

ASSEMBLY INSTRUCTION

Caution : You must read this before you proceed

 
Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside. For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.





- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.
Sets often ship in multiple boxes and may arrive a day or two apart.

DINING CHAIR
N768P489279

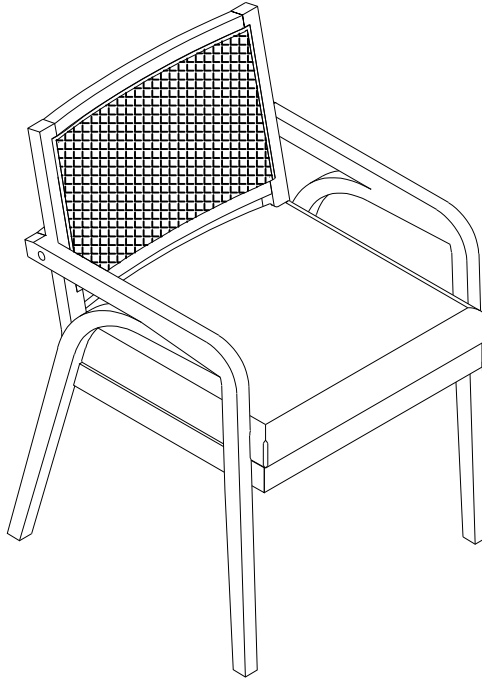

Parts List

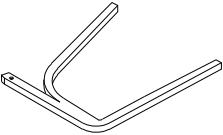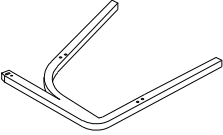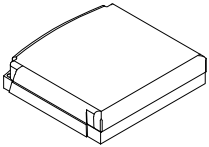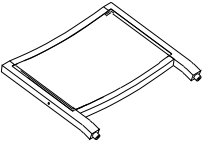    
Label	Picture	Description	QTY
A		Right frame leg	1
B		Left frame leg	1
C		Seat cushion	1
D		Backrest frame	1
E		Backrest support	1

HARDWARE LIST

Label	Picture	Description	QTY
①		Bolt (1/4" x 80mm)	8+1
②		Bolt (1/4" x 45 mm)	4+1
③		Spring washer (10 mm)	12+1
④		Flat washer (19 mm)	8+1
⑤		Flat washer (14 mm)	4+1
⑥		Allen wrench (M4)	1+1
⑦		Cover sticker (Ø21mm)	4
⑧		Felt pad	2

Assembly preparation

 Before begining assembly:

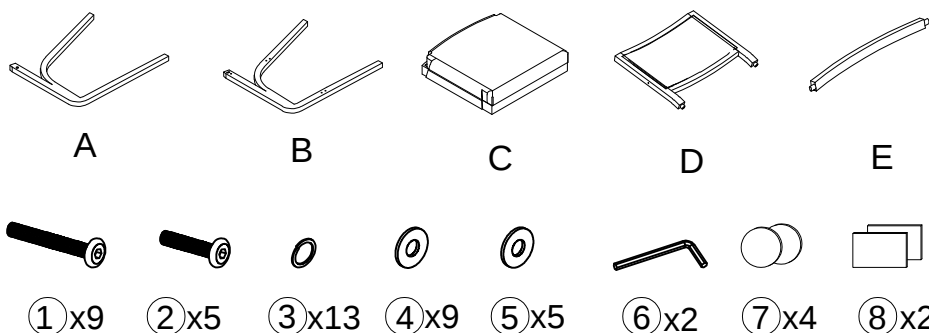



- Read instructions, cover to cover-



- Have 2 adults on hand fo assembly-



- Do not assemble on flooring of carpet-



 
- Assemble on a clean non-marring suface (packing foam)-



- Save all packaging until finished-


Assembly steps

Overview

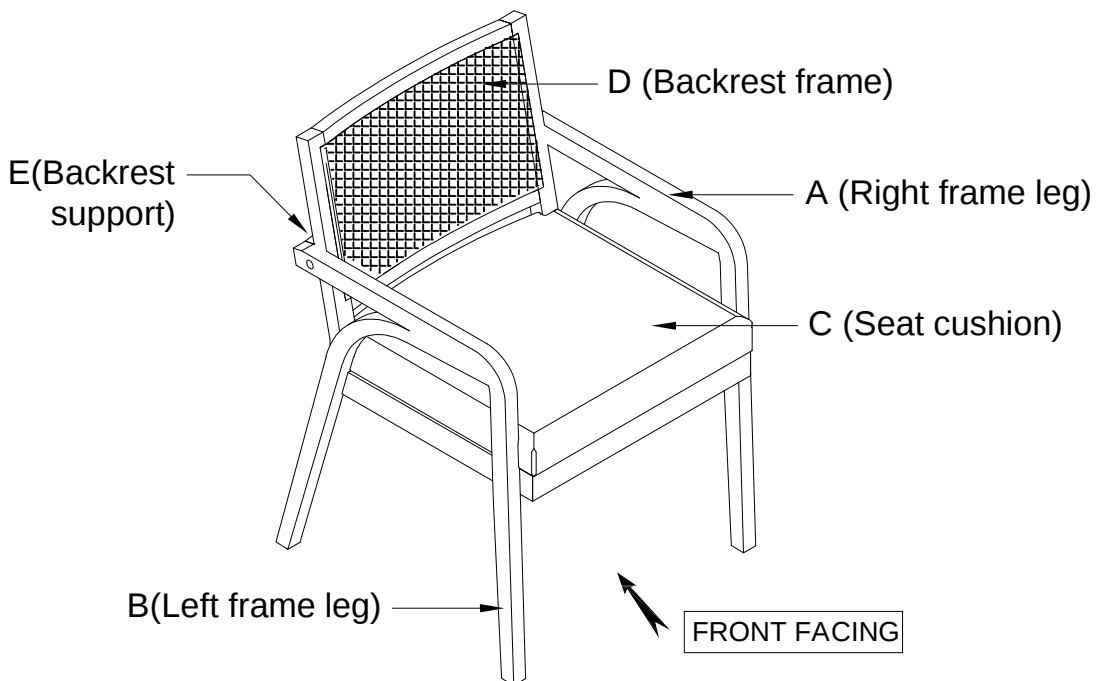


This chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the chair parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarize yourself with the parts and steps before assembly.

 Step 1

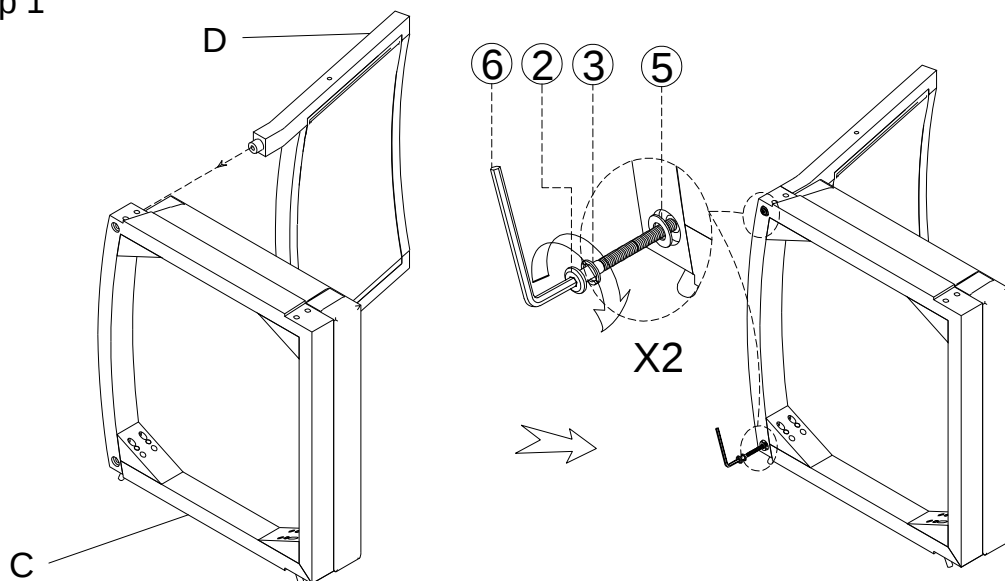


Attach the seat cushion C to the backrest frame D. Using bolt (2), spring washer (3), flat Washer (5) and allen key (6). Do not full tighten

 Step 2

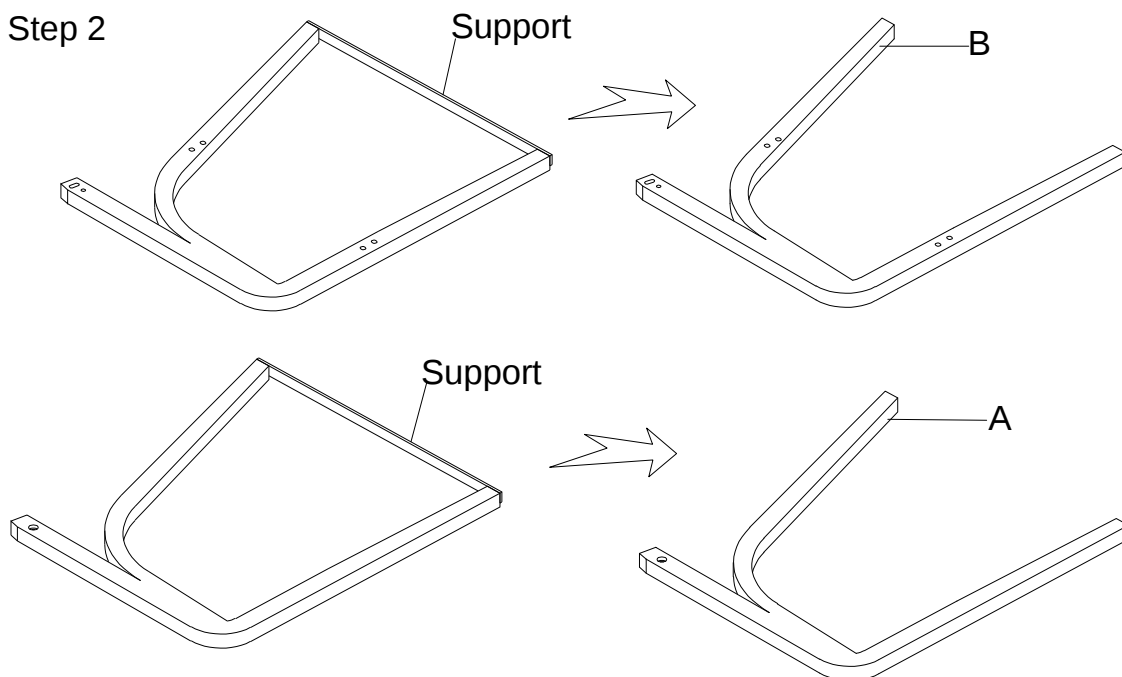



Remove support beams one the right frame leg A, left frame leg B.

 Step 3

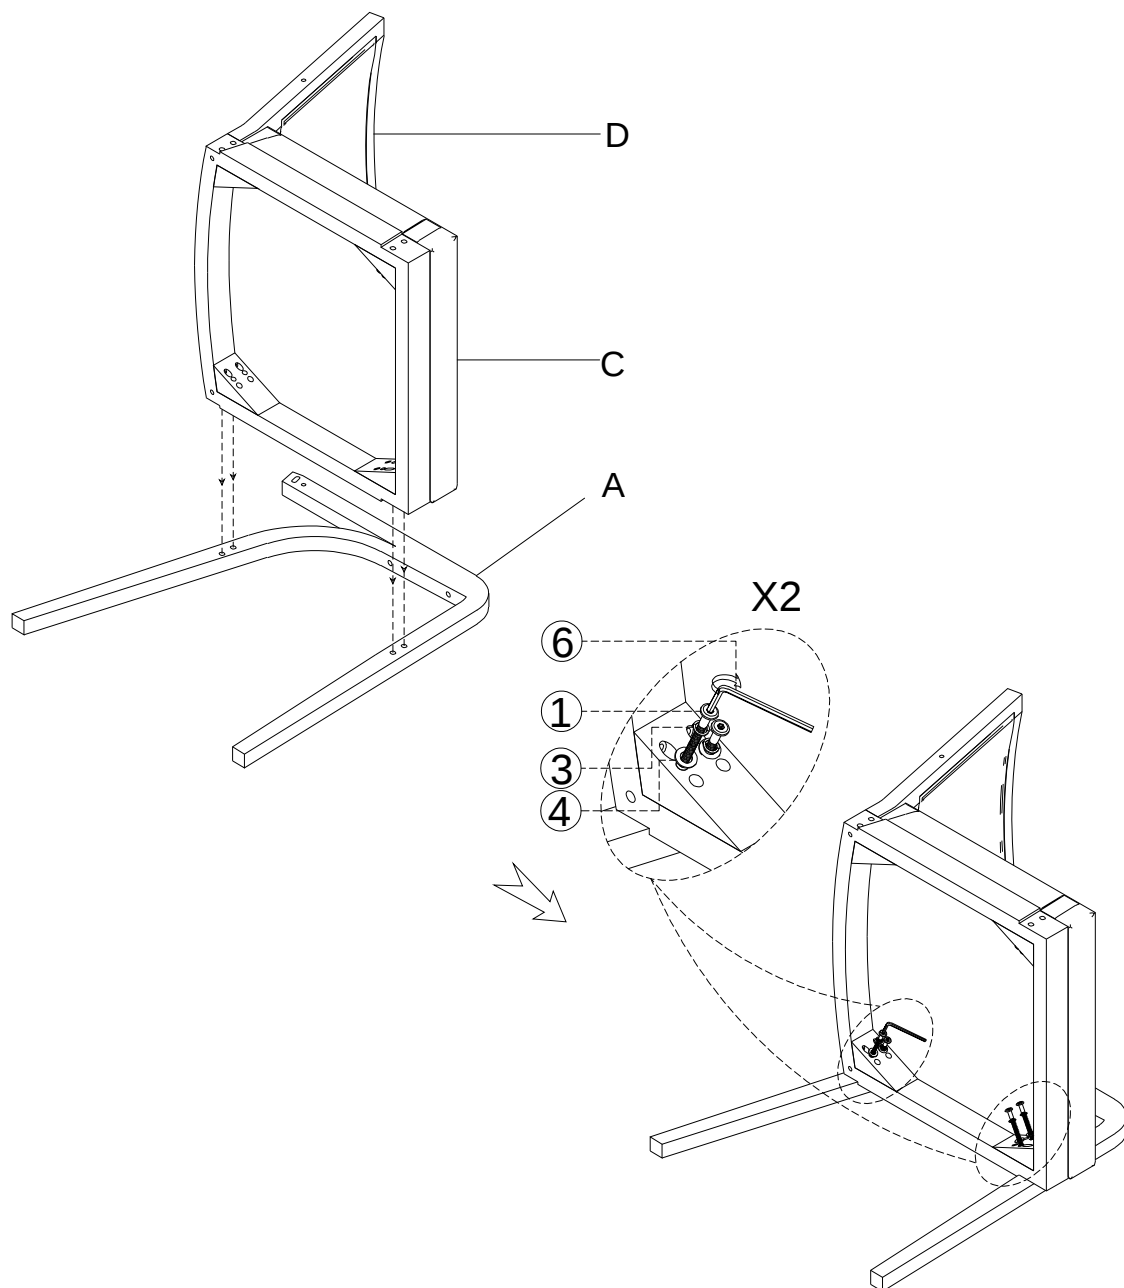


Attach the right frame leg A to the seat cushion C. Using bolt ①, spring washer ③, flat Washer ④ and allen key ⑥. Do not full tighten

  Step 4

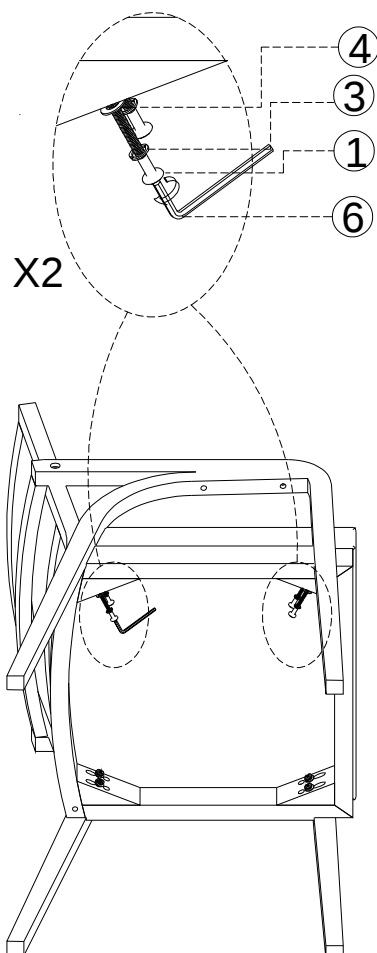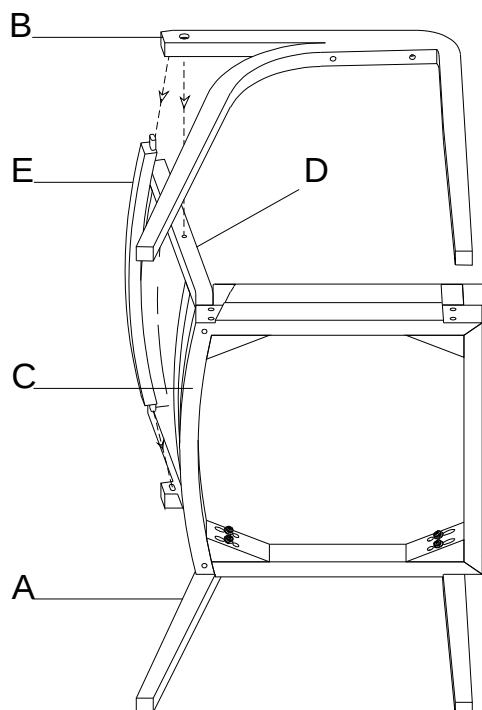


Attach the backrest support E to the right frame leg A, then attach the left frame leg B to the seat cushion C and backrest support E.
Using bolt ①, spring washer ③, flat Washer ④ and allen key ⑥. Do not full tighten

 Step 5

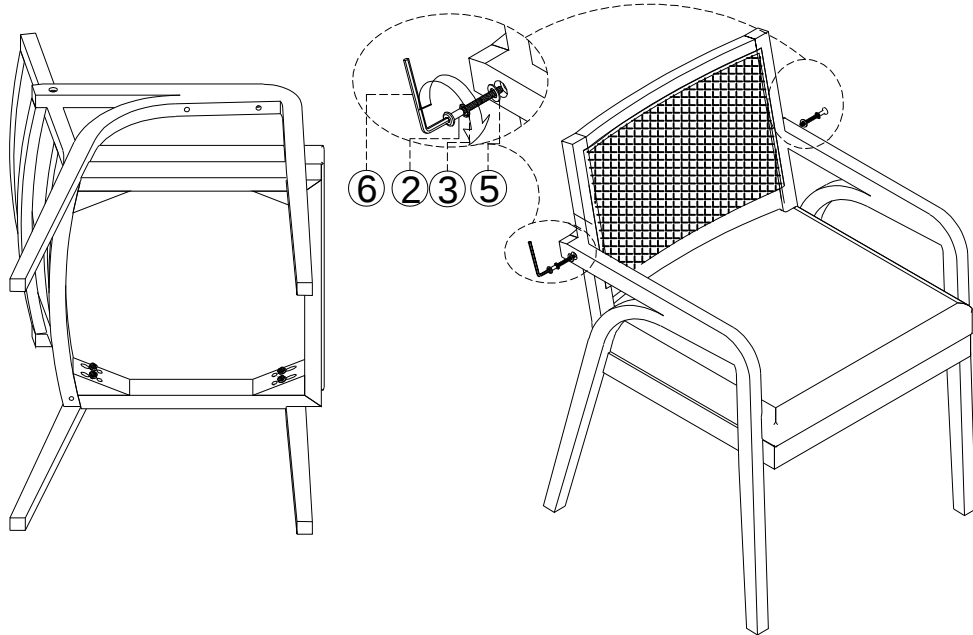

Stand the chair up. Attach bolt ②, spring washer ③, flat washer ⑤ into frame leg, backrest support and allen wrench ⑥. Do not full tighten.

 Step 6

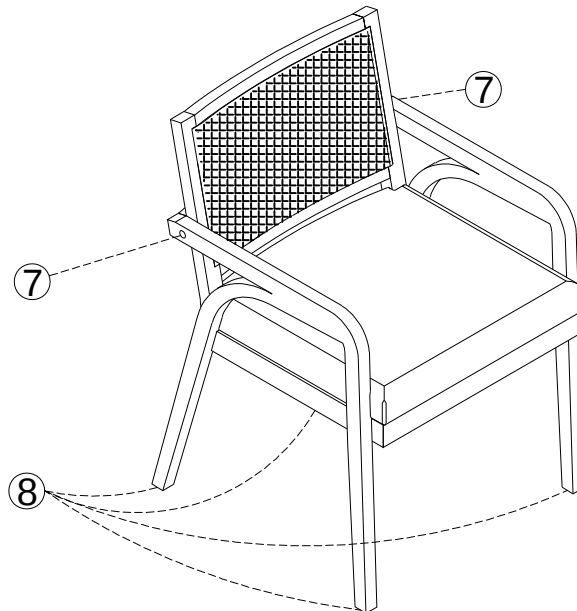

After checking the chair, if no problem, tighten all the bolts.
Place the chair on a **LEVEL SURFACE** to check for wobbles .
After inspection, attach the cover stickers ⑦ hidden the bolt holes.
Note: If missing or fall out the felt pad, attach new one ⑧ .
Your chair is ready for use .
This chair can only be used on a flat, level surface.