Modern Home Kitchen (white)

(WCF32)



98.1WCF32.150

Assembly Instruction

Please follow this instruction to avoid assembly errors.
For customer service, please contact *E-mail:* shop@robud.com



⚠ WARNING:

- CHOKING HAZARD-Small parts. STRANGULATION HAZARD-Long cord. Not suitable for children under 3 years.
- Toys intended to be assembled by an adult. Children should use the product under adult's guidance.
- After opening the package, please keep the packaging items such as plastic film or bags away from babies and children to avoid danger of suffocation.

MAINTENANCE:

- Please keep the product away from fire, substances flammable and humid environments to prevent damage.
- Please keep the product away from water, and don't put liquid in the toy sets.
- Please clean the product with dry soft cloth,don't clean this product with chemical cleaners: alcohol, ammonia water, glass cleaner, etc.
- The instruction must be retained since it contains important information.

Assembly Tips




Assembly time: 3 - 4 hours




Recommended Tools:


(Please prepare them by yourself.))



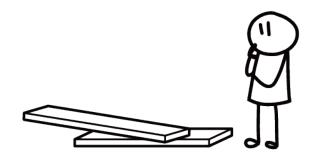


- · Avoid overtightening screws during assembly.
- · Screws should be fully tightened once.
- · Arrange all accessories on a hard, flatsurface for assembly.
- · Follow the instructions step by step.

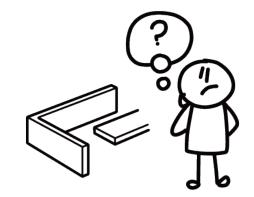


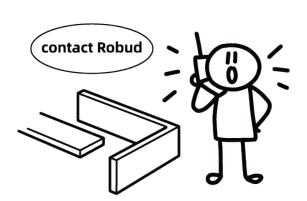

  If you feel hard to assemble the toy or there is any other problem that makes you feel unhappy with the product, please contact us **shop@robud.com**. We are glad to do our best to solve your problem and provide a solution to your satisfaction.









When assembling the door stop, hold the screw with the screwdriver first and then adjust the screw to the position shown on the left.


Product Parts

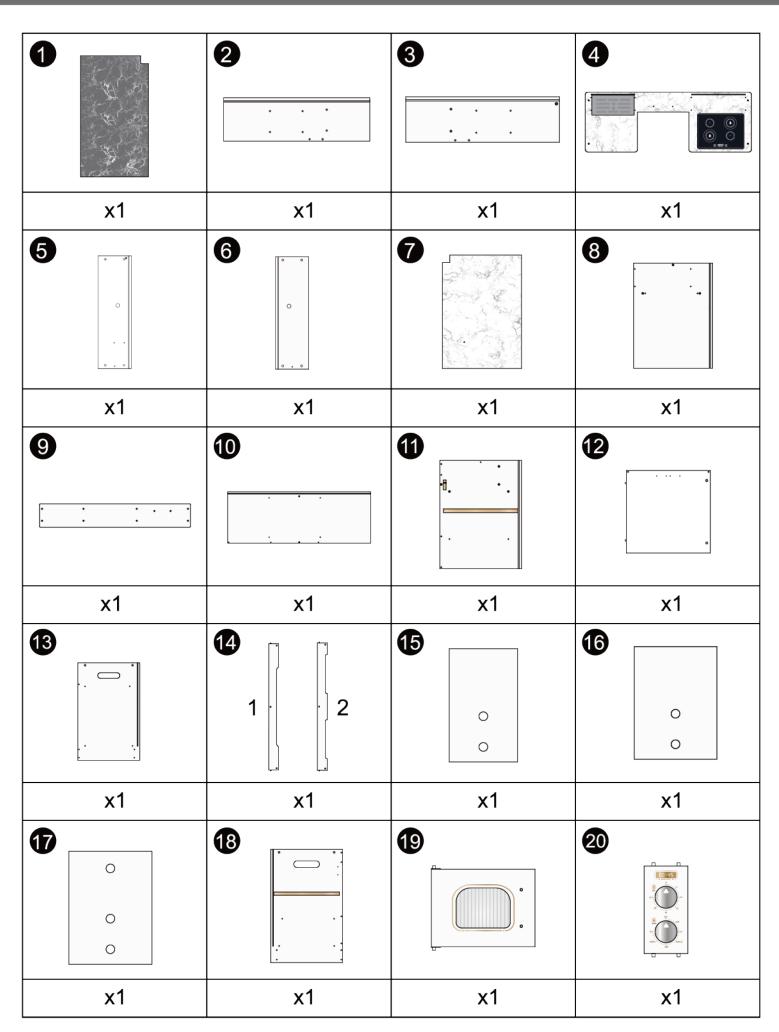

Product Parts

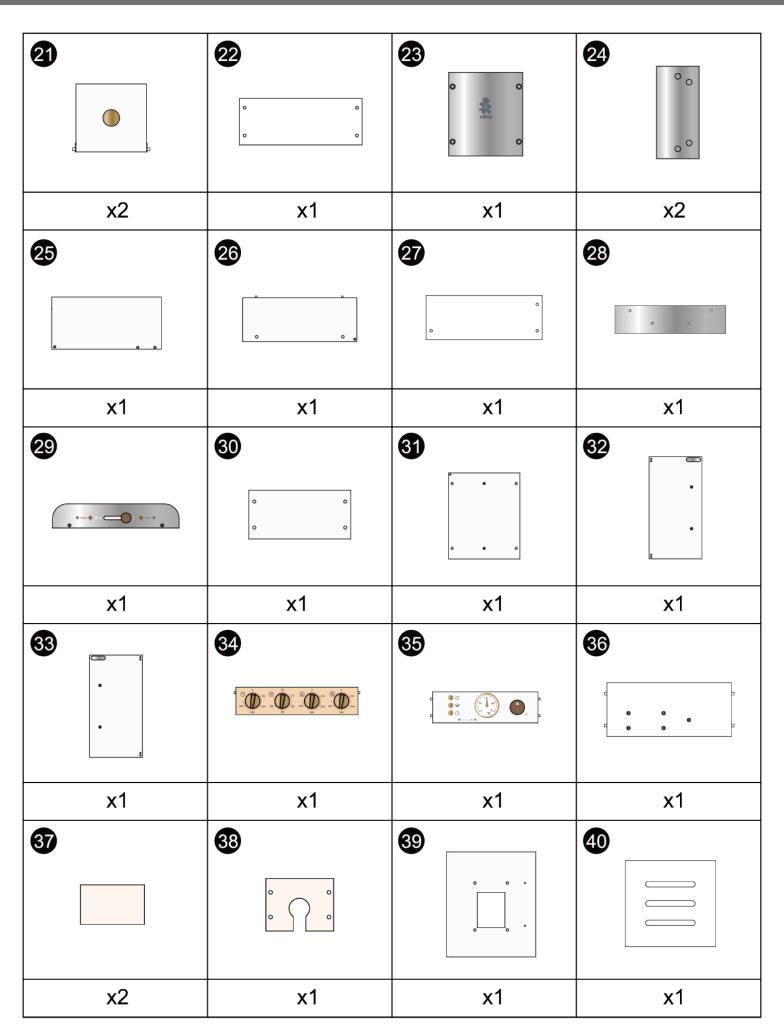

Product Parts

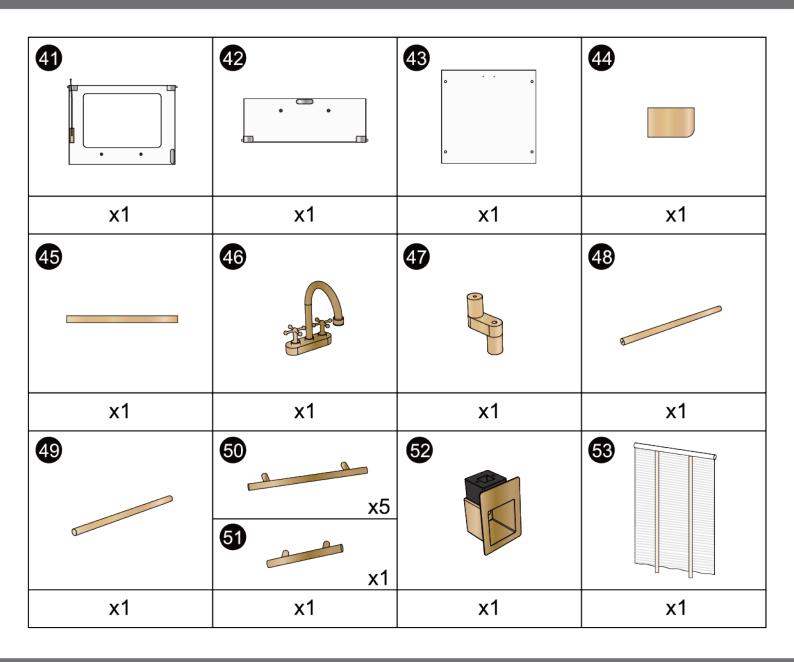

Hardware


54	55	M3.5x32	M4x20
x8	x2	x73	x17
5 8	59	60	61
			M4x40
M4x18	M4x8	M3x12	M4x40
x13	x4	x16	x2


Hardware


62	63	64	65
		<i></i>	uuu a
M3x16	M4x8		
x2	x4	x2	x2
66	67	68	
	0	0	
M4x6			
x12	x3	x3	


Accessories


			000
x1	x1	x1	x1
S	S		
x6	x1	x1	x2
x2	x1	x1	x1

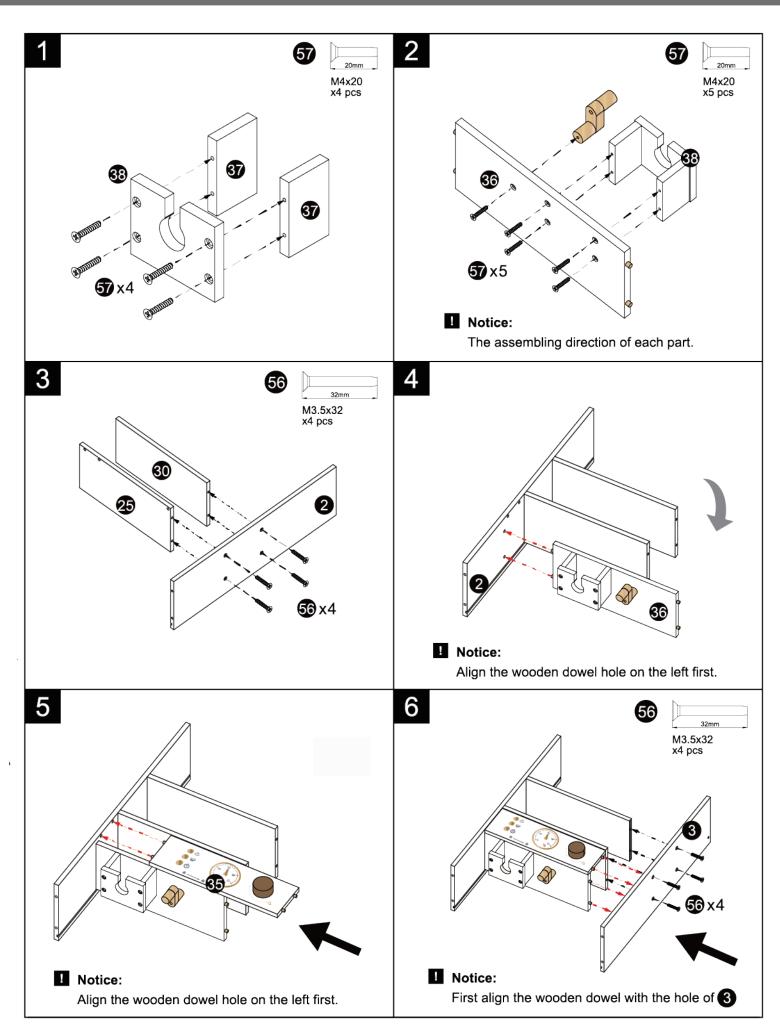


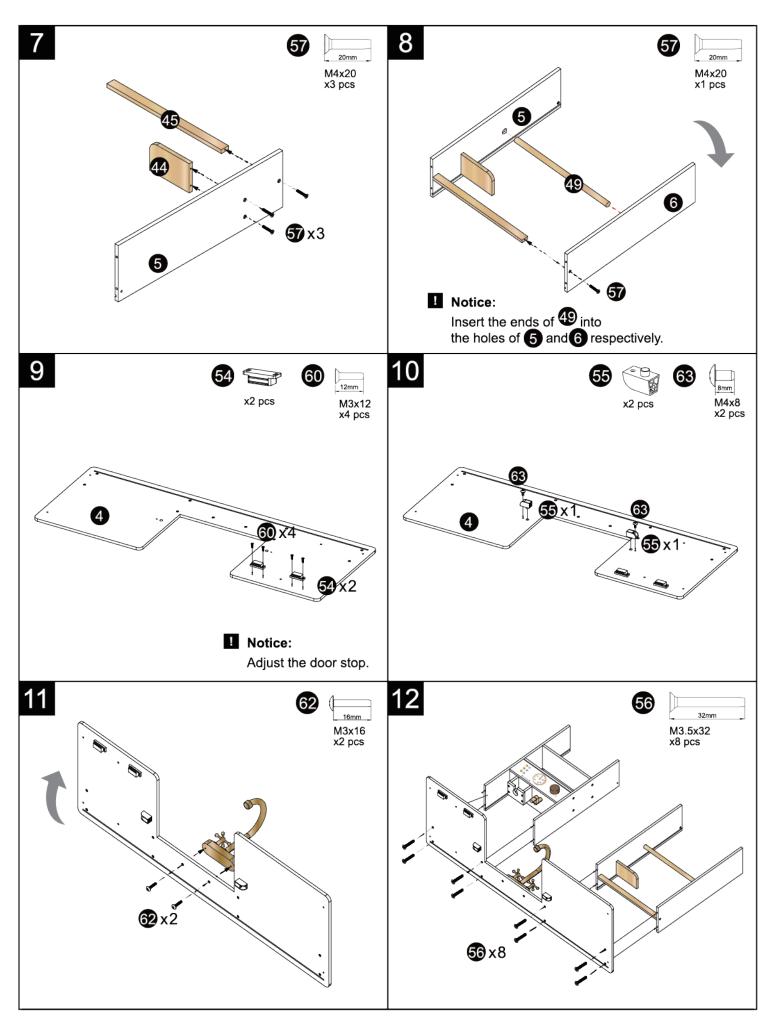


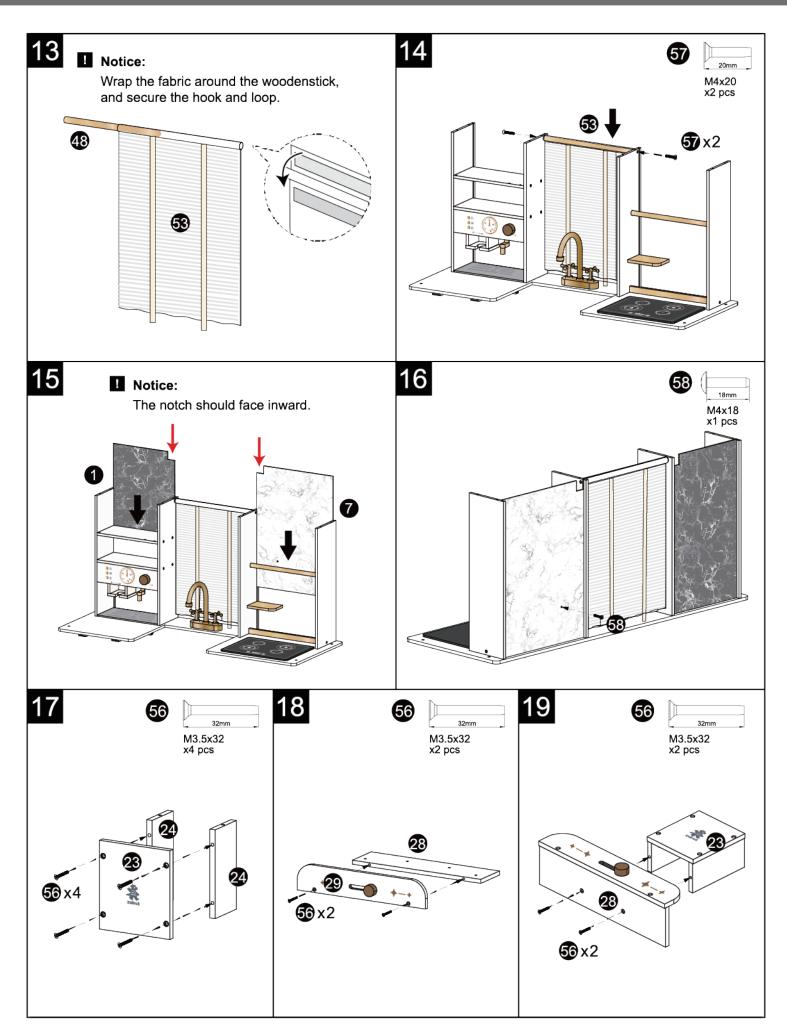


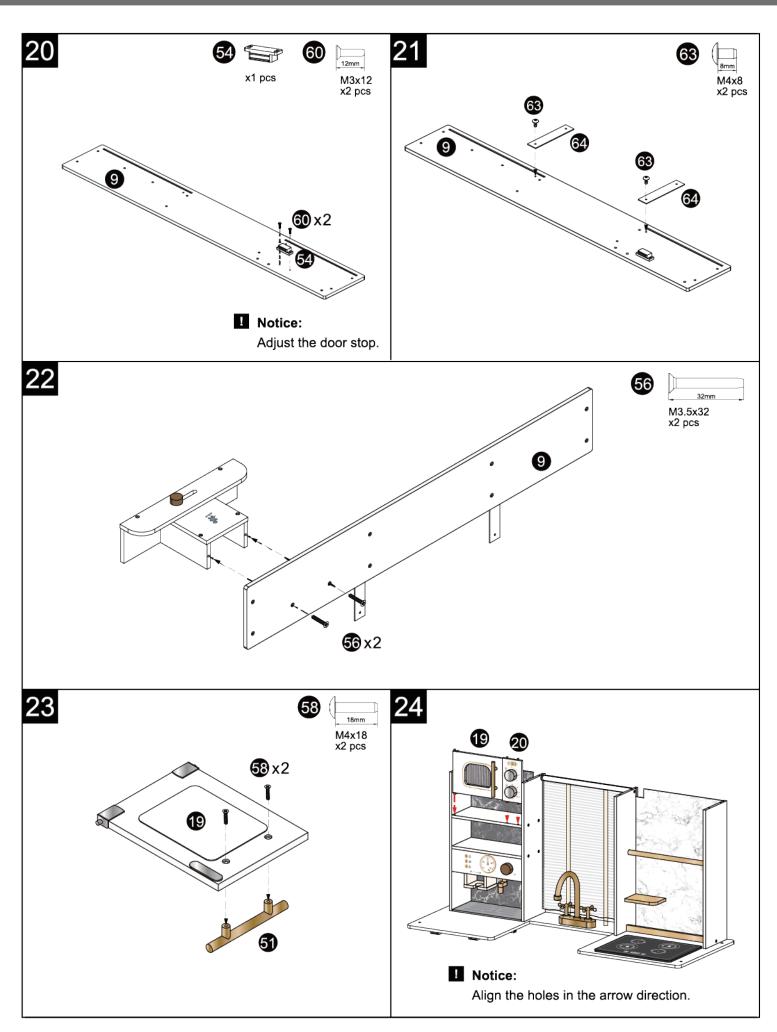


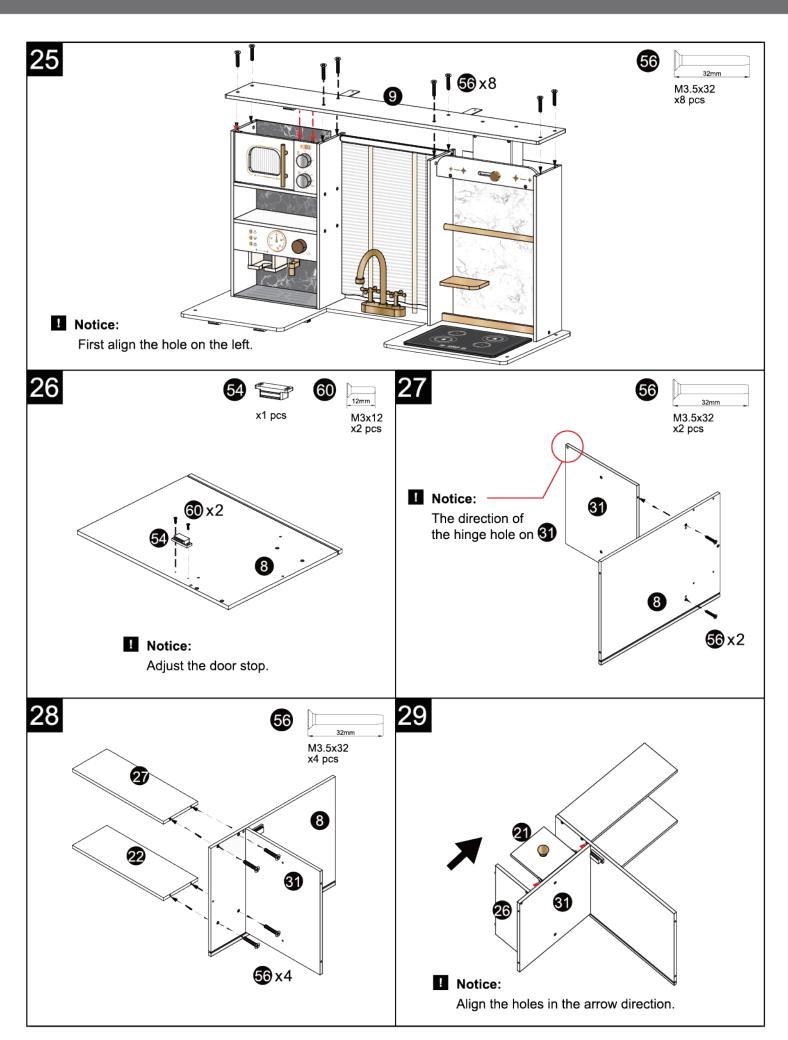


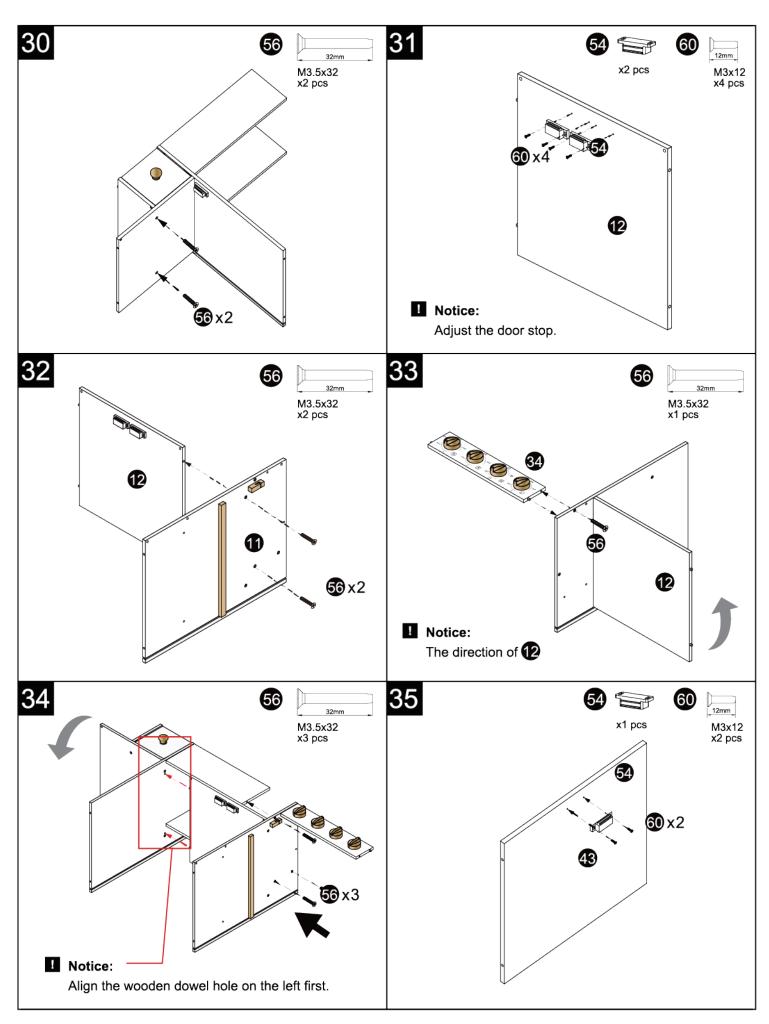


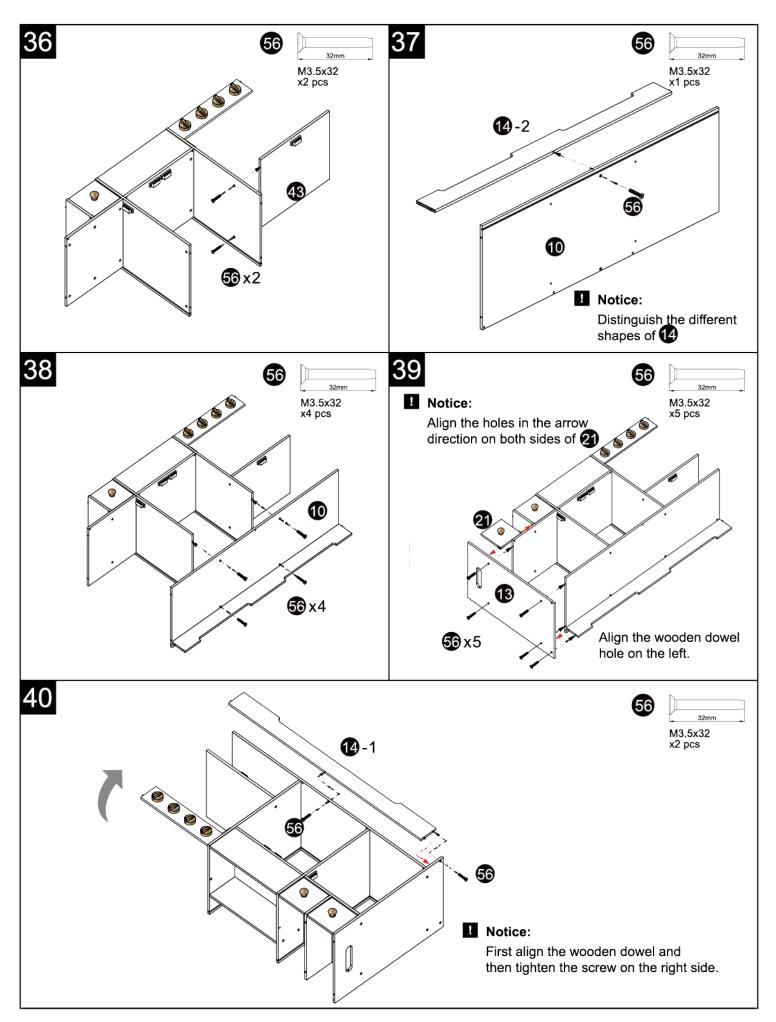


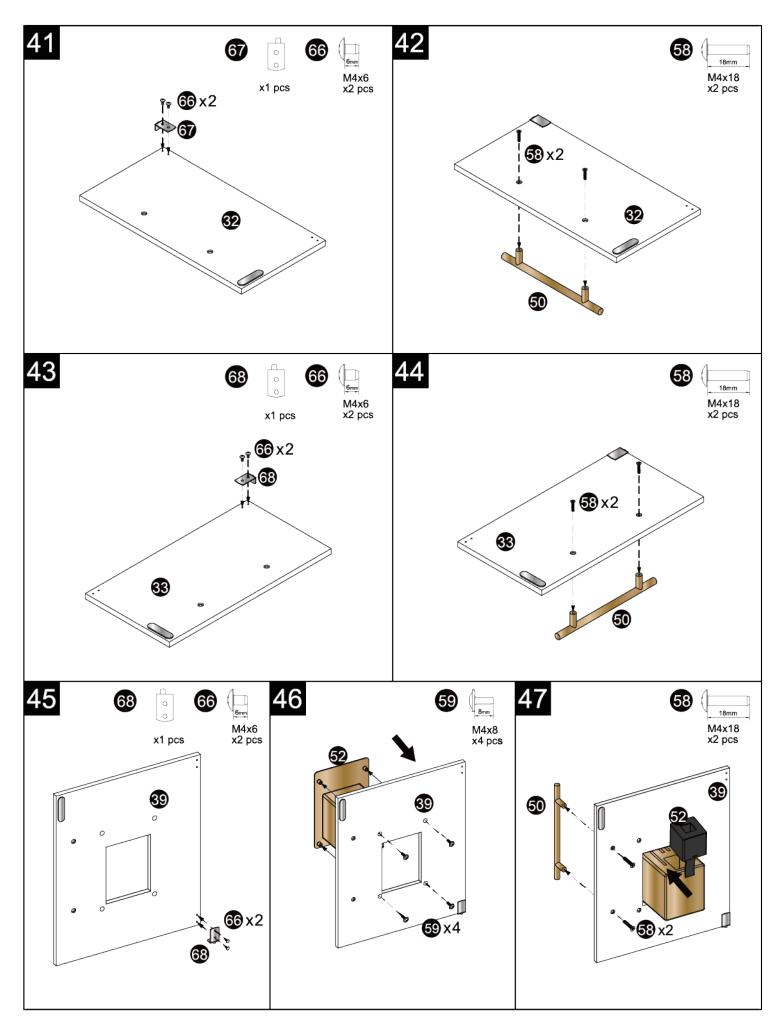

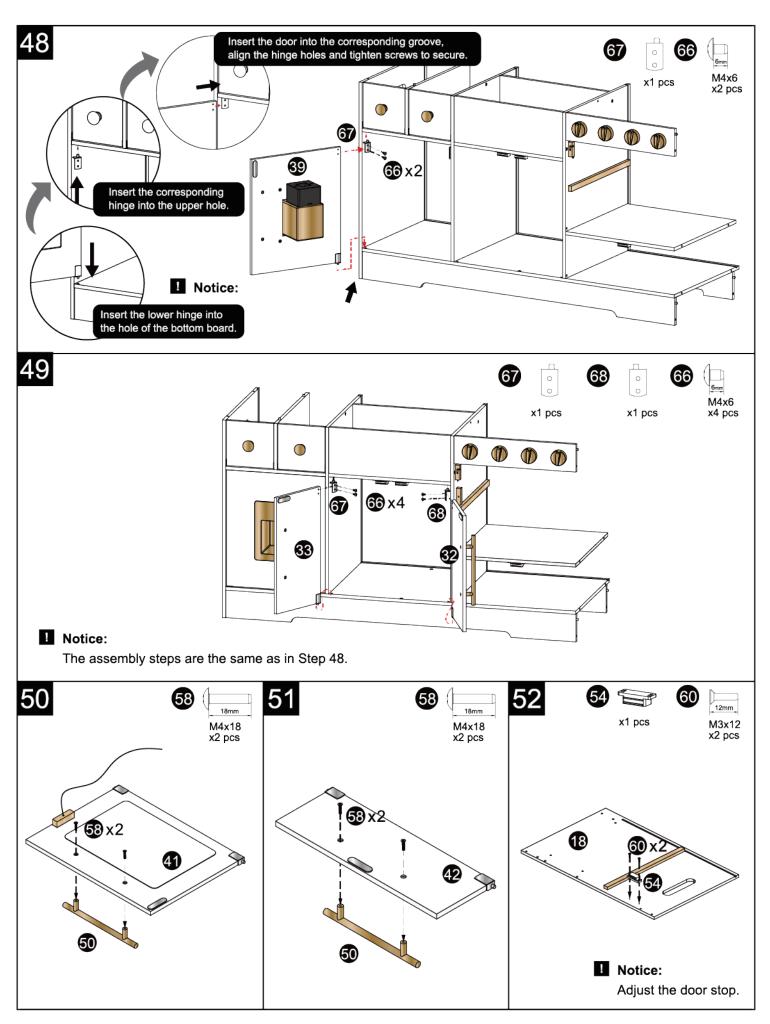

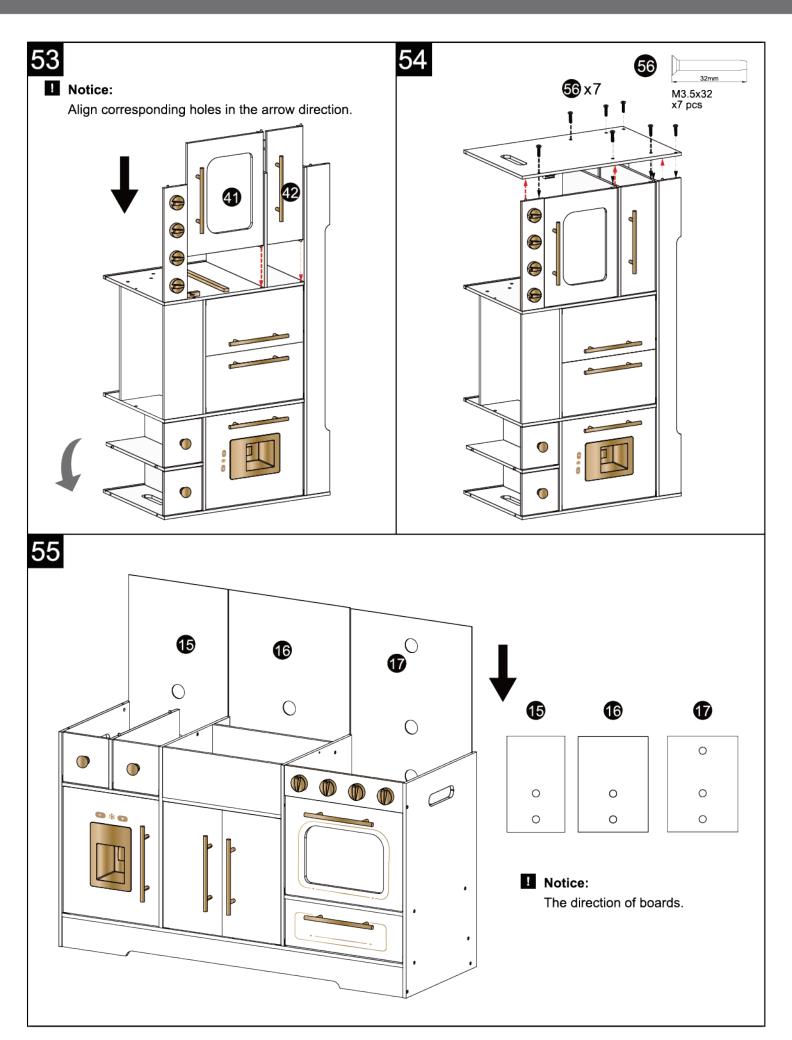

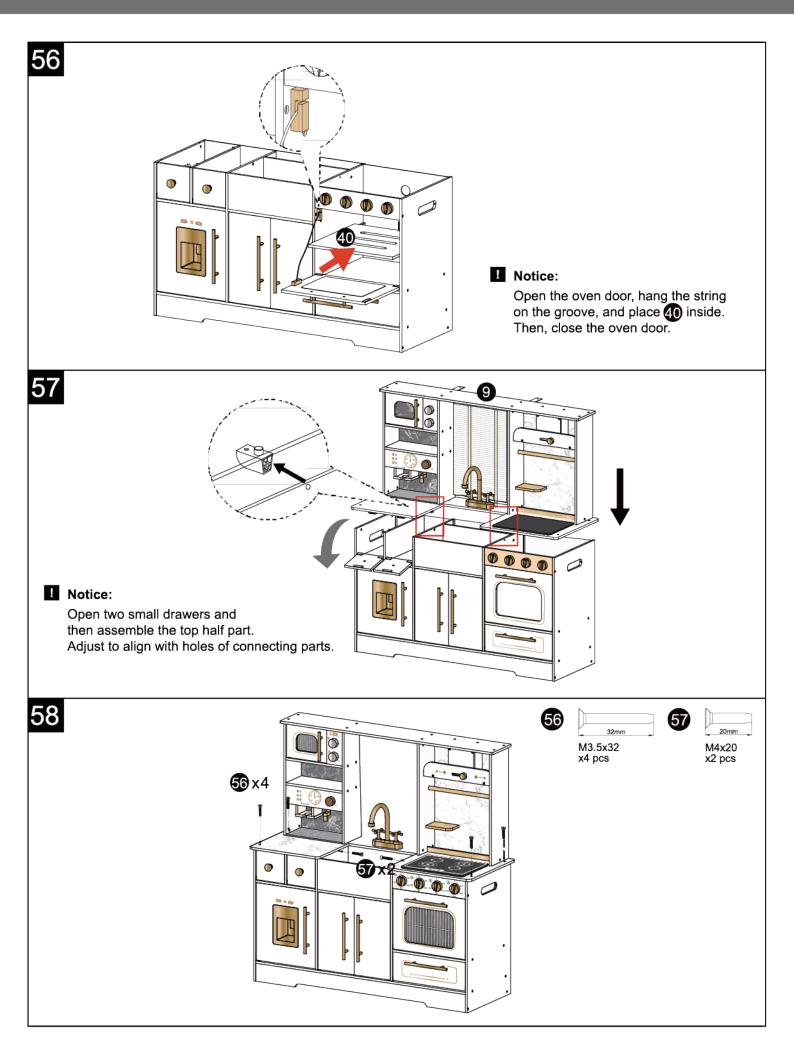

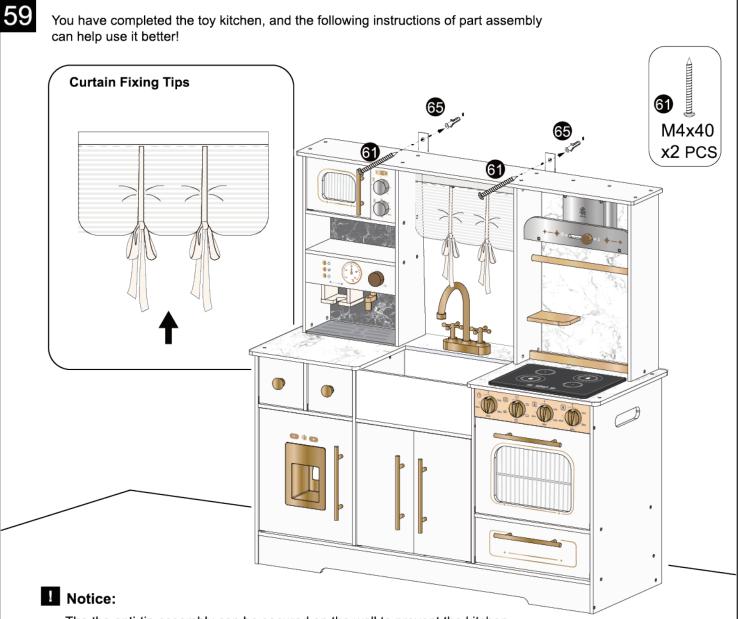

The the anti-tip assembly can be secured on the wall to prevent the kitchen from tipping during play.

It is recommended to place the kitchen against the wall during use.

Avoid placing the toy kitchen in open spaces and prevent your child from climbing on it.

The hardware accessories are primarily suitable for being assembled on walls shown in the instruction.

For other situations, consult your local hardware store to choose more suitable accessories.

