

Installation & Assembly



IMPORTANT: Retain for future reference, read carefully.

PART LIST



A. Body of Fountain (1x)



B. Top Cover of Fountain (1x)



C. Splash Screen (1x)



D. LED Light (1x)



E. Submersible Pump (1x)



F. Adapter(1x)

ASSEMBLY INSTRUCTIONS

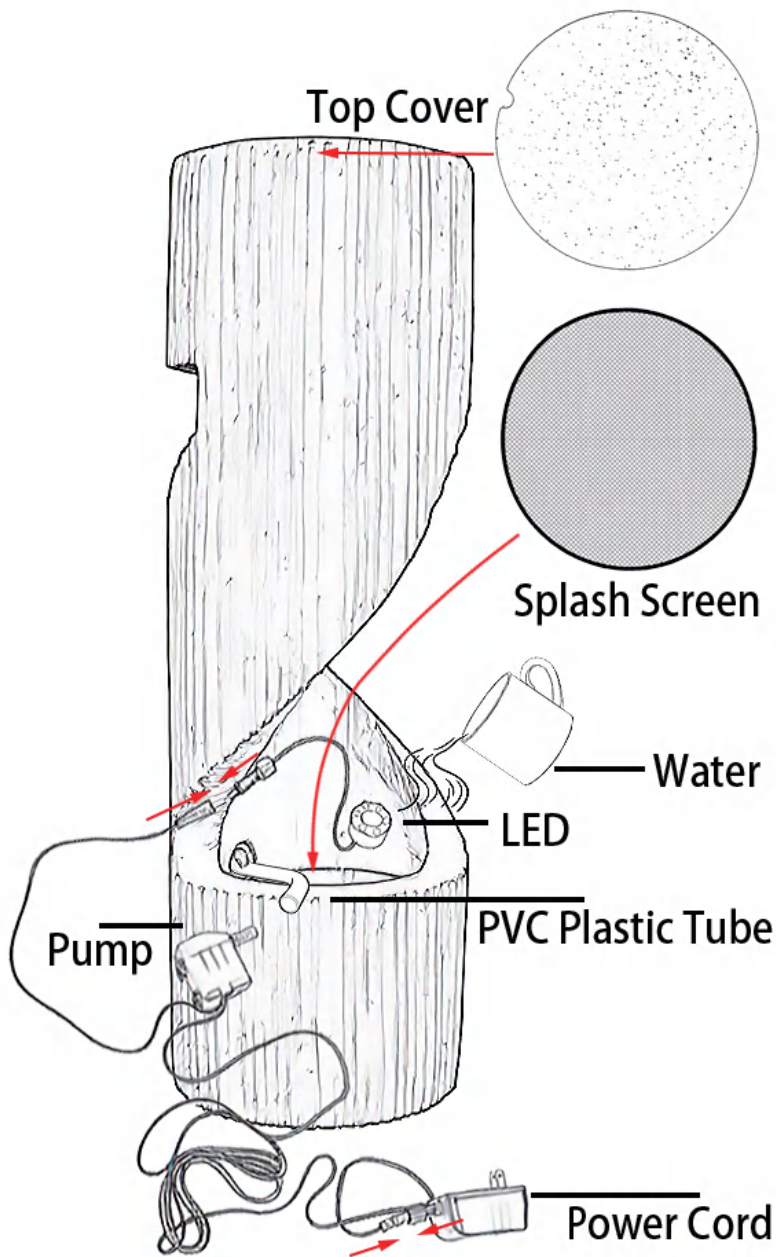 


Fig.1

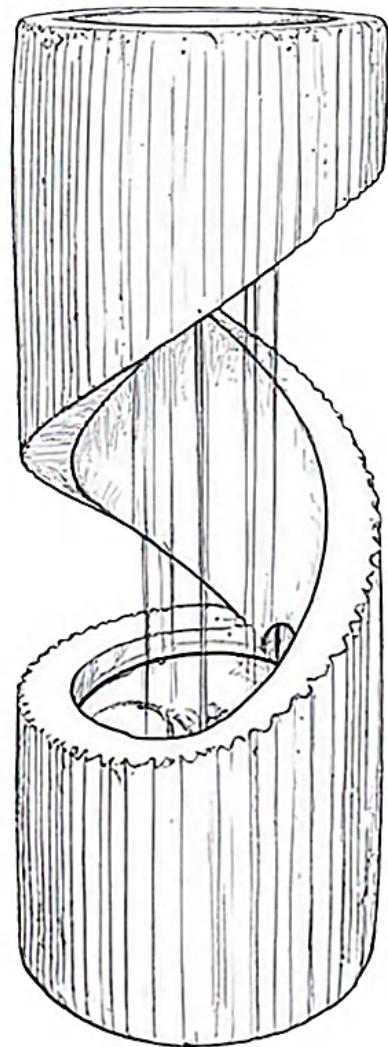 



Fig.2

Tips: Wipe it gently with a damp cloth and the water in the fountain needs to be changed regularly.

Step 1: Remove the fountain from the box, place the product on a level surface.

Step 2: Connect the PVC plastic tube to the outlet nozzle of pump. Place the pump flat inside the bottom of the water tank.

 
Step 3: The LED light is pre-installed in fountain. Plug the LED light into the pump and place them inside the bottom of the water tank.

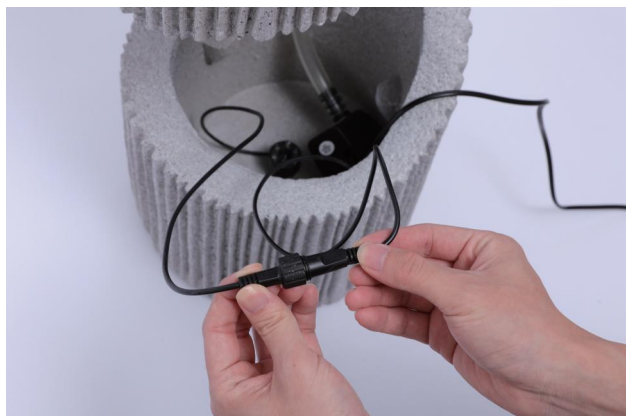

Step 4: Fill the product with clean water. Make sure the pump is completely submerged in water. The fountain is completely assembled as shown in Fig.2 in order to have best effect; the water level should be 3/4 inch (2 cm) below the top of the Basin.

Step 5: Place top cover on the top of the fountain.

 Step 6: Add the splash screen to the fountain basin. Ensure the splash screen lies flat and is positioned below the water outlet.

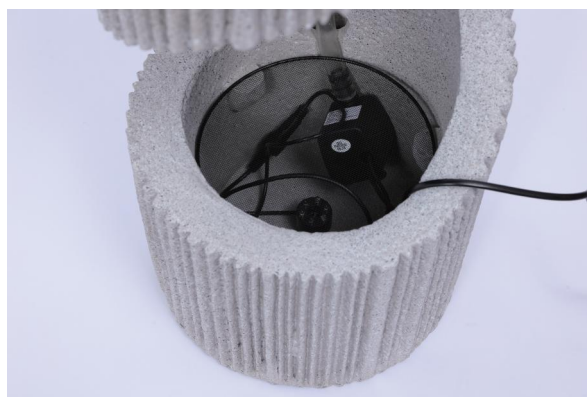

Step 7: Plug the pump power cord into adapter and plug the adapter in the wall outlet to run the fountain.

Trouble Shooting & Cautions

•If you have any questions and/or problems, please contact the retail store you purchased this fountain.

•If your pump fails to run

- Check the circuit breaker or try a different outlet to make sure the pump is receiving electrical power.
- Check the pump discharge and tubing for any kinks and/or obstructions
- Any buildup obstructing the water flow can be flushed with a garden hose
- Check the rotor by removing the front cover & plate to access the impeller area. Turn the rotor and make sure that the rotor is not jammed or broken.

• If your pump “spews”

- Check the water level to make sure the pump is completely submerged and there is enough water in the basin to operate your fountain. Not having enough water will cause your pump to spew.

• If your pump is making abnormal loud noises

1. Disconnect the pump from the electrical power and remove front cover.
2. Carefully grip the impeller and gently pull the impeller/rotor assembly out of the pump housing.
3. Rinse the impeller/rotor assembly and clean the cavity with clean water. If breakage or damage is found, contact your local retailer for part.

Fountain Care

- We recommend using PPL 102’s all-natural cleansing formula to eliminate foam, lime scale, and calcium buildup; fight mineral deposits; leave water crystal clear; help prevent staining; remove organic contaminants; and treat discolored water. This formula will help prevent pump damage due to hard water build up.

Caution

- Always unplug the pump and transformer from the power supply before cleaning & handling.
- Uses with clean water only, do not place the fountain and/or parts in any other liquid.
- Periodically change water & clean the pump to keep free from microorganisms.
- Disconnect and store the unit in a dry place if not in use for extended periods of time.
- Do not lift, carry, or pull the pump by the power cord.
- NEVER LET THE PUMP RUN DRY.

AFTER-SALE SERVICE

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna share your experience with our products?
Share your pictures with us.

Any suggestions? **Contact us!**
We gotcha back!