


3 PIECE WICKER SET

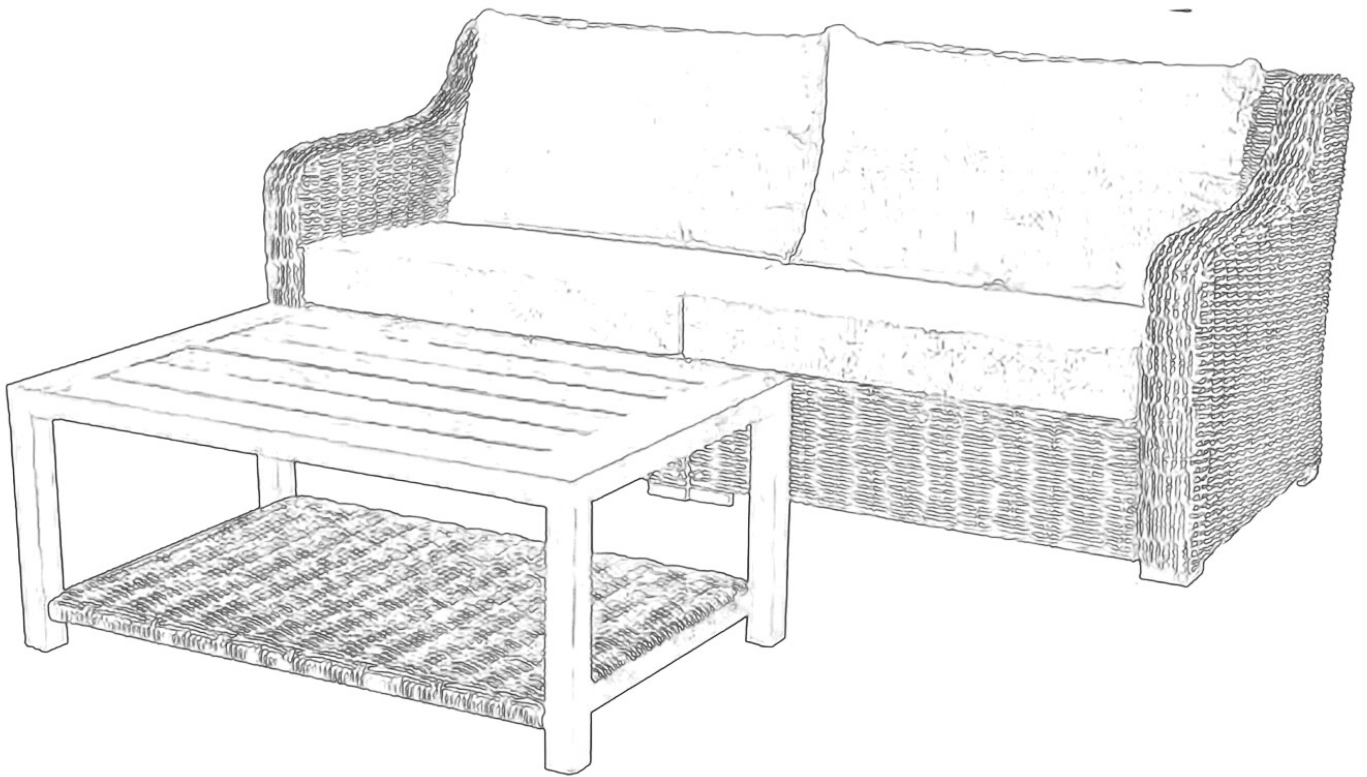

ATTENTION

Thanks for choosing our product.

1. There will be Three boxes (box A, box B and box C) in total for this whole product. Before assembling, please

check you receive all the parts listed below. If there is any missing or damaged part, or if you have any question, please feel free to contact our service team for help.



2. Two persons are recommended to assemble the set.

3. Recommend to use waterproof furniture cover for entire furniture set when it is used outdoor to keep th longer lifetime.


4. Sofa cushion covers can be removed and cleaned up by cleaner when there are stain

	PICTURE	QTY
A		x1
B		x1
C		x1
D		x1
E		x1
F		x1
H	M6*55	x14
J		x52
K		x18
L		x1
M		x1
N	M6*65	x4
P	M6*45	x16
Q		x8


①

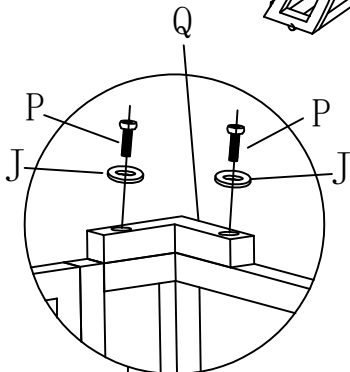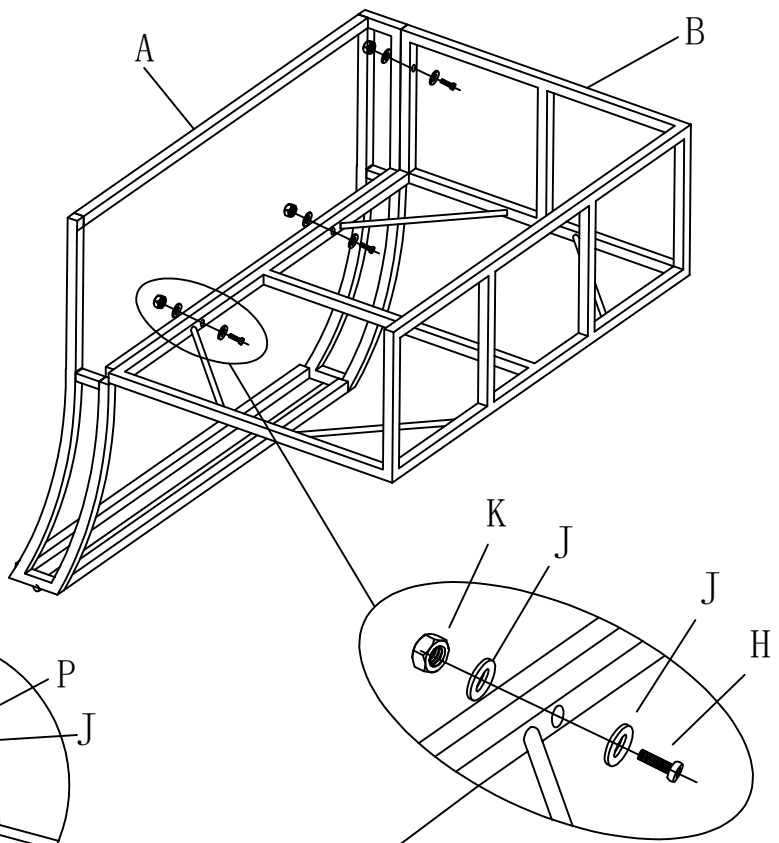



②

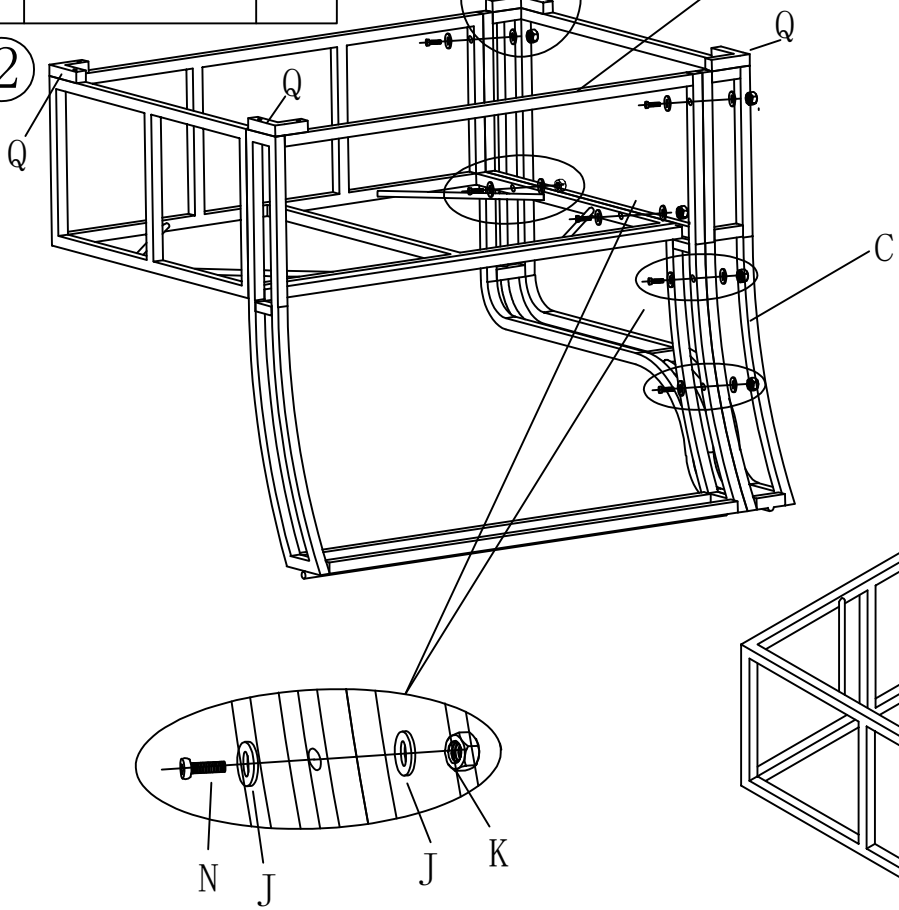





③

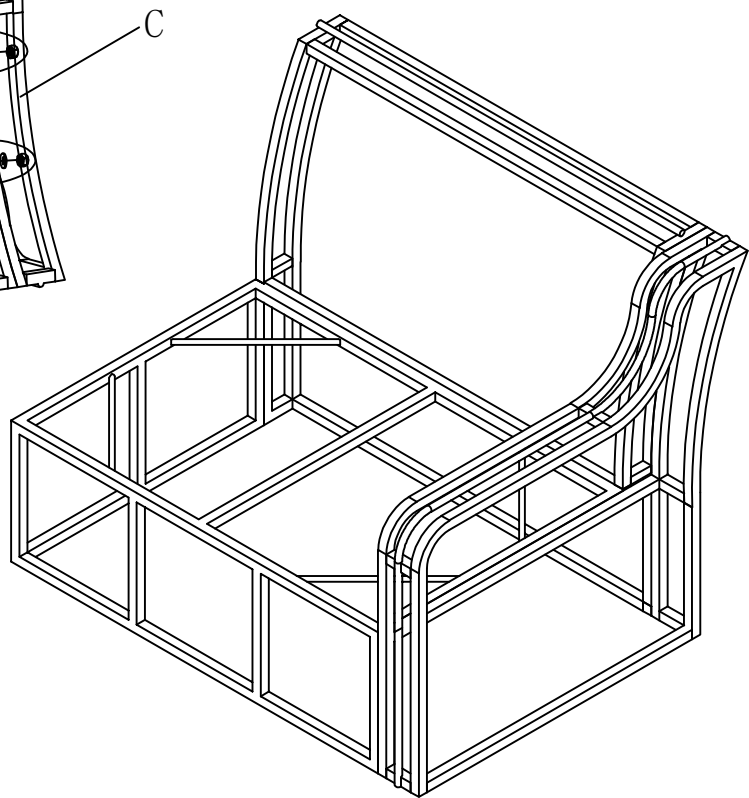

4

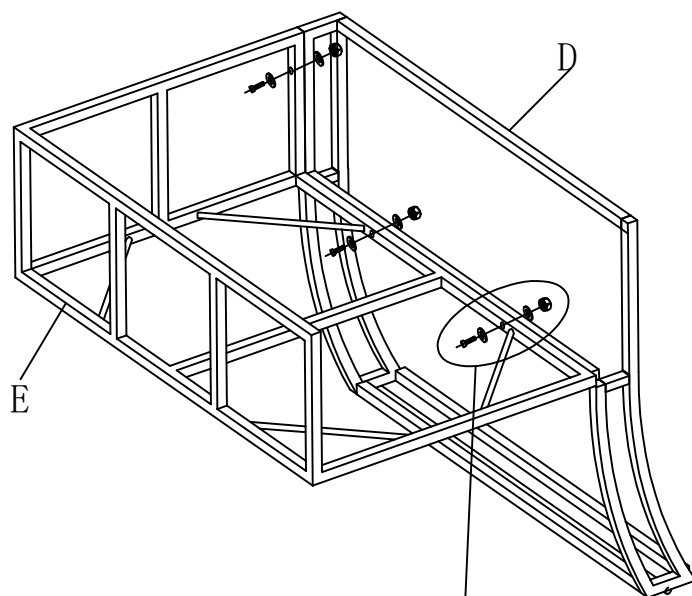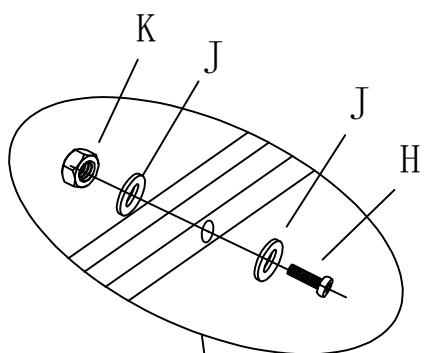

5

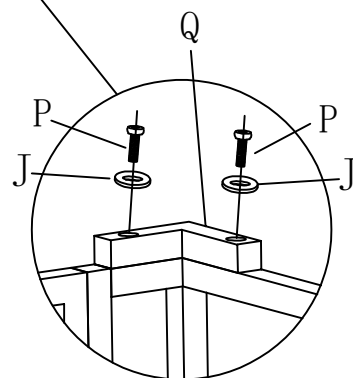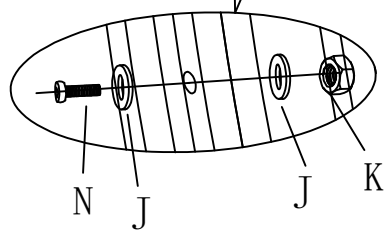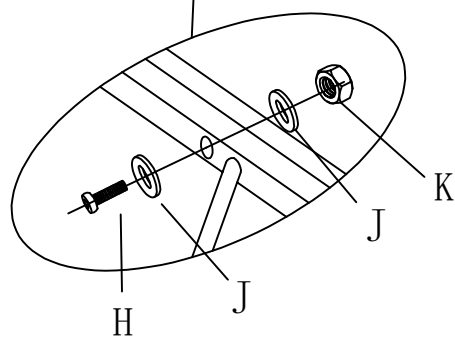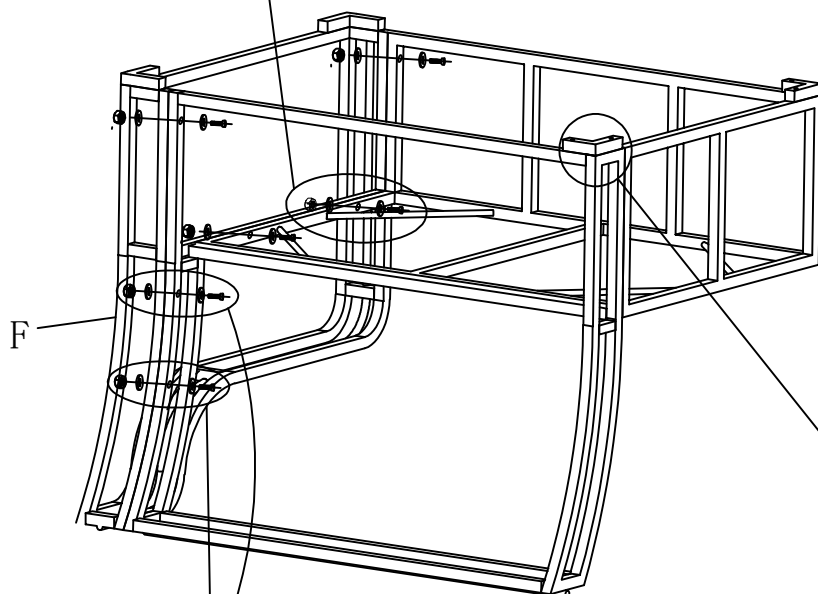

6

