

# **VEVOR<sup>®</sup>**

## **TOUGH TOOLS, HALF PRICE**

Technical Support and E-Warranty Certificate  
[www.vevor.com/support](http://www.vevor.com/support)

### **SPORTS ROLL & SCORE ARCADE GAME**

 
MODEL:SSG-05/ SSG-06

We continue to be committed to provide you tools with competitive price. "Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually Saving Half in comparison with the top major brands.

# VEVOR<sup>®</sup>

TOUGH TOOLS, HALF PRICE

SPORTS ROLL &  
SCORE ARCADE GAME

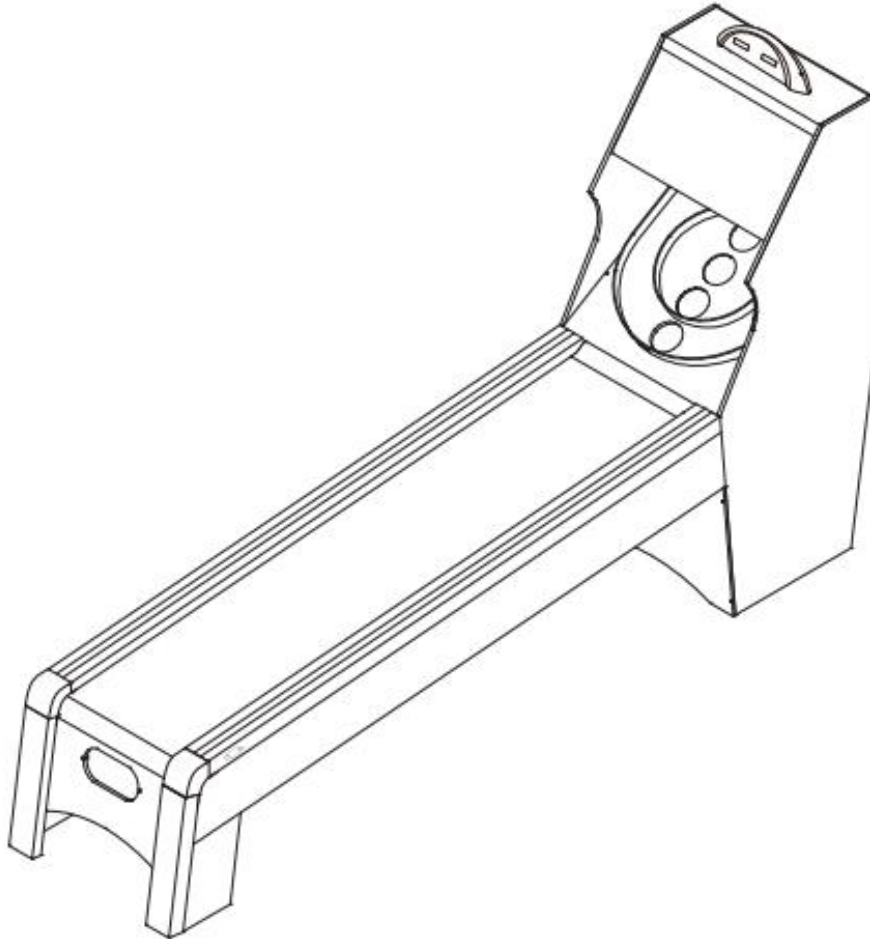

## NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

**Technical Support and E-Warranty Certificate**

**[www.vevor.com/support](http://www.vevor.com/support)**

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

## TIPS





Assembling this Score Arcade Game machine will take approximately 3 hours, it is recommended that 2 people operate it.

## SAFETY INSTRUCTIONS

Thank you for using this product. Please read all of the instructions before using it. The information will help you achieve the best possible results.

### WARNING:

Please read this manual carefully before using the product. Failure to do so may result in serious injury.

	Warning-To reduce the risk of injury, user must read instructions manual carefully.
	Compliance is a EC security certification.
	<b>CORRECT DISPOSAL</b> This product is subject to the provision of European Directive 2012/19/EU. The symbol showing a wheeled bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.
	<b>FCC Information:</b> <b>CAUTION:</b> Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment! This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This product may cause harmful interference. 2) This product must accept any interference received, including interference that may cause undesired operation. <b>WARNING:</b> Changes or modifications to this product not expressly approved by the party responsible for compliance could void the user's authority to operate the product. <b>Note:</b> This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures. · Reorient or relocate the receiving antenna. · Increase the distance between the product and receiver. · Connect the product to an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for assistance.

## ASSEMBLY PRECAUTIONS

1. Assemble needs to follow these instructions. Incorrect assembly can be a hazard.
2. Wear safety goggles and heavy-duty work gloves during assembly.
3. Do not assemble when tired or under the influence of alcohol, drugs or medication.
4. Weight capacity and other product capabilities only apply to a wholly and correctly assembled product.
5. Keep the assembly area clean and well-lit.

6. Keep bystanders out of the area during assembly.
7. The weight of plate is heavy; pay attention to the installation to avoid hurting it, and if necessary, find someone to assist with the installation.
8. Assembly should be done by adults only.
9. **WARNING:** This product contains small parts. If swallowed, it will pose a choking hazard. Keep these small parts away from children when assembling!
10. Before using the appliance for the first time, peel off any promotional materials and packaging materials.

## ATTENTION!



**WARNING!** Keep children and pets away.

**WARNING!** Remove all packaging materials and keep them for future use. Packaging materials are not a toy.

**WARNING!** Don't let children play with the packaging materials. If they swallow the packaging materials, they will suffocate!

**WARNING! CHOKING HAZARD- Small parts. Not for children under 3 years. Assembled by an adult.**  
**ATTENTION ! RISQUE D'ÉTOUFFEMENT - Petites pièces. Pas pour les enfants de moins de 3 ans.**  
**Assemblé par un adulte.**

## SAVE THESE INSTRUCTIONS

### USE PRECAUTIONS



#### **WARNING: TO PREVENT SERIOUS INJURY AND DEATH FROM TIPPING:**

1. To avoid accidents or sharp edges injuries please assemble and use carefully.
2. Use as intended only. Do not sit or stand on the product.
3. Inspect before every use. Do not use it if parts are loose or damaged.
4. If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and replacement parts are installed.
5. Do not exceed the listed weight capacity. Tighten all knobs securely before applying load. Be aware of dynamic loading! The sudden load movement may briefly create an excess load, causing product failure.
6. Try not to be too heavy to avoid the weight in one place, causing the table to overturn.

**WARNING:** Do not climb onto the machine to play, avoid flipping

# HARDWARE IDENTIFIER

 
## (To Scale)




H1 - 3.5 mm x 18 mm  
Phillips Round  
Head Screw  
(24 pcs)




H2 - 3.5 mm x 28 mm  
Phillips Round  
Head Screw  
(28 pcs)



 
H3 - 3.5 mm x 12 mm  
Phillips Round  
Head Screw  
(98 pcs)



 H4 - 6 mm x 25 mm  
Allen Head Bolt  
(16 pcs)

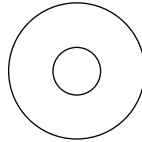

 
H5 - 6.5 mm x 18 mm  
Flat Washer  
(16 pcs)



H6 - M6 Lock Washer  
(16 pcs)




 H7 - 3.5 mm x 14 mm  
Phillips Round  
Head Screw  
(12 pcs)




T1 - M6 Allen Wrench  
(1 pc)


# PARTS IDENTIFIER (Not to Scale)

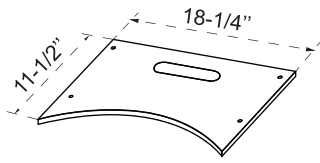 


P1 - Front Leg Apron  
(1 pc)

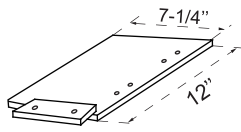 

 
P2 - Left Front Leg  
(assembles with P17)  
(1 pc)

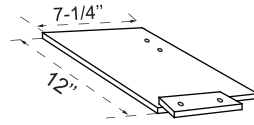

 
P3 - Right Front Leg  
(assembles with P18)  
(1 pc)




P4 - Ball Stop Bottom Board  
(1 pc)

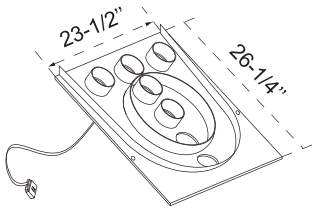 

 
P5 - Target Board  
with Scoring Sensors  
(1 pc)



 
P6 - Top Rail Plastic  
Corner Cap  
(2 pcs)

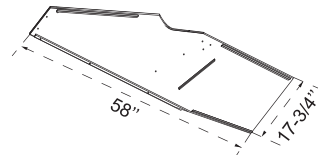


P7 - Right Back  
Cabinet Leg  
(1 pc)

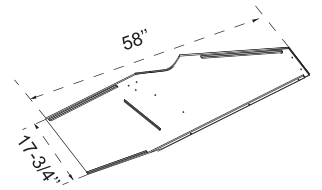 


P8 - Left Back  
Cabinet Leg  
(1 pc)

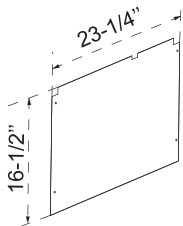 


P9 - Backboard with Graphic  
(1 pc)

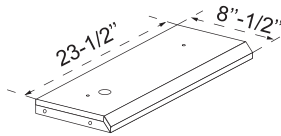 

 
P10 - Top Cabinet  
Panel for Scorer  
(1 pc)

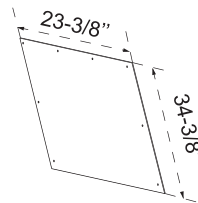

 
P11 - Upper Back  
Cabinet Board  
(1 pc)

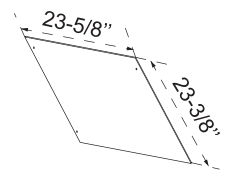

 
P12 - Lower Back  
Cabinet Board  
(1 pc)

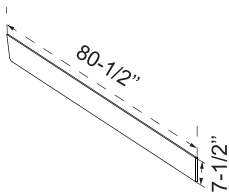


P13 - Left Side Apron  
(1 pc)

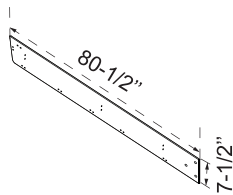 


P14 - Right Side Apron  
(1 pc)

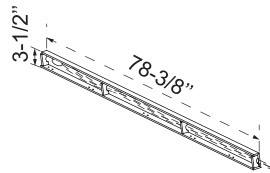 

 
(With ON/OFF switch+ wiring)  
P15 - Left Top Rail with  
Control Switch and Wiring  
(1 pc)

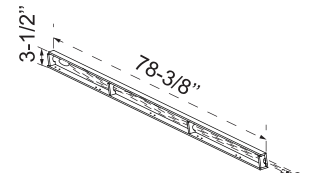


P16 - Right Top Rail  
(1 pc)

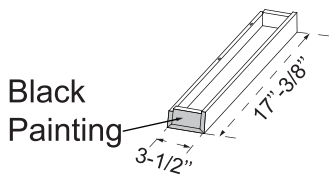 

 
Black  
Painting  
P17 - Left Leg  
(assembles with P2)  
(1 pc)

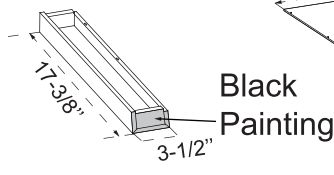

 
Black  
Painting  
P18 - Right Leg  
(assembles with P3)  
(1 pc)

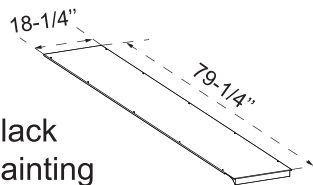

 
P19 - Playfield with  
End Ramp  
(1 pc)



 P20 - Wooden Support Brace  
(packed with black plastic "L" brackets)  
(1 pc)




P21 - Connecting Board  
(2 pcs)

 


P22 - Goal Box  
Bottom Board  
(1 pcs)



 
P23 - Metal Connection Plate  
(16 pcs)




P24 - Middle Support Board  
(2 pcs)

 


P25 - End Support Board  
(1 pc)

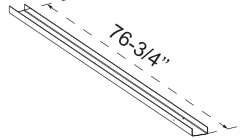 


P26 - Plastic Ball Return  
(1 pc)

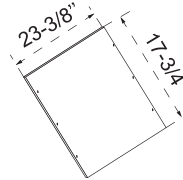 

P27 - Clear Plexiglass  
(1 pc)

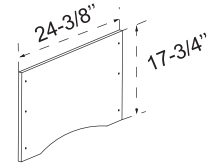 

 
P28 - Lower Front  
Cabinet Board  
(1 pc)

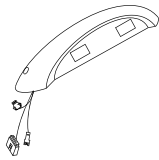


P29 - Electronic Scorer  
(1 pc)



 
P30 - Black Plastic  
"L" Bracket  
(6 pcs)

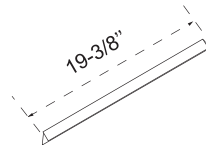

 P31 - Left Plastic  
Trim Strip  
(1 pc)

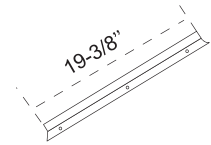

 P32 - Right Plastic  
Trim Strip  
(1 pc)



P33 - Plastic Connector  
(Playfield to Front Leg)  
(1 pc)

## ACCESSORIES IDENTIFIER (Not to Scale)



A1 - A/C Adapter  
(1 pc)



A2 - Ball  
(4 pcs)

## PARTS REQUIRED

- 1pc - **P13** Left Side Apron
- 1pc - **P14** Right Side Apron
- 1pc - **P15** Left Top Rail with Control Switch
- 1pc - **P16** Right Top Rail

- 10pcs - **P23** Metal Connection Plate
- 40pcs - **H3** Phillips Round head Screw

 
### STEP 1

Attach the **P14** Right Side Apron onto the **P16** Right Top Rail using the **P23** Metal Connection Plates and the pilot holes on the **P14/P16**, using the **H3** Phillips Round Head Screws as shown in **DETAIL A**.

Attach the **P13** Left Side Apron onto the **P15** Left Top Rail using the **P23** Metal Connection Plates and the pilot holes on **P13/P15**, using the **H3** Phillips Round Head Screws as shown in **DETAIL B**.

**Tighten, but DO NOT strip out H3 screws.**

**NOTE:** This assembly must be made on a flat, smooth, non-abrasive surface.

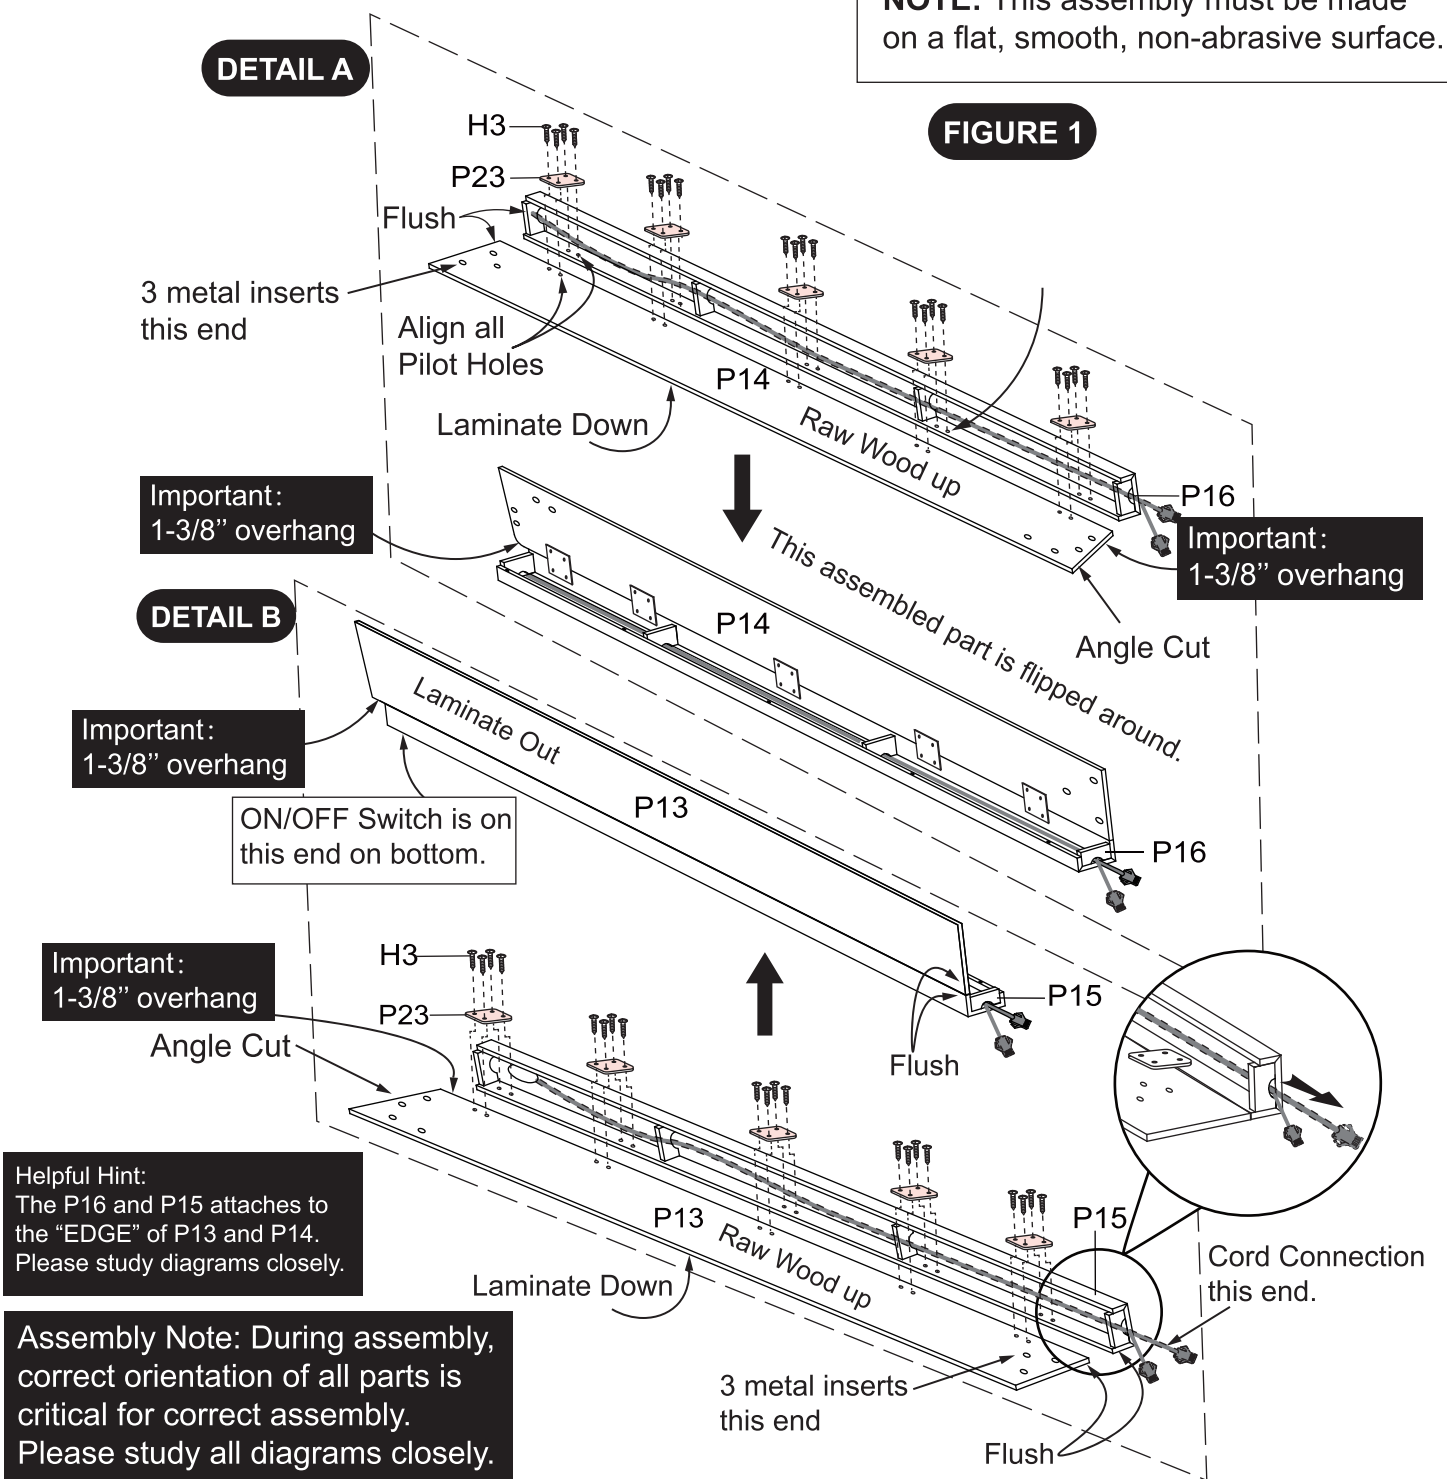

## PARTS REQUIRED

 
1pc - **P19** Playfield with End Ramp

10pcs - **H2** Phillips Round Head Screw

### STEP 2

Attach the **P19** Playfield onto the **STEP 1** Assemblies using the pilot holes and the **H2** Philips Round Head Screws as shown in **FIGURE 2**.

**Tighten, but DO NOT strip out H2 screws.**

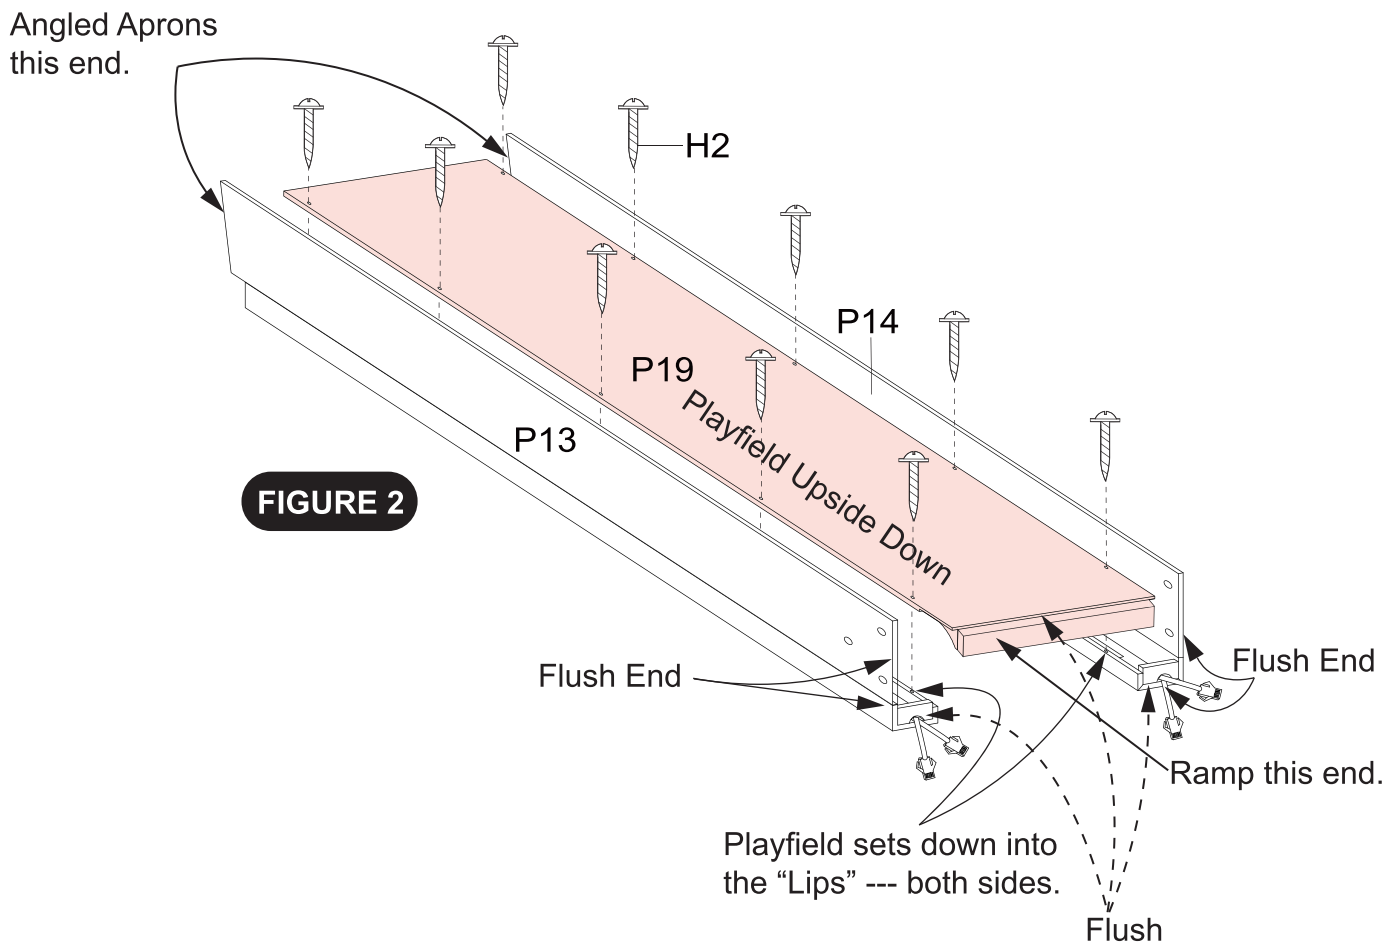

**Assembly Note:** During assembly, correct orientation of all parts is critical for correct assembly. Please study all diagrams closely.

## PARTS REQUIRED

1pc - **P1** End Apron  
 1pc - **P2** Left Front Leg  
 1pc - **P3** Right Front Leg  
 1pc - **P17** Left Leg

1pc - **P18** Right Leg  
 4pcs - **H2** Phillips Round Head Screw  
 20pcs - **H3** Phillips Round Head Screw  
 6pcs - **P23** Metal Connection Plate

 
### STEP 3

Attach the **P3** Right Front Leg onto the **P18** Right Leg using the **P23** Metal Connection Plates, the pilot holes and the **H3** Phillips Round Head Screws as shown in **DETAIL C**.

Attach the **P2** Left Front Leg onto the **P17** Left Leg using the **P23** Metal Connection Plates, the pilot holes and the **H3** Phillips Round Head Screws as shown in **DETAIL D**.

Attach the **DETAIL C / D** Assemblies onto the **P1** End Apron using the pilot holes and the **H2** Phillips Round Head Screws as shown in **FIGURE 3**.

**Tighten, but DO NOT strip out H2,H3 screws.**

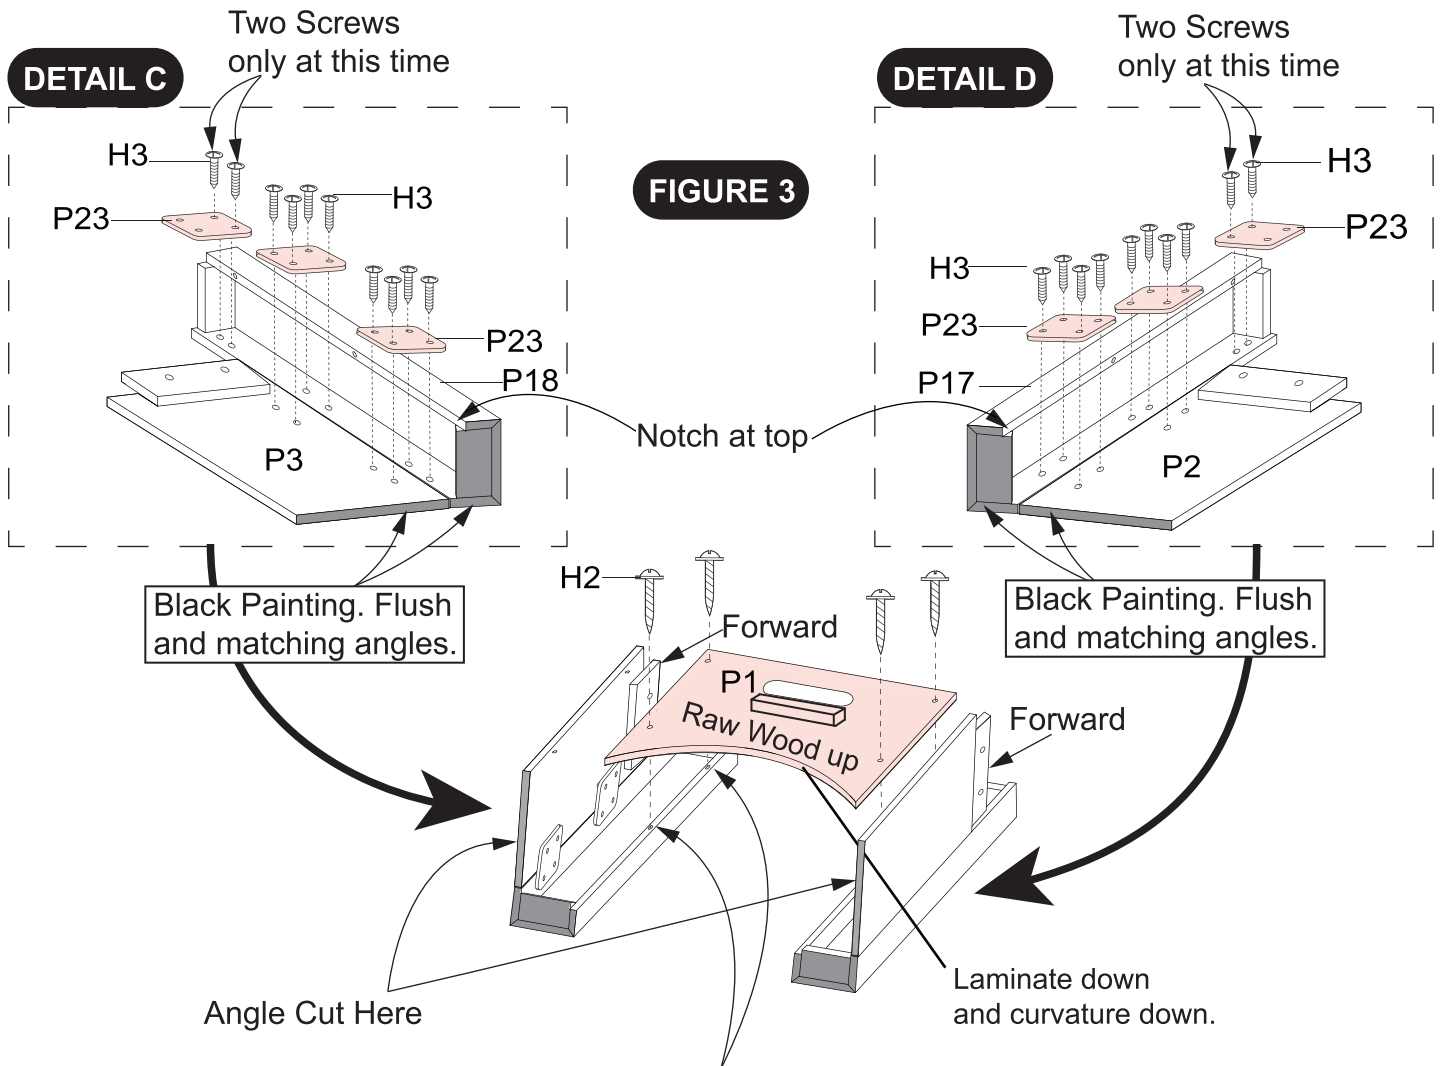


**NOTE:** Use the pilot holes for the H2 screws in the "notch" area of the P17 & P18 legs for correct orientation and assembly of the P1 end apron.

### PARTS REQUIRED

 1pc - **P33** Plastic Connector (Playfield to Front Leg)

#### STEP 4

Connect the **STEP 3** Front Leg Assembly onto the Playfield Assembly using the **P33** Plastic Connector as shown in **FIGURE 4**.

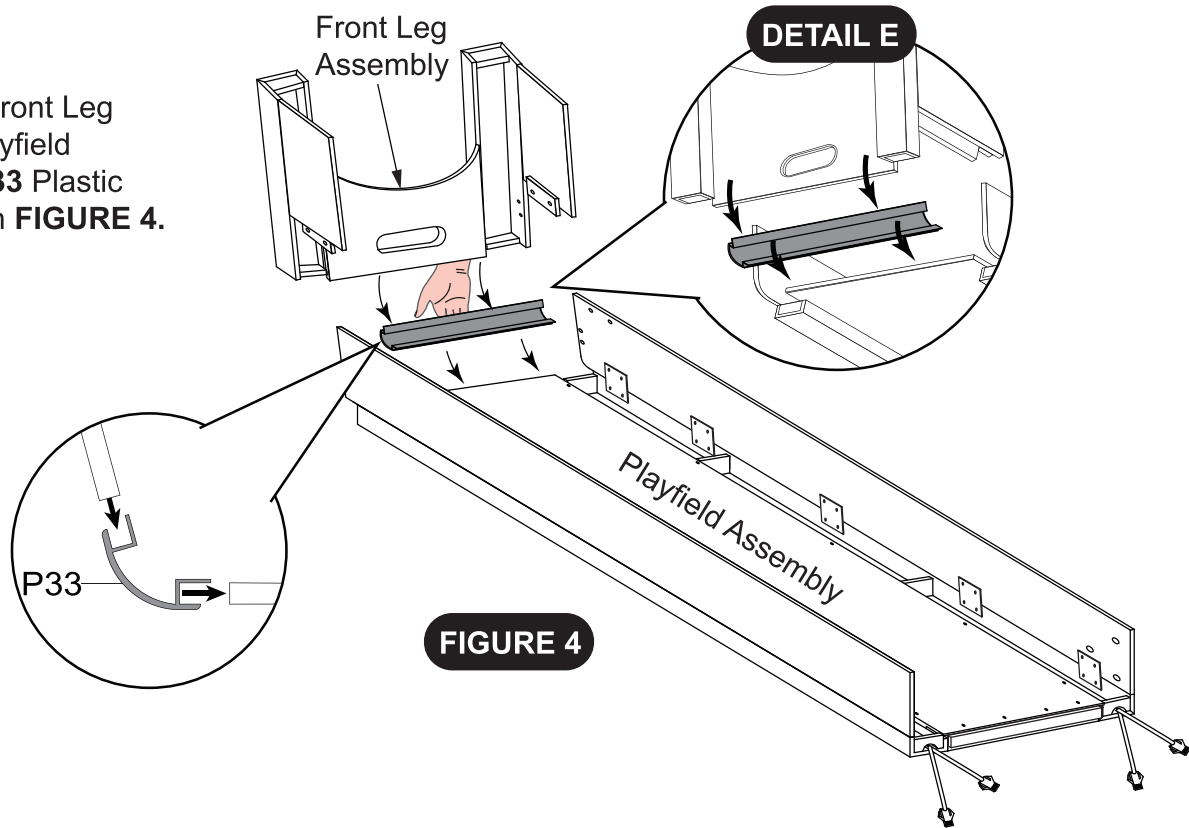

### PARTS REQUIRED

 
4pcs - **H1** Phillips Round Head Screw

4pcs - **H3** Phillips Round Head Screw

#### STEP 5

Attach the **STEP 3** Front Leg onto the **STEP 2** Assembly using the pilot holes and **H1** Phillips Round Screws, **H3** Phillips Round Screws as shown in **FIGURE 5**.

**Tighten, but DO NOT strip out H1, H3 screws.**

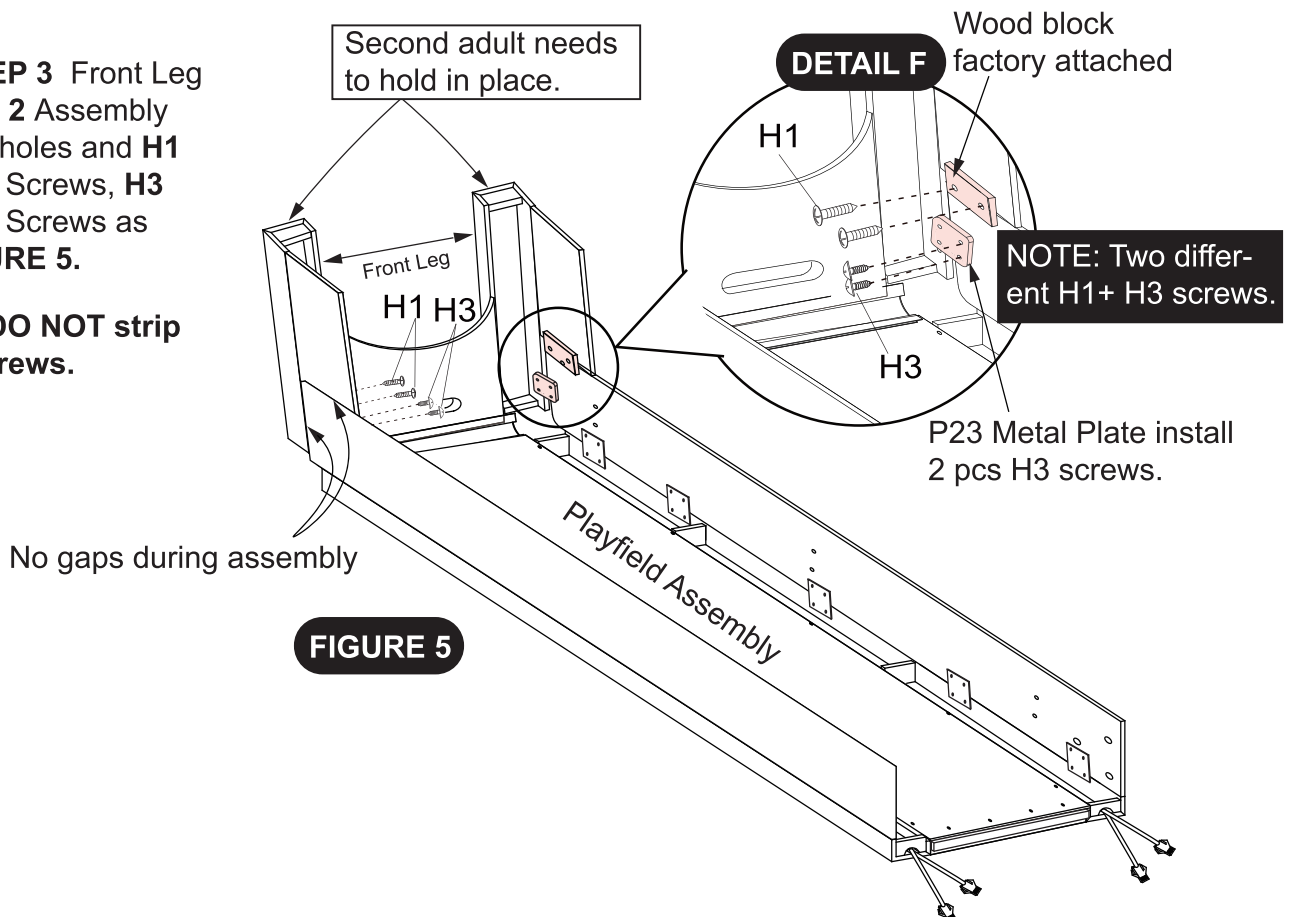

**PARTS REQUIRED**


- 2pcs - **P24** Middle Support Board
- 1pc - **P25** End Support Board
- 6pcs - **P30** Black Plastic "L" Bracket

- 12pcs - **H7** Phillips Round Head Screw

**STEP 6**

Attach the **P30** Plastic "L" Brackets onto the **P24 / P25** Support Boards using the pilot holes and the **H7** Phillips Round Screws as shown in **FIGURE 6**.

**Tighten, but DO NOT strip out H3 screws.**

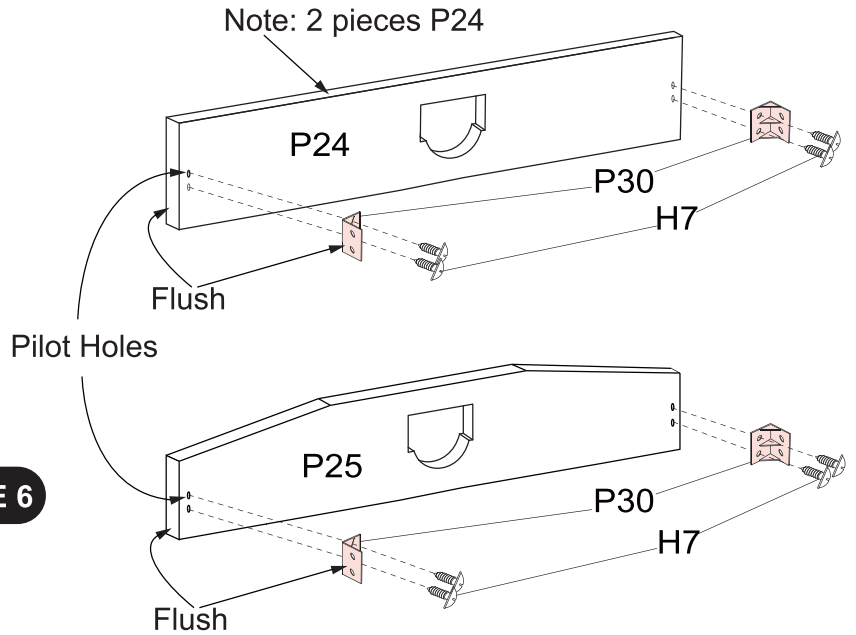 

**FIGURE 6**

**PARTS REQUIRED**


- 12pcs - **H3** Phillips Round Head Screw

**STEP 7**

Attach the **P24 / P25** Support Board Assemblies onto the Side Aprons using the pilot holes and the **H3** Phillips Round Screws as shown in **FIGURE 7**.

**Tighten, but DO NOT strip out H3 screws.**

**Assembly Note:** During assembly, correct orientation of all parts is critical for correct assembly. Please study all diagrams closely.

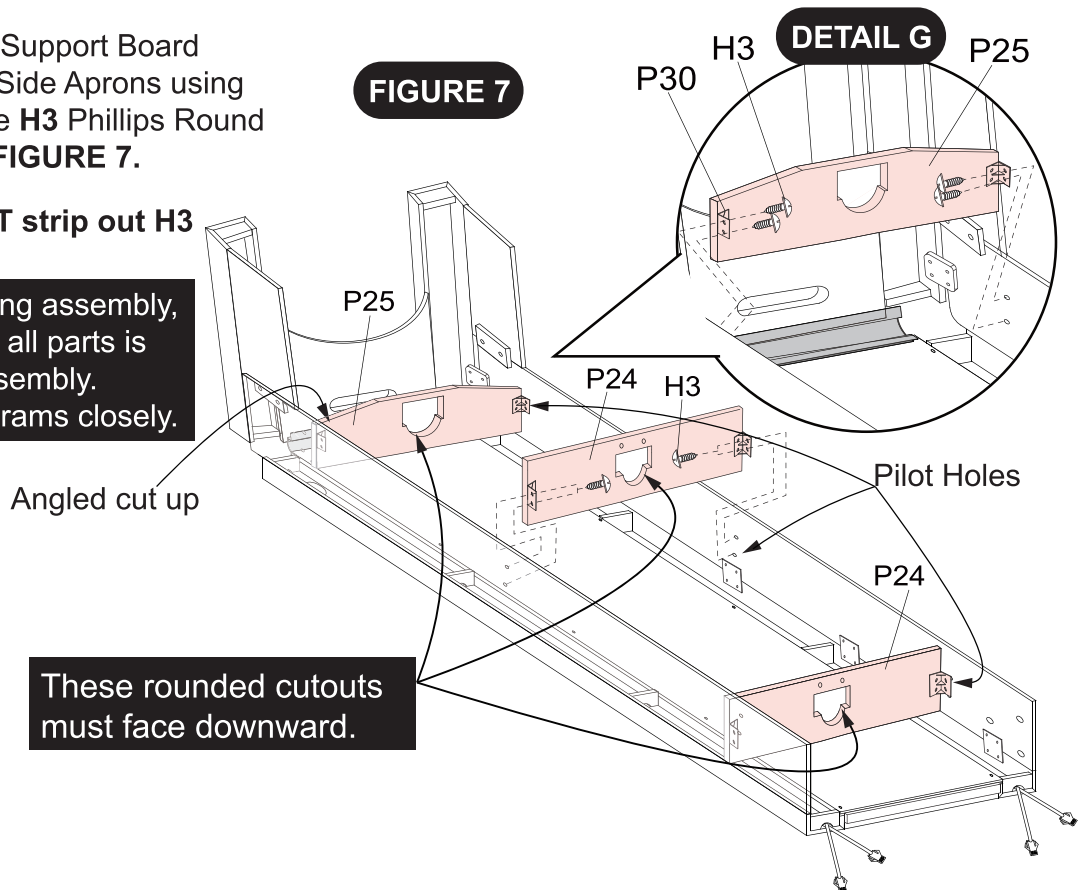 

**FIGURE 7**

**PARTS REQUIRED**


2pcs - **P21** Connecting Board  
 6pcs - **H4** Allen Head Bolt

6pcs - **H5** Flat Washer  
 6pcs - **H6** Lock Washer

**STEP 8**

Attach the **P21** Connecting Boards onto the inside of the Side Aprons using the **H4** Allen Head Bolts, **H5** Flat Washers, **H6** Lock Washers as shown in **DETAIL H**.

**Tighten H4 bolts using T1 Allen Wrench--- DO NOT overtighten.**

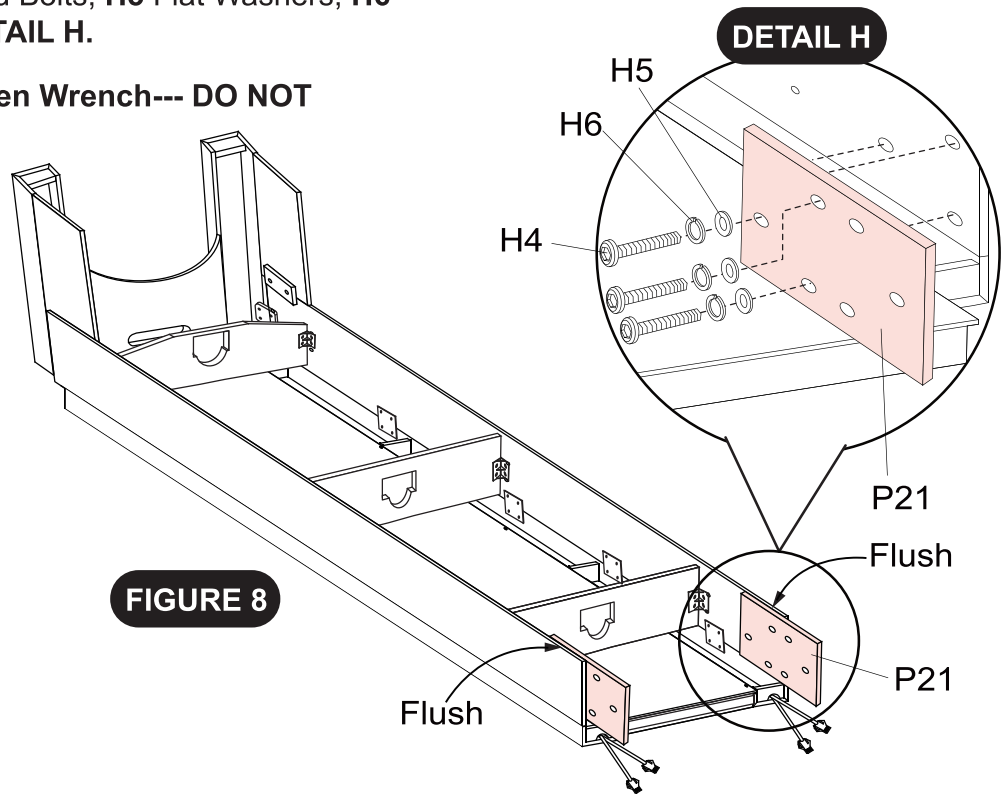 

**FIGURE 8**

**PARTS REQUIRED**

 
1pc - **P20** Wooden Support Brace  
 1pc - **P26** Plastic Ball Return

2pcs - **H3** Phillips Round Head Screw

**STEP 9**

Attach the **P20** Wooden Support Brace onto the **P26** Plastic Ball Return using the **H3** Phillips Round Head Screws as shown in **FIGURE 9**.

**Tighten, but DO NOT strip out H3 screws.**

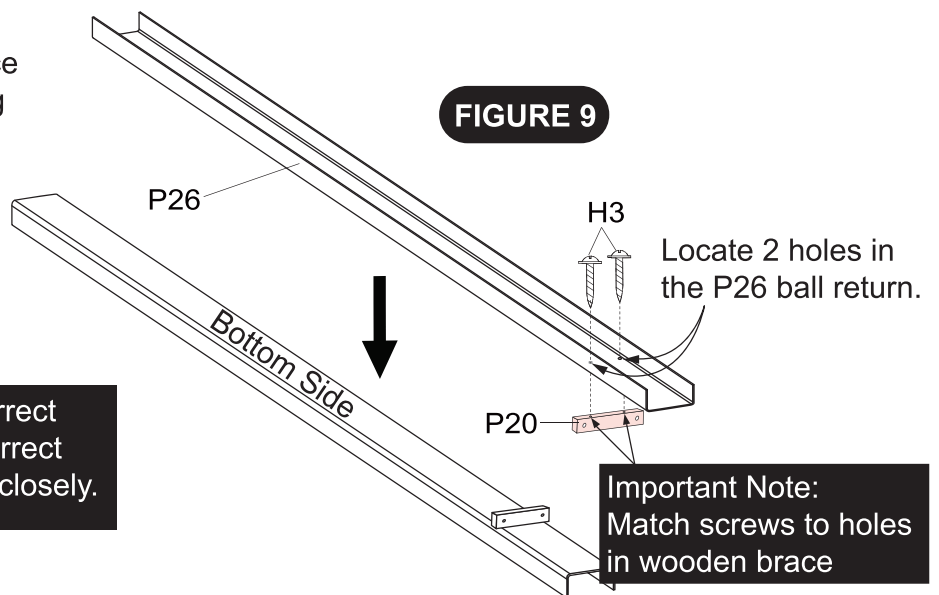

**Assembly Note:** During assembly, correct orientation of all parts is critical for correct assembly. Please study all diagrams closely.

**Important Note:** Match screws to holes in wooden brace


## PARTS REQUIRED

 2pcs - H2 Phillips Round Head Screw

### STEP 10

Install and attach the **P26** Plastic Ball Return onto the **P24/25** Support Boards using the **H2** Phillips Round Screws as shown in **DETAIL I**.

Tighten, but **DO NOT** strip out H2 screws.

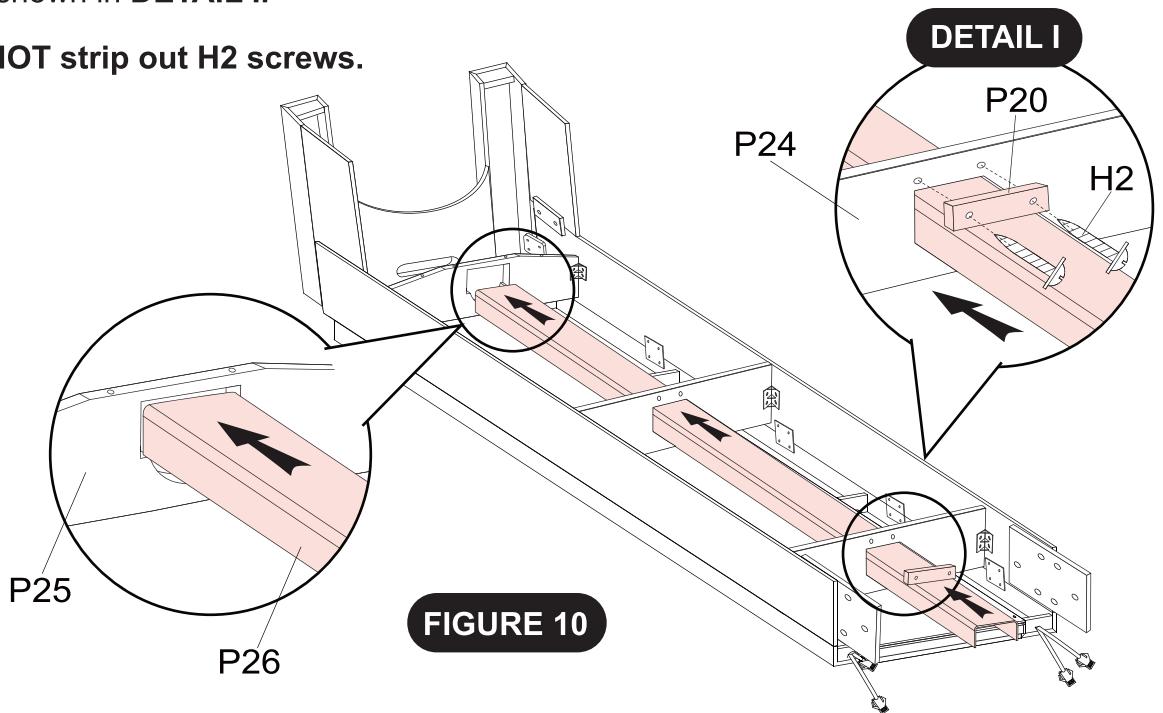

## PARTS REQUIRED

1pc - P22 Goal Box Bottom Board

 
4pcs - H2 Phillips Round Head Screw

**NOTE: NEED 2 ADULTS FOR ASSEMBLY**

### STEP 11

Attach the **P22** Goal Box Bottom Board onto the **P25** End Support Board using the **H2** Phillips Round Screws as shown in **DETAIL J**.

Tighten, but **DO NOT** strip out H2 screws.

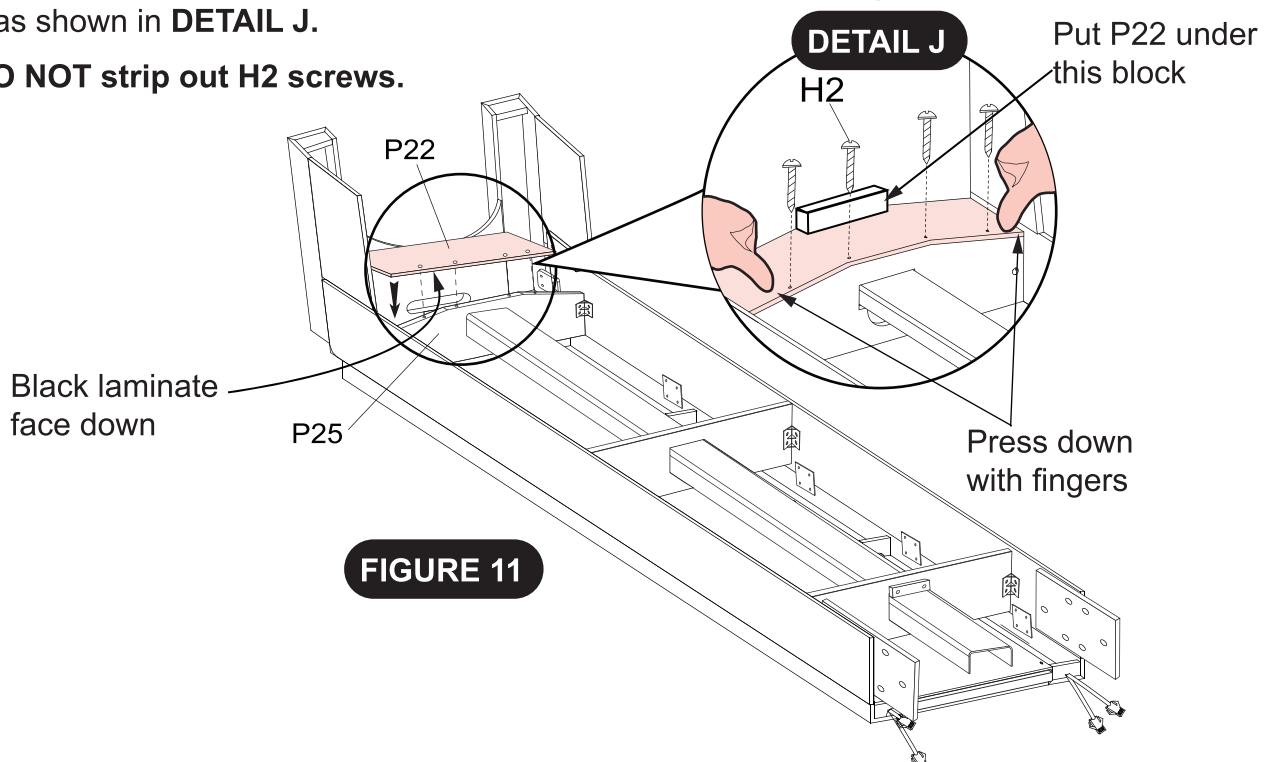

### PARTS REQUIRED

1pc - **P7** Right Back Leg  
1pc - **P8** Left Back Leg  
1pc - **P28** Back Board - D

 
4pcs - **H2** Phillips Round Head Screw

**NOTE: NEED 2 ADULTS FOR ASSEMBLY**

### STEP 12

Attach the **P28** Lower Front Cabinet Board onto the **P7 / P8** Back Legs using the pilot holes and the **H2** Phillips Round Screws as shown in **FIGURE 12**.

**Tighten, but DO NOT strip out H2 screws.**

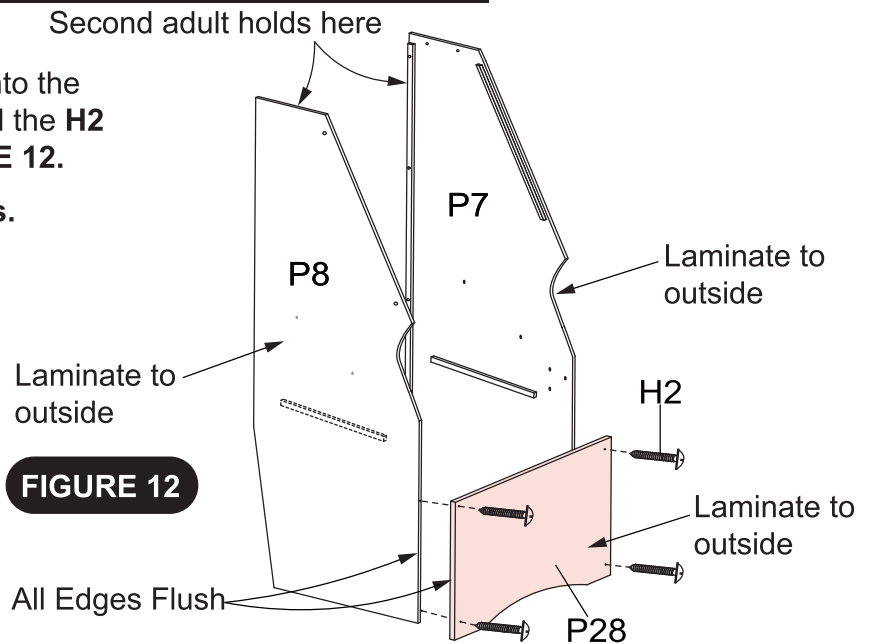

### PARTS REQUIRED

6pcs - **H4** Allen Head Bolt  
6pcs - **H5** Flat Washer

6pcs - **H6** Lock Washer

 
**NOTE: NEED 2 ADULTS FOR ASSEMBLY**

### STEP 13

Attach the **STEP 12** Assembly onto the **STEP 11** Assembly using the **H4** Allen Head Bolts, **H5** Flat Washers, **H6** Lock Washers as shown in **FIGURE 13**.

**Tighten all H4 Bolts using the T1 Allen Wrench--- DO NOT overtigten.**

Carefully stand between the P7 and P8 Left and Right Cabinet legs to install and tighten the H4 bolts .

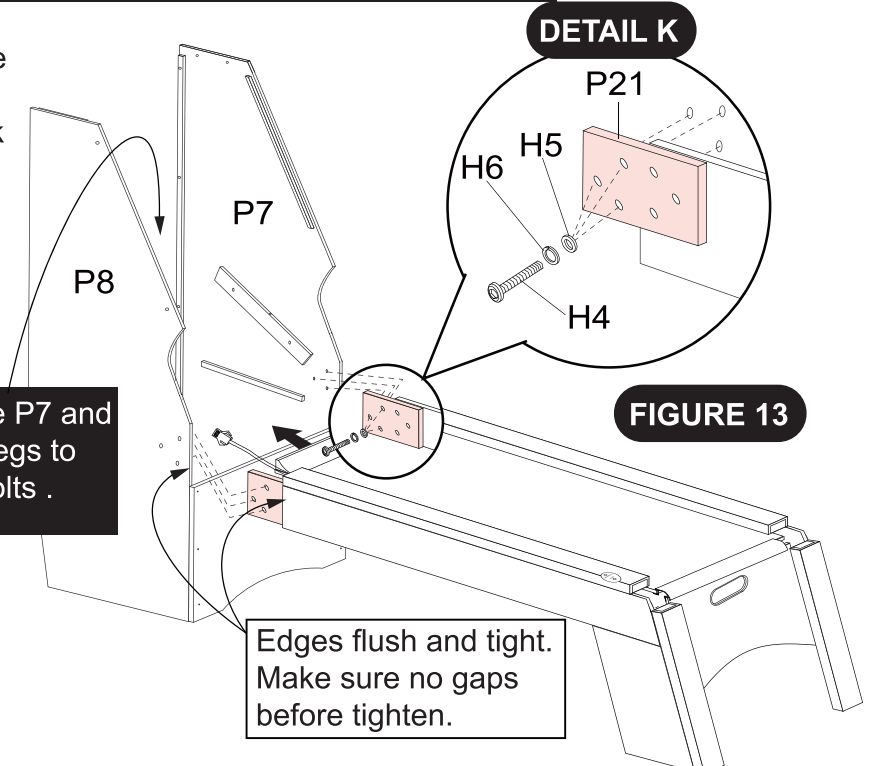

**PARTS REQUIRED**

 
 
1pc - **P4** Ball Stop Bottom Board

4pcs - **H1** Phillips Round Head Screw

**STEP 14**

Attach the **P4** Ball Stop Bottom Board onto the **P7 / P8** Back Legs using pilot holes and the **H1** Phillips Round Screws as shown in **FIGURE 14**.

Tighten, but **DO NOT** strip out **H1** screws.

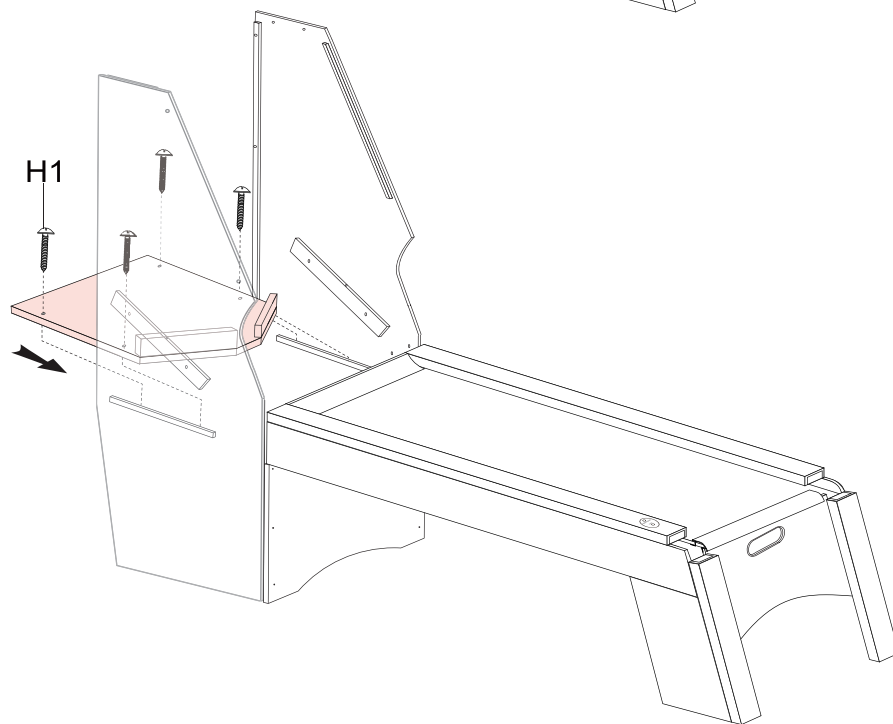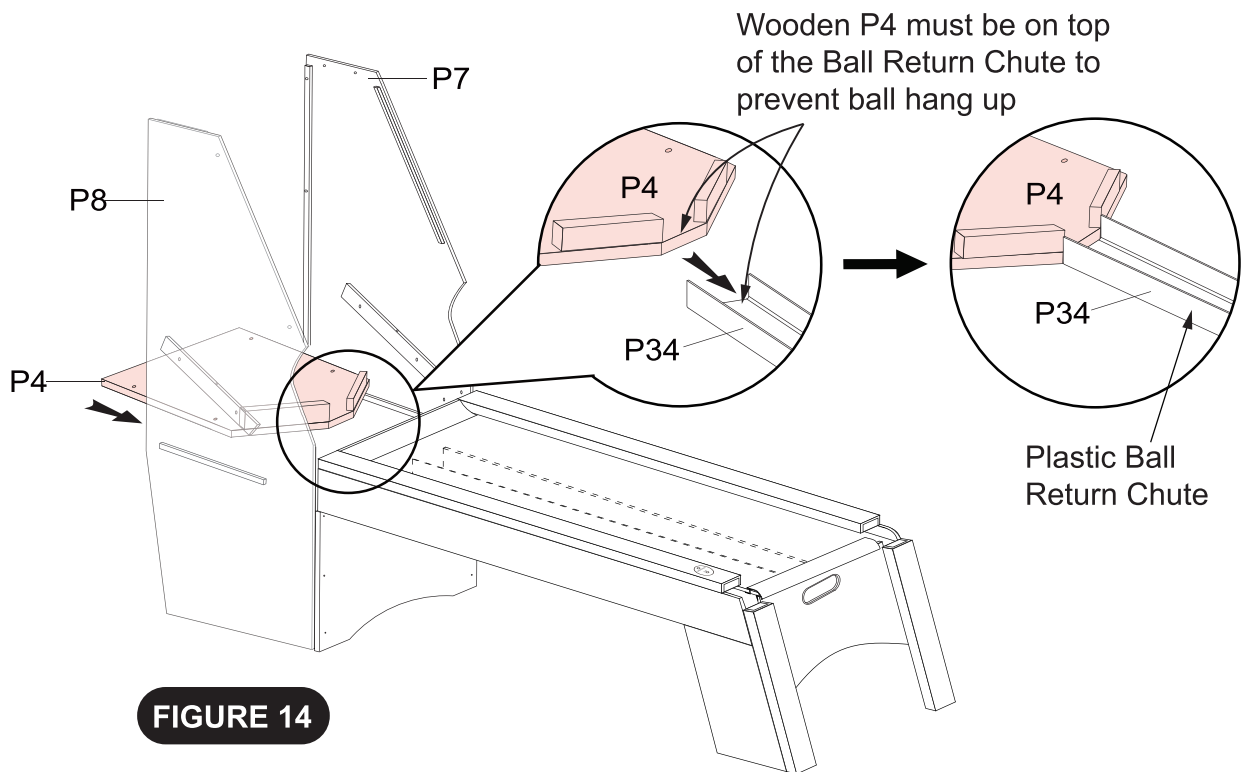

## PARTS REQUIRED

1pc - P27 Clear Plexiglass

6pcs - H3 Phillips Round Head Screw

 
### STEP 18

Install the P27 Clear Plexiglass onto the P7 / P8 Back Legs and attach onto the P10 Top Cabinet Panel using pilot holes and the H3 Phillips Round Screws as shown in FIGURE 18.

**Tighten, but DO NOT overtighten H3 Screws as this could crack the plexiglass.**

#### NOTE:

The groove for the top of the P27 plexiglass is in the lower front side of the P10 top cabinet panel . If the plexiglass will not easily slip into this groove , it will be necessary to loosen the 4 pcs H4 bolts that hold the P10 top cabinet panel and carefully tap or push it forward thus moving the groove forward just enough to allow the P27 plexiglass to slip into the groove .

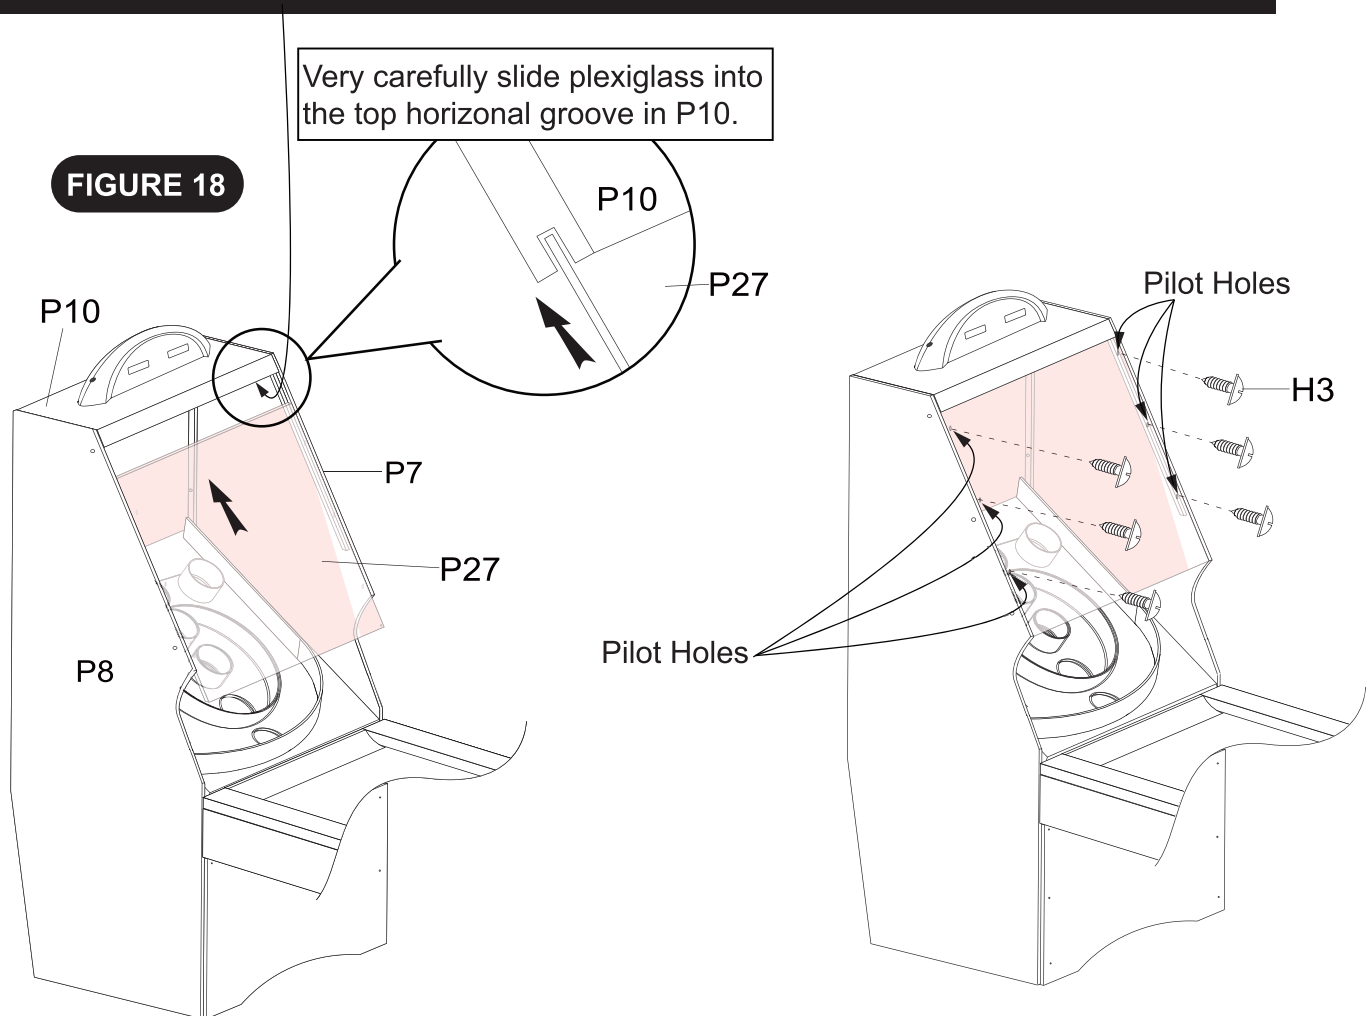

#### NOTE:

Carefully remove protective covering from the plexiglass before installation, avoid finger prints on the plexiglass by wearing cotton gloves.

### PARTS REQUIRED

1pc - **P12** Lower Back Cabinet Board

4pcs - **H1** Phillips Round Head Screw


### STEP 19

Attach the **P12** Lower Back Cabinet Board onto the **P7 / P8** Back Legs using pilot holes and the **H1** Phillips Round Head Screws as shown in **FIGURE 19**.

**NOTE:** All male/ female connectors must be turned correctly in order to plug into each other.

Tighten, but **DO NOT** strip out **H1** Screws.

 **FIGURE 19**

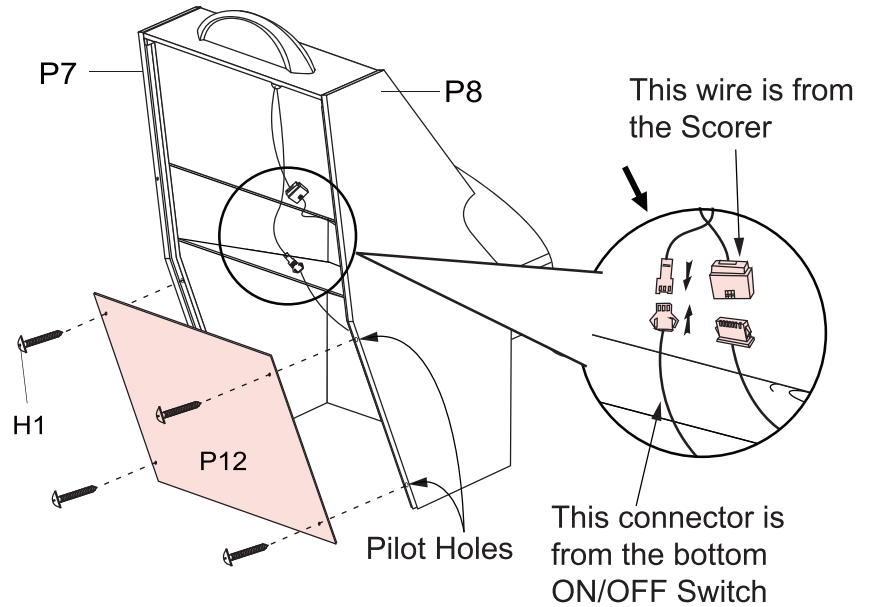

### PARTS REQUIRED

1pc - **P11** Upper Back Cabinet Board

6pcs - **H1** Phillips Round Head Screw

1pc - **A1** A/C Adapter

2pcs - **H2** Phillips Round Head Screw

### STEP 20


Attach the **P11** Upper Back Cabinet Board onto the Back Leg Cabinet using pilot holes and the **H1** and **H2** Phillips Round Screws as shown in **FIGURE 20**.

Tighten, but **DO NOT** strip out **H1**, **H3** Screws.

Plug **A1** A/C Adapter into back side of **P29** Electronic Scorer

Do not allow A/C Adapter cord to be a trip hazard.

 **FIGURE 20**

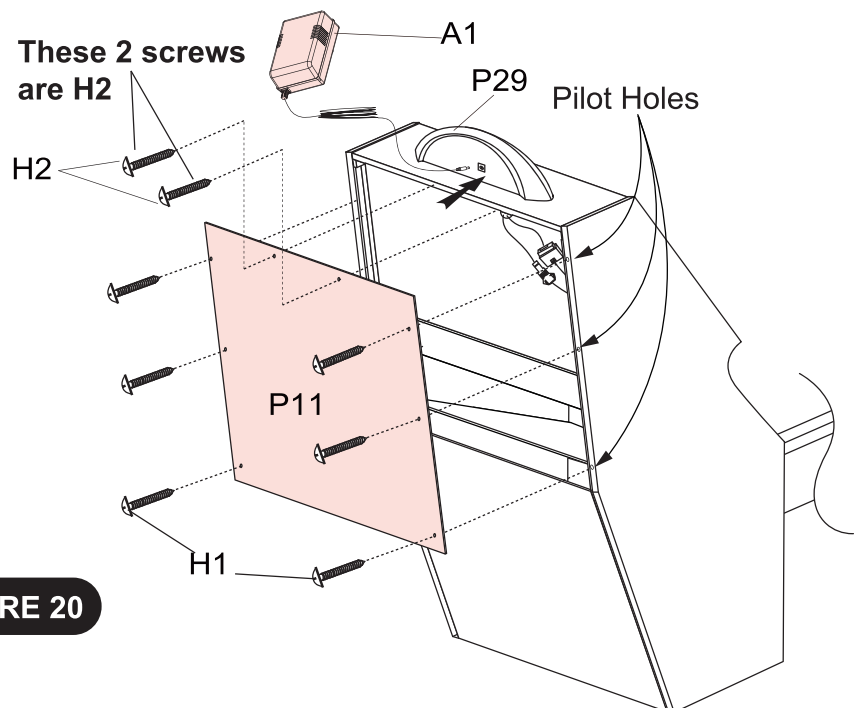

## PARTS REQUIRED

1pc - **P31** Left Plastic Trim Strip  
1pc - **P32** Right Plastic Trim Strip  
2pcs - **P35** Top Rail Plastic Corner Cap

 
14pcs - **H3** Phillips Round Head Screw

### STEP 21

Attach the **P31 / 32** Plastic Trim Strips onto the Cabinet using pilot holes and the **H3** Phillips Round Head Screws as shown in **FIGURE 21**.

Attach the **P35** Top Rail Plastic Corner Caps onto the Front Legs using pilot holes and the **H3** Phillips Round Screws as shown in **FIGURE 21**.

**Tighten, but DO NOT strip out H3 Screws.**

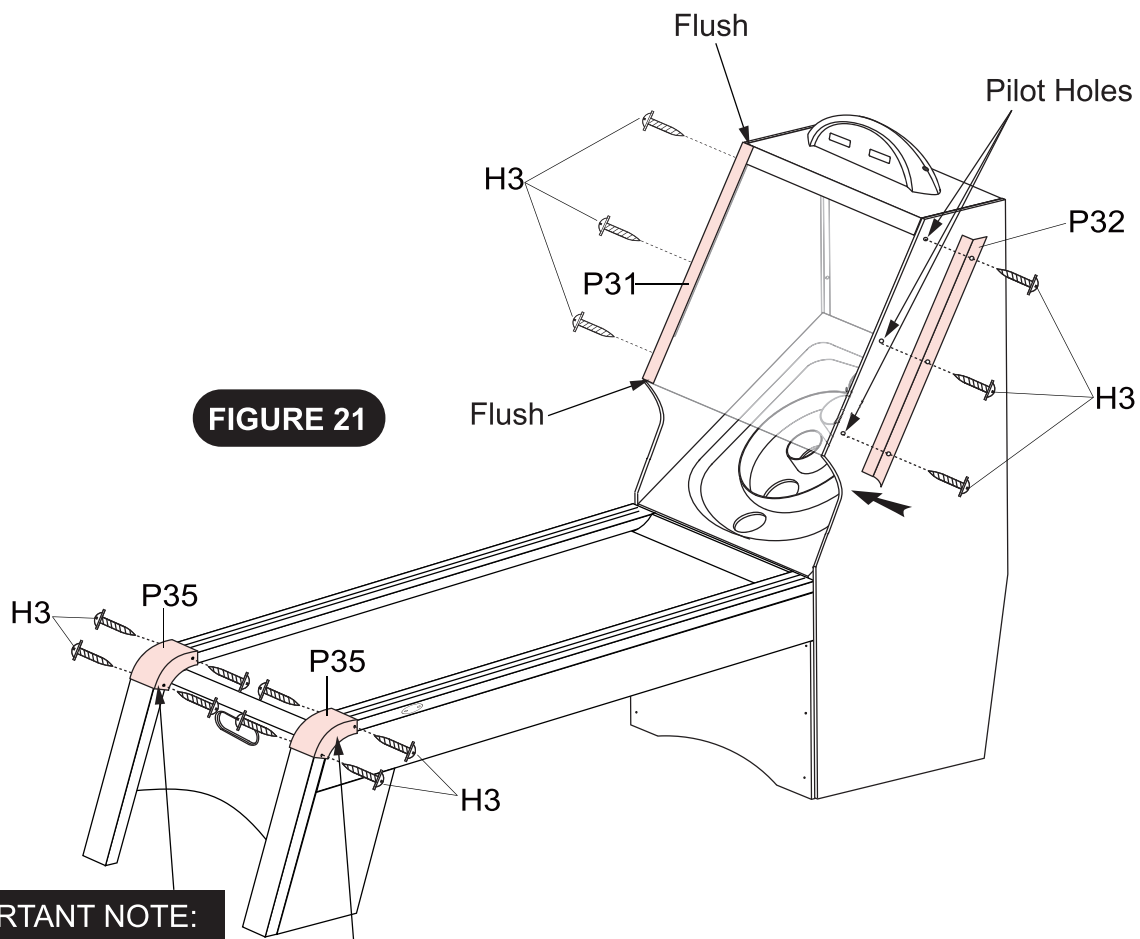


**IMPORTANT NOTE:**  
Smaller side to inside

**IMPORTANT NOTE:**  
Longer, wider side to outside



# ELECTRONIC CONNECTIONS

 NOTE: All male/ female connectors must be turned correctly in order to plug into each other.

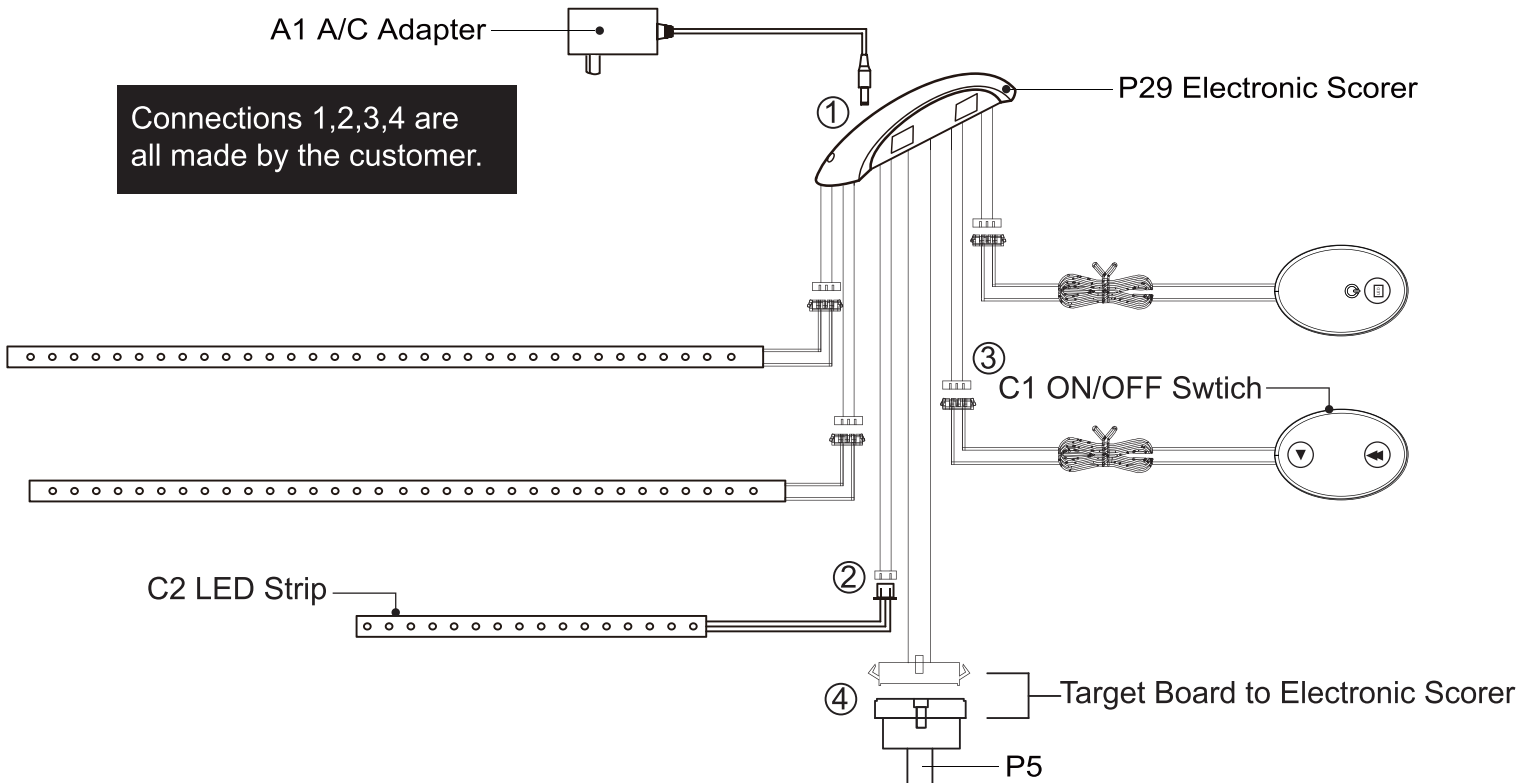

## Replacement of Scorer Sensor

  Unplug the connecting wire first.

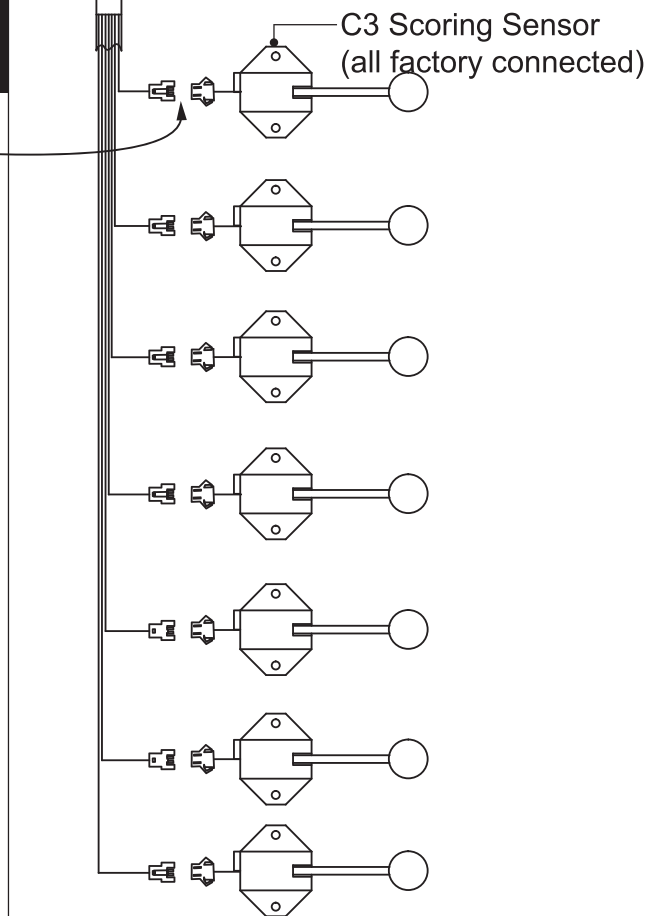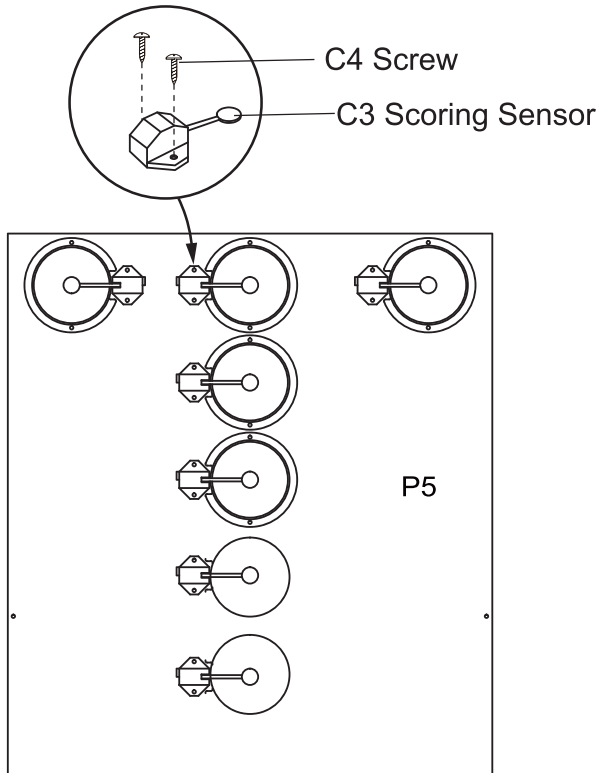

Congratulations! You have now assembled your game table. Please note the Care and Use instructions below to ensure many years of trouble-free use of your game table.

### CARE AND USE OF YOUR TABLE

1. Use spray furniture polish to clean all exterior surfaces of your game table and on the playfield (but not the plexiglass which requires an acrylic cleaner/polish).
2. Use only a suitable UK AC household outlet, and ensure the cord is not a trip hazard.
3. This product is intended for **INDOOR** use only.
4. **DO NOT** sit, climb or lean on the table.
5. **DO NOT** drag the table when moving it. This will damage the legs.
6. **DO NOT** set drinks on the table.

### PRODUCT PARTS LIST FOR MODEL

**#188805**

Key #	Part #	Description	Qty.
H1	188805HLH1	3.5 mm x 18 mm Phillips Round Head Screw	24
H2	188805HLH2	3.5 mm x 28 mm Phillips Round Head Screw	28
H3	188805HLH3	3.5 mm x 12 mm Phillips Round Head Screw	98
H4	188805HLH4	6 mm x 25 mm Allen Head Bolt	16
H5	188805HLH5	6.5 mm x 18 mm Flat Washer	16
H6	188805HLH6	M6 Lock Washer	16
H7	188805HLH7	3.5 mm x 14 mm Phillips Round Head Screw	12
T1	188805HLT1	M5 Allen Wrench	1
P1	188805HLP1	Front Leg Apron	1
P2	188805HLP2	Left Front Leg	1
P3	188805HLP3	Right Front Leg	1
P4	188805HLP4	Ball Stop Bottom Board	1
P5	188805HLP5	Target Board with Scoring Sensors	1
P6	188805HLP6	Top Rail Plastic Corner Cap	2
P7	188805HLP7	Right Back Cabinet Leg	1
P8	188805HLP8	Left Back Cabinet Leg	1
P9	188805HLP9	Backboard with Graphic	1
P10	188805HLP10	Top Cabinet Panel for Scorer	1
P11	188805HLP11	Upper Back Cabinet Board	1
P12	188805HLP12	Lower Back Cabinet Board	1
P13	188805HLP13	Left Side Apron	1
P14	188805HLP14	Right Side Apron	1
P15	188805HLP15	Left Top Rail with Control Switch and Wiring	1
P16	188805HLP16	Right Top Rail	1
P17	188805HLP17	Left Leg (assembled with P2)	1
P18	188805HLP18	Right Leg (assembled with P3)	1
P19	188805HLP19	Playfield with End Ramp	1
P20	188805HLP20	Wooden Support Brace (packed with P30)	1
P21	188805HLP21	Connecting Board	2
P22	188805HLP22	Goal Box Bottom Board	1
P23	188805HLP23	Metal Connection Plate	16
P24	188805HLP24	Middle Support Board	2
P25	188805HLP25	End Support Board	1
P26	188805HLP26	Plastic Ball Return	2
P27	188805HLP27	Clear Plexiglass	1
P28	188805HLP28	Lower Front Cabinet Board	1
P29	188805HLP29	Electronic Scorer	1

<b>Key #</b>	<b>Part #</b>	<b>Description</b>	<b>Qty.</b>
P30	188805HLP30	Black Plastic "L" Bracket	6
P31	188805HLP31	Left Plastic Trim Strip	1
P32	188805HLP32	Right Plastic Trim Strip	1
P33	188805HLP33	Plastic Connector (Playfield to Front Leg)	1
A1	188805HLA1	A/C Adapter	1
A2	188805HLA2	Ball	4
C1	188805HLC1	ON / OFF Switch	1
C2	188805HLC2	Led Strip	2
C3	188805HLC3	Scoring Sensor	7
C4	188805HLC4	3.5mm x 12mm Phillips Round Head Screw	14
K1	188805HLK1	Hardware Kit	1
M1	188805-HLM1	Instruction Manual	1



**VEVOR<sup>®</sup>**

**TOUGH TOOLS, HALF PRICE**

Technical Support and E-Warranty Certificate  
[www.vevor.com/support](http://www.vevor.com/support)