

OUTDOOR WICKER BAR STOOLS

Assembly Instructions


Warning

- Children are not allowed to assemble the product. During assembly, keep all small parts out of the reach of children, as it may be fatal to swallow or inhale them.
- Children are forbidden to climb or play on the product. Climbing or playing on the product may result in serious bodily injuries.

Note

- The product must be assembled and used in accordance with the provisions of the manual.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects directly on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Please assemble the item on a spacious surface; to aviod product damage, do not place the unwrapped product directly on the ground.
- Please do not stand or sit on the wooden boards.
- Please keep the product away from sharp, pointed objects and corrosive substances to prevent product damage.
- If the stool legs are loose, please tighten the screws as soon as possible to prevent the issue from persisting.


Parts List and Diagram

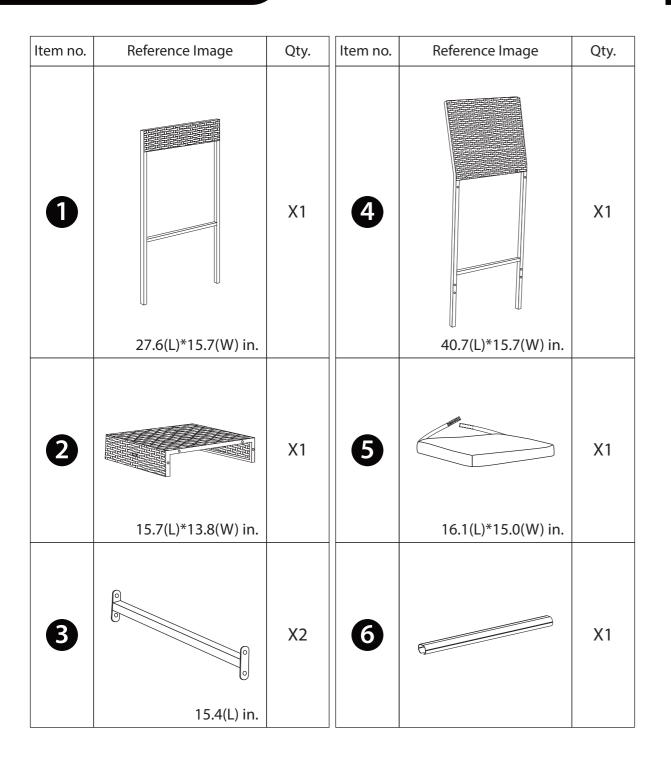

Assembly Steps




Connect Part 5 (1 pc.) and Part 6 (1 pc.) to the main body, as shown in the picture.

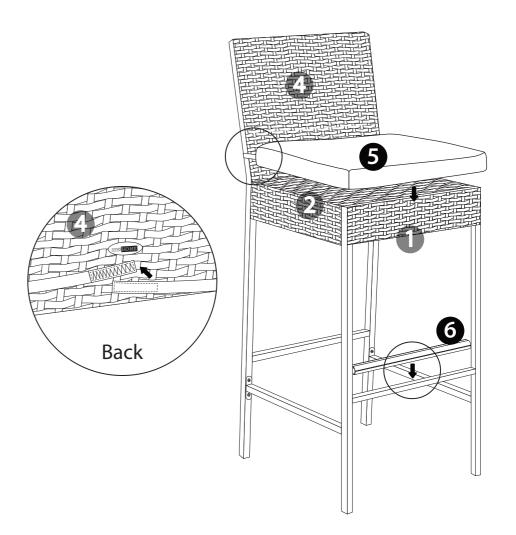


-2-

Assembly Steps

Connect Part 4 (1 pc.) to the main body with Part A screws (4 pcs.) and Part B screws (4 pcs.).

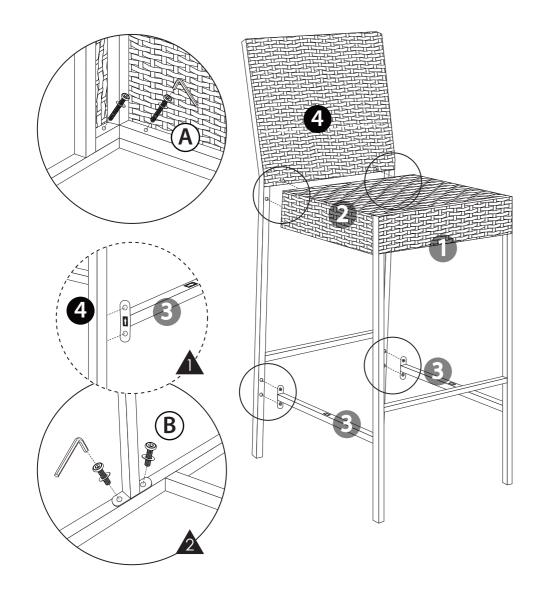

Parts List and Diagram

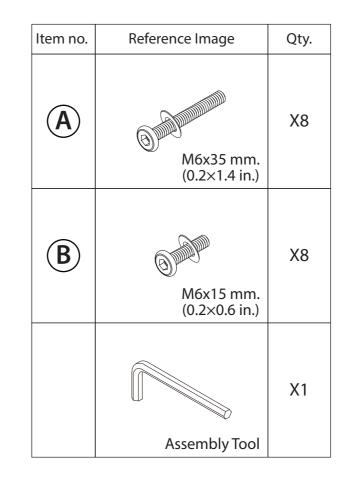

Assembly Steps

Use Part A screws (4 pcs.) to connect Part 1 (1 pc.) and Part 2 (1 pc.). Note: Please install the parts in the direction of the arrows.

Assembly Steps



Use Part B screws (4 pcs.) to connect Parts 3 (2 pcs.) and Part 1 (1 pc.). Note: Please install the parts in the direction of the arrows.

