

# Electric Oven

Product ID. QNSQ4



Scan for Support  
[support@garvee.com](mailto:support@garvee.com)



**GARVEE**.com

 
## Technical Sheet

Production	Single Wall Oven
Item No.	G66MQ-AC
Rated Voltage	240V
Rated Frequency	60Hz
Rated Power	3000W
Capacity	66L
Dimension(WxHxD)	23.43X23.43X22.64in
Installation Size(WxHxD)	22.24X23.43X22.83in


## APPLIANCE DOOR

With good care and cleaning, your appliance will retain its appearance and remain fully functional for a long time. This will tell you how to remove the appliance door and clean it.

For cleaning purposes, you can unlock the hinge to remove door, as below fig shows.

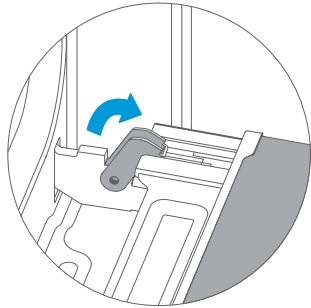


Unlock position

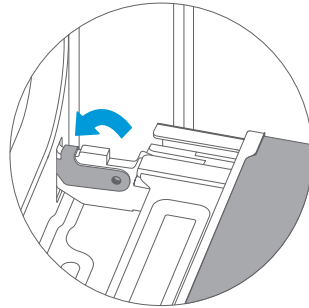 

Lock position

### For clean door glass

 1. Press button on the right and left side of the cover.
2. Remove the cover. After removing the cover, the door glass can be easily removed to clean.
3. When finish cleaning door glass , put the glass and cover back, then press on it until it clicks audibly into place.

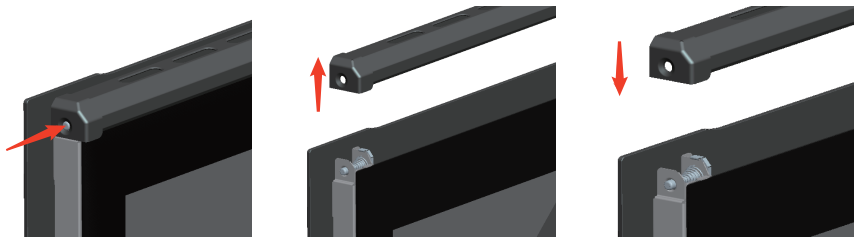

## SAFETY INFORMATION

Thank you for purchasing our product. We hope you enjoy using the many features and benefits it provides. Before using this product please study this entire Instruction Manual carefully.

Only then will you be able to operate your appliance safely and correctly. Warmly recommend retain the instruction manual and installation instructions for future use or for subsequent owners.

The appliance is only intended to be fitted in a kitchen. Observe the special installation instructions.

## WARNING

1. When the oven is first switched on, it may give off an unpleasant smell. This is due to the bonding agent used for the insulating panels within the oven. Please run up the new empty product with the conventional cooking function, 482 °F, 90 minutes to clean oil impurities inside the cavity.
2. During the first use, it is completely normal that there will be a slight smoke and odors. If it does occur, you merely have wait for the smell to clear before putting food into the oven.
3. Please use the product under the open environment.
4. If the appliance is defective, unplug the appliance from the mains or switch off the circuit breaker in the fuse box. Contact the after-sales service. Incorrect repairs are dangerous. Repairs may only be carried out and damaged power cables may only be replaced by one of our trained after-sales technicians.
5. The cable insulation of the electrical appliances may melt when touching hot parts. Never bring the cables into contact with hot parts.
6. Must plug off this oven when you clean it with wet cloth or sponge , or may result in an electric shock.
7. A defective appliance may cause electric shock. Never power on it, then contact the after-sales service.
8. The appliance becomes very hot when it's working, do not touch the interior surfaces of the appliance or the heating elements.

## WARNING

9. Always allow the appliance to cool down.
10. Keep children at a safe distance.
11. Accessories and ovenware become very hot. Always use oven gloves to remove accessories or ovenware from the cavity.
12. Alcoholic vapors may catch fire in the hot cooking compartment. Never prepare food containing large quantities of food with high alcohol content.
13. The accessible parts become hot during oven working. Never touch the hot parts. Keep children at a safe distance.
14. Hot air escape when you open the appliance door, it may not be visible depending on its temperature. When opening, do not stand too close to the appliance. Open the appliance door carefully. Keep children away.
15. Scratched glass door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents to clean the door glass.
16. When opening and closing the door, keep your hands away from the hinges to avoid trapped.
17. Combustible items stored in the cavity may catch fire. Never store combustible items in the cavity. Never open the appliance door if there is smoke inside. Switch off the oven and cut off power immediately.
18. Greaseproof paper may come into contact with the heating element and catch fire. Only cover the surface required with greaseproof paper when it is necessary, Greaseproof paper must not protrude over the accessories.
19. This appliance is intended to household used only.
20. This appliance can be used by children aged from 8 years and above and person with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliances in a safe way and understand the hazards involved.
21. Cleaning and user maintenance shall not be made by children without supervision.
22. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
23. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## USING YOUR APPLIANCE

After the oven has been electrically connected, put food into cavity, turn the function knob to select functions, turn temperature knob to select temperature, then turn the timer to select time, the oven start to work.

NOTE: Turn timer knob or function knob to position, the oven will stop work.

### Caution!

The oven will not stop working when open door, be careful when you need to open the door when it's working.









After the appliance switched off, it is still very hot inside the cavity. Never touch the interior surfaces of the appliance or the heating elements. Use oven gloves to remove accessories or ovenware from the cavity, and allow the appliance to cool down.

Keep children at a safe distance at the same time to avoid the injury of burns.

### Tips

 
1. Clean the cooking compartment after each use.
2. Always remove flecks of lime scale, grease, starch and albumin (e.g. egg white) immediately.
3. Use suitable ovenware for baking, roasting, grilling.

## CONTROL PANLE DESCRIPTION


Symbol	Function description
	Oven lamp: When turn this position, the lamp turn on. When select other heat mode, the lamp will turn on all the time.
	Defrost: The circulation of air at room temperature enables quicker thawing of frozen food.
	Radiant grilling: The inner grill element switches on and off to maintain temperature.
	Conventional cooking: The top and bottom work together to provide convectional cooking
	Convection: An element around the convection fan provides an additional source of heat for convection style cooking. In convection mode the fan automatically comes on to improve air circulation within the oven and creates an even heat for cooking.
	Convention with fan: Combination of the fan and both heating element provides more even heat penetration, saving up to 30-40% of energy. Dishes are lightly browned on the outside and still moist on the inside. Note: This function is suitable for grilling or roasting big pieces of meat at a higher temperature.
	Double grilling with fan: The inside radiant element and top element are working with fan.
	Bottom heater with fan: A concealed element in the bottom of the oven provides a more concentrative heat to the base of food without browning. This is ideal for slow cooking dishes such as casseroles, stews, pastries and pizzas where a crispy base is desired.

## INSTALLATION

unit:in

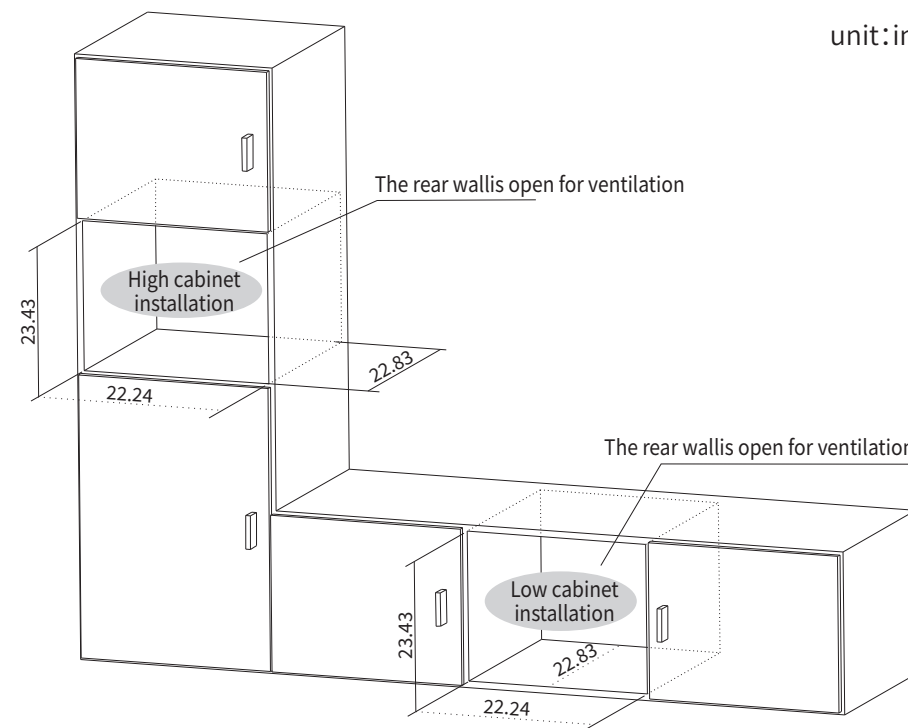


Mounting screw fixing position

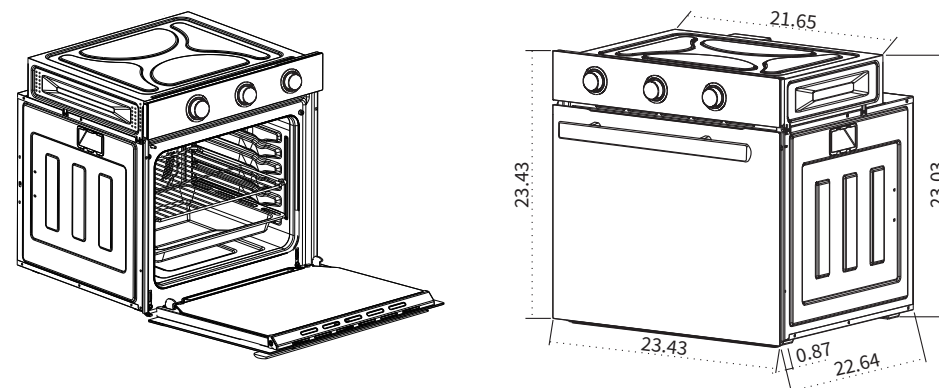 

## INSTALLATION

1. The electric oven should be placed in a stable, firm and easy-to-operate cabinet.
2. Install the oven as shown in the figure below to ensure air circulation around the electric oven;
3. The cabinet where the electric oven is placed must be firm, and the cabinet floor can withstand a weight of more than 60 kg; cabinet materials (wood, adhesive, Mixture) must withstand temperature above 248°F;
4. When move the electric oven, you should lift the electric oven from side handle hole and the bottom of the electric oven (do not drag the door or handle to move the electric oven), put the electric oven into the cabinet and slowly push it into the cabinet. Open the electric oven door and fix the electric oven on the cabinet with two self-tapping screws;
5. Before connecting power, please make sure:
  - The socket and circuit connected to the power supply must be reliably grounded;
  - After connect to the power supply, please check whether the power cord is in contact with heat-prone accessories. If there is contact, keep it away from a safe distance;
6. All installation and connection operations must be performed by professionals.
 
## CONTROL PANLE DESCRIPTION

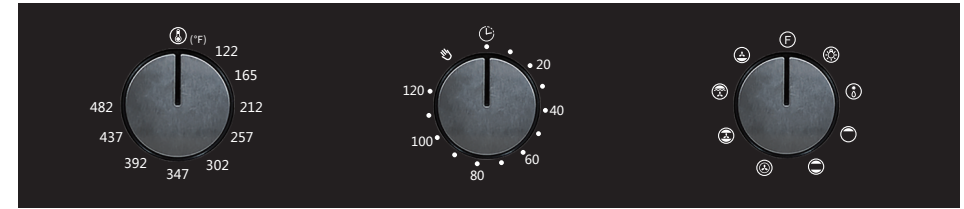

Symbol	Function description
	Temperature(°C): Max temp is 482 °F, Turn this knob to adjust cooking temperature.
	Timer knob: Max is 120min, when turn to this position , means no time limited, must turn back manually.
	Function knob

## Limited Liability & Warning

No Unauthorized Modifications/Repairs: Do not modify or attempt to repair this product unless you are an authorized technician. Unauthorized actions may create hazards and void all warranties

Misuse & Non-Compliance: We are not liable for any injury, damage, or loss resulting from:

- (a) misuse, abuse, neglect, or improper installation;
- (b) failure to follow instructions or safety precautions;
- (c) use of unauthorized parts/accessories;
- (d) unauthorized modifications/repairs;
- (e) accidents, natural disasters, or external causes.

If you doubt any step of installation or operation, stop using the product and contact authorized service or the customer support.

## LIMITACIÓN DE RESPONSABILIDAD Y ADVERTENCIA

Modificaciones o Reparaciones No Autorizadas: NO modifique ni intente reparar este producto a menos que sea un técnico autorizado. Las acciones no autorizadas pueden generar riesgos y anularán todas las garantías.

Uso Indebido e Incumplimiento: No asumimos responsabilidad alguna por lesiones, daños o pérdidas que resulten de:

- (a) uso indebido, abuso, negligencia o instalación incorrecta;
- (b) incumplimiento de las instrucciones o precauciones de seguridad;
- (c) uso de piezas o accesorios no autorizados;
- (d) modificaciones o reparaciones no autorizadas;
- (e) accidentes, desastres naturales o causas externas.

Si tiene dudas sobre algún paso de la instalación o el funcionamiento, deje de usar el producto y póngase en contacto con el servicio técnico autorizado o con atención al cliente.

**GARVEE**

**[support@garvee.com](mailto:support@garvee.com)**