


Coffee Table

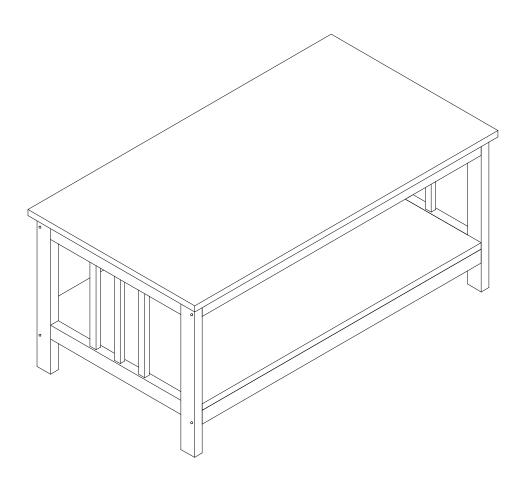


Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

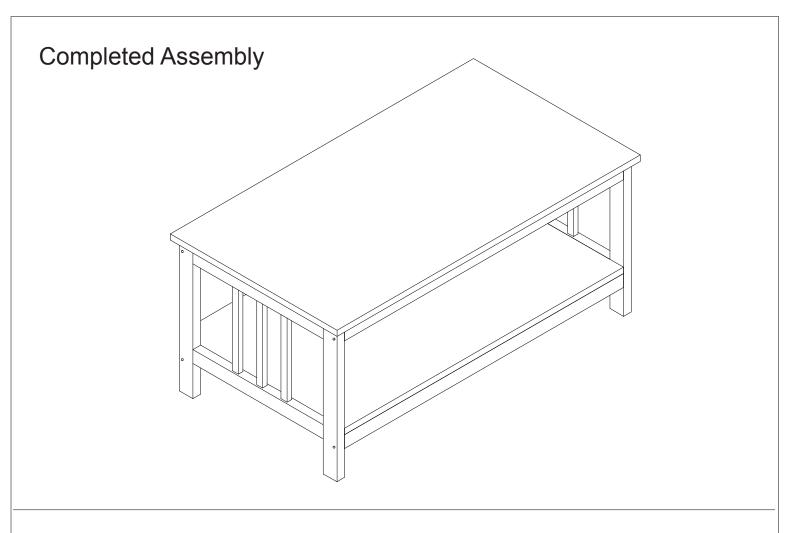

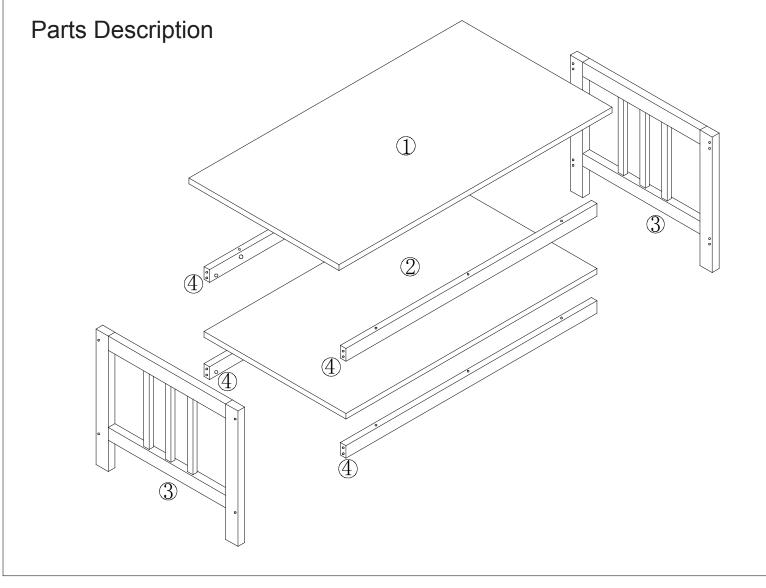

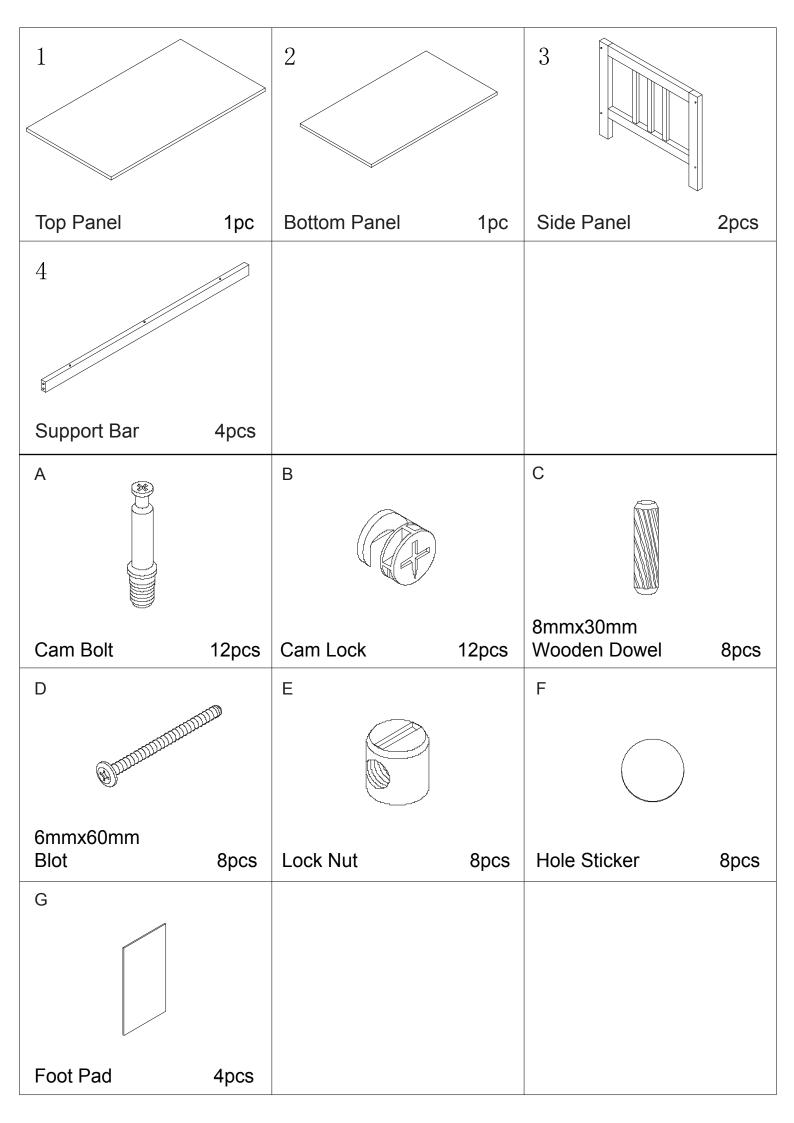

ASSEMBLY REQUIREMENTS:

2-Person Assembly 0.5 Hours Assembly Time (Approximate)

Tools Required (Not Provided)


Phillips Screwdriver

Flat Screwdriver



Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

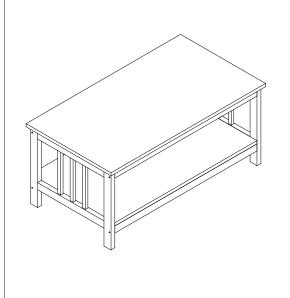

We appreciate your business!

ASSEMBLY PREPARATION

- 1. Remove all packaging materials, staples and packing straps from the carton.
- 2. Refer to Parts List and Hardware List and ensure they are complete before you start assembling.
- 3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION

- 1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY

- 1. Allow ample room for assembly and in close proximity to where product will be placed.
- 2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
- 3. Please check all of the parts and quantities are included before assembly. Contact customer service for missing parts.
- 4. Identify all of the parts, hardware and quantities required for each step.
- 5. During assembly, do not over-tighten any fittings as this may cause damage.
- 6. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
- 7. Always place the product on a flat surface.
- 8. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE

- · Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- · Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock




CAM BOLT




CAM LOCK


Cam Bolt


Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

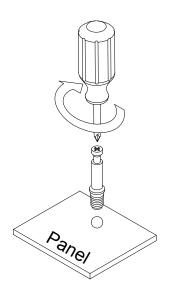

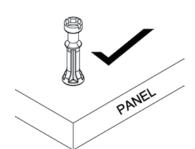



Shoulder is flushed (on the same level) with the panel.

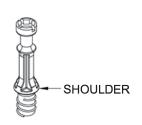

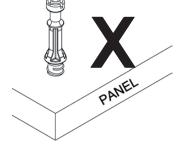



Shoulder is above the panel.

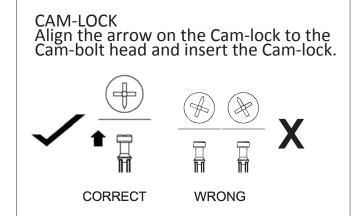

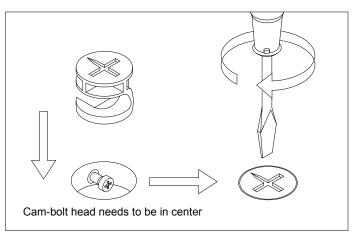

Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.

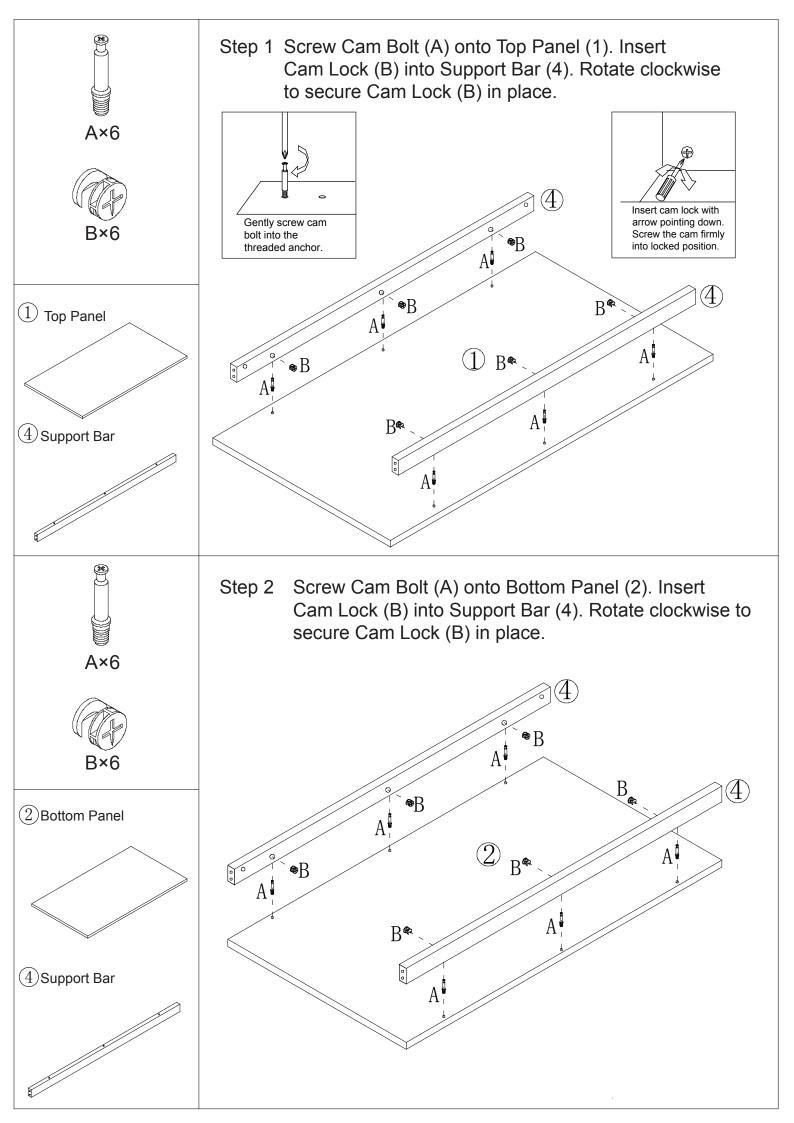

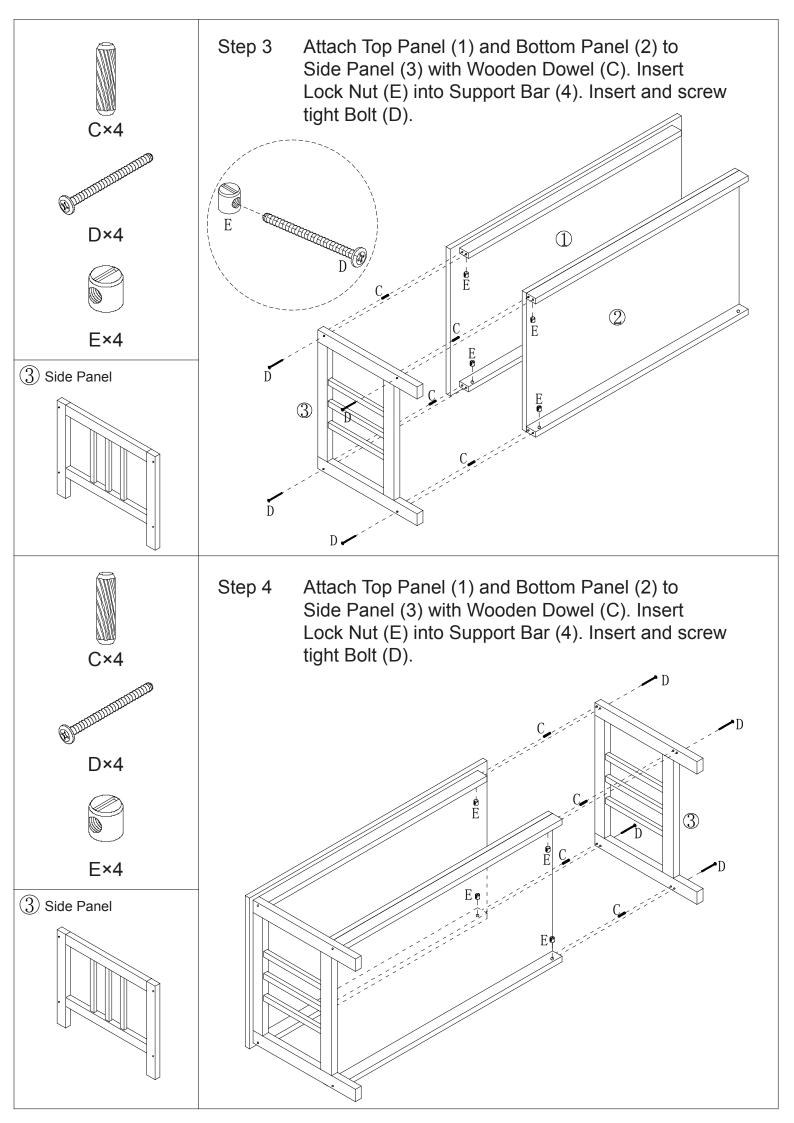

Completed Assembly

