
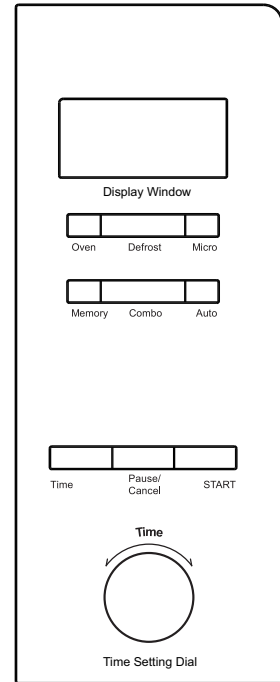


Combo Microwave-Oven

Model - CMO 800 T

QUICK OPERATION INSTRUCTIONS

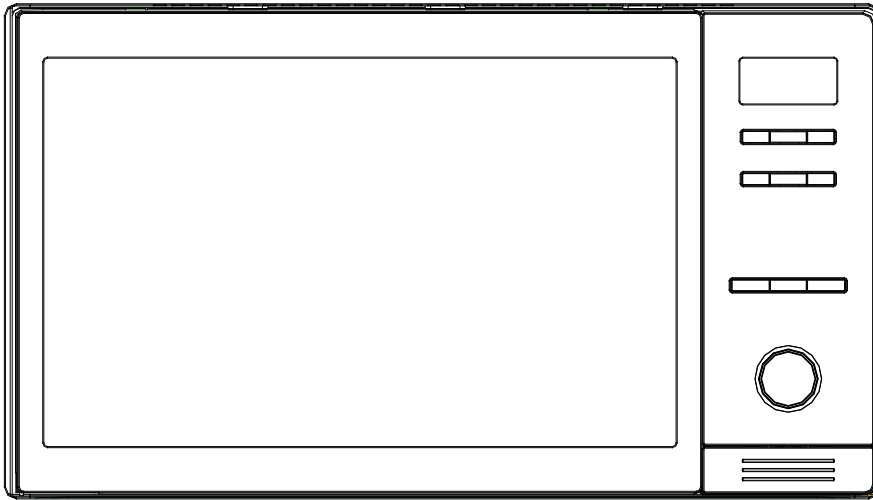

1. SINGLE BUTTON HEATING

With a single press of a button, you can start simple cooking.

Example: To heat a glass of water

- Put a glass of water onto the glass turntable and close the door
- Press the "Start" button. The microwave oven will work on P100 (100% Power) for 1 minute
- You will hear 5 beeps when heating is complete

2. MICROWAVE HEATING

Quick microwave heating P100 (100% power)

Example: To heat food for 5 minutes

- Rotate the Time Setting Dial until "5:00" is displayed
- Press "Start"

3. OVEN

This function has two power settings: G-1 and G-2

Example: Cooking food with G-1 for 20 minutes

- Press "Oven" until the LED displays "G-1"
- Set cooking time "20:00"
- Press "Start"

When oven is in use, the cooking time has 2 stages. After the 1st half of the cooking, the program will automatically pause and sound 2 beeps indicating you can open the oven and turn food over.

Close the door after turning the food over, the oven will re-start after 1 min pause.

4. COMBINATION COOKING (COMBO)

This appliance offers you a choice of two methods of combination cooking.

Combo power has 2 power settings: C-1 and C-2.

Example: Cooking food using C-2 for 30 minutes

- Press "Combo" button to select "C-2"
- Set cooking time "30:00"
- Press "Start"

5. PAUSE / CANCEL

- a) In the course of operation, pressing "Pause/Cancel" button will stop operation.
- b) If any program was set before pressing start, pressing this button will cancel all the set programs.

6. AUTO WEIGHT DEFROST

Select the food type and weight. It will automatically adjust the power level and time.

Example: defrost 500 grams (approx 1lb) frozen food

- a) Press the button "Defrost", "DEF" will be displayed
- b) Rotate the Time Setting Dial to set the weight at 500
- c) Press "Start"

7. AUTO

Refer to Auto Heating Guide and select the food type and weight. It will automatically adjust the power and time.

Example: Auto cooking 500 grams (approx 1lb) of meat

- a) Press "Auto" button to choose A-3
- b) Rotate the Time Setting Dial to set weight at 500
- c) Press "Start"

8. MEMORY COOKING OPTION

This function can memorize oven, defrost, micro, combo, auto to avoid resetting time and power.

If no memory has been set press "Memory" and "1" will be displayed. Input cooking power and time and press "Memory" again. The set program will be memorized. If you press "Start" instead of "Memory" button, the oven will start working, and the program also will be memorized.

9. CLOCK

The oven can be used as a clock.

Example: to input time 16:30

- a) Press "Time" and the time will flash in display. Rotate the Time Setting Dial to set "16:00"
- b) Press "Time" again and rotate the Time Setting Dial to set "16:30"
- c) Press "Time" again and the clock time is set

10. TIMER

The timer function programs the microwave oven to begin and stop automatic cooking at a set time. (You should set the clock before using timer function)

Example: The current time of microwave oven is 16:30. To set cooking at 18:15 on P70 power for 10 minutes

- a) Press "Time" and set time to 18:15 (same procedure as setting clock)
- b) Press "Micro" to set P70 power
- c) Input cooking time 10 minutes by rotating the Time Setting Dial
- d) Press "Start"

If you don't set power and cooking time (omit b and c steps), and directly press "Start" button, the microwave oven will work only as a clock. There will be 10 beeps at 18:15, but no other function will run.

11. CHILD SAFETY LOCK

To activate the child safety lock, press "Auto" and "Combo" at the same time for 2 seconds. Press "Auto" and "Combo" at the same time for 2 seconds again and it will unlock.