

Installation and Operation Manual

Ceiling Fan with Lights



BEFORE YOU BEGIN

Read this manual carefully and completely, and keep it for future reference.


WARNINGS

To reduce the risk of electric shock, make sure electricity has been turned off at the circuit breaker or fuse box before installing. All wiring must be in accordance with national and local electrical codes. Electrical installation should be performed by a qualified electrician. The outlet box and ceiling support structure must be securely mounted and capable of supporting the fan. To reduce the risk of personal injury, do not insert objects between rotating fan blades.




- Do not operate this fan with a variable (Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.

Package Contents

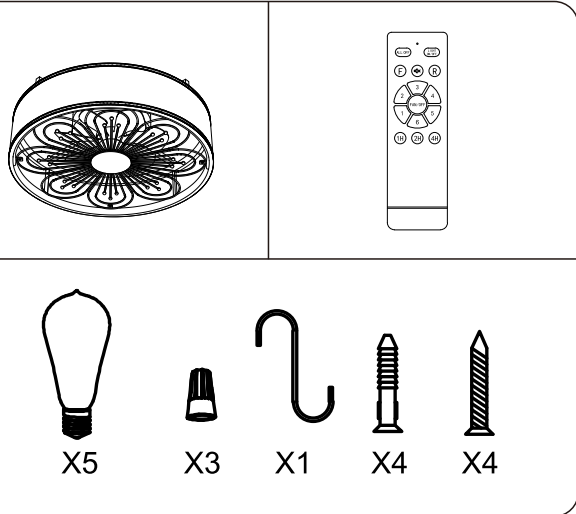


Installation Step


1 Open the package and check if all the accessories are included.

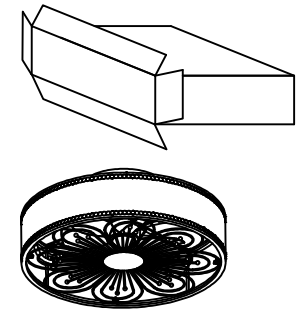


2 Loosen the screws on the side of the mounting plate and remove the mounting plate.

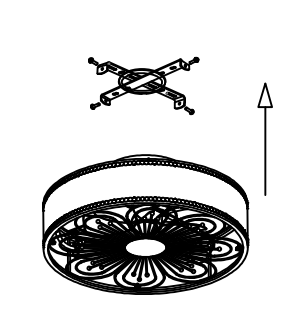


3 Fixing the mounting plate to the ceiling.

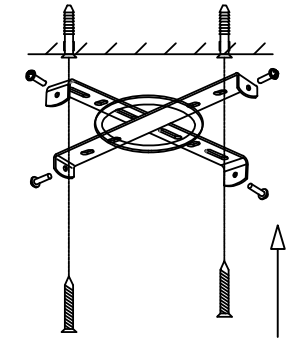


4 Twist on the bulb.

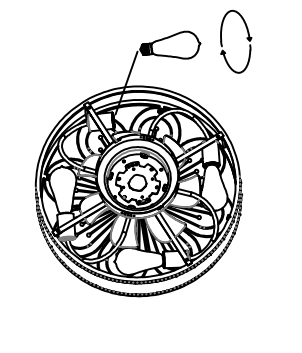

5 Install the safety hook on the mounting bracket first and then connect wires from the receivers to the house supply wires.

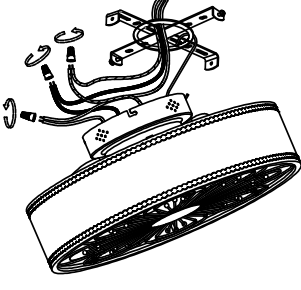

6 Rotate the lamp into the mounting plate and tighten the mounting plate screws, installation is complete.

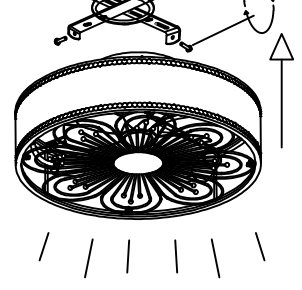


Remote Control

Turn off the lights and Fan

Mute Button

Forward Rotation Mode

1~6:Regulating fan wind speed

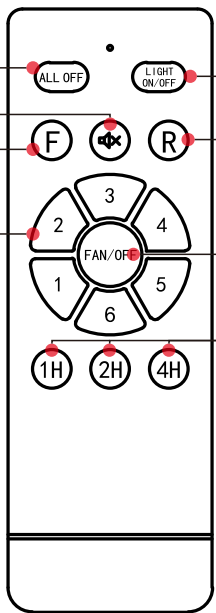

Light switch (on/off)

Reverse Rotation Mode

Fan off (code matching key)

Timing off fan



NOTICE:

This remote control does not contain batteries. Please insert 2x1.5V batteries before use.

OPERATING INSTRUCTIONS

CONTROL MATCHING CODE:

If the remote control loses signal, turn on the power switch at the same time long press the code matching key (⏏) button within 3 seconds. When hear the "Beep" twice, the pairing is successful.

If the remote control cannot be effectively controlled: please check the battery, and remove the battery if it is not in use for a long time.

NOTE: Both the fan and the light will be controlled by the remote. The wall switch (if applicable) is not able to control all functions of the fixture.

REVERSE DIRECTION

Wait for the fan to stop and reverse blade direction after pressing the Forward or Reverse button.