 


ASSEMBLY INSTRUCTION

Coffee Table

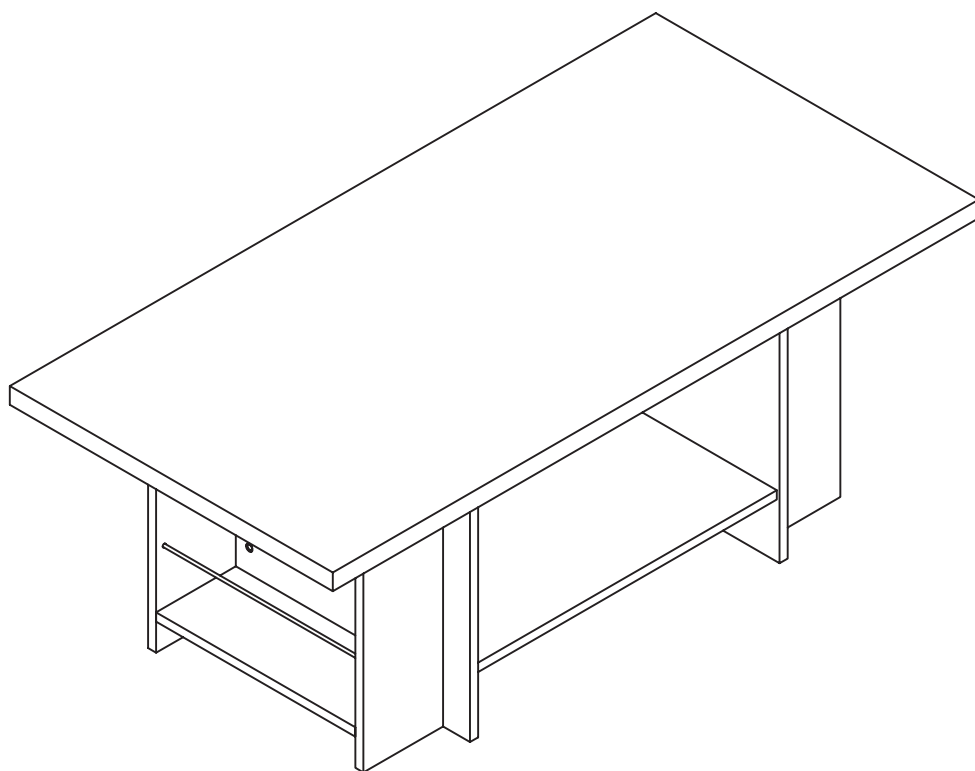 





Thank you for purchasing coffee table. If any part is missing or damaged, please do not hesitate to contact us, we will send you the replacement immediately.

ASSEMBLY TIPS

1. Please read the assembly instructions first and become familiar with the parts.
2. Proper assembly of this item requires 2 people.

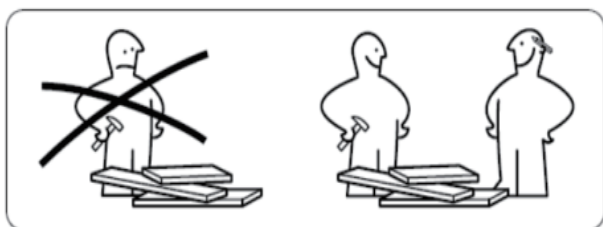

 3. Unpack and assemble this unit in an spacious area, assemble the unit on top of the empty carton or carpet to prevent scratches.

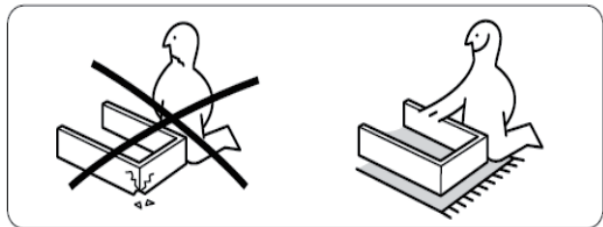



4. To avoid accidentally discarding small parts or hardware, DO NOT dispose of any contents until assembly is completed.
5. **Do not fully tighten all bolts until all parts are in place.** Failure to follow these instructions may cause the bolts to misalign during assembly.











CARE INSTRUCTIONS

- (1) Hardware may loosen overtime. Periodically check that all connections are tight.
- (2) Wipe with a soft, dry cloth. To protect finish, avoid the use of chemicals and household cleaners.
- (3) All hot serving dishes should be placed on a pad.
- (4) Any liquid spilled onto the furniture should be cleaned up immediately with a dry cloth.

Part Identification

             While not all parts are labeled, some of the parts will have a label to help distinguish similar parts from each other. Use this part identification to help identify similar parts.

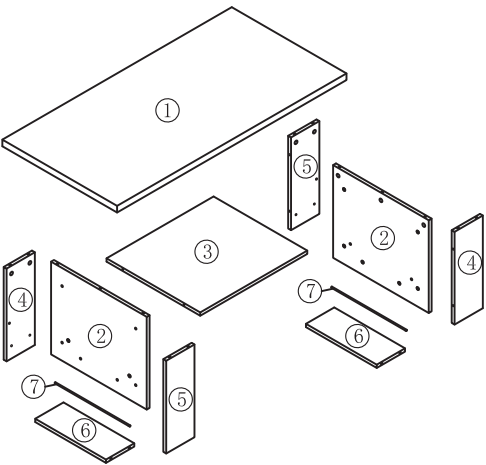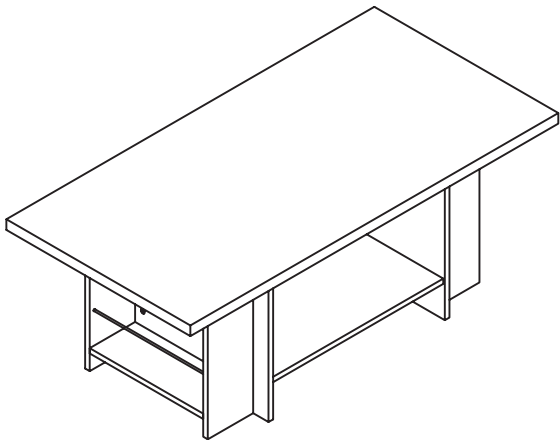

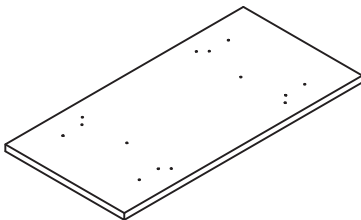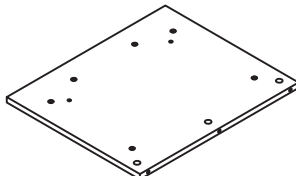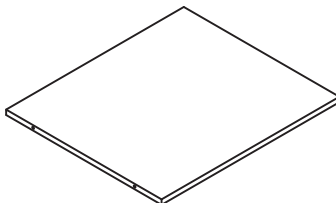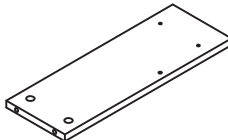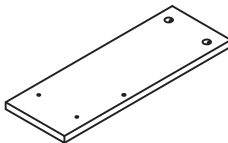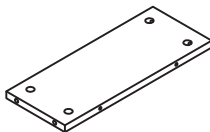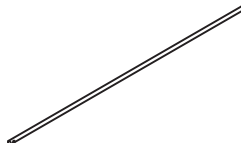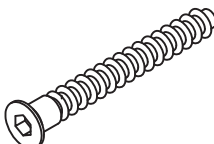①  Table Top 1 pc		②  Side Panel 2 pcs									
③  Middle Shelf 1 pc		④  Vertical Panel 2 pcs									
⑤  Vertical Panel 2 pcs		⑥  Bottom Shelf 2 pcs		⑦  Support Rod 2 pcs							
A  Cam Bolt Ø6*45mm 22 pcs		B  Cam Lock Ø15*11.5mm 22 pcs		C  Self-tapping Screw M7*40mm 16 pcs		D  Anti-skid Pad 30*15*5mm 12 pcs		E  Phillips Screwdriver 70*30*5mm 1 pc		F  Allen Key 4mm 1 pc	

Hardware Usage Guide

 
 
HOW TO USE A CAM BOLT & CAM LOCK.

1.



Cam Bolt

Clockwise rotate the CAM BOLT until the shoulder is against the surface of the board.

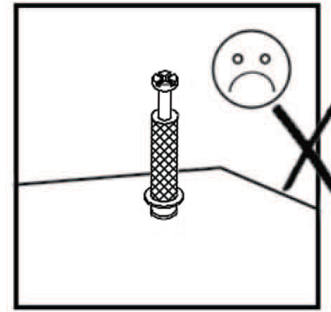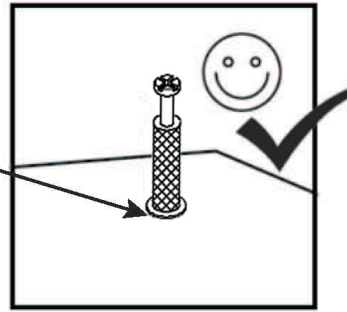


2.

Arrow



Cam Lock

 Push a CAM LOCK into the board. The arrow in the CAM LOCK must point toward the hole in the edge of the board.

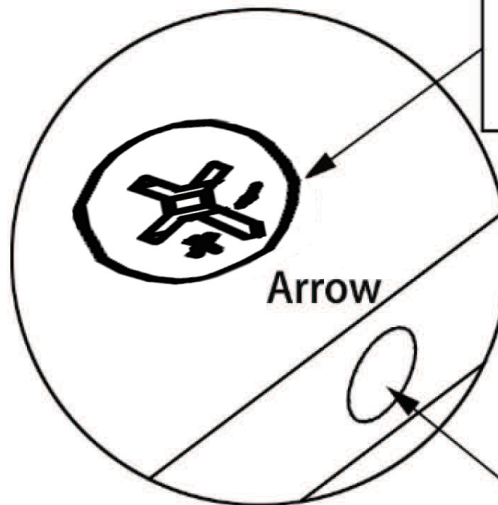


Hole


3.

Insert the CAM BOLT into the CAM LOCK.
Clockwise rotate to tighten the CAM LOCK.

 1

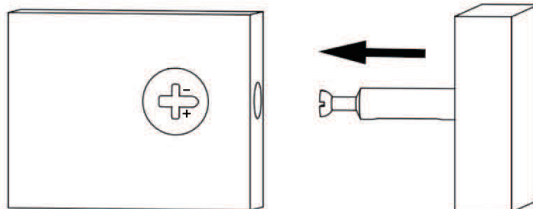

2

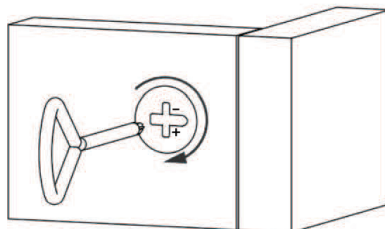 

Step 01

 
NOTE: All bolts must be fully tightened at this step.



Lay the Vertical Panels (④) and (⑤) on a clean smooth surface such as carpet or cardboard.

Insert and fasten 4 Cam Bolts(A) into the holes on the Vertical Panels (④) and (⑤) by Phillips Screwdriver (E) until the shoulder is against the surface of the board.

Repeat the same steps for the other set of Vertical Panels (④) and (⑤). Fully tighten all bolts at this step.

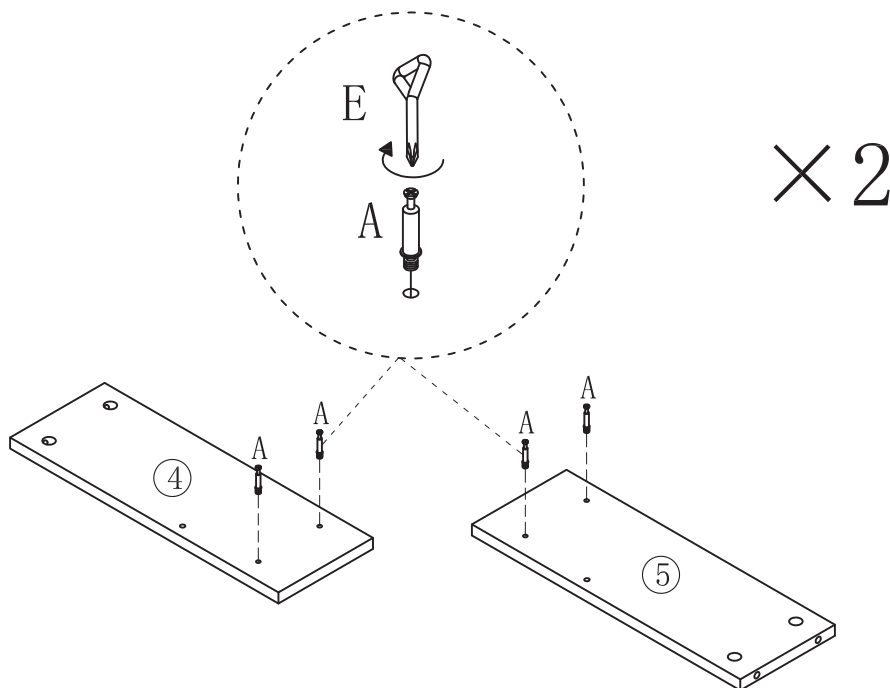


Step 02

NOTE: All bolts must be fully tightened at this step.





Attach Bottom Shelf (⑥) to the Vertical Panel (④). Make sure the Cam Bolts (A) on the Vertical Panel (④) are inserted into Bottom Shelf (⑥). Insert 2 Cam Locks (B) into Bottom Shelf (⑥), make sure the arrow on Cam Lock (B) points to Cam Bolt (A), and then tightly fasten by turning Phillips Screwdriver (E) clockwise.

 Repeat the same steps for the other set of Vertical Panel (④) and Bottom Shelf (⑥). Fully tighten all bolts at this step.

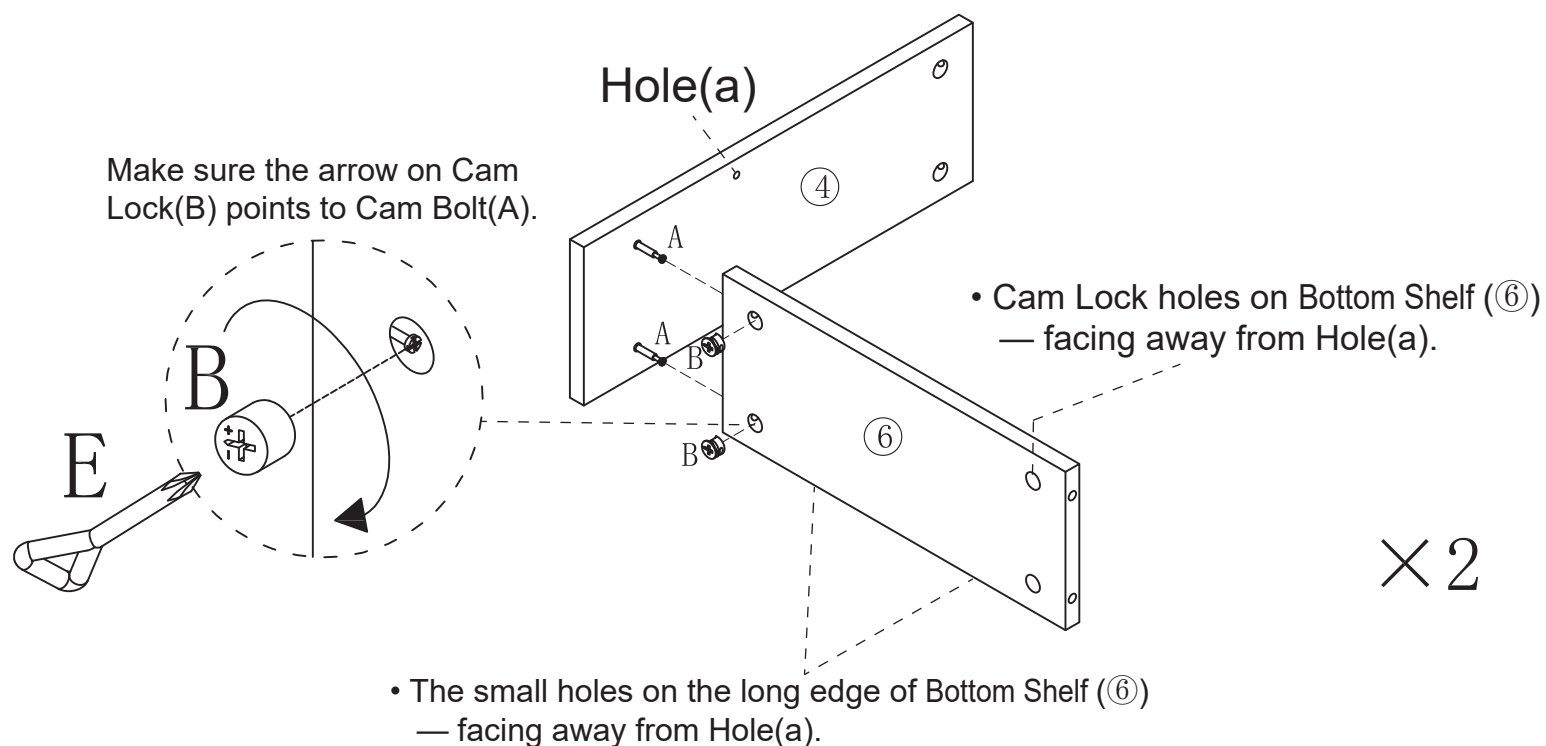

Step 03

  
- 3.1** Attach and align Support Rod (⑦) to the Vertical Panels (④) and (⑤). Attach and align the Vertical Panel (⑤) to the Bottom Shelf (⑥). Make sure Cam Bolts(A) on the Vertical Panel (⑤) are inserted into the Bottom Shelf (⑥). Insert 2 Cam Locks (B) into Bottom Shelf (⑥), make sure the arrow on Cam Lock (B) points to Cam Bolt (A) on the Vertical Panel (⑤), and then tightly fasten by turning Phillips Screwdriver (E) clockwise. Repeat the same assembly for the other set. All bolts must be fully tightened.
- 3.2** Attach and fix the Side Panel (②) to the Bottom Shelf (⑥), Vertical Panels (④) and (⑤) with 6 Self-tapping Screws (C) by Allen Key (F). Repeat the same assembly for the other set.

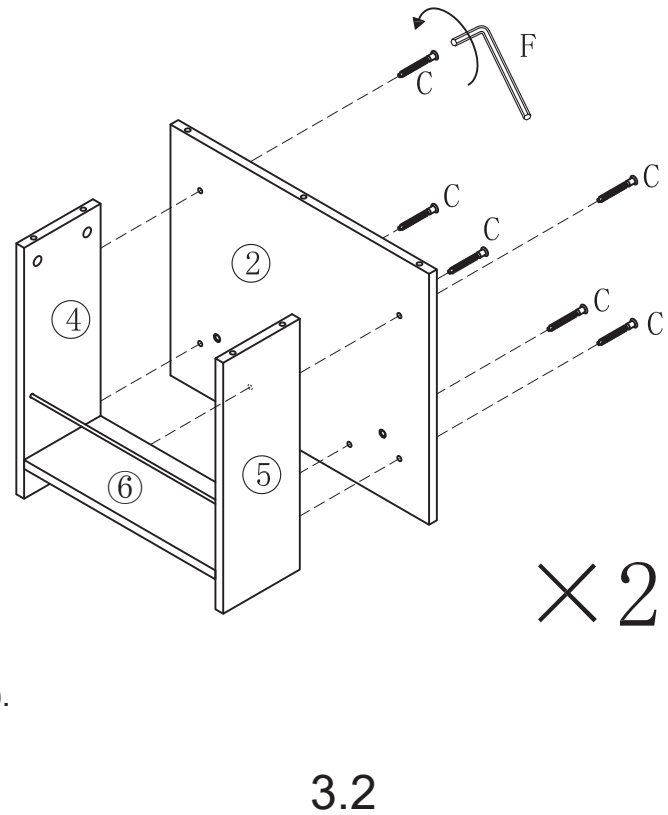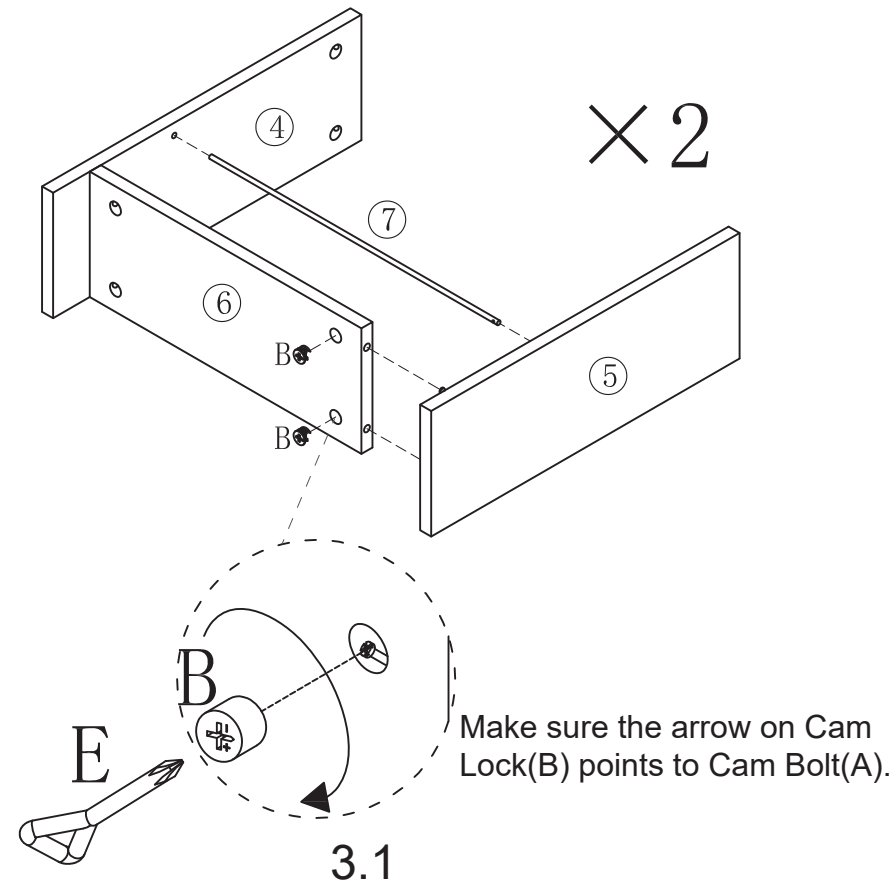

Step 04

NOTE: All bolts must be fully tightened at this step.

 - 3** Insert and fasten 14 Cam Bolts (A) into the holes on the Table Top (①) by Phillips Screwdriver (E) until the shoulder is against the surface of the board.

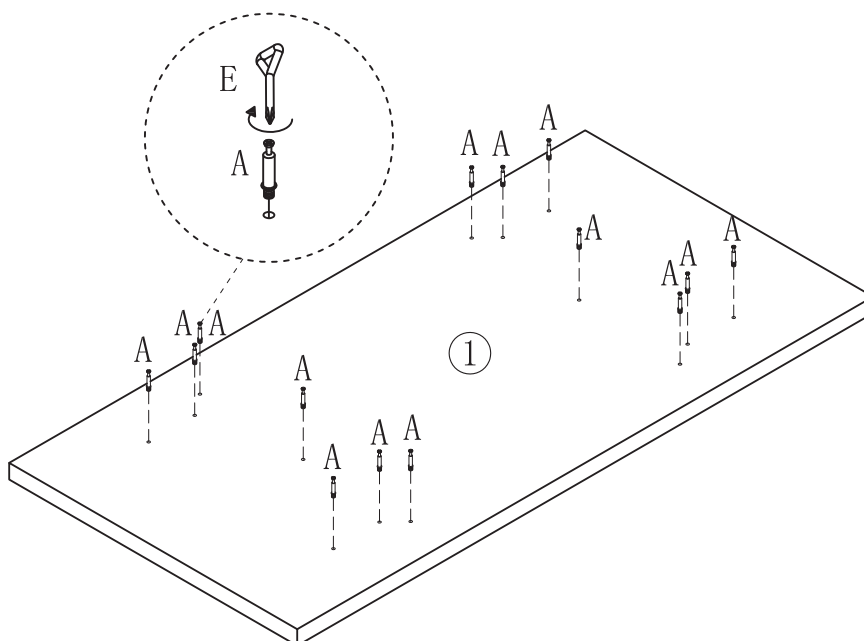


Step 05

NOTE: If holes don't align, loosen all bolts and adjust the holes slightly. After all holes are aligned, tighten all bolts.

- 5.1 Attach the Table Top (①) to the Side Panel (②), Vertical Panels (④) and (⑤). Make sure Cam Bolts (A) on the Table Top (①) are inserted into the Side Panel (②), Vertical Panels (④) and (⑤). Insert 3 Cam Locks (B) into the Side Panel (②), and Insert 2 Cam Locks (B) into each Vertical Panel (④) and (⑤), make sure the arrow on Cam Lock (B) points to Cam Bolt (A) on the Table Top (①), and then tightly fasten by turning Phillips Screwdriver (E) clockwise. If holes don't align, loosen all bolts and adjust the holes slightly. After all holes are aligned, tighten all bolts.

 
- 5.2 Repeat the same assembly for the other set.

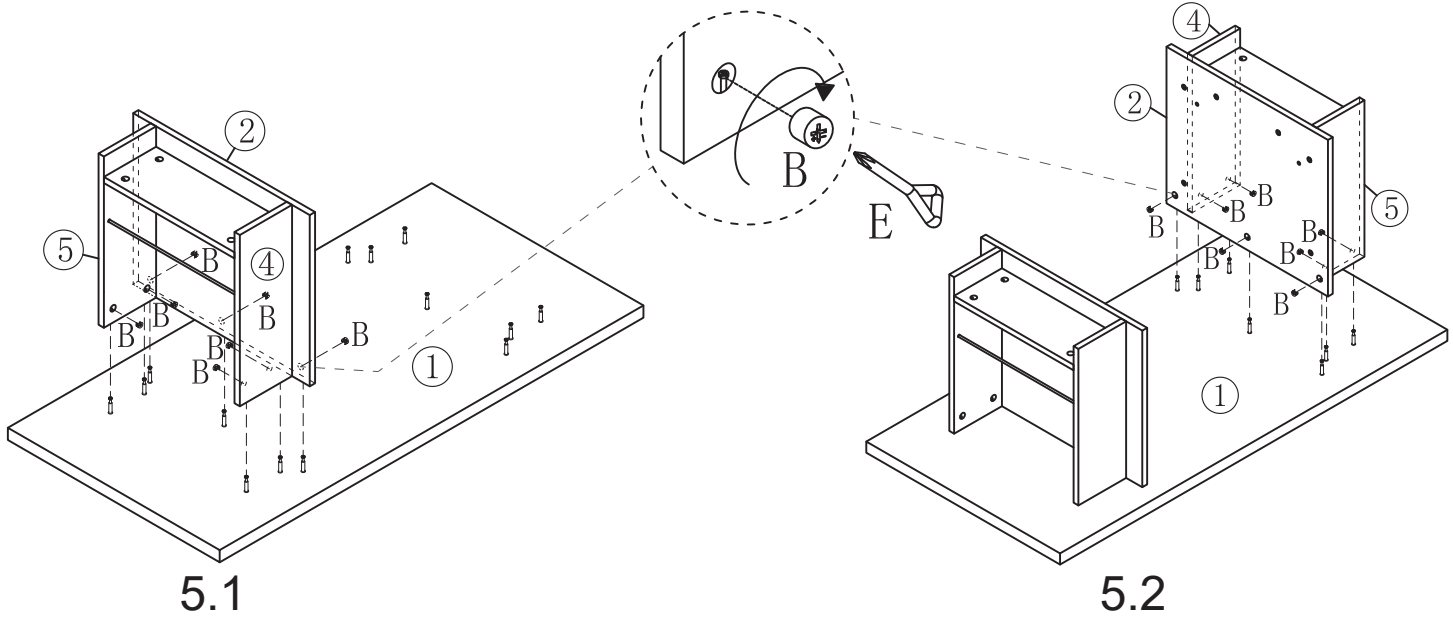

Step 06

NOTE: All bolts must be fully tightened at this step.

 
- Connect the Middle Shelf (③) to the Side Panels (②) with 4 Self-tapping Screws (C) by Allen Key (F).

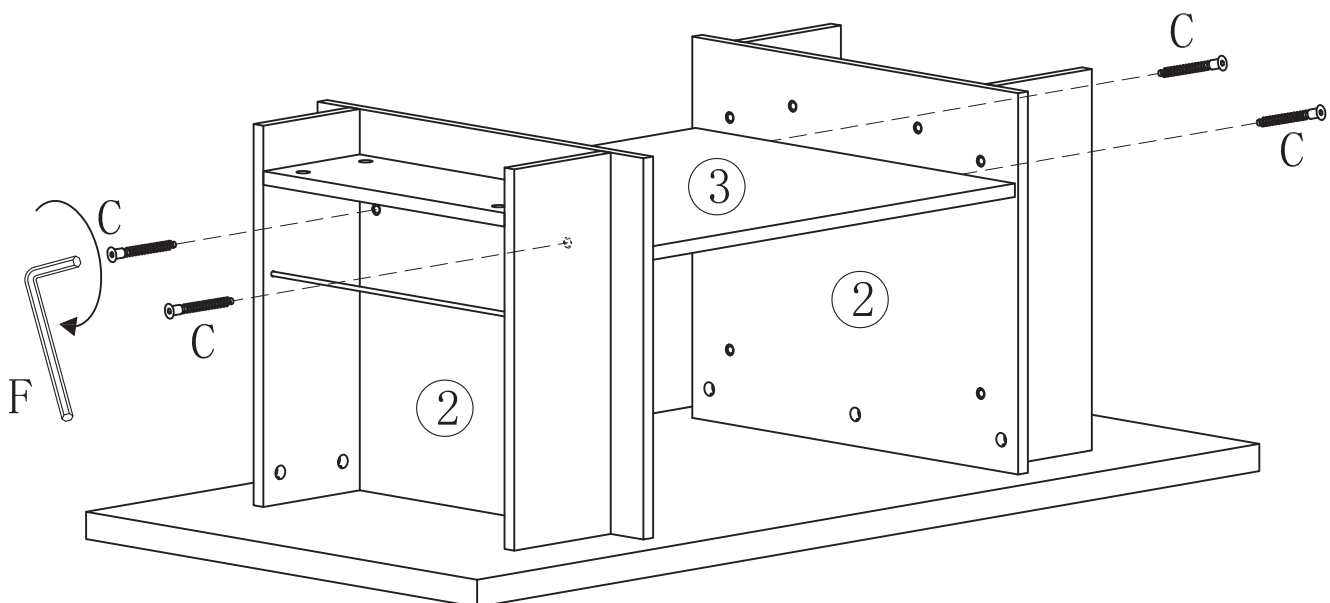

Step 07



 Apply 12 Anti-skid Pads (D): 4 to the bottom of the each Side Panel (②) and 1 each to the outer bottom of the Vertical Panels (④) and (⑤), as shown.
Press firmly to ensure proper adhesion.

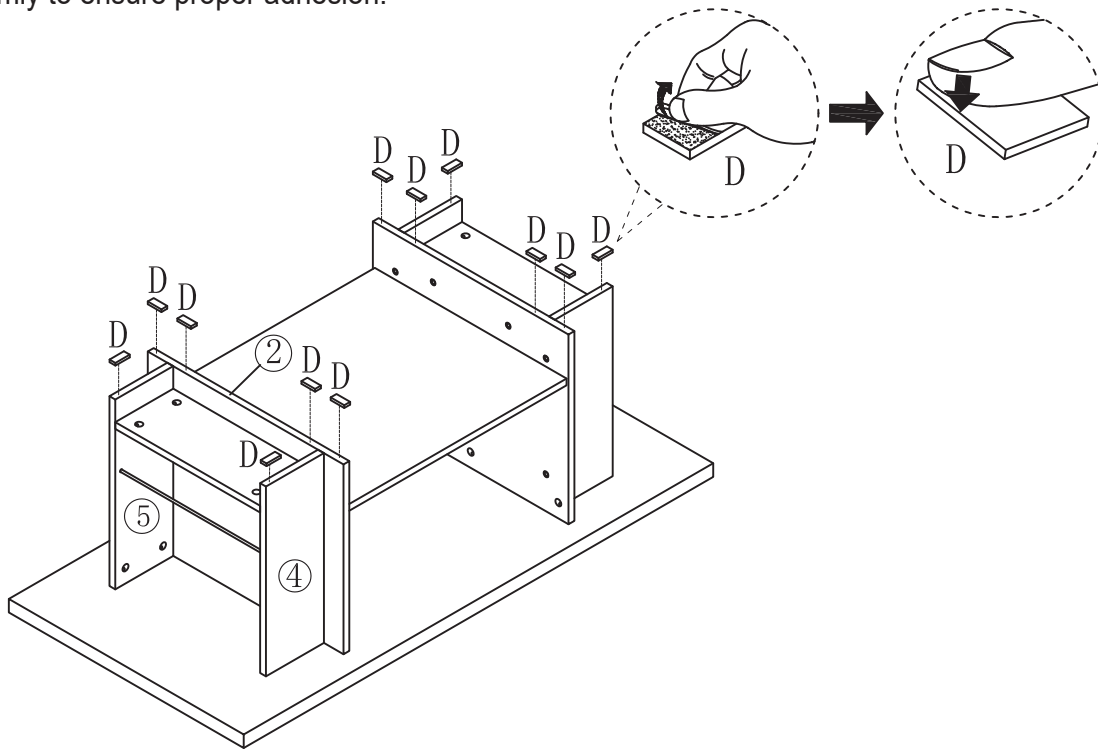

Step 08



Assembly completed. Ensure all bolts and screws are securely tightened and the table is stable before use.

