

Elves Tossing Package Back and Forth



This piece comes equipped with a back-and-forth controller that regulates and creates the animation on the piece. To protect the controller from water damage, keep it in a covered container or bag with a hole at the bottom of the container to let out any humidity or built-up condensation.

To setup the controller, plug the male end cords of each present into the controller's female ends. We include (2) extension cords if you choose to space out the pieces. Plug the controller into power and adjust the knob to your preferred speed.