


Model: _____

Lot No: _____

Date of Purchase: _____

Swoop Back Upholstered 30" Stool

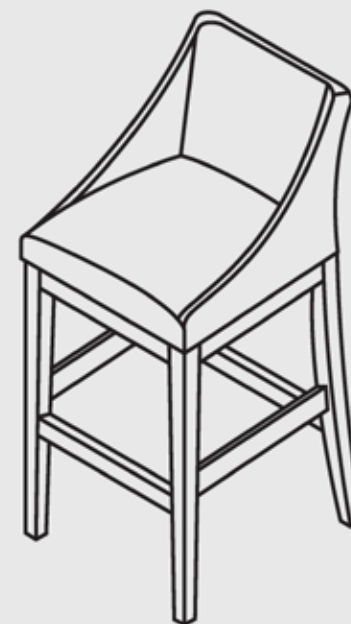

ADULT ASSEMBLY REQUIRED


If you are missing any parts or have any questions regarding assembly, do not return this item to the retailers store. Please call our toll- free customer service number and have this assembly manual open to the parts list ready to provide the model name, and part name or number.



WARNING: This product may contain small components, please ensure they are kept away from small children.

PARTS AND HARDWARE

Avoid using sharp objects such as a knife to cut open packing as you may accidentally damage the upholstery.

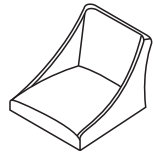

A. Seat
1x



B. Front Left Leg
1x



C. Front Right Leg
1x



D. Back Left Leg
1x



E. Back Right Leg
1x



F. Front Rail
2x



 
G. Side Rail
2x



H. Bolt 5/16" x 2"
8x



I. Lock Washer 5/16"
8x



J. Flat Washer 5/16" x 22mm
8x



K. Wood Screw 1-1/2" x 22mm
8x




L. Allen Key
1x

ASSEMBLY INSTRUCTIONS

Do not fully tighten bolts until assembly is complete.

1

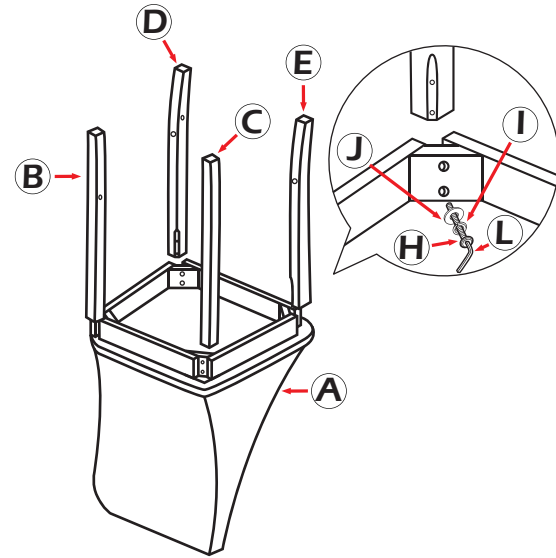

2

