

## **IMPORTANT**

PLEASE READ THE INSTRUCTIONS BEFORE SET UP AND INSTALLATION

### **COMPONENT PARTS AND FITTINGS**



**Wall Light x1**



**Screw & Wall Plug x 2**  
(Included in pack)

#### **Suggested Tools:**



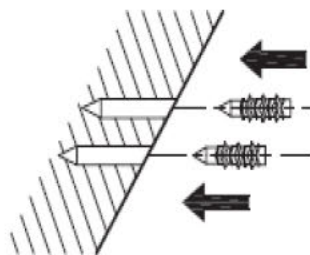
**Screwdriver**



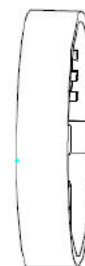
**Pliers**



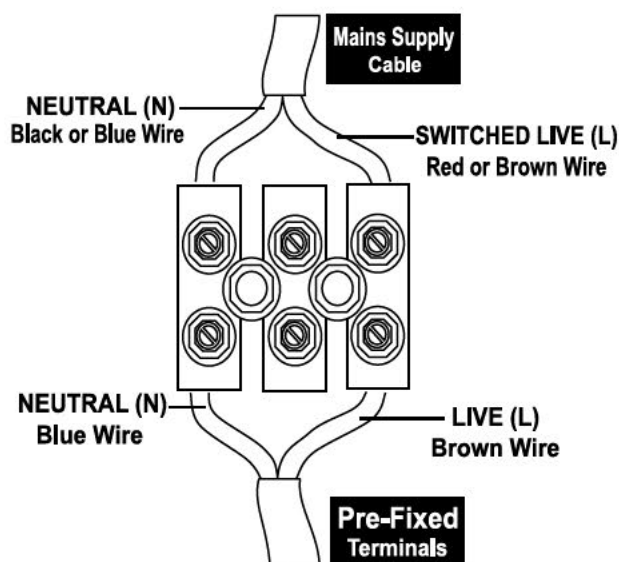
**Drill**

**DIA.1**

**DIA.1** Mark the positions of the fixing holes onto the walls surface ensuring that they align to the mounting holes on the wall light. Drill holes on the marked positions with a 5mm drill bit.

**DIA.2**

**DIA.2** Mount the backplate in place (using the screws provided) taking care not to damage any of the supply wires or any sunken pipes.

**DIA.3**

**DIA.3** Make the electrical connections in accordance with the diagram above. Fix the backplate to the fixing bracket with the side screws provided, taking care not to trap any supply wires

**SENSOR INFORMATION:**

The dusk till dawn sensor will operate when the ambient light drops below 10lux (dusk) and will switch off when the ambient light reaches 15lux (dawn), this may take up to 5 minutes.

**IMPORTANT:**

- Mains Voltage: 230/240V – 50Hz
- This lamp is Class II and does not require an earth connection.

**USER ADVICE**

- Keep all packaging until after a successful installation and retain instructions for future use
- The design of the lamp may vary slightly from the illustration

**SAFETY:**

- Before inserting or replacing bulbs make sure that the light is switched off and has cooled down.

**DIA.4**

**DIA.4** The lantern can only be installed as an uplighter (see above)



**DIA.4** Fit the wall light to the back plate using the nuts and bolts provided, insert the bulb (not supplied), refer to the wattage label for the type and wattage, do not exceed the wattage indicated on the label.