

BX88 Smart Lunch Box



MADE IN CHINA


Product Parameter

Model:	Product Name:	Product size	Battery capacity
BX88	Smart Lunch Box	236*133*96mm	4000mAh*4
Input Voltage:	rated voltage:	Operating current:	Rated power:
5V/9V/12V	7.4V	5.5A	60W

Safety precautions, please read and strictly follow them!

- This operating manual contains safety instructions for the proper use of this product. Therefore, please read them carefully before use.
- To avoid damage and danger caused by improper use, all safety instructions are for your safety.
1. This product complies with the technical certification regulations for electrical products and related safety regulations.
 2. Before use, check whether the rated voltage on the nameplate of the product is the same as the voltage you use.
 3. When using the product, it should be placed on a stable platform and beyond the reach of children.
 4. Please keep the inner and outer surfaces of the product clean. After using for a while, the dirt on the inner and outer surfaces of the product must be cleaned in time.
 5. Do not immerse in water or make liquid flow into the product to avoid danger!
 6. If the product has no moisture, please do not dry it, otherwise it will affect the service life of the product.
 7. Except for professional maintenance technicians, do not disassemble, repair or modify the machine, otherwise it may cause fire and leakage.
 8. The equipment can not be immersed in water.


Vessel Use Procedure

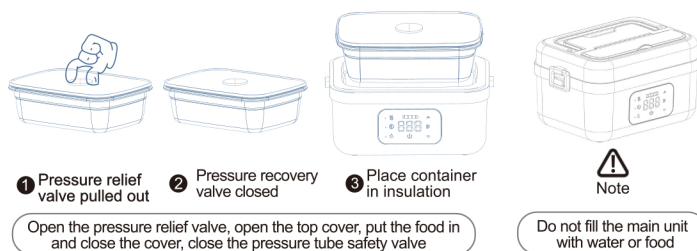


Special precautions

Accessories include

- 1 Rechargeable insulated lunch box
- 2 Stainless steel container (1 set)
- 3 Smart Lunch Box
- 4 Charging line
- 5 Adapter for Power

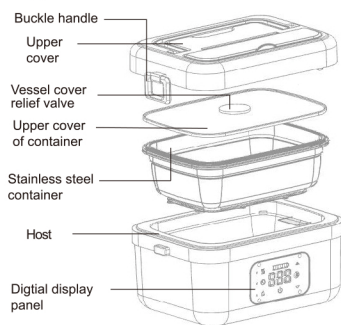

Internal battery precautions

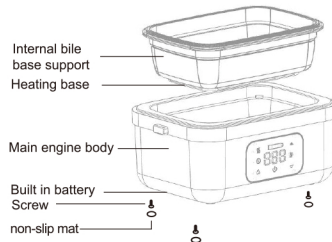


How to remove the built-in battery:
Tear off the bottom antiskid pad -- loosen the four screws -- remove the host liner -- unplug the battery terminal -- then take out the built-in battery

- Built in battery precautions:
1. Before discarding the appliance, the battery must be removed from the appliance
 2. When removing the battery, the appliance must be powered off
 3. Batteries should be disposed of safely


Function Panel

1. Thermal insulation mode function button: press 1 time to enter the thermal insulation working state, the display shows the graphic type - cycle, at this time the machine begins to work; after the battery is fully charged, the thermal insulation mode of the machine can work for about 15-20 hours
2. Appointment function button: Appointment start device can be set to 30/60/90/120/150/180/210/240 minutes after the start device, for example: 8:00 a.m. set the machine to 210 minutes after the start device, the display will have "210" digital display countdown, countdown is complete to start the device, start heating, heating is complete, the machine will be in standby 2 minutes and then turn off the machine. Note: Default heating in reservation mode is 30 minutes.
3. Heating Function Button: You can set the heating time for 20/30/40/50/60 minutes; for example, if you need to have lunch at 12 o'clock, you can set the heating time to 30 minutes, i.e., you can heat up the food for 30 minutes at 11:30 a.m., and then you can have your meal at 12 o'clock after the heating is finished. Note: The default heating mode is 30 minutes.
4. Battery power display: 4-segment power display, when the power display is only one frame of power; the battery indicator will flash to prompt, please charge the device in time to ensure the normal use of the device!
5. Time and temperature display: It can display two values of time and temperature, the icon "°C" indicates the temperature indicator, when the temperature indicator is on, the display panel value indicates the temperature value, when the temperature indicator is not on, the display panel value indicates the time value.
6. Power on/off and reset buttons: long press 1.5 seconds to turn on/long press 1.5 seconds to turn off the machine, lightly press to return to standby state, in the operation of the device, if the mode button locked state, you can press the on/off button to restore the settings.
7. Up and down key function: "△" key: can be set to extend the time and increase the temperature value, "▽" key: can be set to key to reduce the time and reduce the temperature value, this function can only be used in the heating mode and the reservation mode, the reservation mode: press the reservation button, the reservation button indicator light flashes, at this time, you can set the reservation start time through the up and down keys. After the time setup is completed, press the temperature indicator key, when the temperature indicator light is on, press the temperature indicator button, when the temperature indicator light is on, you can set the heating temperature by up and down key. Heating mode: press the heating button, the heating indicator light flashes, at this time you can set the heating time by up and down keys, after the time setting is completed, press the temperature indicator key, when the temperature indicator light is on, you can set the heating temperature by up and down keys.
8. Lock key: when pressing all mode keys, the mode indicator light will flash, the mode indicator light is always on that means the mode key is locked, long press the "△" key for 3 seconds to unlock the mode function key, at this time you can change the settings according to the previously set parameters; for example, the heating mode: set the heating time to 30 minutes, the device has been activated for 10 minutes, and there are still 20 minutes of heating, at this time we unlock the "△" key. After unlocking the function key and changing the heating time to 40 minutes, the device will not clear the operating record of the previous 10 minutes, the device will complete our new "Heating 40 minutes" setting after 30 minutes of heating, and if we unlock the function key with the reset key, the device will restart the heating mode.


Scheduled-Heating Use Procedure

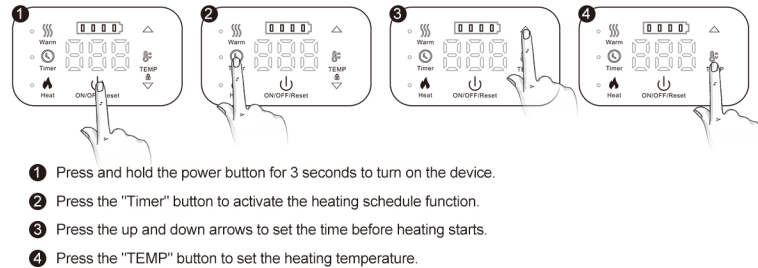

Heating Now Use Procedure

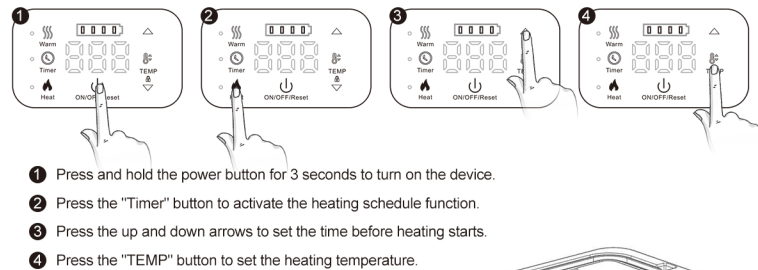

Keep Warm Use Procedure

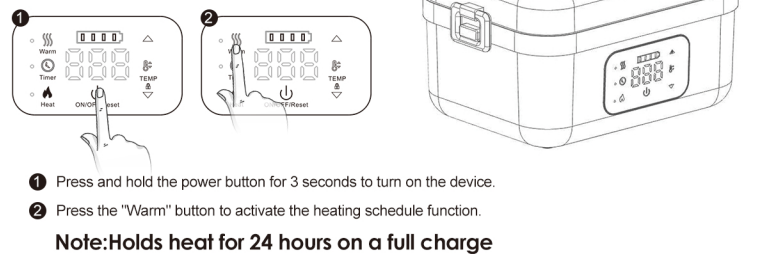

Battery life

Please charge the product main unit before use and charge it promptly after use. If the lunch box is used infrequently, charge the product before storing it to prevent the battery from losing power.

Cleaning and Maintenance

1. Stainless steel container:
After each use, remove food residue, add a little water, wipe it with a cloth or sponge using soft water, then rinse it with water 2-3 times.
2. Product Cleaning
Do not immerse the host in water to clean, and do not directly rinse with water, the dirt on the outer surface of the product can be wiped with the appropriate amount of detergent wet wipe, please ensure that the power supply is completely disconnected before cleaning.
3. Warm tips:
After use, the power must be unplugged and the spare body cooled. Please do not use the product thoroughly cleaning water, do not use corrosive detergent, but choose a soft detergent, do not use banana water, gasoline detergent, hard brush or steel wire ball cleaning, so as not to damage the surface of the product. When the product is not in use, please clean it and put it into the packing box and store it in a ventilated and dry place to avoid being affected by moisture and use.

Thank you

If you find any problem with your product, please don't hesitate to let us know and we will take care of it. Your satisfaction is the most important thing!