
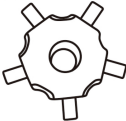
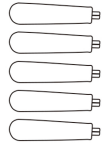

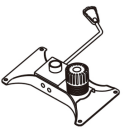

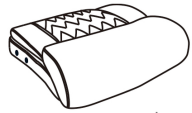
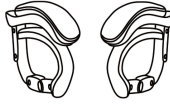







Accessories List

(A) 5 Castors 	(B) Central Base Tube 	(C) Split Base Tube 	(D) Air Rod 
(E) Base Plate 	(F) Backrest 	(G) Seat Cushion 	(H) 2 Armrests 
(I) 10 M6*16mm Screws 	(J) 14 M6*30mm Screws 	(K) 4 Gaskets 	(L) 8 Decoration Caps 
(M) Hexagon Wrench 			

Notice

- Do not stand in this chair or use the chair as a step ladder use it as chair only. This chair is designed for one person to use at a time.
- Do not use this chair unless all bolts, screws and knobs are firmly secured.
- Check all bolts, screws and knobs every 90 days. Tighten them if any are loose.
- Failure to follow these instructions may result in serious injury or death of yourself and people around you.
- Some of the parts are heavy and/or have sharp edge, please install it carefully to avoid hurting you and people around you.

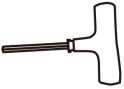
Instructions for Use



Up and Down Adjustment



Adjustable Lumbar Support

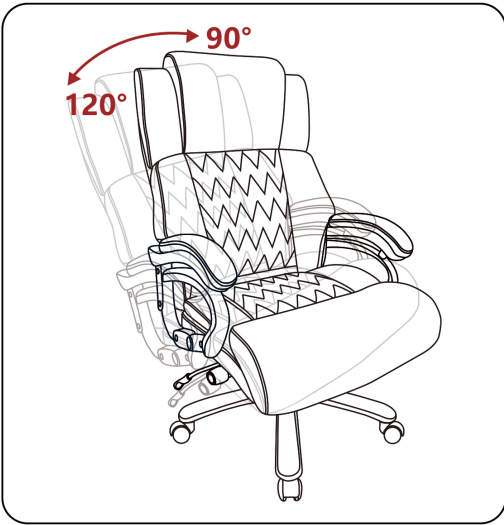

Rocking Fuction




Strong Loading Capacity

Thanks for purchasing our products. Please read this manual before assembly. And please assemble in order. After the assembly, keep the instruction properly. Make sure all the parts are included (12 kinds in total)

Assembly Instruction


Please assemble in a wide and flat place.

Step 1

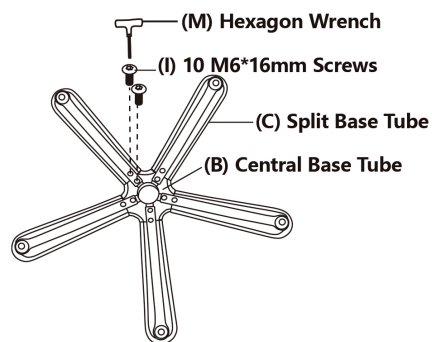

Insert the Split Base Tube (C) into the Central Base Tube (B), and then use Hexagon Wrench (M) to screw in 10 M6 * 16mm screws (I) for fixation


Step 2

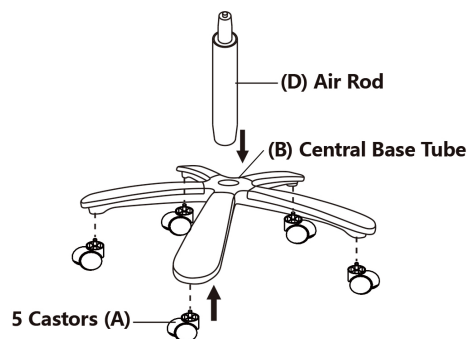

Take out 5 Castors (A) and Air Rod (D). Insert Castors (A) into Central Base Tube (B). There are 5 Castors (A) need to be inserted. Then insert Air Rod (D) into the hole of Foot Stool (B) as shown.

* Caution: Confirm Castors (A) must be inserted deeply. Otherwise the castors could easily fall out and the chair could fall down.


Step 5

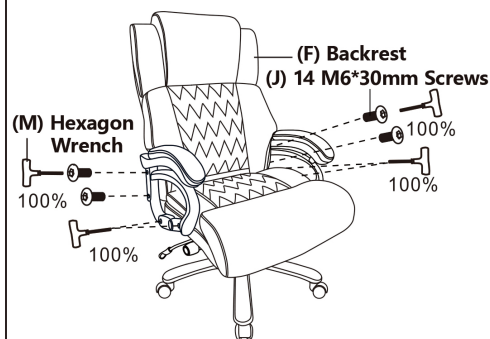

Insert the Backrest (F) between the two Armrests (H), align the holes then press the armrests in and fasten them, then tighten with 14 M6*30mm Screws (J).


*Caution: As the chair is heavy, it is better for two people to put the backrest into the middle of the armrests together.

Step 6

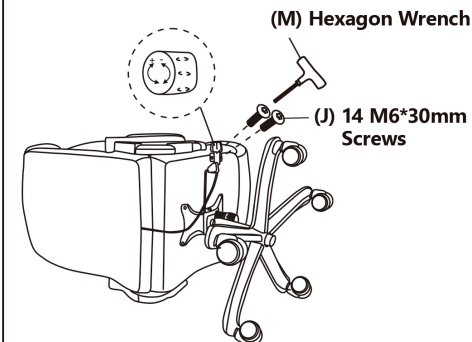

Install the lumbar support adjuster on the Backrest (F) of the chair on the bottom of the Seat Cushion (G), align the adjuster with the holes according to the 'FRONT' mark and install with 14 M6*30mm Screws (J).


Step 3

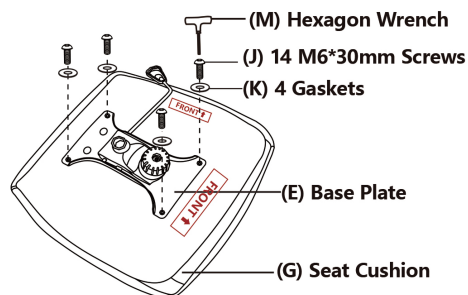

Fix Base Plate (E) to the bottom of Seat Cushion (G). Tighten the 14 M6*30mm Screws (J) and 4 Gaskets (K) with Hexagon Wrench (M) firmly.

* Caution: Align the direction with the 'FRONT' mark for installation, half-tighten the screws first, and tighten the four screws after aligning the holes to prevent the chassis from shifting and being difficult to tighten.


Step 4

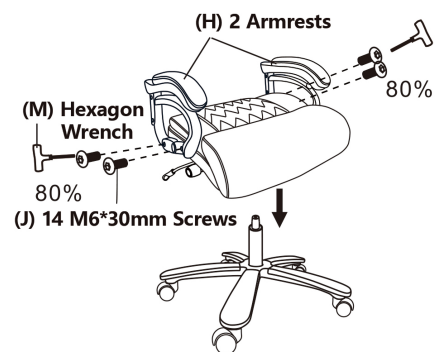

Insert the step 3' Base Plate (E) into Air Rod (D) as shown. Then take out the 2 Armrests (H), tighten the 14 M6*30mm Screws (J) with Hexagon Wrench (M) and fix the 2 Armrests (H) to the two sides of the Seat Cushion (G).

*Caution: Align the 4 screws with the holes until they are screwed in half-way, then after the backrest has been inserted between the two armrests, fasten all the screw holes and finally tighten them all the way.

Step 7

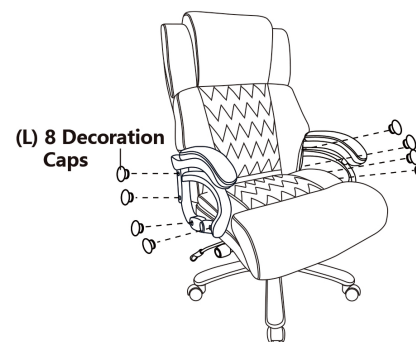

Cover the screw holes on both sides of the Armrests (H) with 8 Decoration Caps (L), the assembly is complete now.

Finish

