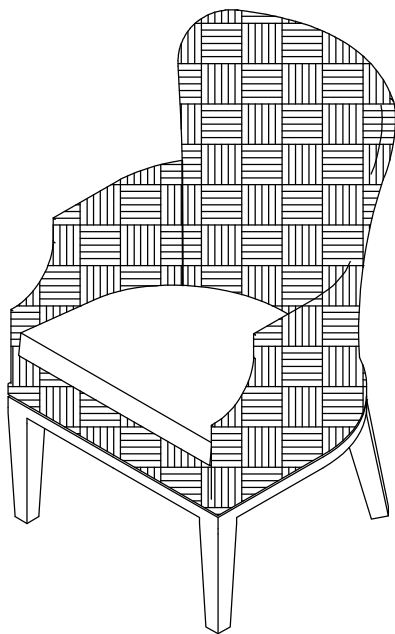
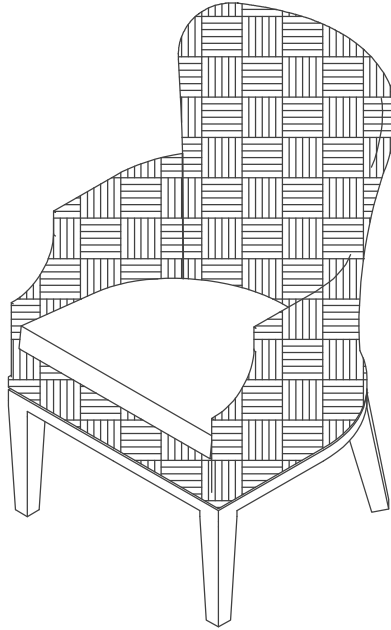


# INSTRUCTION MANUAL



Wicker Dining Chair



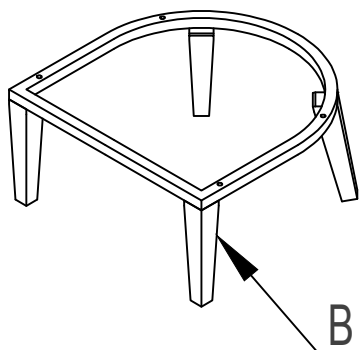
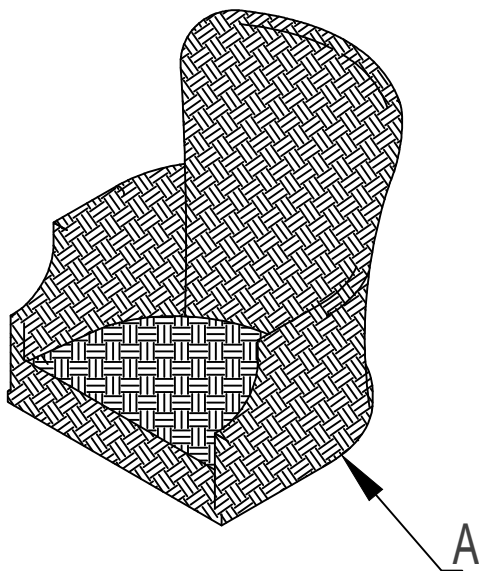
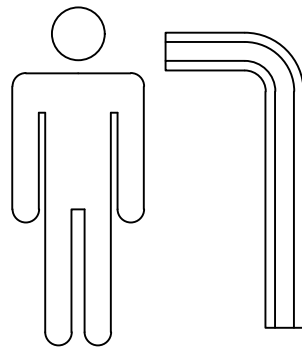
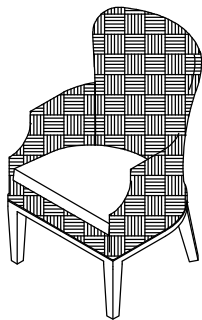



 



Step1: Attach leg's frame (B) to upper chair's frame (A) using 4 bolts(D), 4 spring rings(E), 4 washers (C).Do not over tighten.

Step2: Upon completion of full assembly and bolted up-all screws can be tightened down.


Note:Please do not tighten any bolt until all bolts have been put into right place.

If you tighten one bolt, it maybe cause other bolts out of position.



Part Number	Images and Sizes	Qty.
A		1
B		1
C	 M6* $\varnothing$ 16	4
D	 M6*35	4
E	 M6* $\varnothing$ 9.5	4

# 1

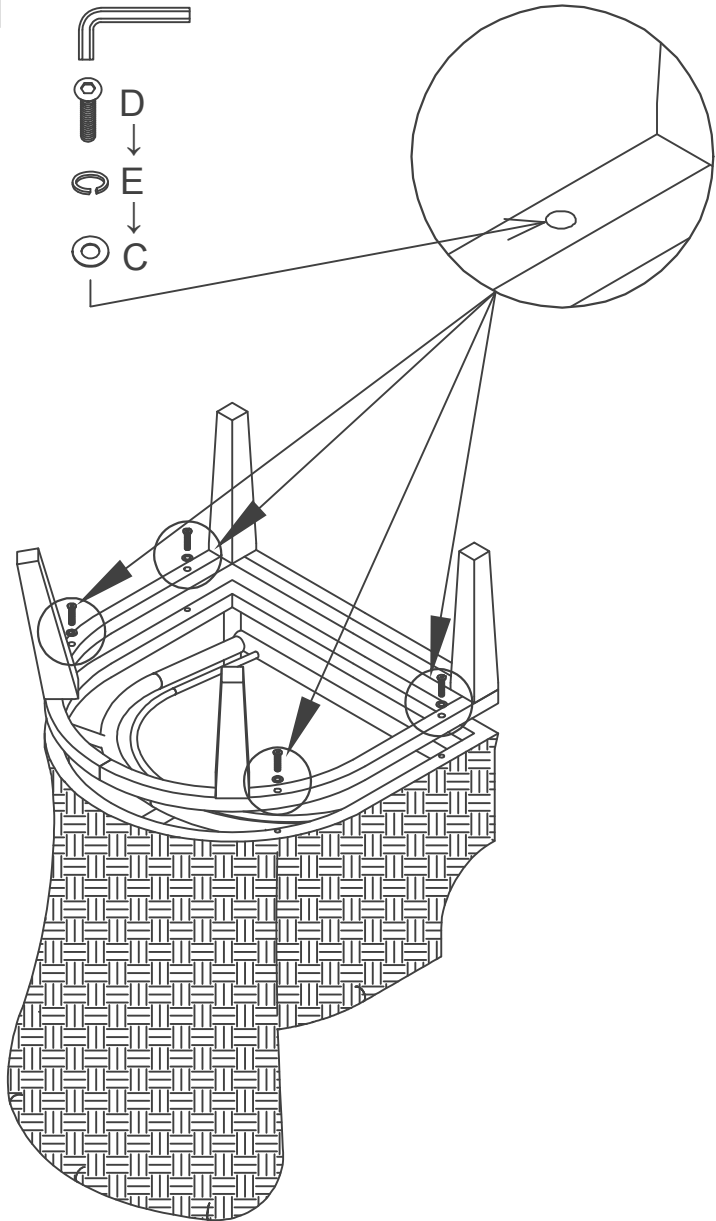

## CARE AND MAINTENANCE

Following the instructions to make the item remain in its best status as long as possible. The solutions below are only regarded as a general guideline. For more information, please contact us.

Rinse it thoroughly with clean water to wash away dirt and grime. Never use abrasive cleanser on the furniture, since it can damage the surfaces and leave scratch marks.

For the stubborn grime and stains, use a soft sponge and mild soapy water, and then dry it with a cloth or paper towel.

Check the stability of screws, nuts and nut caps in priority. Tighten up them after one(1) to two(2) months' use whenever required.

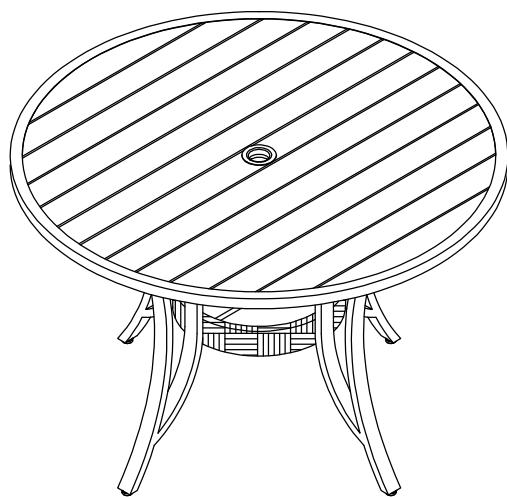
Avoid improper use and be careful not to scratch or damage the surface with sharp objects.

When moving furniture, make sure lifting it rather than pulling or pushing it so as to avoid any damage to the floor, legs and mounting.

## **CUSTOMER SERVICE**

Thanks for ordering our furniture. When you have any question regarding of assembly or accessories, please do not hesitate to contact our customer service.

# INSTRUCTION MANUAL



Wicker Dining Table





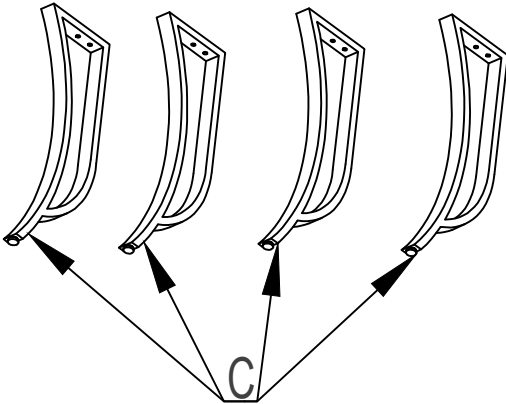
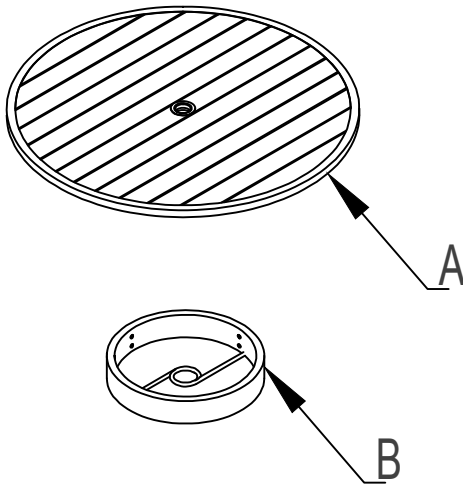
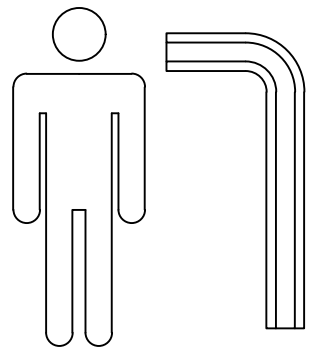
Step1 : Attach 4 legs (C) to fixed ring(B) using 2 bolts (E),2 spring washers(F),2 washers(D). Do not over tighten.







Step2: Attach 4 legs (C) to table frame(A) using 2 bolts (E), 2 spring washers(F), 2 washers(D). Do not over tighten.

Step3: Upon completion of full assembly and bolted up-all screws can be tightened down.


Note:Please do not tighten any bolt until all bolts have been put into right place.

If you tighten one bolt, it maybe cause other bolts out of position.



Part Number	Images and Sizes	Qty.
A		1
B		1
C		4
D	 M6* $\varnothing$ 16	16
E	 M6*35	16
F	 M6* $\varnothing$ 9.5	16

# 1

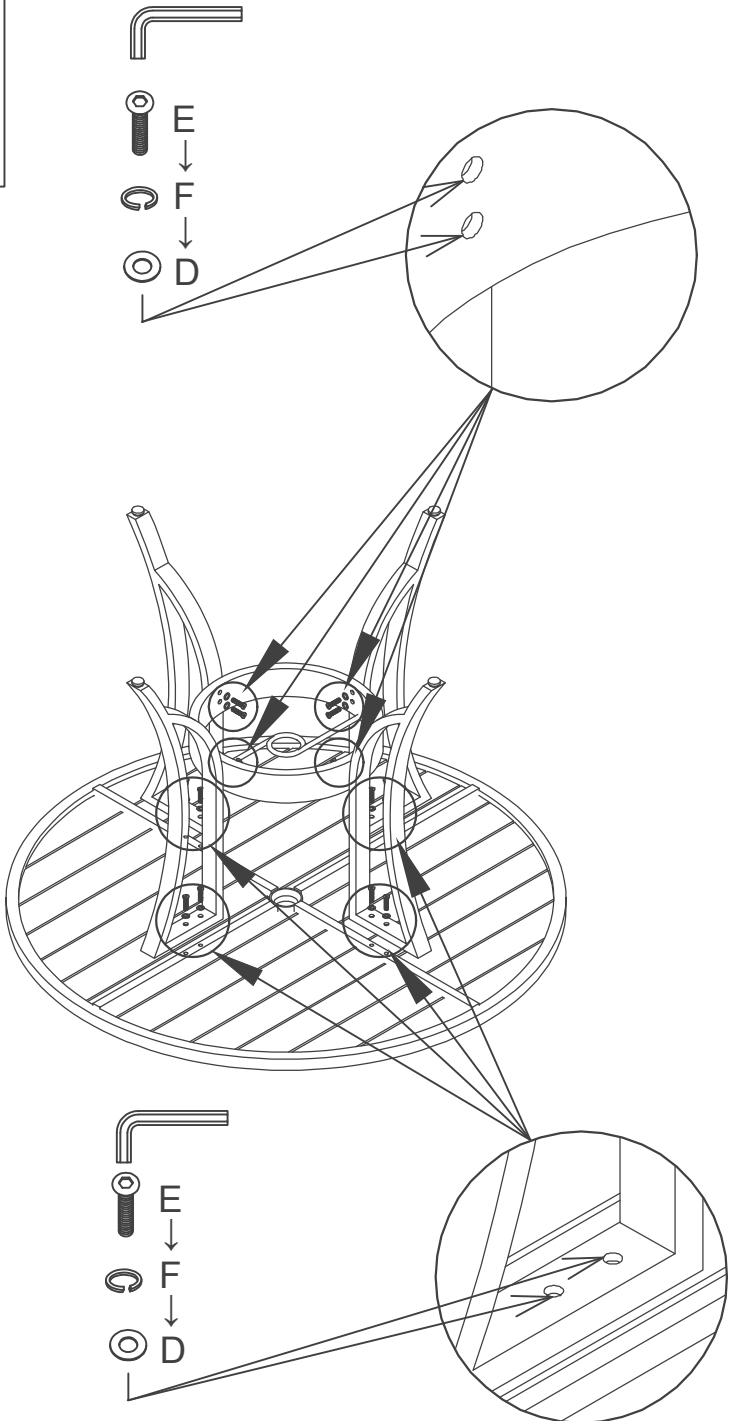

## CARE AND MAINTENANCE

Following the instructions to make the item remain in its best status as long as possible. The solutions below are only regarded as a general guideline. For more information, please contact us.

Rinse it thoroughly with clean water to wash away dirt and grime. Never use abrasive cleanser on the furniture, since it can damage the surfaces and leave scratch marks.

For the stubborn grime and stains, use a soft sponge and mild soapy water, and then dry it with a cloth or paper towel.

Check the stability of screws, nuts and nut caps in priority. Tighten up them after one(1) to two(2) months' use whenever required.

Avoid improper use and be careful not to scratch or damage the surface with sharp objects.

When moving furniture, make sure lifting it rather than pulling or pushing it so as to avoid any damage to the floor, legs and mounting.

## **CUSTOMER SERVICE**

Thanks for ordering our furniture. When you have any question regarding of assembly or accessories, please do not hesitate to contact our customer service.