



Please do not hesitate to contact us whenever you want, we are always more than happy to help you!

✉ support@inselife.com 🌐 www.inselife.com 📱 @insesupport



MADE IN CHINA

insē

USER MANUAL

Cordless Stick Vacuum Cleaner

**S6/S6P/S600
S650/S660/S670**

Instruction Videos & Frequently
Asked Questions As Below



S6/S6P

<http://bit.ly/inseyoutube-s6>




S600

<http://bit.ly/inseyoutube-s600>



S6/S6P/S600

<https://inselife.com/pages/faq>

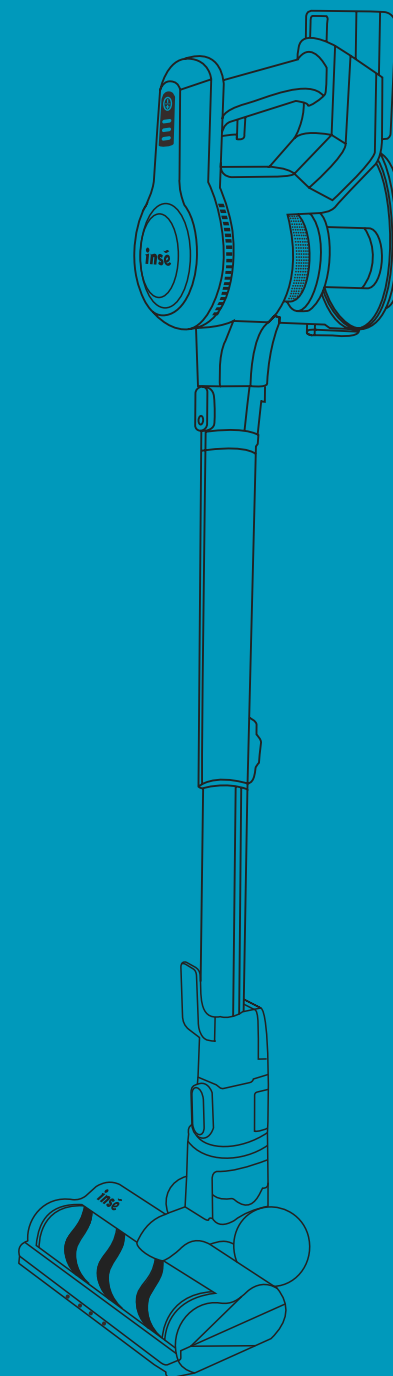

CONTENTS

Important Safety Instructions	01
Battery Safety	02
Warning	03
Charging	04
Storage	06
Product Parts List and Schematic	07
Product Overview	08
Accessory Instructions	09
Product Technical Parameters	10
Assembly and Disassembly	11
Combination	12
Power Mode and Runtime	13
Ready to Use	14
Daily Maintenance	15
Troubleshooting	17
Warranty	18

IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING THIS MACHINE READ ALL INSTRUCTIONS AND CAUTIONARY MARKINGS IN THIS MANUAL AND ON THE MACHINE

When using an electrical appliance, basic precautions should always be followed, including the following:



Do not use near open flames



Do not store near heat sources



Do not pick up water or liquids



Do not pick up burning objects



Do not put hands near the brush bar when the machine is in use



Do not place on or near the cooker

- **Do not** use to pick up water or any other liquid, as this may cause electric shock.
- **Do not** use to pick up sharp objects such as glass or screws, etc.
- **Do not** use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
- **Do not** use if any of its openings are blocked.
- **Do not** store the appliance in direct sunlight or in high humidity conditions.
- **Do not** use this appliance outdoors.
- **Do not** use any damaged accessories or adaptors.
- **Do not** use any parts/accessories or adaptors other than those supplied with this appliance, as this may cause damage.
- **Do not** use the appliance for anything other than its intended use.
- **Do not** use the appliance if it has been dropped or if there are visible signs of damage.
- **Do not** use the adaptor to recharge non-rechargeable batteries.
- **Do not** remove from the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.
- **Do not** expose the appliance to rain.
- **Do not** operate the appliance with wet hands.
- **Do not** immerse the appliance in water or any other liquid.
- Only use with provided power adapter.
- Use of an extension power cord is not allowed.
- Always ensure that the appliance has cooled fully after use before performing any cleaning or user maintenance.
- Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
- Take care when equipping accessories with rotating parts as this could cause entrapment.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.

- Keep the appliance away from other heat emitting appliances.
- Keep the appliance away from heat or sharp edges that could cause damage.
- Keep away from children aged below 8.
- Improper repairs may put the user in danger.
- If any part is damaged due to human error, only a qualified electrician can repair it. Please note the appliance is not under warranty in this case.
- This appliance is not a toy.
- Children should be supervised to ensure that they do not play with the appliance.
- Children whose aged from 8 years and above, people who with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning to use the appliance in a safe way and understand the hazards involved.
- Check the voltage indicated on the rating plate and confirm you connect the appliance to the power supply with correct voltage.

Battery Safety

- If the battery pack becomes exhausted, it should be removed from the product to avoid leakage.
- In the event of the battery pack leaking, do not allow any liquid to come into contact with the skin or eyes.
- If contact has been made, wash the affected area with copious amounts of water and seek medical advice.
- Keep the battery pack out of the reach of children.
- Secondary battery packs need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the batteries several times to obtain maximum performance.
- Do not leave battery packs on charge for prolonged periods of time.
- Do not use any charger other than that specifically provided for use with the product.
- The supply terminals are not to be short-circuited.
- Do not store above 60°C. Avoid storing in direct sunlight.
- Do not use any battery packs that are not designed for use with the product.
- Do not dispose of the battery pack in a fire.
- Do not crush, puncture, dismantle or otherwise damage the battery pack.
- Do not dismantle, open or shred battery packs.
- Do not expose the battery pack to heat or fire as it may explode.
- Do not subject the battery pack to mechanical shock.
- Do not dispose of the exhausted battery pack in household waste.
- To dispose of the exhausted battery pack, take it to a local recycling station.
- Contact the local government offices for further details.
- This appliance is fitted with a 29.6V 2500mAh Li-ion rechargeable battery.

WARNING


Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

1. Prevent unintentional starting ensure the switch is in the off-position before connecting pack, picking up, or carrying the appliance.
Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
2. Disconnect the battery pack from the appliance before making any adjustments changing accessories or storing appliance.
Such preventive safety measures reduce the risk of starting the appliance accidentally.
3. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
4. Use appliances only with specifically designated battery packs.
Use of any other battery packs may create a risk of injury and fire.
5. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.
Shorting the battery terminals together may cause burns or a fire.
6. Under abusive conditions, liquid maybe ejected from the battery; avoid contact.
If contact accidentally occurs, flush with water.
If liquid contacts eyes, additionally seek medical help.
Liquid ejected from the battery may cause irritation or burns.
7. Do not use a battery pack or appliance that is damaged or modified.
Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
8. Do not expose a battery pack or appliance to fire or excessive temperature.
Exposure to fire or temperature above 130°C may cause explosion.
The temperature of 130°C can be replaced by the temperature of 265 °F.
9. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions.
Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
10. Have servicing performed by a qualified repair person using only identical replacement parts.
This will ensure that the safety of the product is maintained.
11. Do not modify or attempt to repair the appliance or the battery pack (as applicable) except as indicated in the instructions for use and care.


Charging

- * For safety, the battery was charged up to 30% battery capacity before shipping. Please fully charge the battery before first use.
- * It takes about 5.5 hours to fully charge the battery from flat status.

Way 1: Insert the battery pack into the main motor; insert the power plug into the battery pack; connect the power adaptor with the power supply

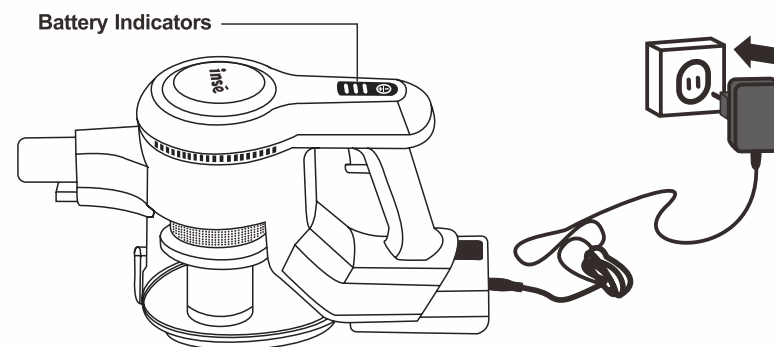

Way 2: Charge the separate battery directly

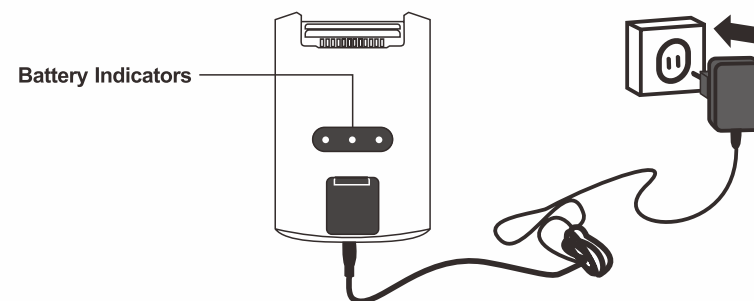

Battery Indicators

On Work



- Three solid blue lights: **full power**



- Two solid blue lights: **medium power**

 


- One solid blue light: **low power**



- One blinking blue light: **lower than 5% of the total power, needs a recharge**

During Charging



- Three blue lights blinking successively: **charging**



- Three steady lights: **charging complete**

Notes:





* The machine cannot be turned on during charging

* Charge the battery only with the adaptor provided by INSE

* When you won't use the battery for a long time, please store it in a cool dry place. In this situation, please ensure that the battery has been half charged (2 glowing indicator lights)

* If you need an additional battery, please purchase from an authorized distributor of INSE

Storage

 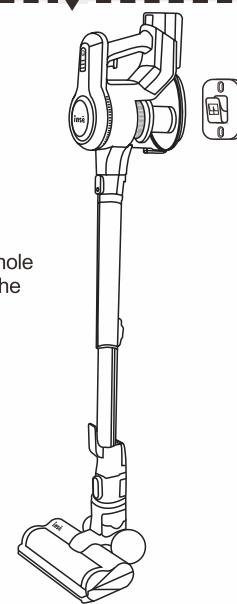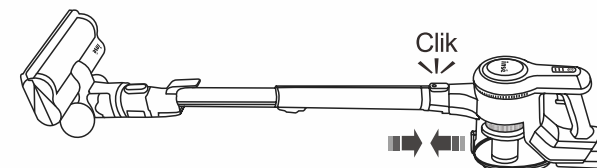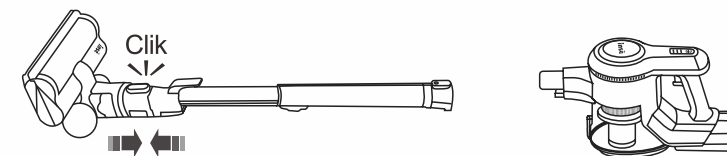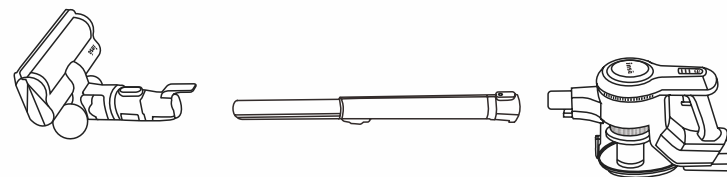













 


Way 1:
Hanging the whole
machine onto the
wall bracket




Way 2:
Hanging the main
motor onto the hook
of the metal tube

Product Parts List and Schematic


Item	S600	S6	S6P
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
		✓	✓
		✓	✓
	✓	✓	✓ 2 Pack
	✓	✓	✓
	✓	✓	✓
		✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓
	✓	✓	✓

* Actual accessories may vary from shown or change without notice.
 * Available accessories may vary by market.

Product Overview

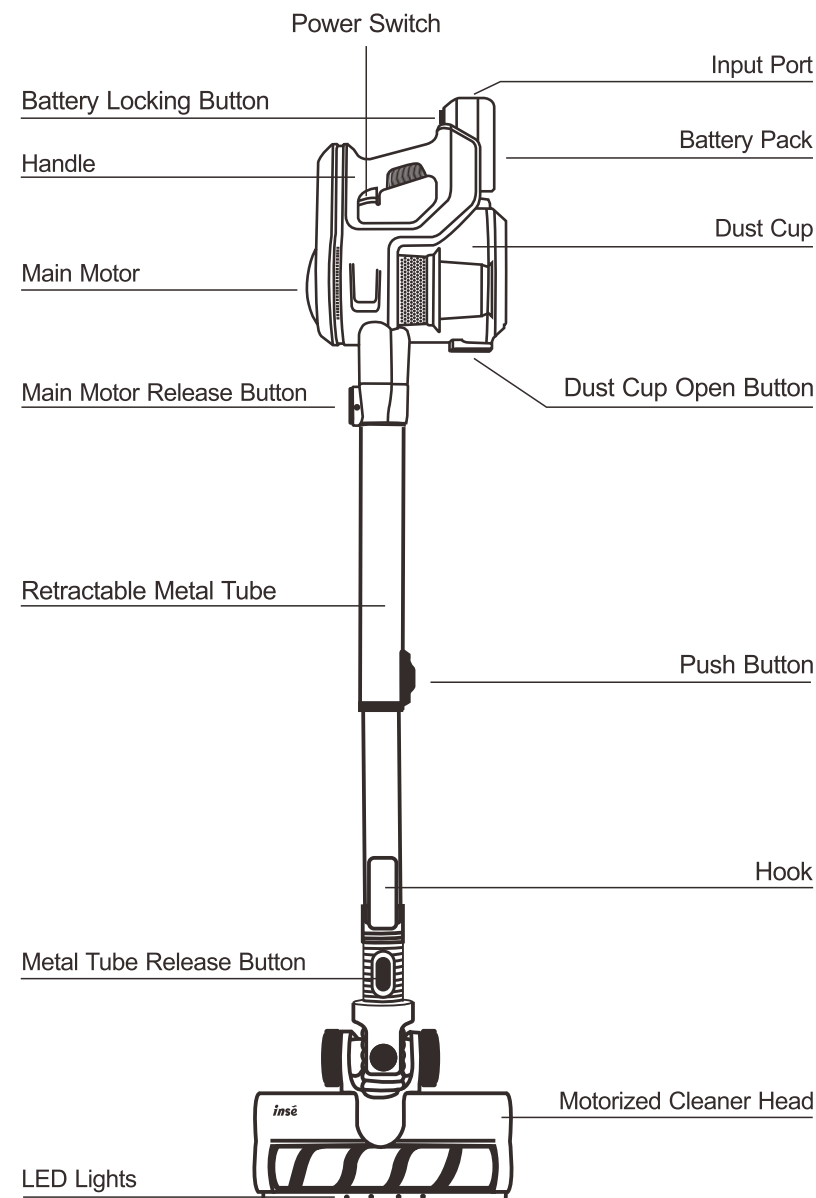

Accessory Instructions

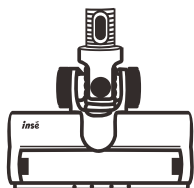

Motorized Cleaner Head

Can be connected to the metal tube for daily cleaning on the floor or carpet, or to the main motor for cleaning the trunk



Stiff Roller Brush

Can be installed into the cleaner head; Ideal for both hard floors and carpets



 
Soft Roller Brush

Can be installed into the cleaner head; Perfect for hard floors, performs better for removing fine dirt from wood floor



Mini Motorized Cleaner Head

Perfect for picking up hair and dust mite from fabric surface like sofa and mattresses like bed, pillow




Long Crevice

For corners and other hard-to-reach places; can be connected to the metal tube to clean spider web on the ceiling



Flexible Hose

 Can be connected with long crevice or 2-in-1 brush, perfect for cleaning corners inside the car or cabinet



2-in-1 Brush

Can be switched into a brush or a wide crevice; suitable for fabric surface and corners



2-in-1 Cleaning Gadget


The blade end can be used to cut off hair that wrapped around roller brush, the another brush end can be used to clean dirt inside dustbin, strainer or cleaner head

Product Technical Parameters

Product Category	Vacuum Cleaner		
Product Weight (Including All Attachments)	S6: 3.6kg / S6P: 4.0kg / S600: 3.0kg		
Product Net Weight (Main Motor with Battery)	1.5kg/3.3lb	Rated Power	250W
Dust Cup Capacity	1.2L	Rated Voltage	29.6V
Charging Time	5.5 hours	Power Adapter Input	100-240V~50/60Hz
Battery Capacity	2500mAh	Power Adapter Output	36V 500mA


Assembly and Disassembly

1. Insert the tube end into the cleaner head port until you hear a klik, make sure the connection is tight

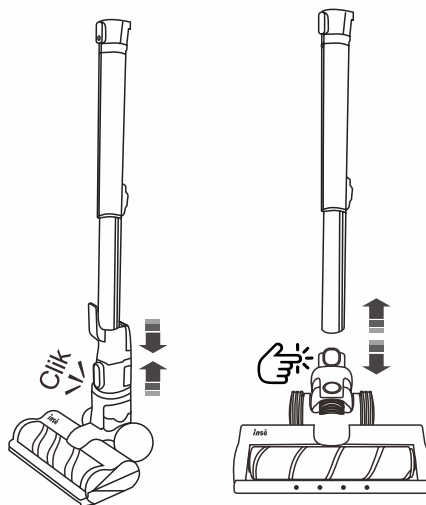


2. Press the metal tube release button with one hand, hold the tube with another hand and then pull it out to remove it

1. Insert the metal tube end into the suction port of the main motor until you hear a klik, make sure the connection is tight

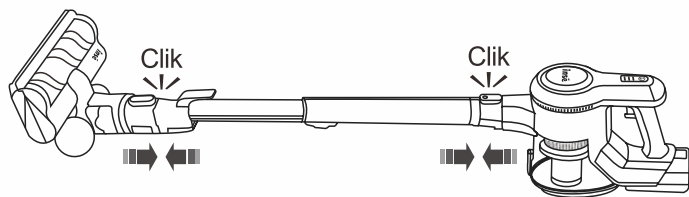


2. Press the main motor release button with one hand, hold the main motor with another hand and then pull the handle to remove the main motor from the tube

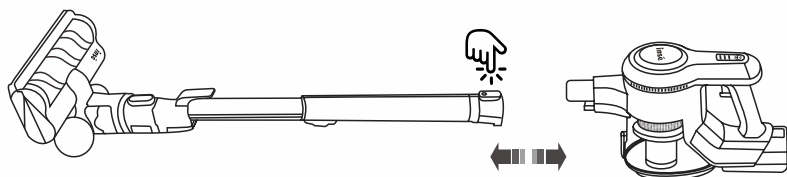


Combination


1

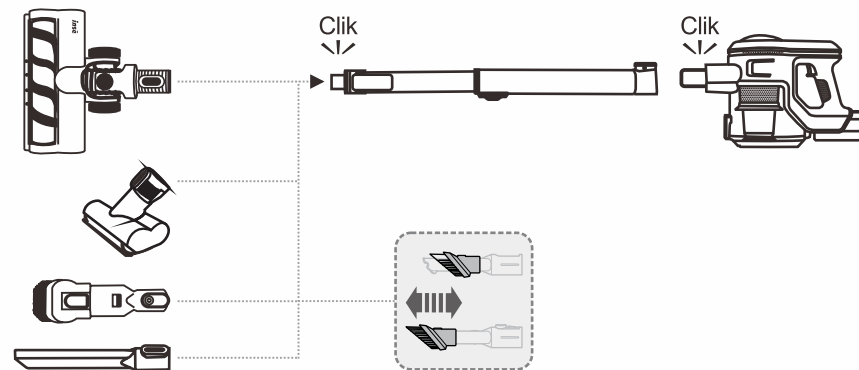

2

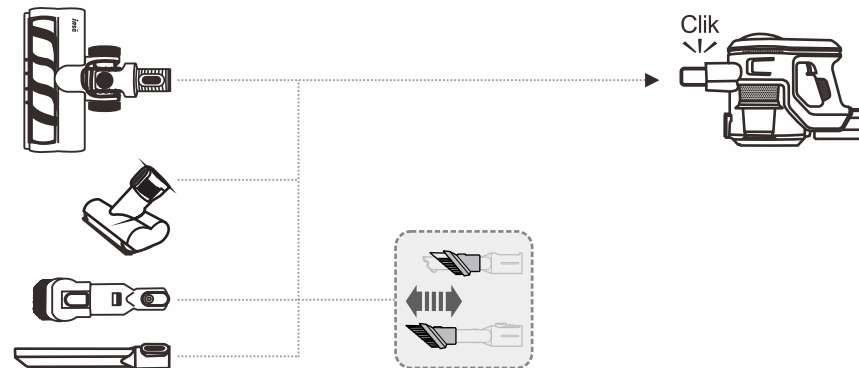

3

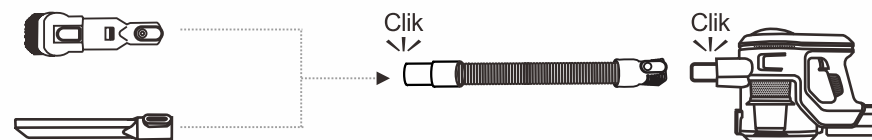



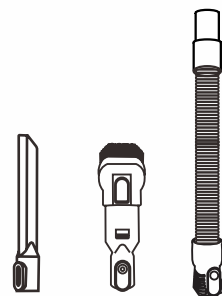
The flexible hose is not electric, so it cannot function when being connected with a motorized attachment.

Power Mode and Runtime


Note:

* Any runtime posted on the website is the time when the machine runs without attaching to any surface and debris.

* Actual runtime will vary based on the power mode, battery capacity, attachment, debris amount, cleaning area/surface.

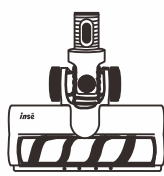			
Powerful Mode	35-45 minutes	35-45 minutes	35-45 minutes
Max Mode	12-20 minutes	12-20 minutes	12-20 minutes

Ready to Use

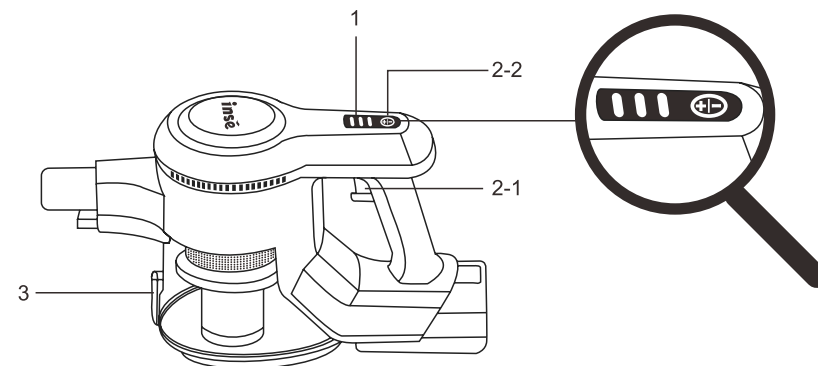

1. Preparation

Please check if the battery power is sufficient before using. It's suggested to charge over 5-6 hours before the first time of use to ensure utmost performance of the product. Choose the attachment you need according to the cleaning area/surface.

2. Start to Work

2-1 Press the power switch to turn on the vacuum, and then press it again to turn it off.
2-2 Press the +/- button to switch the power mode between MAX and powerful.

- ❗ **HOUSEHOLD USE ONLY**
- ❗ **DO NOT** use outdoors or on wet surfaces
- ❗ **DO NOT** immerse in water

3. Dust Cup Cleaning

After turning off, press the button to release the dustbin cover, dump the dirt and then close the cover until you hear a click.



Daily Maintenance

In order to make ensure max performance of the vacuum, please regularly maintain its components.



The dustbin or the cleaner head cannot be washed by water. Otherwise, the motors will be damaged.

Clean Handheld Part of the Main Motor

- ❗ Please turn off the vacuum before cleaning.
- ❗ Wipe the surface with a clean cloth; avoid the water gets into the inner part of the vacuum.
- ❗ Do not place the vacuum under direct sunlight or in wet places after cleaning.

Clean Stainless Steel Strainer


If the strainer is full of dust, please clean it in time. You could wash it with water. Make sure it is completely dry before refitting.

Clean Dust Cup

The sign -MAX- on the dust cup means dust capacity limit. Once the dust approaches the sign, empty the dust cup in time. You could use the 2-in-1 cleaning gadget to clean the inside.

Clean Detachable Roller Brush

1. Unlock the side lock on the underside of cleaner head, remove the side cover and take out the roller brush.
2. Remove the side cover of the roller brush if necessary.
3. Use the 2-in-1 cleaning gadget to cut and remove the tangled hair.

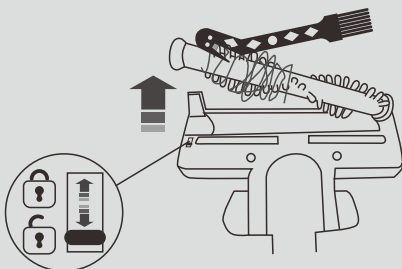


Clean Strainer and High Efficiency Filter

IMPORTANT!

- ! Wash the filter with cool water at least every month
- ! Ensure the strainer and filter are completely dry before refitting


1. Hold the main motor, press the button to open the dustbin cover, rotate the strainer and filter one by one to take them out (see as pictures below)

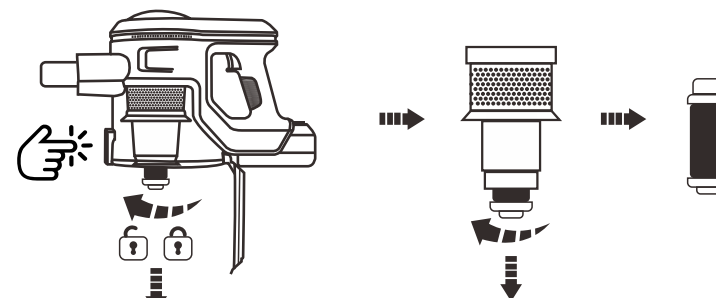

Remove after Rotating

2. If they are too dirty, you could wash them with **cool water**

3. Ensure the strainer and filter are completely **dry** before refitting

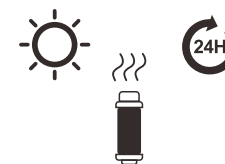

Troubleshooting

Problems	Possible Causes	Solutions
Machine stops working or doesn't work	1. Low battery or no battery power 2. There is blockage 3. Roller brush is tangled by hair	1. Charge the battery 2. Remove the blockage (refer to Looking for Blockages) 3. Clean the roller and also remove the side covers of the roller to remove the tangled hair
Roller brush stops spinning	Roller brush is tangled by hair	Clean the roller and also remove the side covers of the roller to remove the tangled hair
Weak suction power	1. Dustbin, strainer or filter is full of dust 2. The strainer or filter is not installed 3. There is blockage 4. Roller brush is tangled by hair	1. Clean the dustbin, strainer or filter, replace the filter if necessary 2. Install the strainer and filter 3. Remove the blockage (refer to Looking for Blockages)
Abnormal motor sound	There is blockage	Remove the blockage (refer to Looking for Blockages)
Battery cannot be charged	1. Wrong adaptor is used 2. Connection between power cord and battery is loose	1. Use the correct adaptor offered by INSE 2. Make sure the power cord is plugged tightly



S6/S6P

<http://bit.ly/inseyoutube-s6>



S600

<http://bit.ly/inseyoutube-s600>



S6/S6P/S600

<https://inselife.com/pages/faq>

If the solutions above cannot solve the problem, or the issue you met is not listed, please feel free to contact us via

email support@inselife.com

or visit our website www.inselife.com

for further support.

Warranty

The 1-Year Limited Warranty applies to purchases made from authorized retailers of INSE.

Warranty coverage applies to the original owner and to the original battery only and is not transferable.

According to the requirements outlined in this instruction manual, subject to the following conditions and exclusions.

WHAT IS COVERED ?

Your INSE machine has a 1-year warranty against original defects in material and workmanship, when used for private household purposes in accordance with the INSE Instruction Manual.

This warranty provides, at no extra cost to you all labor and parts necessary to ensure your machine is in proper operating condition during the warranty period.

This limited warranty is subject to the following terms:

WHAT IS NOT COVERED ?

INSE shall not be liable for costs, damages or repairs incurred as a result of :

Machines purchased from an unauthorized dealer.

Careless operation or handling, misuse, abuse and/or lack of maintenance or use not in accordance with the INSE Instruction Manual.

Use of the machine other than for normal domestic purposes, e.g. for commercial or rental purposes.

Use of parts not in accordance with the INSE Instruction Manual.

Use of parts and accessories other than those produced or recommended by INSE.

External factors unrelated to product quality and use, like accidental water damage.

Repairs or alterations carried out by unauthorized parties or agents.

Failing to clear blockage and other hazardous material from the machine.

Normal wear and tear, including normal wearing parts, such as clear bin, belt, filter, HEPA, brush bar, and power cord (or where external damage or abuse is diagnosed), carpet or floor damage due to use not in accordance with manufacturer's instructions or failure to turn the brush bar off when necessary.

Reduction in battery discharge time due to battery age or use.

Warranty

WARRANTY SERVICE

Please contact the INSE customer service Email: support@inselife.com

Please inform us your model name/number, serial number, purchase date ,order number, main problem and your requirement.

Please keep your purchase receipt in a safe place to ensure you have this information.

All work will be carried out by INSE or its authorized agency.

Any replaced defective parts will become the property of INSE.

Service under this warranty will not extend the period of this warranty.

If your machine is not functioning properly, please email us: support@inselife.com

WARRANTY LIMITATIONS AND EXCLUSIONS

Any implied warranties relating to your machine including but not limited to warranty of merchantability or warranty of fitness for a particular purpose, are limited to the duration of this warranty. This limitation is not allowed by some regions and so this limitation may not apply to you.

Your remedy for breach of this warranty is limited to the warranty service described above.

INSE will not be liable for any consequential damage or incidental damages you may incur in connection with your purchase and use of your machine. This limitation is not allowed by some regions and so this limitation may not apply to you.

This limited warranty gives you specific legal rights. You may also have other rights which vary by region. This limited warranty is not transferable.

Manufacturer's warranties may not apply in all cases, depending on factors such as use of the product, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer if you have any questions.