

## Disclaimer

The manufacturer assumes NO LIABILITY for damages, injuries, or losses resulting from:

- \* Misuse, neglect, or failure to follow instructions.
- \* Unauthorized modifications, repairs, or use with non-compatible accessories.
- \* Acts beyond reasonable control (e.g., power surges, natural disasters).



**USE WITH CAUTION. WHEN IN DOUBT, UNPLUG.**

T5386

# User Manual



## **Welcome**

Thanks for purchasing this **Electric Hot Pot**, Please read this user manual carefully before use.

## Package List

Upon opening the package, please check for the following items:

- \* 1 × Electric Hot Pot with Glass Lid
- \* 1 × Steamer Rack
- \* 1 × Power Cable
- \* 1 × Spatula
- \* 1 × User Manual

## Specifications

- \* Product Type: Electric Hot Pot
- \* Color: White
- \* Material: ABS Shell; Stainless Steel Inner Surface With Teflon Coating; Glass Lid
- \* Powered By: 110V60HZ US Plug
- \* Power: 1000W
- \* Hot Pot Capacity: 3L/0.8Gal
- \* Suitable For 3-5 Person
- \* Power Adjustment: 2 Gears(1000W High Power + 600W Low Power)
- \* Control Method: Push Switch
- \* Overheat/Dry-Boil Protection: Auto shut off when reach over 170°C/338°F
- \* Power Cable Length: 70cm/27.56in
- \* Pot Opening Diameter: 24cm/9.45in
- \* Steamer Rack Size: 30×25.5×7cm/11.8×10.04×2.76in
- \* Spatula Size: 32×9cm/12.6×3.54in
- \* Item Size: 41×23×30cm/16.14×9.06×11.8in
- \* Item Weight: 1065g/2.35lbs

## Highlights

- \* With a steamer rack, can boil soups and steam a variety of delicious foods simultaneously.
- \* Dual side handles on the steamer rack ensure convenient carrying.
- \* The 2-power adjustment(1000W/600W) offers more precise control options.
- \* Non-stick coating can effectively prevent food from sticking and provide healthy cooking.
- \* Smooth surface allows for easy cleaning with water and a sponge.
- \* Clear glass lid with vent hole allows you to observe the cooking of ingredients conveniently.
- \* Equipped with advanced heating element, able to cook your food faster and more evenly.
- \* The over-heat and dry-boil protection provide a max protection while cooking, effectively safeguarding the pot from overheating and continuous boiling in dry and overheated conditions.
- \* Long handle can protect your hands from burning effectively.
- \* Comes with a silicone spatula for convenient cooking.

## Product Instructions

1. When power switch is at “O”, product is not connected to power supply. The indicator light is off and stops heating.
2. When power switch is at “I”, product is connected to power supply. The indicator light is on and starts heating. At this level, the product is heated at low power.
3. When power switch is at “II”, product is connected to power supply. The indicator light is on and starts heating. At this level, the product is heated at high power.

4. For safety reason, please adjust the power switch to “O” when stop heating and unplug the power cord or when the product is not in use.

## Friendly Reminder



**Warning: Failure to comply with these instructions may result in fire, electric shock, burns, or serious injury.**

1. The power supply voltage must be consistent with the rated power of this product.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. This product is for household use only.
4. Please use the power cord provided only. Do not use other power cord by third party.
5. Please do not leave the product to operate alone without any guardian.
6. Please use the product on a flat surface and do not put near any heat resources, or on any other electronic appliances.
7. When the appliance is working, do not touch the hot steam from the cover lid, to prevent injury.
8. Do not exceed the maximum water level (15mm from the pot), to prevent boiling water splashes out and cause injury. Do not lower than minimum water level to prevent dry burning and cause product damage. Do cover the glass lid when boiling water.
9. To clean the pot during first time use, add water to the maximum water level and boil the water and drain out the water.
10. Please keep the power cord in a safe dry place when the product is not in use.
11. Do not immerse the product in the water or wash with any liquid to prevent short circuit.
12. Do not connect to power supply under these situations: when the pot is empty, during adding water, cleaning the pot, or moving the pot.
13. Do not disassemble or repair the product if there is any damage. Please contact our customer service immediately.
14. Inspect cord regularly. Discard and replace if damaged. Do not repair frayed wires yourself.
15. This appliance is NOT A TOY. Keep out of reach of children. Do not allow unsupervised use.

## Cleaning & Maintenance

1. Before cleaning, kindly unplug the cable from machine. Wait the pot to be cool down before cleaning.
2. When cleaning, do not immerse the body of pot into water. Use a wet cloth to wipe.
3. Strictly not allowed to use the steel wool or any other metal to brush the body and inner surface of the pot to prevent damage.
4. Please remove all the remaining foods after cooking.
5. The surface of the bottom pot will turn colour after a period of time due to is in a high temperature status for a long time. This is a situation which could not be avoid, but it does not affect the function of the electric pot.
6. When do not use for a long time, please clean and dry the cooking pot before storage.