
Toy & Book Rack

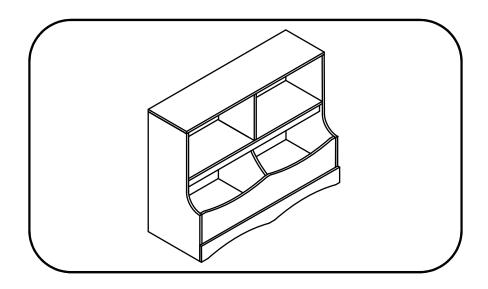

Assembly Instructions

Product Dimensions: 40.94"L×15.94"D×32.68"H

Please take a moment to read through the entire instruction booklet before assembly to familiarize yourself with this product. Once you feel ready to start, follow the instructions step by step and this should make this process as easy as we could make it for you.

WARNING ! CAUTION

ADULT ASSEMBLY REQUIRED CHOKING HAZARD

 This product includes small parts, sharp points and sharp edges in its unassembled state. Keep unassembled parts away from children under 3 years of age, and animals.

SAFETY WARNINGS

- Follow the information on the warnings appearing on table and on the carton. Do not remove warning label from cabinet.
- Do not allow children under 3 years of age to use the cabinet.
- Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

FURNITURE TIP-OVER HAZARD

Children have died from furniture tip-over

To reduce the risk of furniture tip-over:

- ALWAYS install tip-over restraint especially if used by a wall or in the open.
- NEVER put a TV on this product
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- ALWAYS place heaviest items in lowest cabinet.

PARENTAL SUPERVISION IS REQUIRED

- Parents or Guardians should supervise use under the intended age specifically regarding children that may have access to it and climb on the unit.
- Do not allow horseplay on, under, or behind the unit and prohibit jumping on the cabinet.
- If used improperly, your table may be pulled over or fall, creating risk of injury or damage. Children should not be permitted to climb or pull on the cabinet.

USE, MAINTENANCE & ASSEMBLY

- Periodically check and ensure that the components are in their proper position, free from
- damage, and that all connectors are tight.
- Use on level surfaces only. Assemble on a soft level surface to avoid damage to unit or floor.
- Do not use this item if any components are missing or damaged.
- Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
- Only clean using damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- Check you have all components and tools listed on page 4
- Do not stand or put weight on this product during assembly, this could cause damage.
- Remove all hardware from the plastic bags and separate them into groups.
- Assemble the item as close to its final position (in the same room) as possible.
- Certain assembly steps may be easier with 2 people.
- Dispose of all packaging carefully and responsibly.
- · We do not recommend power screwdrivers. Only use hand screwdrivers to prevent damage to unit.
- Keep these instructions for future reference.

Enfants morts suite au basculement d'un meuble.

Afin de limiter le risque de basculement de meuble:

- TOUJOURS utiliser les fixations anti-basculement.
- NE JAMAIS installer de TV sur ce produit.
- •NE JAMAIS laisser d'enfants se tenir debout sur les tiroirs, portes ou etageres, y grimper ou s'y suspendre.
- NE JAMAIS ouvrir plus d'un tiroir a la fois.
- TOUJOURS placer les choses les plus lourdes dans les tiroirs du bas. Colocar los objetos mas pesados en los cajones inferiores.

Han muerto ninos por el vuelco de meubles.


Para limitar el riesgo de vuelco de los meubles:

- Utilisar SIEMPRE las fijaciones antivuelco que suministran.
- NUNCA instalar un TV sobre este producto.
- 'NUNCA permitar que los ninos se pongan de pie, trepen o se cuelguen de los cajones, puertas o baldas.
- •NUNCA abrir mas de un cajon a la vez.



ASSEMBLY AT A GLANCE

Please take a moment to read through the whole instruction booklet before assembly to familiarize yourself with this product. Once you feel ready to start, follow the instructions step by step and this should make this process as easy as we could make it for you.

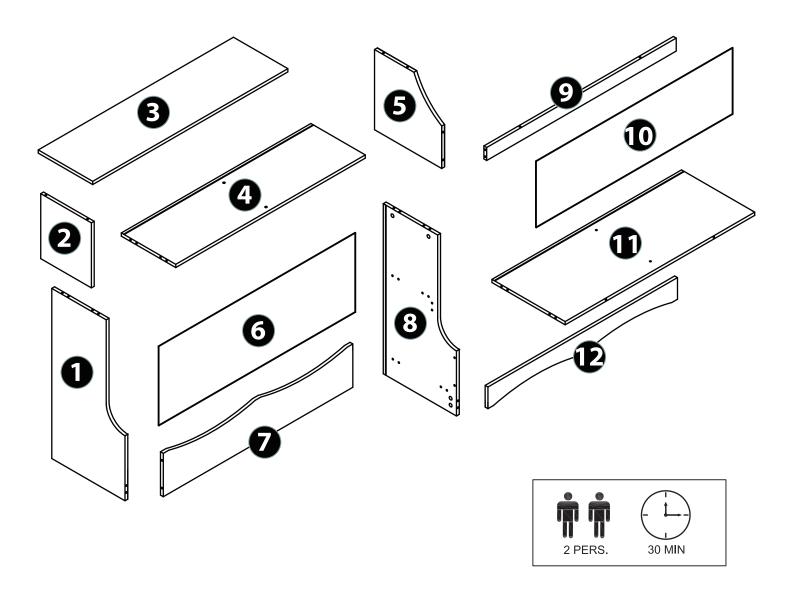


This drawing is to give you an overall idea only of how this assembly will go together and does not replace the assembly instructions.

COMPONENT PARTS


Please check that you have all the parts listed below

- 1. Left Side Panel ×1
- 2. Middle First Support Panel×1
- 3. Top Panel×1
- 4. Middle Panel×1
- 5. Middle Second Support Panel×1
- 6. Second Back Support Panel ×1
- 7. Drawer Front ×1
- 8. Right Side Panel×1
- 9. Support Panel ×1
- 10. First Back Support Panel ×1
- 11. Bottom Panel ×1
- 12. Bottom Support Panel $\times 1$

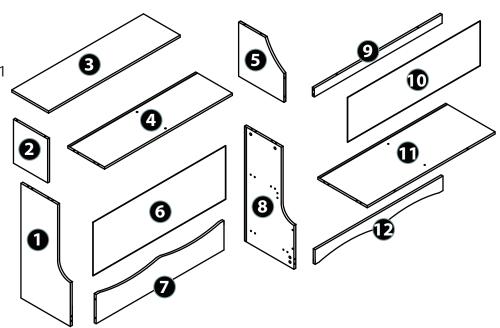

ASSEMBLY HARDWARE



 

Cam Bolt × 32





Cam Lock × 32





 






Wood Dowel Pin ×20

Tools Required



Phillips Screwdriver (Medium) (not included)


*Do Not Use Power Screwdriver or Drill.



(included)


1

Insert A×4 into the 4.

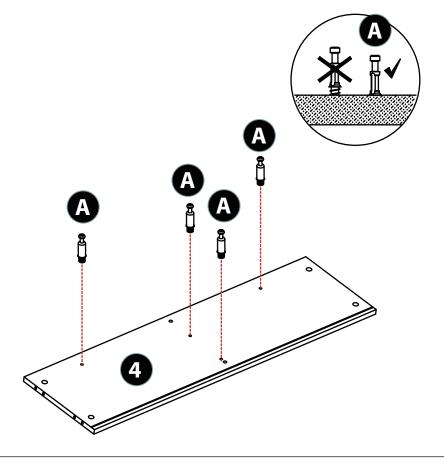


2

Insert the 2 into the 4 with $D\times 2$ and $C\times 2$.

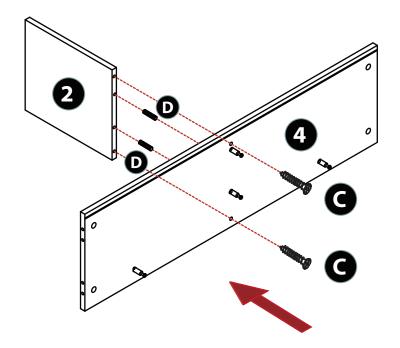


3

Insert B \times 2 into the 9, and install the 9 into the 4 with the A \times 2.

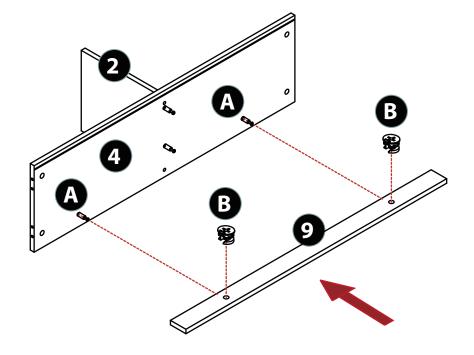


4

Insert B \times 2 into the 5. Install the 5 into the 4 with A \times 2.

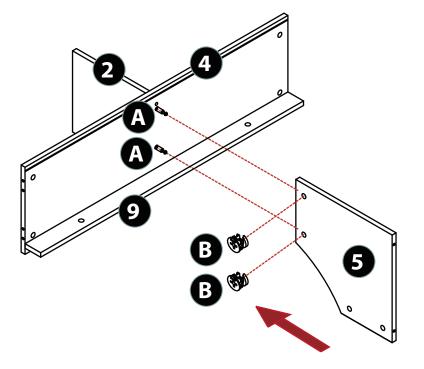


(5)

Insert $A \times 2$ into the 7.

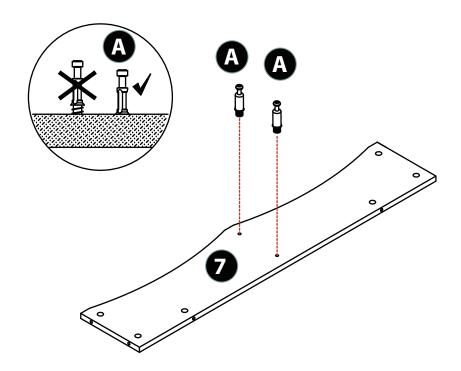


6

Insert the 7 into the 5 with $B\times 2$.

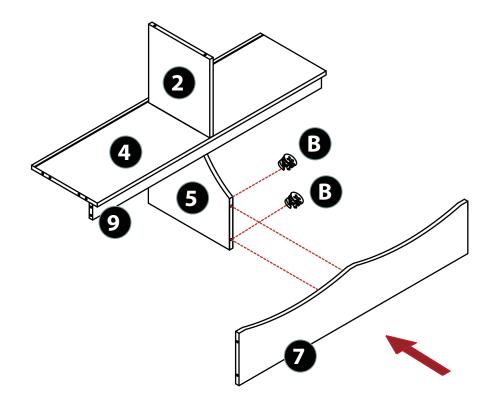




Insert A×2 into the 11.

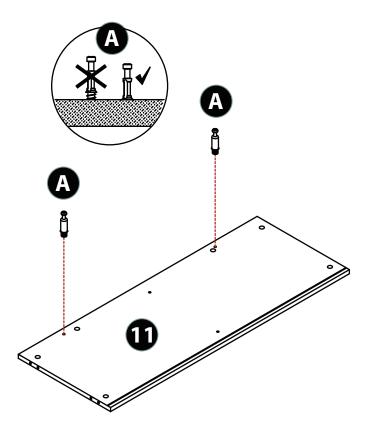




Insert the 11 into the 5 with $C\times 2$ and $D\times 2$. Insert the 11 into the 7 with $B\times 2$.

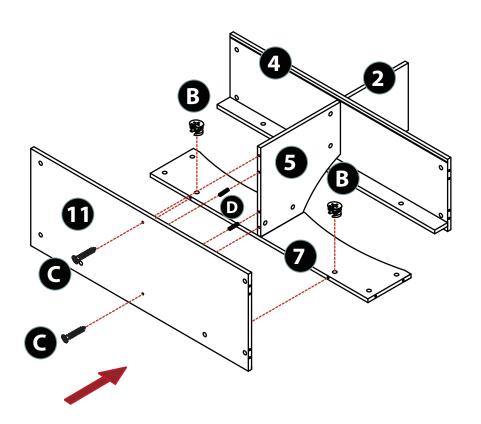


9

Insert A×6 into the 8.Repeat for the 1

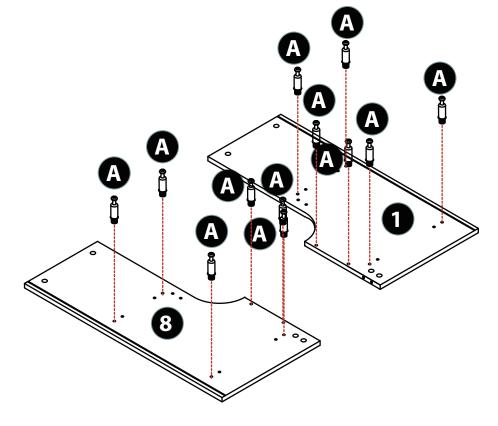


10

Insert the 8 into the 4 and 11 with B×6 and C×6.

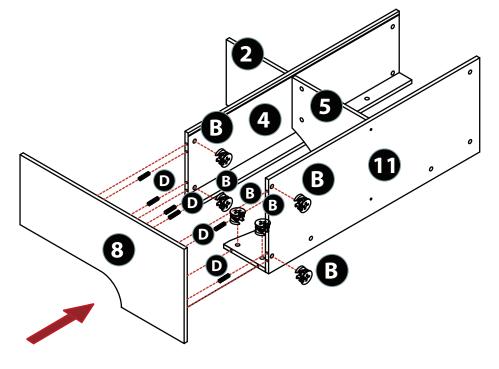


11

Push the 6 into the grooves of the 4.

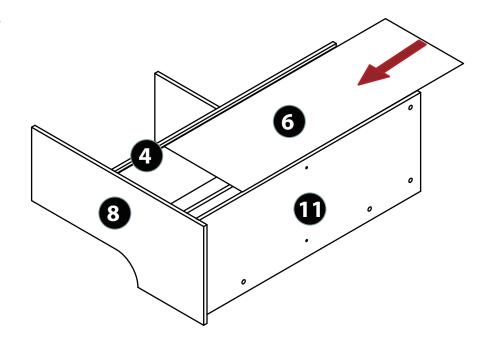

12


Insert the 1 into the 6 and 11 with $B\times6$ and $D\times6$.

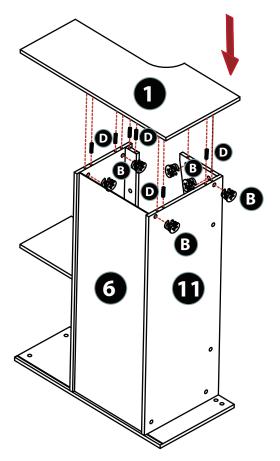

Page 10 of 14


13

Insert A×6 into the 12.

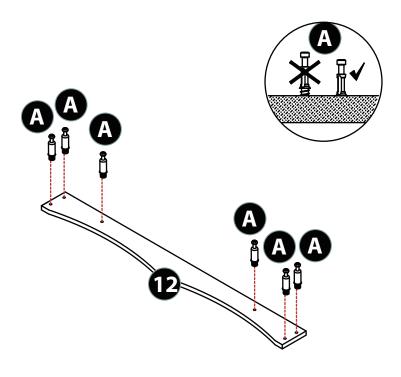

14


Insert A×6 into the 3.

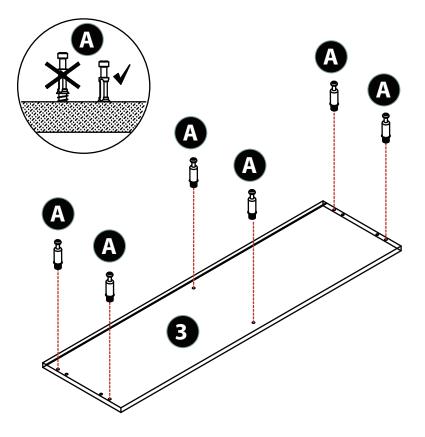

Page 11 of 14


(15)

Insert the 12 into the 1,8 and 11 with B×6.

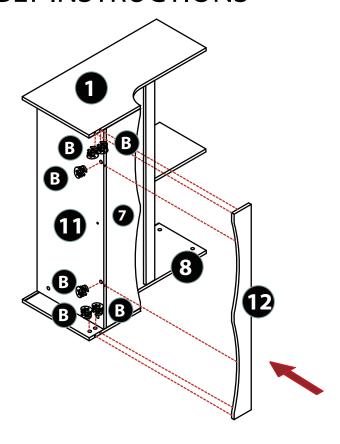


16

Push the 10 into the grooves of the 1,2 and 8.

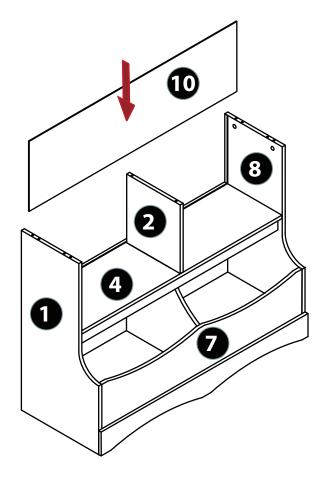


Page 12 of 14

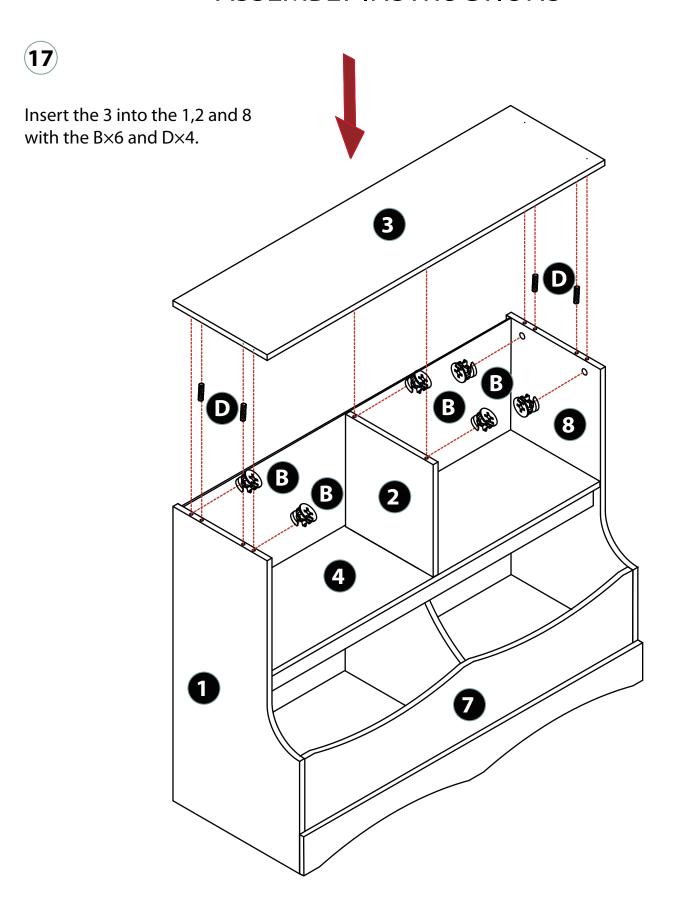

Page 13 of 14

ASSEMBLY COMPLETE

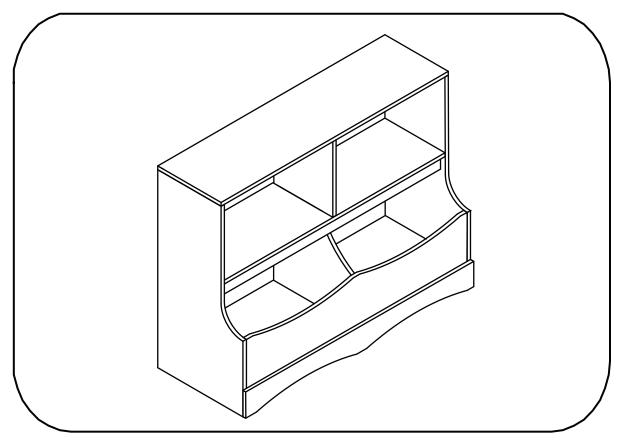

CONGRATULATIONS, YOUR TOY & BOOK RACK IS COMPLETE!