

Keazile

Smart Light, Brighter Life.

Item No. KA07-18ABS8-BR

Contact us: support@keazile.com

Thank you for purchasing and using our product. If you encounter any issues during installation or usage, please contact us using the information provided above. We will respond promptly to assist you in resolving any problems. Please read this installation manual carefully before using the security product.



Safety Instructions

1. **Turn off the power** at the main fuse box or circuit breaker **before doing anything** with the fan. Don't get electrocuted.
2. **All wiring must follow your local electrical rules** or the National Electrical Code. **Hire a licensed electrician** unless you really know what you're doing.
3. **Wear gloves** if the fan parts are sharp. Don't slice your hands open.
4. Make sure the fan has **enough space to spin freely**:
 - At least **7 feet (2.13 m)** between the floor and the blades.
 - At least **18 inches (45.72 cm)** from any walls or upright surfaces.
5. **⚠ WARNING**: To avoid fire, electric shock, or getting hurt:
 - Only mount the fan to a **ceiling box rated for fan support**.
 - Use the **mounting screws** that came with the box.
 - If you're not sure the box is strong enough, **ask an electrician**.
 - Regular light fixture boxes usually **aren't strong enough** and might need to be replaced.
6. The **ceiling box and support structure** must be **securely attached** and able to hold **at least 45 kg** (about 100 lbs.).
7. Be careful when installing or cleaning the fan to **avoid injury or damage**.
8. **Never use water or cleaning chemicals** on the fan. Use a **dry cloth** or a **slightly damp cloth** only.
9. After connecting the wires:
 - **Push the spliced wires up into the box**.
 - Keep the **grounded wires and grounding wire on the same side** of the box.
10. The wiring diagram is just a **reference**, not a step-by-step guide.
11. **Indoor use only**. Don't install this fan outside.

Package Contents

1. Remote Control & Receiver — 1 Set
2. Coupling Cover — 1 PCS
3. Downrods 10 cm or 3.94 in.
4. Canopy & Mounting Bracket — 1 Set
5. Downrods 20 cm or 7.87 in.
6. Zinc alloy connector — 1 PCS
7. Mounting Bracket Screws — 1 Pack
8. Fan Motor & Shade— 1 PCS



Tools required

Screwdriver, Ladder, Electrical Tape/Terminal Block (Not Included)



Installation Steps

Step 1:(open the carton and count the parts)

Open the carton as shown below. (Be careful not to use too much force to avoid damaging the contents)

When you open the box, you will see the product in the inner box, as shown below:

Please remove the goods from the carton as shown in the following figure:



Figures 1



Figures 2



Figures 3

Step 2:(zinc alloy connector and motor connection)

A. Connect the zinc alloy connector to the motor as shown in the figure below. (Fig.4)

B. Here is a picture of the effect when connected. (Fig.5)



Figures 4



Figures 5

Step 3: (Install Downrod)


A. Downrod There are two sizes, choose one size to install according to the height of your house.

B. Pass Canopy and Coupling Cover through Downrod as shown in Fig. 6 below.

C. The output wire of the motor is passed through Downrod as shown in Fig. 7:



Figures 6

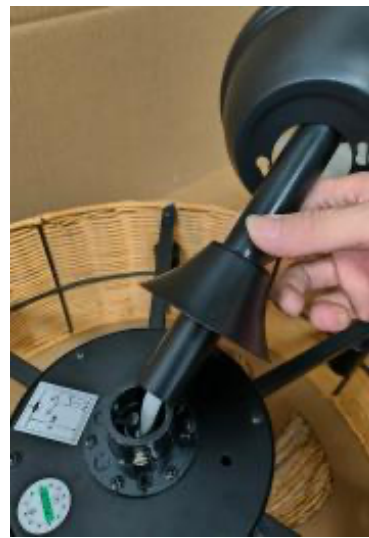


Figures 7

- D. Connect the Downrod to the motor and connect the motor to the Downrod with Cross Pin, as shown in the figure below: (Fig. 8)
- E. As shown in the figure 9, fix R Pin (Clamp Pin)
- F. As shown in the figure 10, tighten two screws to secure Downrod.



Figures 8

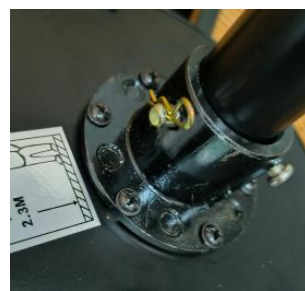

Figures 9



Figures 10


Step 4: Fix Mounting Bracket.

Depending on the material of your pockmark, you can choose one of three ways to fix Mounting Bracket:

- A. If your ceiling is made of solid wood and more than 9mm thick, use the 4 wooden screws in the accessory pack to connect the Mounting Bracket to the ceiling. (Fig. 11)
- B. If your ceiling is made of solid cement, use the two expansion screws in the accessory pack to connect the Mounting Bracket to the ceiling.
- C. If you have a standard junction box reserved in your home, such as the one shown below, it can also be installed directly. (Fig. 12)



Figures 11

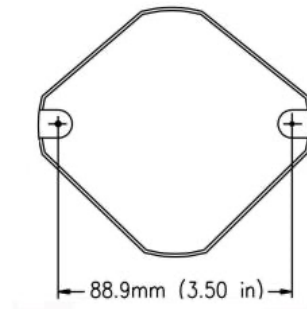

Figures 12

No matter which of the above methods is used to fix the ceiling disk, please ensure that the ceiling disk is firm, firm and reliable after being fixed. There should be no signs of shaking or loosening.

Step 5: (Hang the motor to Mounting Bracket)

A. As shown in the figure below:




Figures 13

B. There is one place that needs special attention. The two positions marked by the red arrow in the figure below must be aligned:




Figures 14

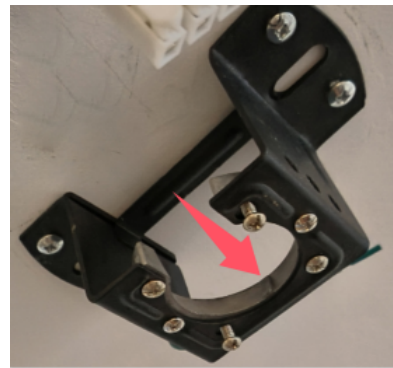

Figures 15

C. Connect the wiring of the remote receiver to the reserved wires in the ceiling (black is L line, white is N line). You can connect the wires in three ways:

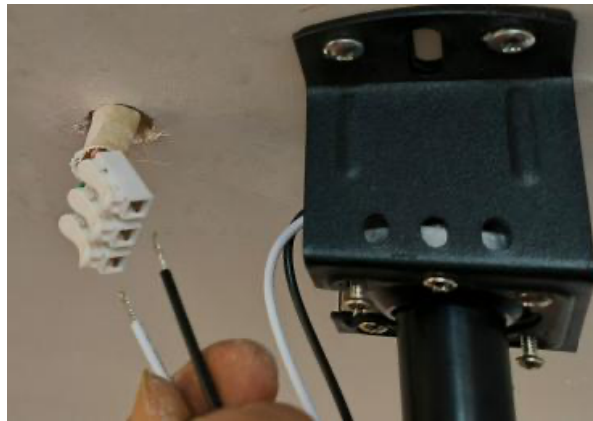

Figures 16

A. Electric tape. (No match in the goods)

B. Terminal blocks. (If you have terminal blocks reserved in your home)

C. Our matching orange wire cap.

D. Loosen the two screws shown in the figure below. (Fig. 17)

E. Use these two screws to connect Canopy and Mounting Bracket. (Fig. 18)



Figures 17



Figures 18

Step 6:(Insert E12*6 bulb, no match in the cargo)



Figures 19

Step 7: Fix the remote-control bracket. If you don't think it is necessary, you can skip this step

As shown in the figure below. (If the remote-control bracket is fixed to wood, just use 2 screws to fix it directly. If the remote-control bracket is fixed to cement, you need to first insert 2 white rubber sleeves and then fix it with 2 screws. These accessories are in the packaging of the remote control.) (Fig.20)

Step 8: Insert 2 AAA batteries. (The battery does not match the goods)

To prevent leakage of liquid from dry batteries and damage to the remote control, please replace the new battery once every 6-8 months. Dry batteries are inflammable and explosive products, so please keep them away from fire sources. Dry batteries are dangerous goods, so please keep children away from dry batteries to avoid unnecessary dangers such as swallowing.

Step 9: Install the battery cover.

Step 10: Place the remote-control handle into the remote-control bracket.


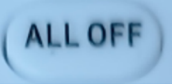 








Figures 20



 Figures 21

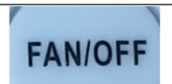Function description of remote-control handle:

	WORD	Function declaration
		Turn off the main switch, fan and lights
		Turn the lights on and off
		R is reversed, clockwise direction, with wind on the top, used in winter; F is forward, counterclockwise direction, with wind on the bottom, used in summer.
		Turn off the fan
		Natural wind
		The fan has different Speeds. 1 is the minimum and 6 is the maximum.
		The fan works for 1/2/4 hours at a time, and the light source cannot be timed

Warranty & After Care:

Keazile products are warranted against defects in materials and workmanship under normal use. This warranty excludes damage from misuse, improper installation, or failure to follow care instructions, as well as normal wear and tear. Please inspect your product upon delivery. Satisfaction is guaranteed within the terms of this warranty. For assistance, please contact our team at support@keazile.com with your product's serial number and issue details. Our team will respond promptly to help.

🌟 Troubleshooting

If the fan or light doesn't work after Setup:

- A. Check that the **power supply is on**.
- B. Double-check the **wiring** (refer to earlier steps).
- C. Still broken? **Contact customer service**.

Important Notes:

1. For indoor use only.
2. Avoid exposing the remote to extreme heat or moisture.
3. Periodically check screw tightness to prevent loosening due to vibration.

Thank You for Choosing Keazile!

We're committed to making your home brighter, safer, and more comfortable— you can trust and support you can count on.