

INSTALLATION AND USE >>

1. Please read the manual before starting, and check the meter, switch, insurance wire and other specifications are in line with the requirements. Wiring whether the re is loosening, leakage, short circuit phenomenon, whether the mechanical parts of the loose and wipe, whether the oil oil(production has been fueled), if any adverse phenomena must be eliminated before the boot.
2. please pay special attention when the power supply voltage is not rated if the motor does not turn a few seconds , low turn or light can not quickly return from the dark and abnormal sound, you should immediately cut off the power, otherwise the motor easy to burn.
3. must be empty machine start, until the machine is running normally to feed, facing the direction of rotation of the belt is not allowed to stand people.
4. the motor operating voltage shall not be less than 5% of the rated voltage, the general start difficult due to lack of electricity , this time not allowed to frequent start more low-voltage operations is strictly prohibited, so as not to damage the motor.
5. feeding should be uniform, prevent too much, according to the material, the operator control the board feed , is strictly prohibited to avoid damage to the motor overload.
6. smashing the high oil content of crops and not too dry food when easy to plug the machine slot and screen to be randomly removed, it is recommended to use the net net and then use fine network.
7. processed into a slurry material(such as soy milk) should be appropriate with the material feeding, avoid water into the operation do not shut down before the power supply, generally 1.5-2mm to do tofu is better. (Grouting material easy to leak pulp).
8. the machine is absolutely not allowed to open the door when turning , prohibit any other metal objects into the machine, so as to avoid serious accidents!
9. no matter what kind of failure, should first cut off the power, to be stopped after the car can find the cause, troubleshooting, and after the removal of residual materials to boot.
10. after each use, to determine the safety and then open the door, remove the sieve to dry, and clean the warehouse.
11. regular inspection plus butter in the ring, prevent dry grinding.
12. the motor should be grounded outside the ground, usually to keep clean , pay attention to moisture, if necessary, with a single-phase motor start control protector.

SATETY REQUIREMENTS >>

1. before installation, pay attention to use of rated voltage should be 230V, avoid the voltage is too low, resulting in the reasons for the lack of voltage is generally too far from the transformer, the line conductor is too small, power peak power shortage should be resolved after the resolution to be installed.
2. the power distribution board and the motor must be installed by the local electrician according to safety regulations to ensure safety.
3. the power distribution board or switch should be placed in the easy operation of the place in case of failure to cut off the power supply.

THE MOTOR USES THE MAINTENANCE INSTRUCTIONS >>

1. the first use of the motor before the check must be on the nameplate on the rated value of the parameters to meet the requirements and in strict accordance with the correct connection of the motor shell grounding wire.
2. the motor quota is based on continuous working system(SI) based on the continuous quota.
3. ambient air temperature changes with the seasons, but not more than 40 degrees.
4. the motor connected to power, 10 seconds can not reach the normal speed or abnormal sound, should immediately cut off the power troubleshooting and then start.

PARTS LIST

