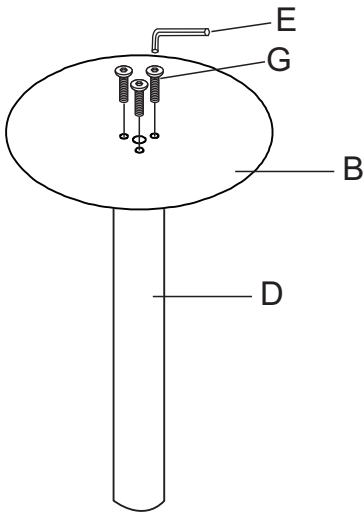
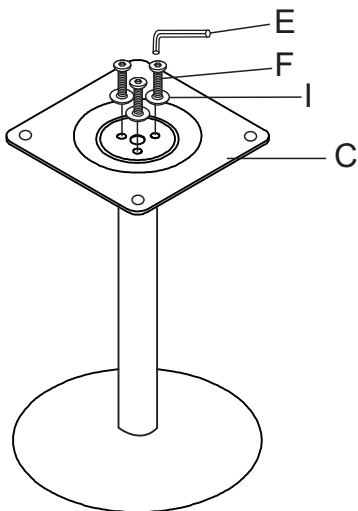
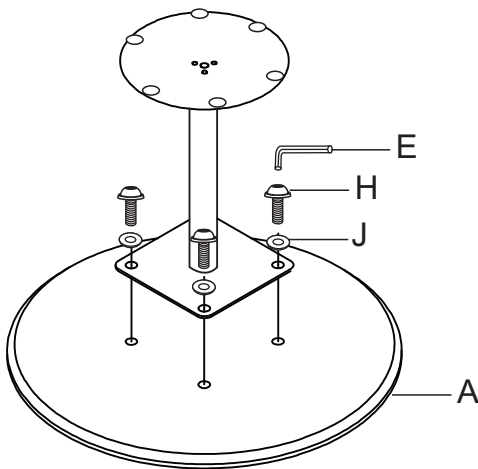
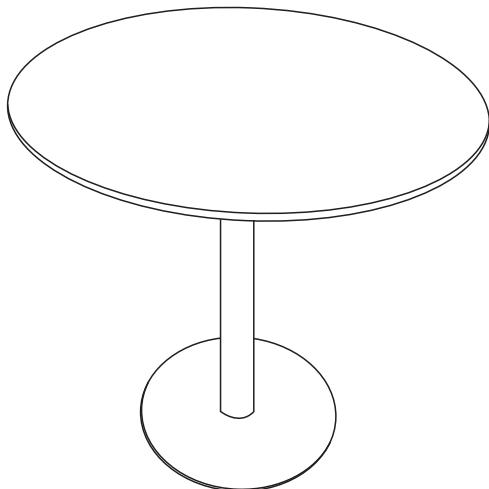
 


1 		2 		
3 		4 		
Ax1 	Bx1 	Cx1 	Dx1 	Ex1 
Fx3  M8x30mm	Gx3  M8x25mm	Hx4  M6x16mm	Ix3  8x18x1.5mm	Jx4  6x16x1.5mm
SPARE Ersatzteile				
Fx1  M8x30mm	Gx1  M8x25mm	Hx1  M6x16mm	Ix1  8x18x1.5mm	Jx1  6x16x1.5mm