

Warning!

1. Please check that all parts in good condition before using. Never use if there are any broken or loose parts.
2. Never set up or continue to use in any rain, wind or stormy conditions.
3. Please don't stand and step on the frame, joint or chair.
4. Avoid bending the frame or pinching your fingers or hands while opening or closing the frame.
5. Avoid setting up your Camping Chair on steep inclines or on uneven ground.
6. Keep the Camping Chair away from heat and flames at all times.
7. Max weight capacity:200KG

Cleaning!

If your chair material is dirty, you can wash it below 30°C water. Please do not bleach, do not tumble dry, do not iron and do not dry clean.



USER INSTRUCTION

Camping Chair



How to Open



01



02

How to Store



01



02