 


INSTALLATION

 
 
Product Manual

Version: 590063US-01-26A-HXC

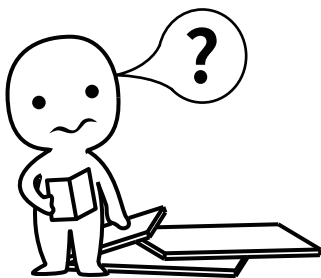


IMPORTANT INFORMATION!

please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

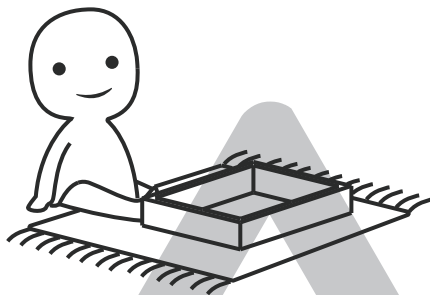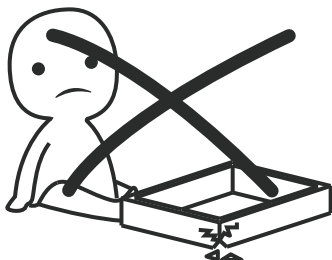



AVOID SCRATCHES!

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

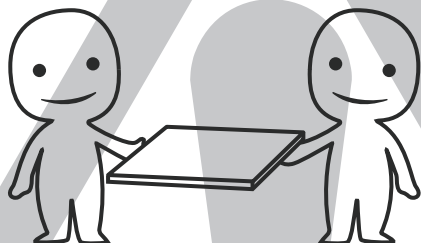

IMPROVE EFFICIENCY !

  Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

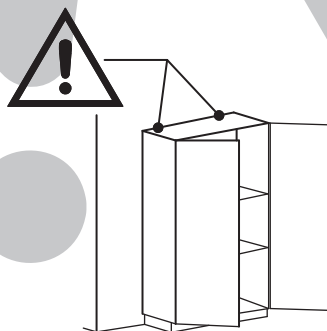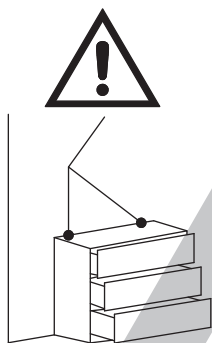

ANTI-TOPPLE WARNING !

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

IMPORTANT !




It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

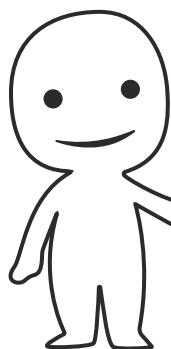

Please prepare the following tools

   

When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

A x 6



Ø4 x 20 mm

B x 48



 
Ø3.5 x 12 mm

C x 19




Ø6 x 12 mm

D x 22




Ø6 x 23 mm

 E x 8



Ø6 x 15 mm

 F x 24

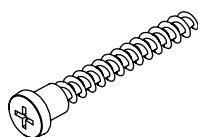


Ø5 x 48 mm

G x 16




Ø15 x 9 mm

 H x 16




Ø6 x 35 mm

 I x 4




Ø6 x 30 mm

 
J x 1

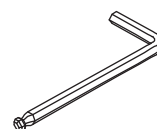

K x 6

 


L x 1

 


M x 2



 
N x 2



O x 4

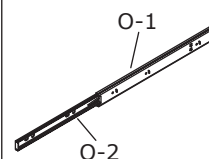 


P x 4

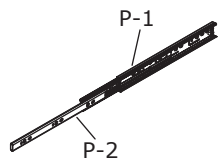 

Q x 10



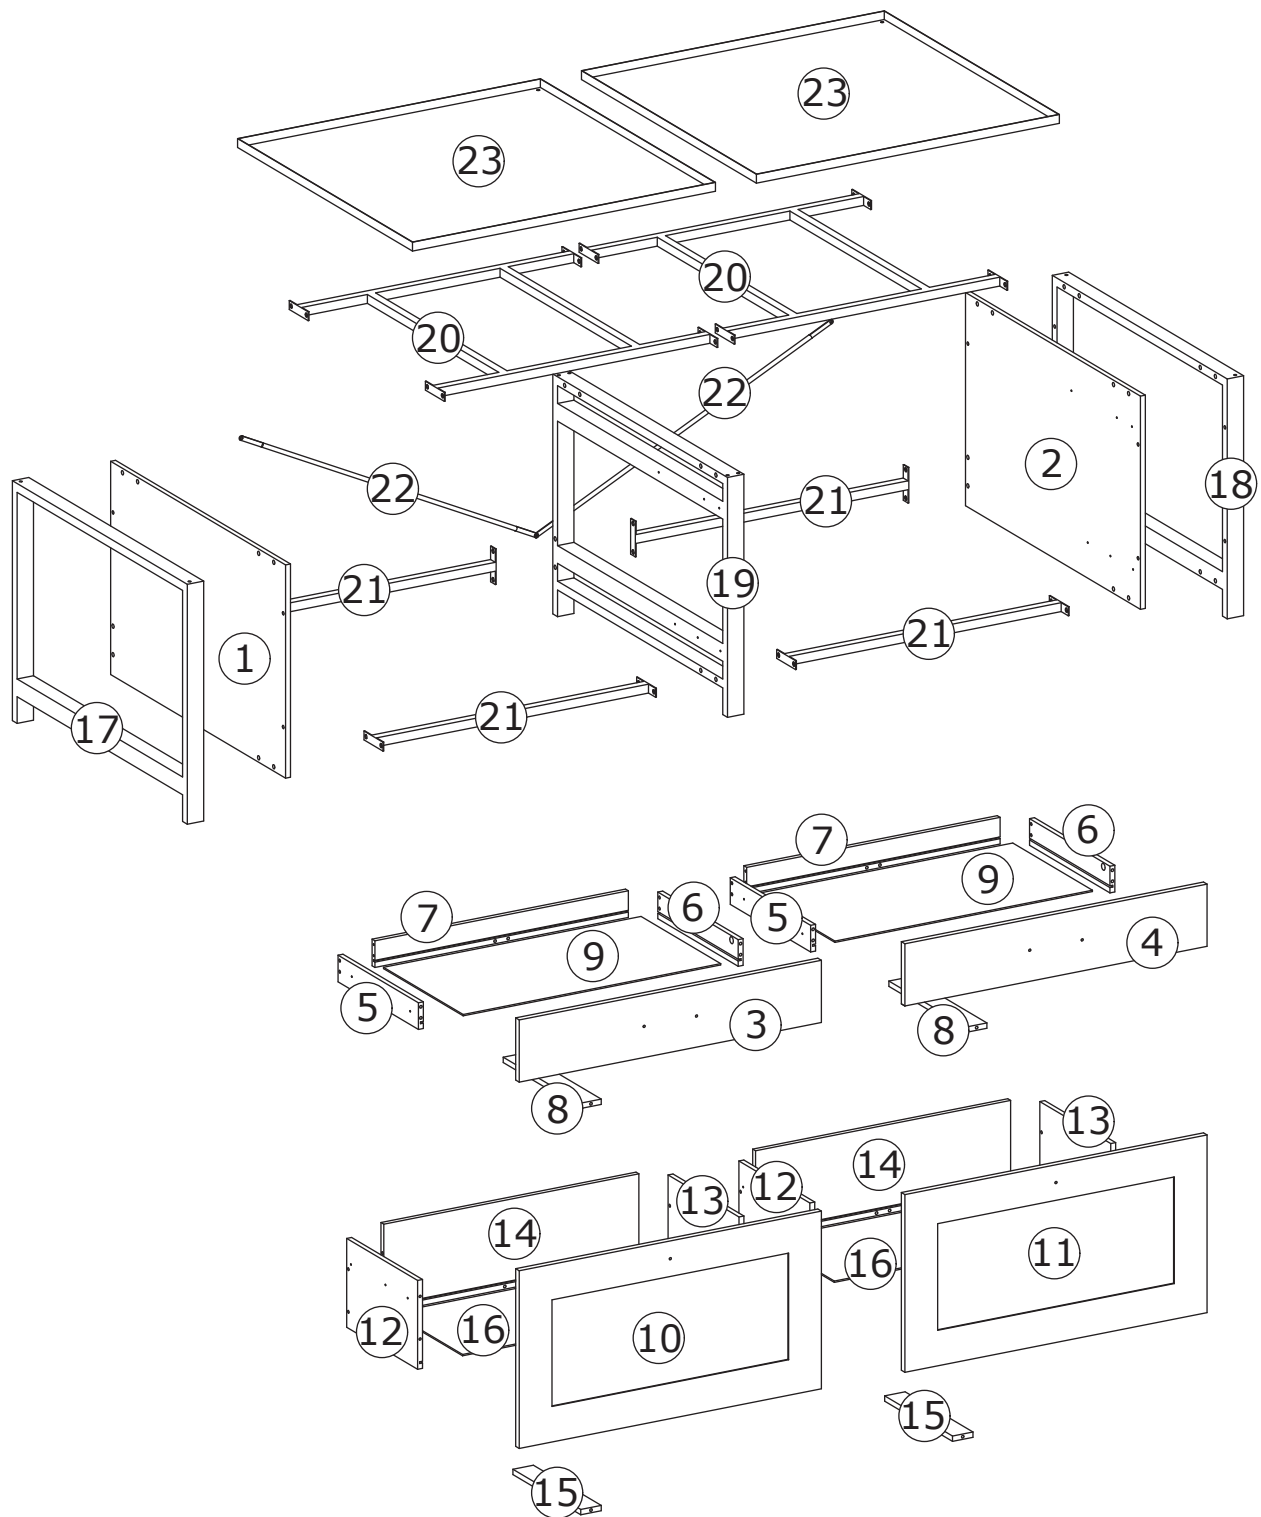 


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install Anti-tip device provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

 *This is a permanent label.
Do not remove!*

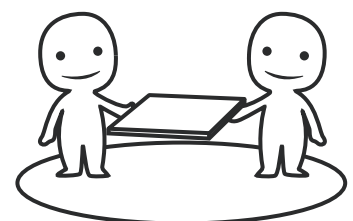

ASSEMBLED BY 2 ADULTS

 
 
Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.

Las diapositivas deben separarse antes del montaje.


Después de la separación, déjelo a un lado hasta que sea necesario.

Les glissières doivent être séparées avant l'assemblage.

Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

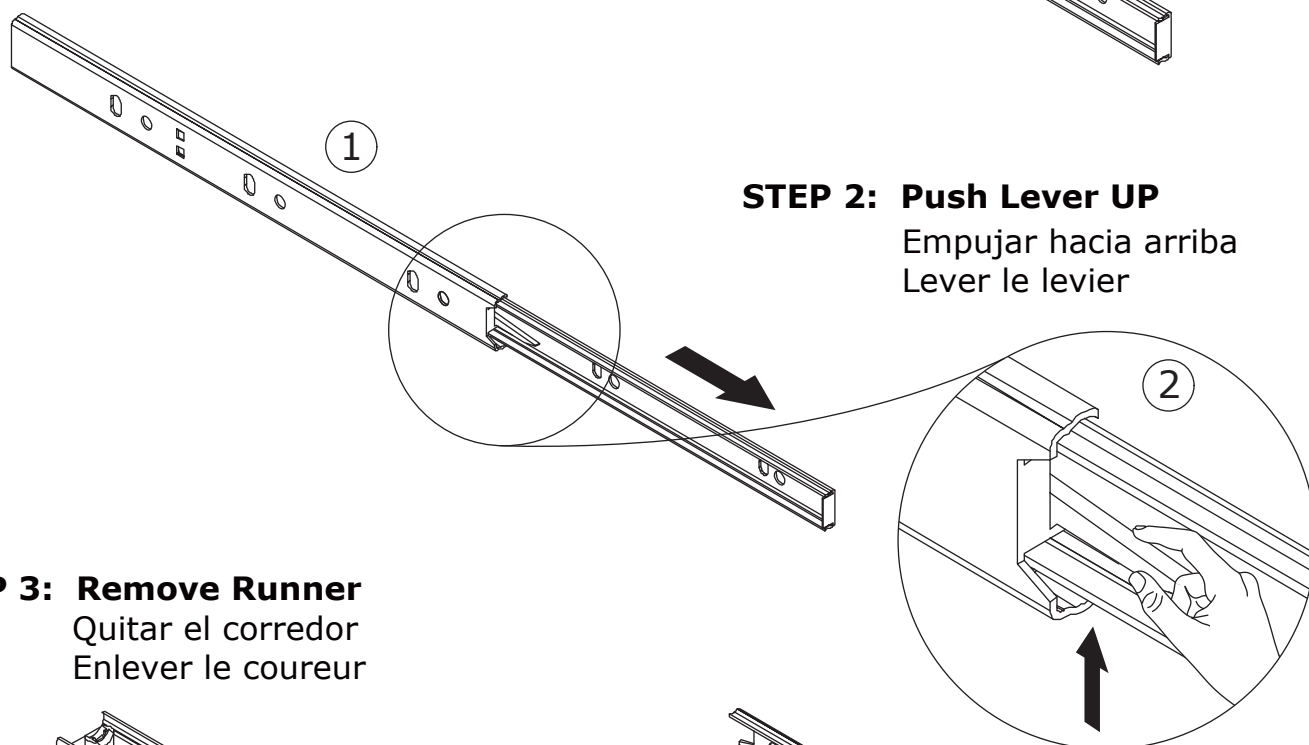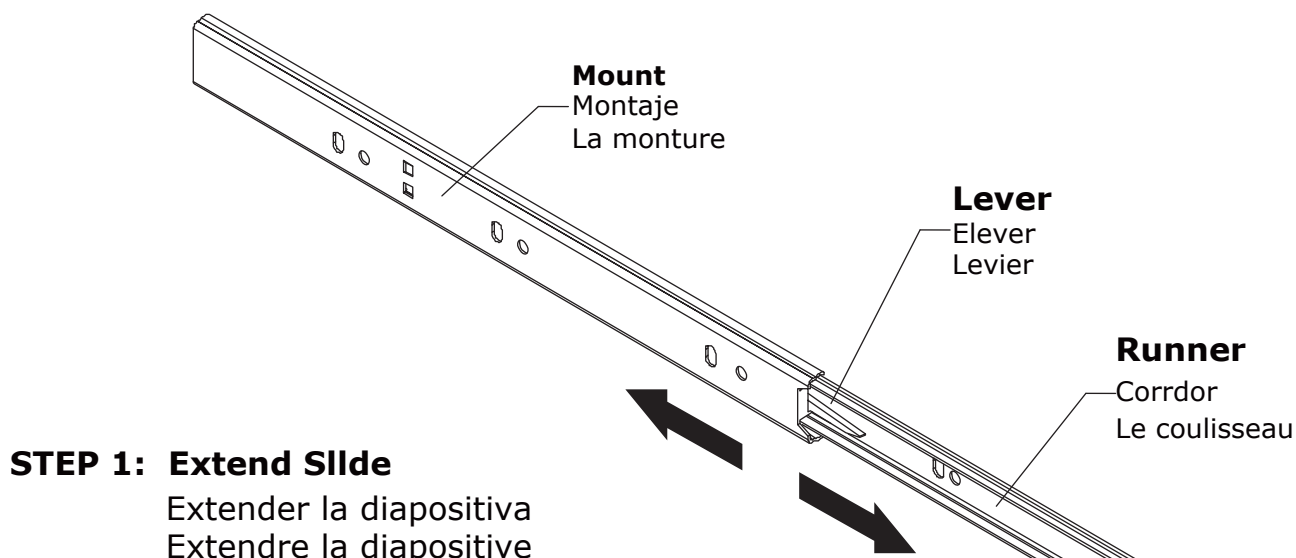

 
STEP 3: Remove Runner
Quitar el corredor
Enlever le coureur

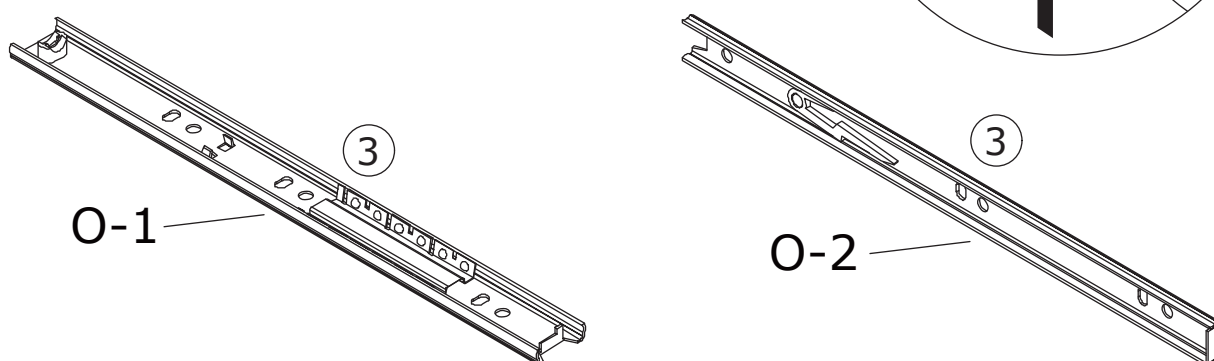


**Slides Must Be Separated Before Assembly.
After Separated, Set Aside Until Needed for Assembly.**

Las diapositivas deben separarse antes del montaje.
Después de la separación, déjelo a un lado hasta que sea necesario.

 
Les glissières doivent être séparées avant l'assemblage.
Après la séparation, mettez de côté jusqu'au moment de l'assemblage.

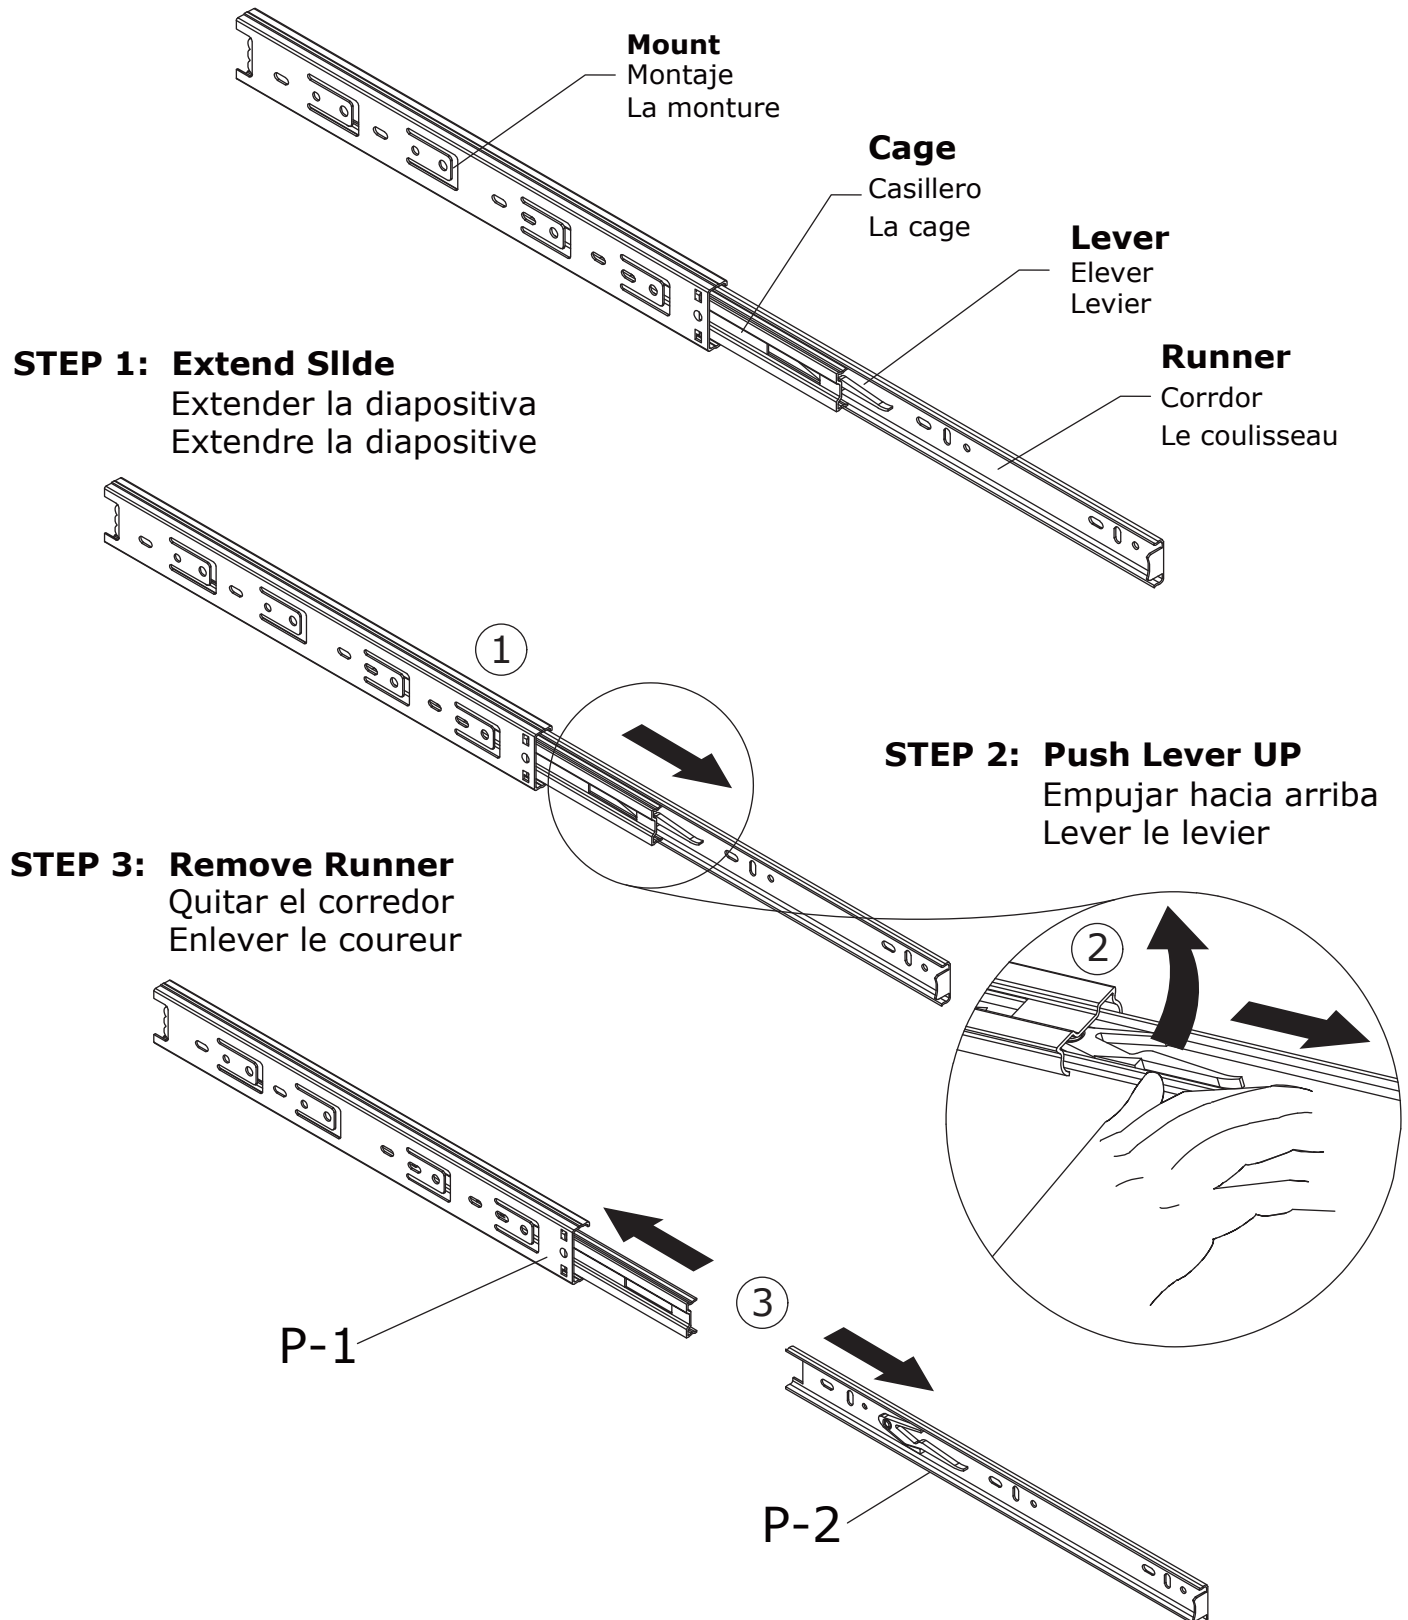

1



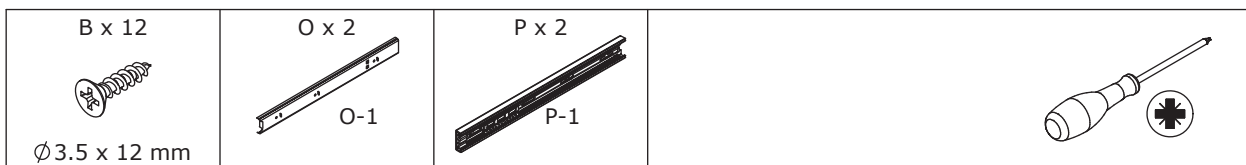 


 Secure slide rail (O-1) and (P-1) to **both sides of** part 19 using screw(B).



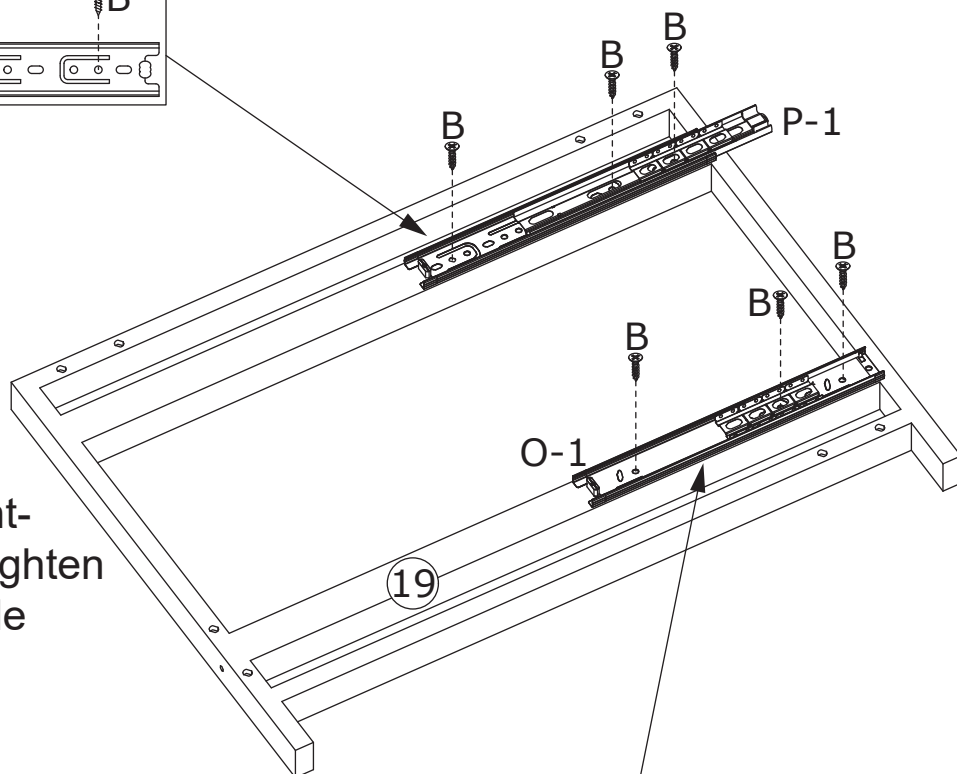


Screw B should be tight-
ened only 30%. Fully tighten
after confirming the hole
position is correct.



 
 
 
Flip 180°

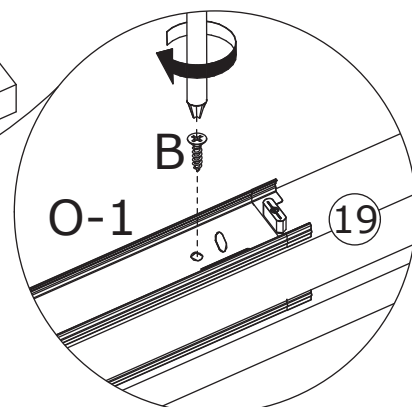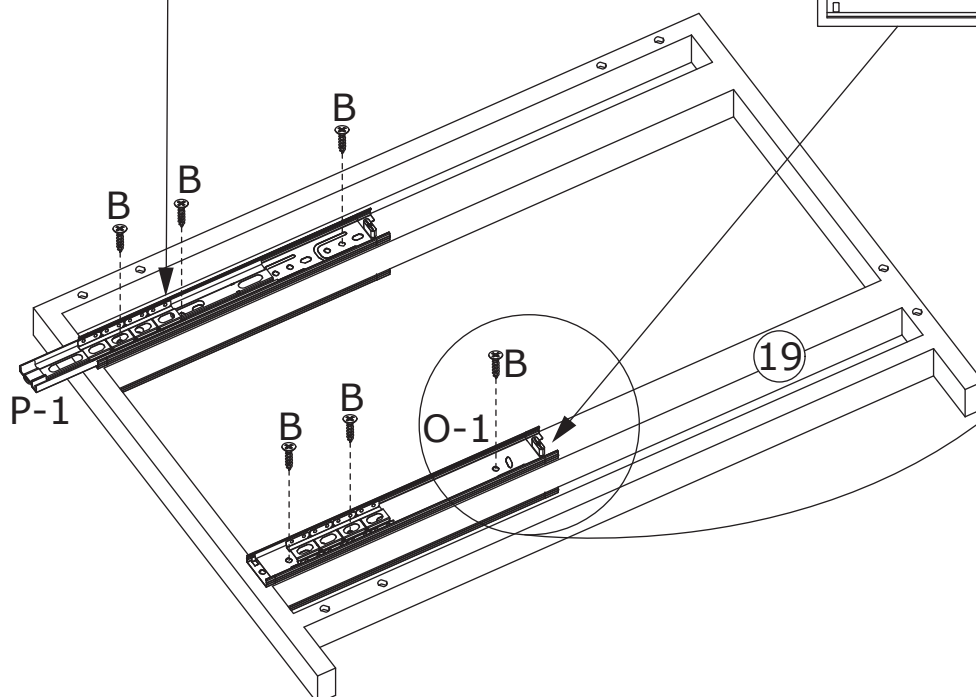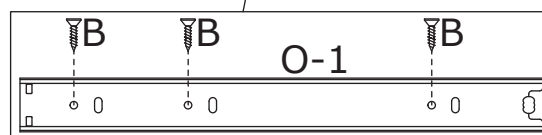


2

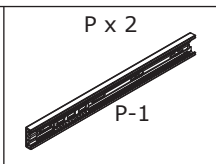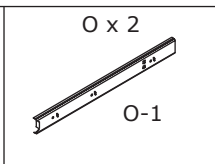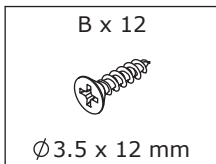   

     
Secure slide rail (O-1) and (P-1) to part 1 and 2 using screw(B).

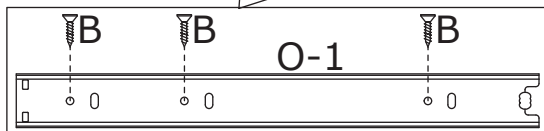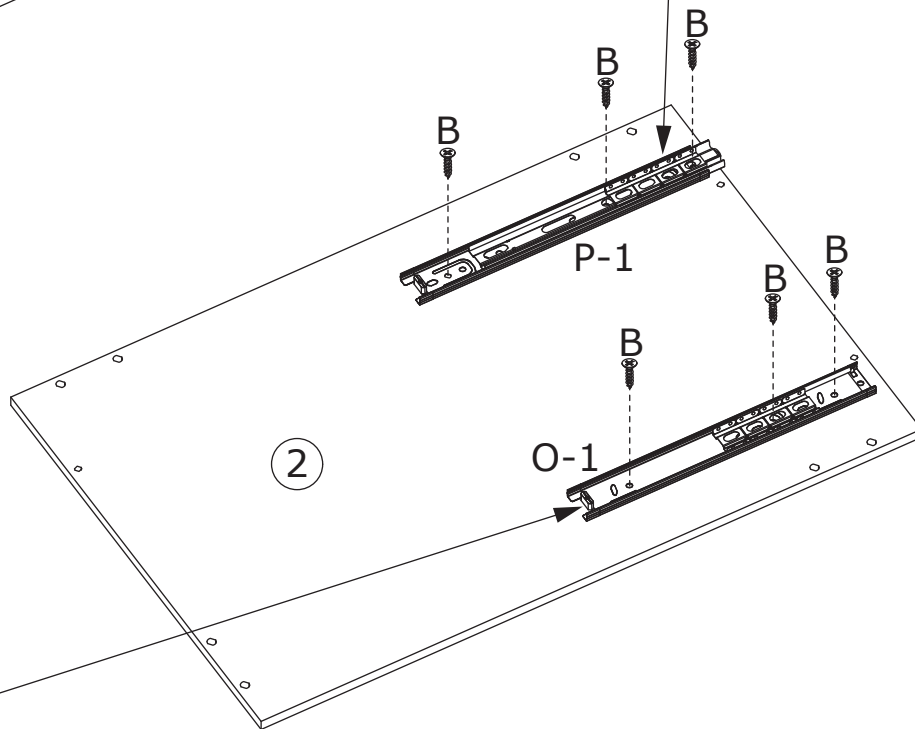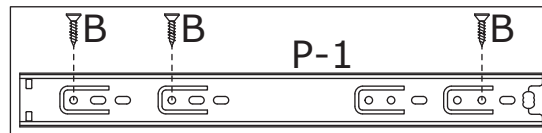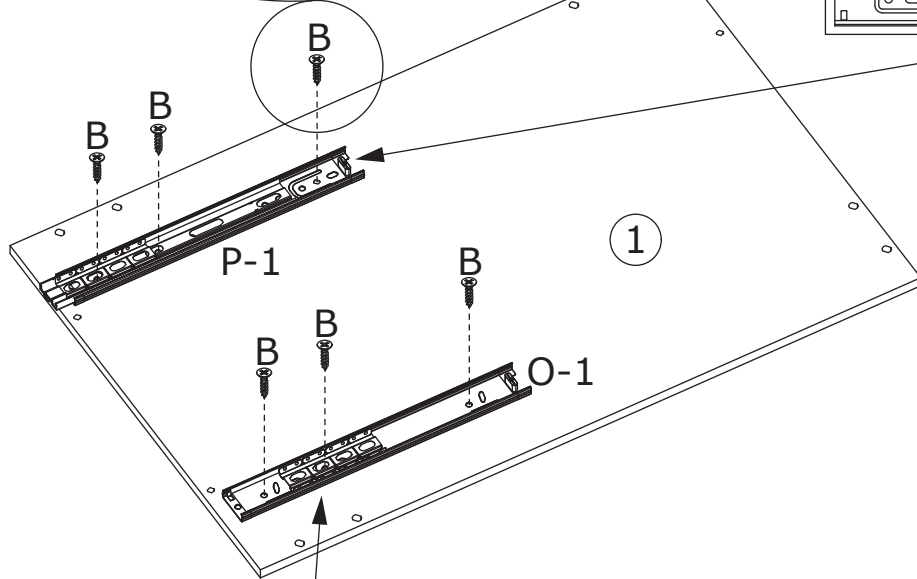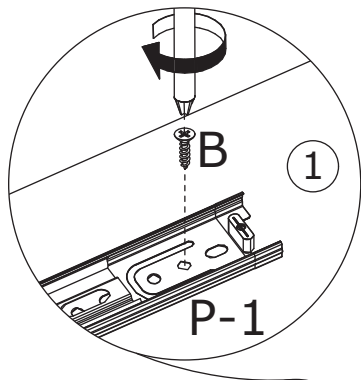

3

 
C x 16  Ø6 x 12 mm	J x 1 	
---	--	--

 Secure part 20 and 21 to part 19 using screw(C).

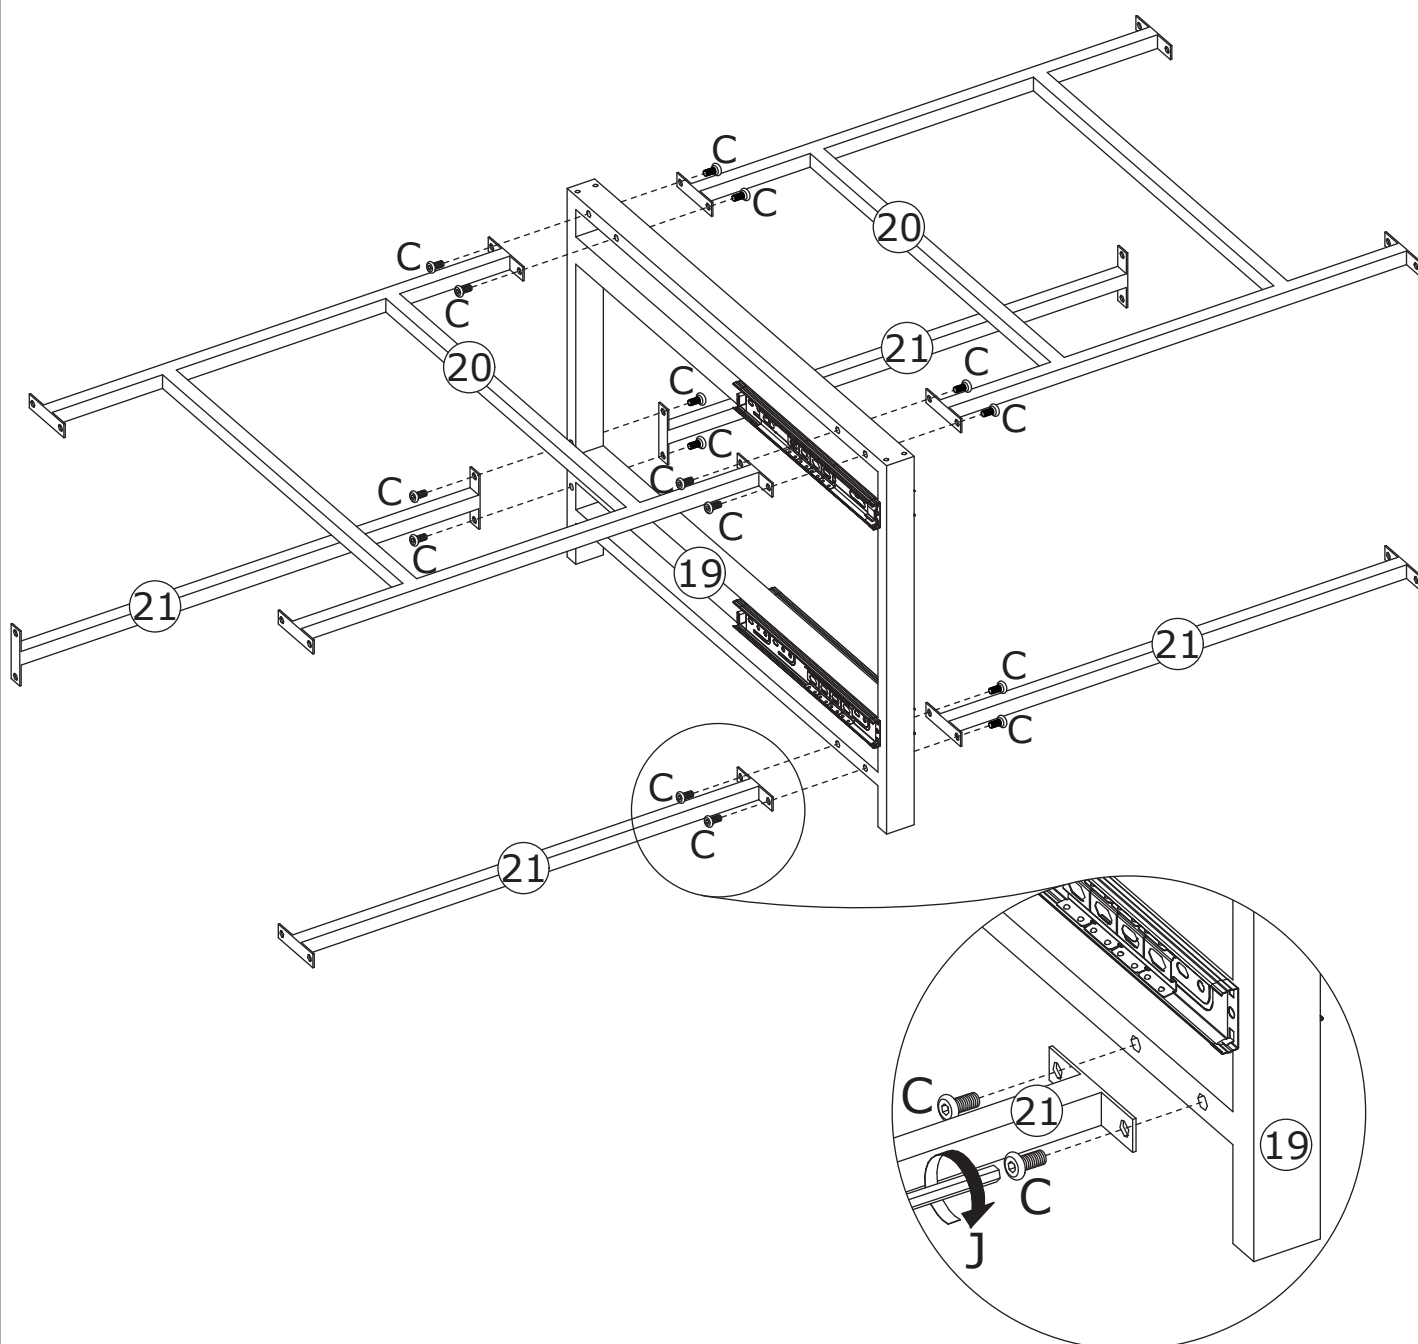


4

 D x 11




Ø6 x 23 mm


 
J x 1



 
Secure part 20 and 21 to part 2 and 18 using screw(D).

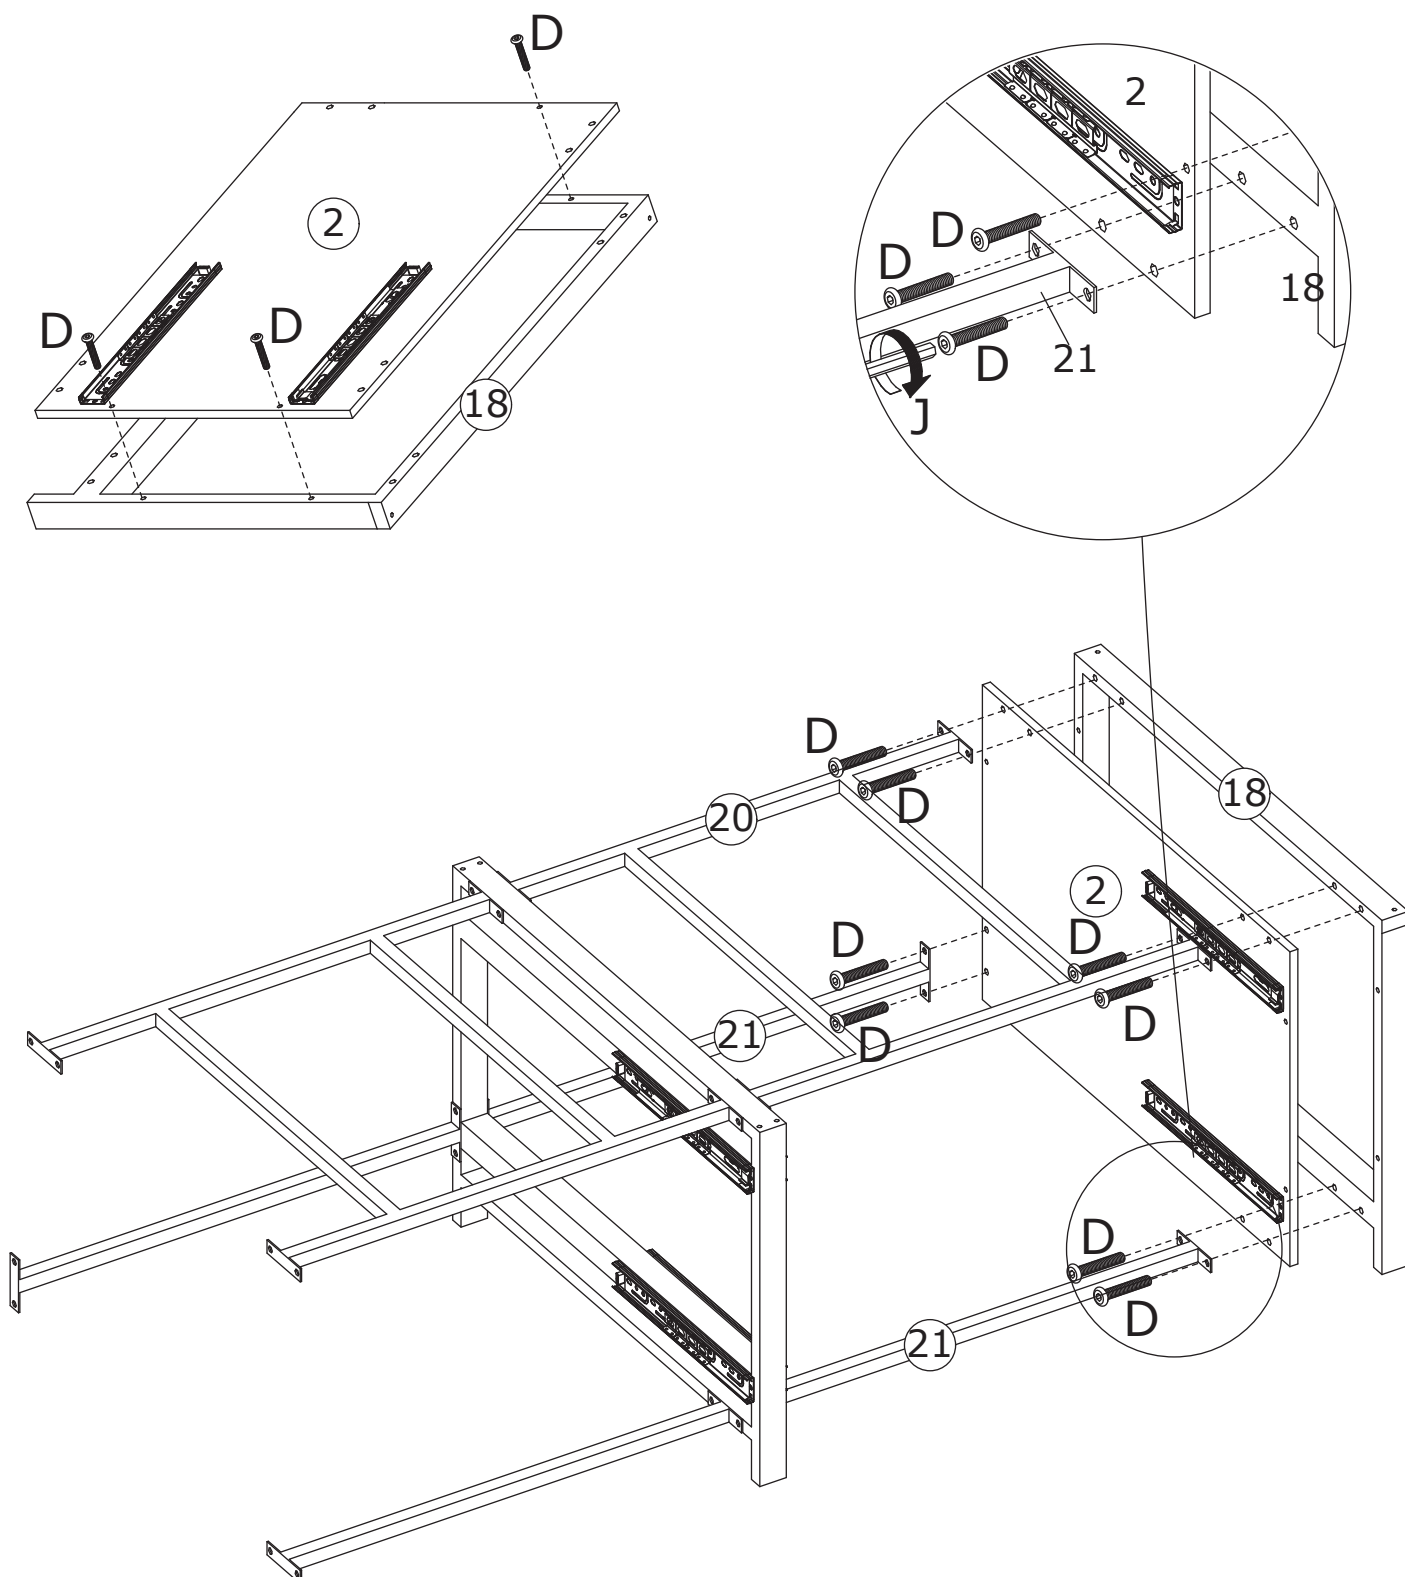


5

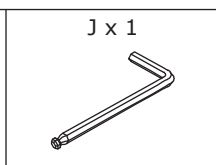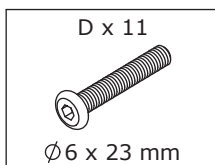  


 
Secure part 20 and 21 to part 1 and 17 using screw(D).

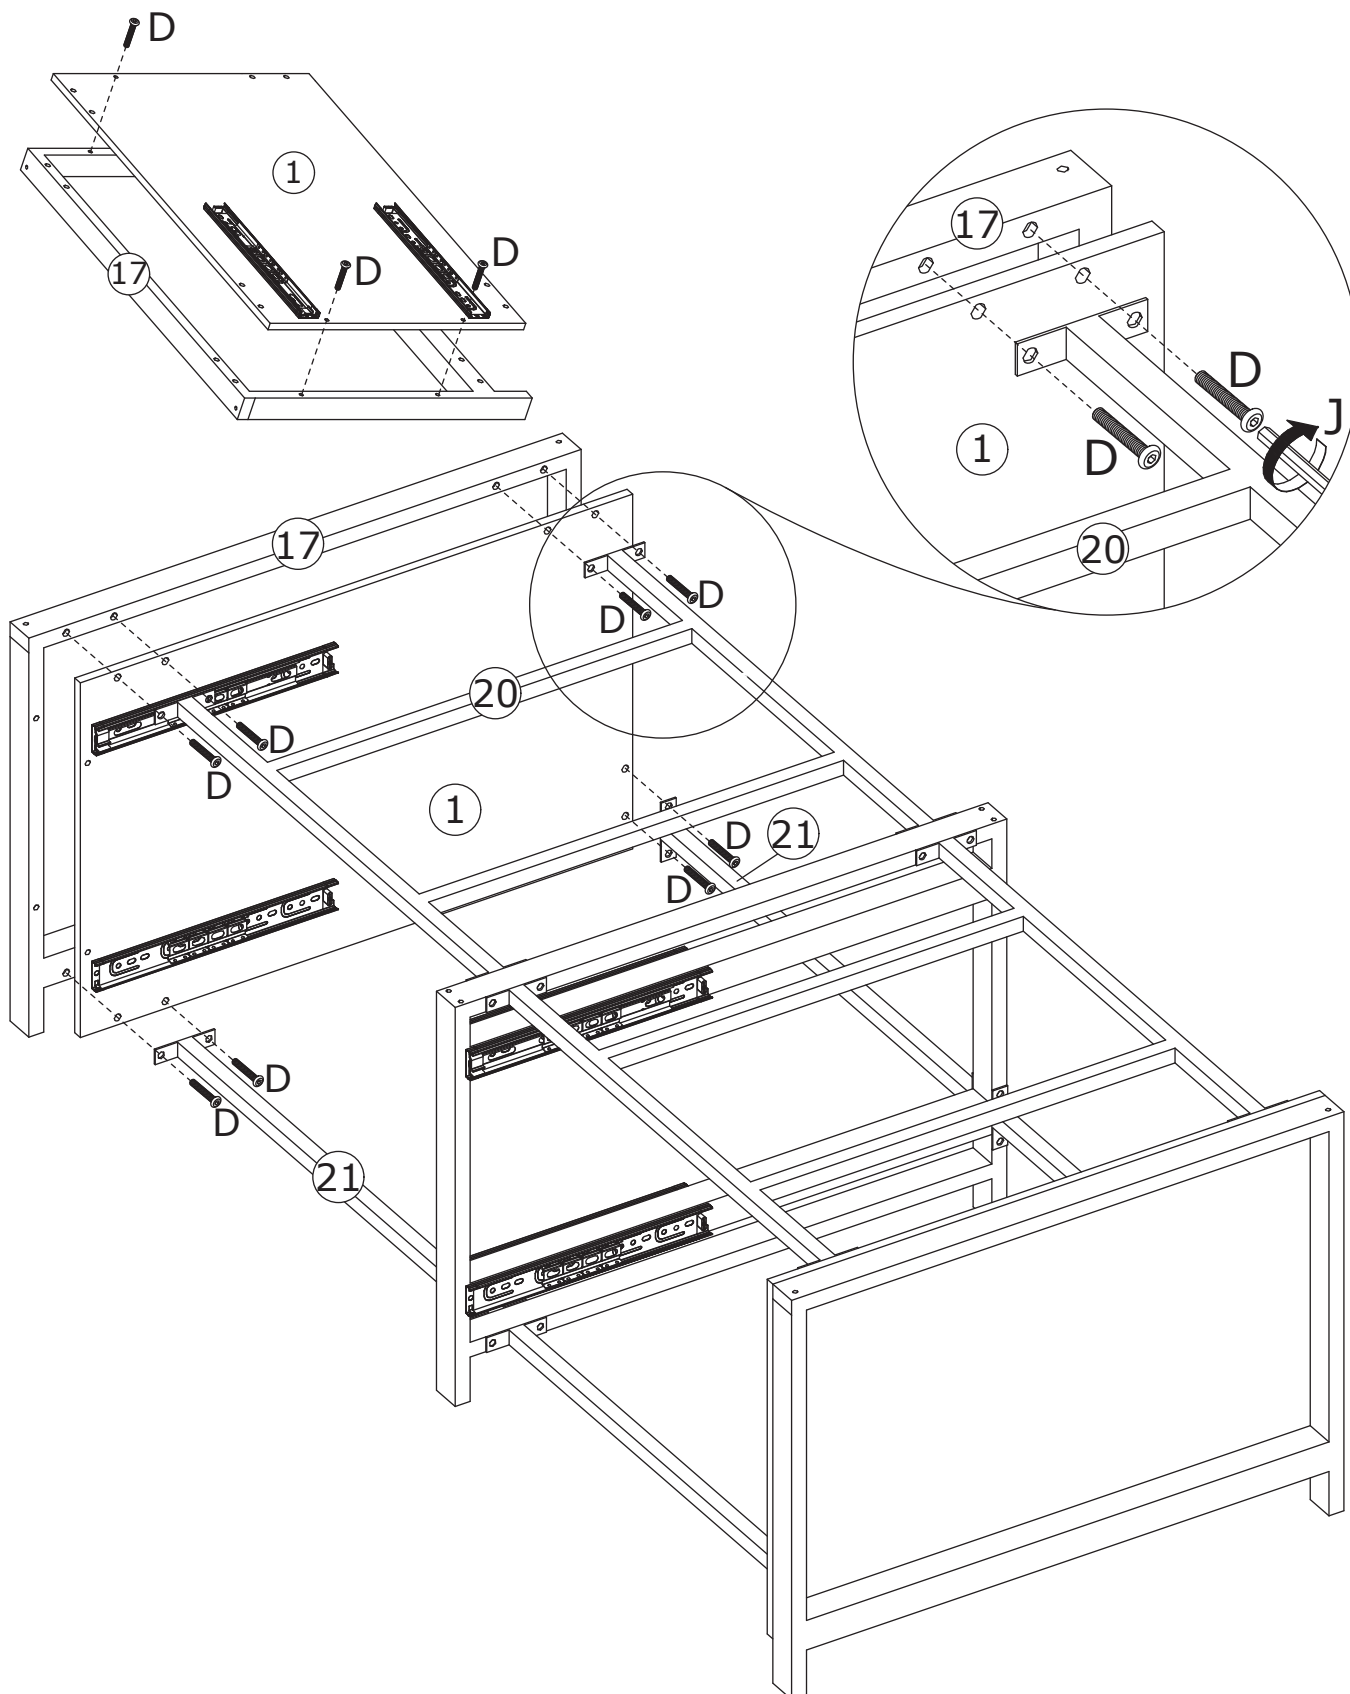



6

 
C x 3  Ø6 x 12 mm	J x 1 	
--	--	--

  Secure part 22 to part 17, 19, and 18 using screw(C).

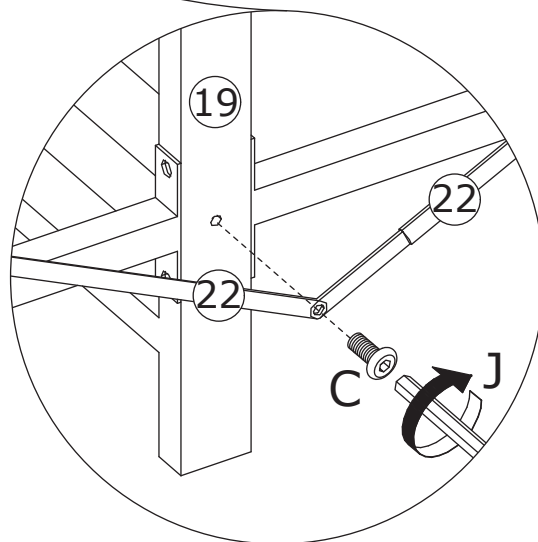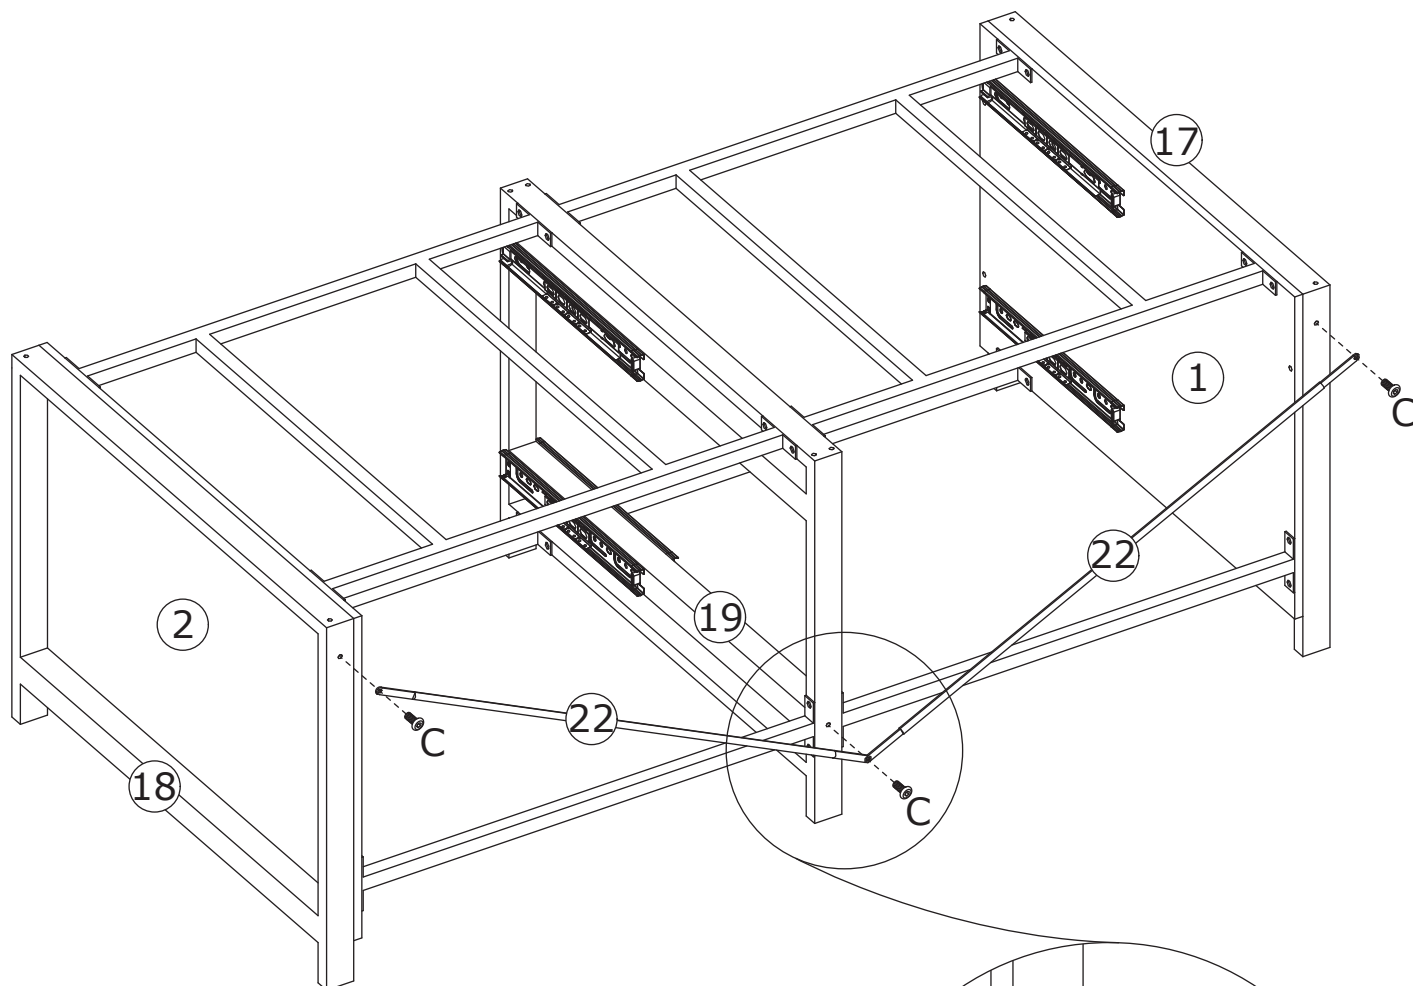


7

  E x 8  Ø6 x 15 mm	Q x 8 	J x 1 	
--	--	--	--

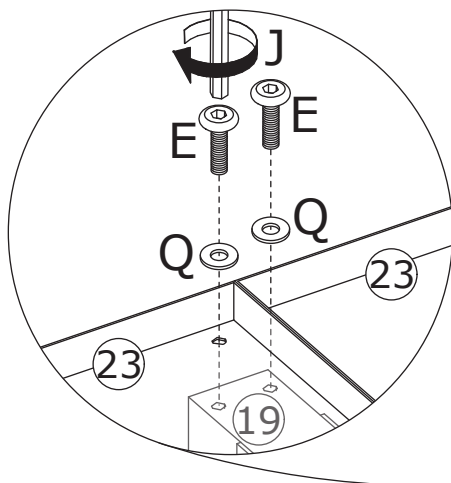 

 Secure part 23 to part 17, 19, and 18 using washer(Q) and screw(E).

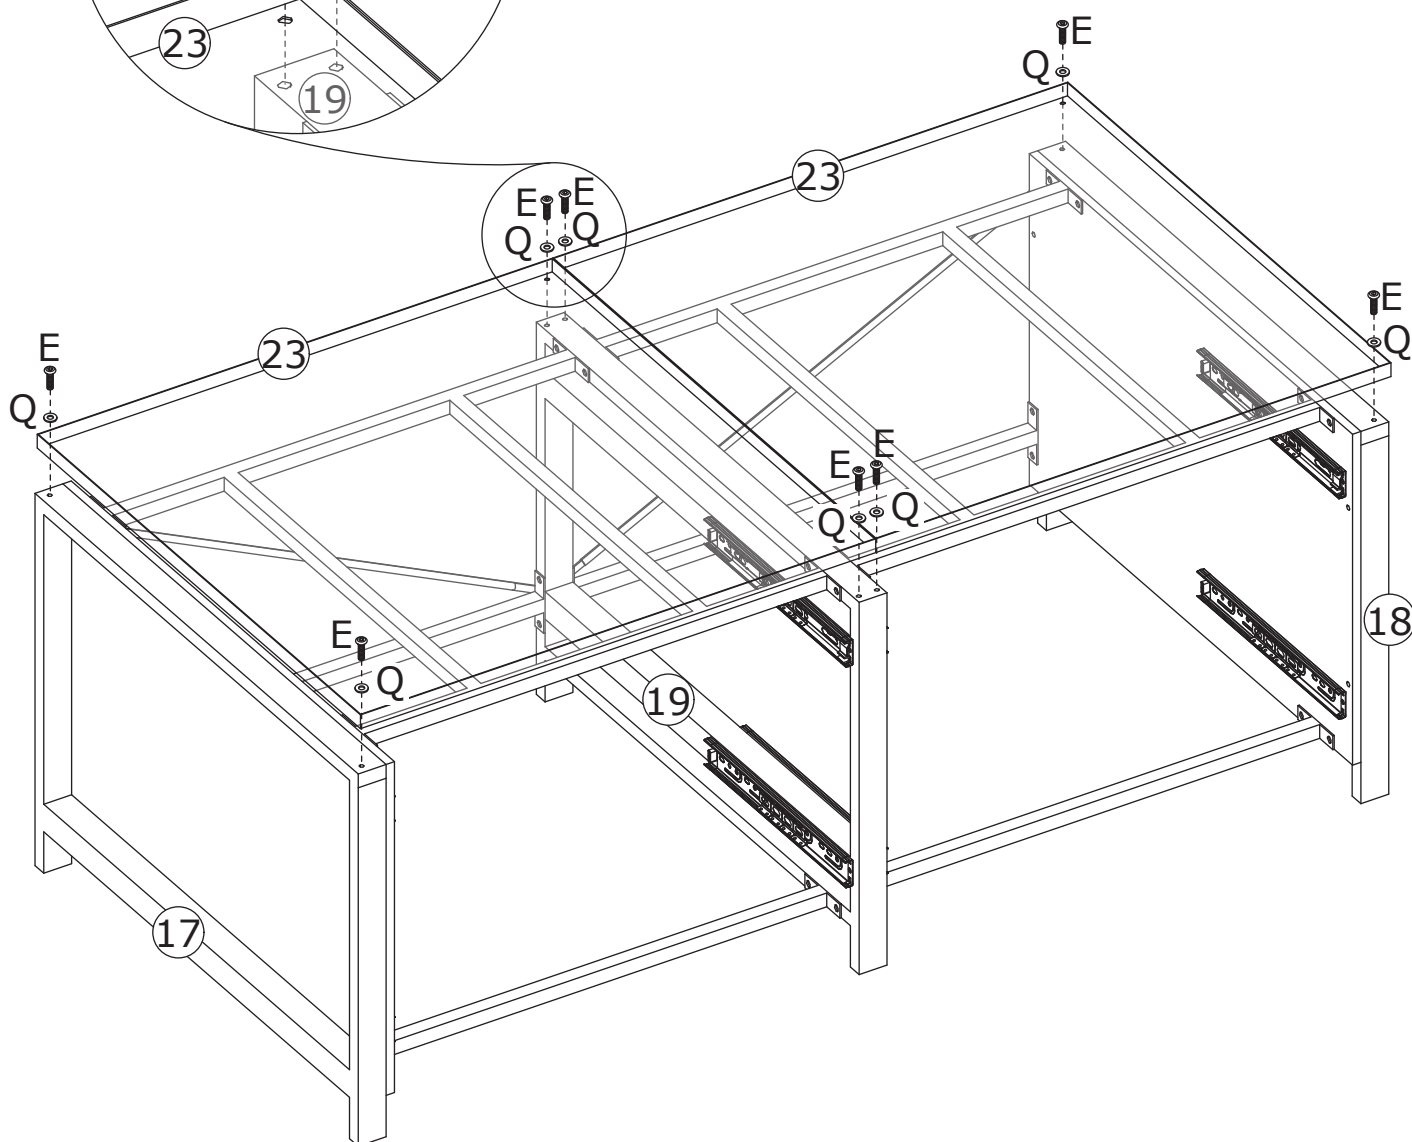


8




K x 6



 Install foot pad (K) onto part 17, 19, and 18.

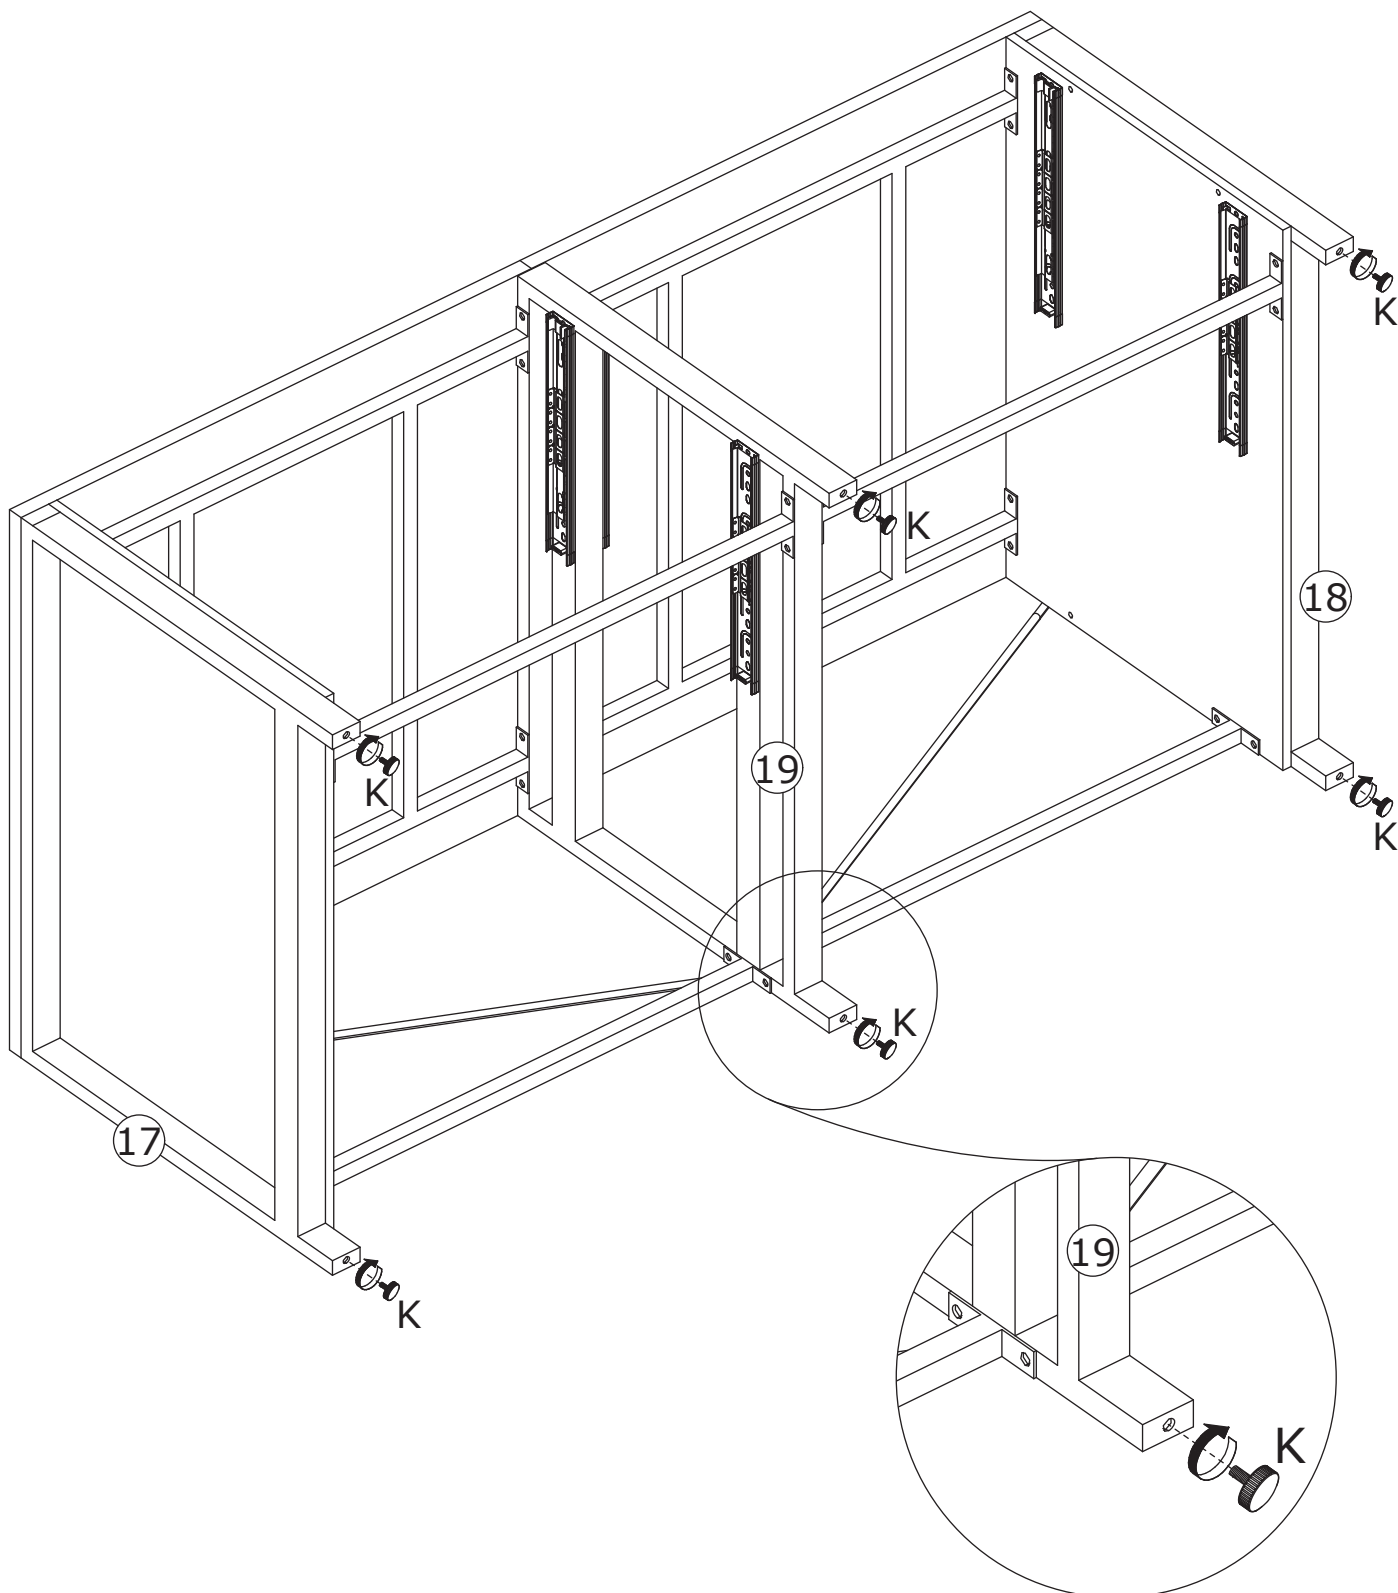


9

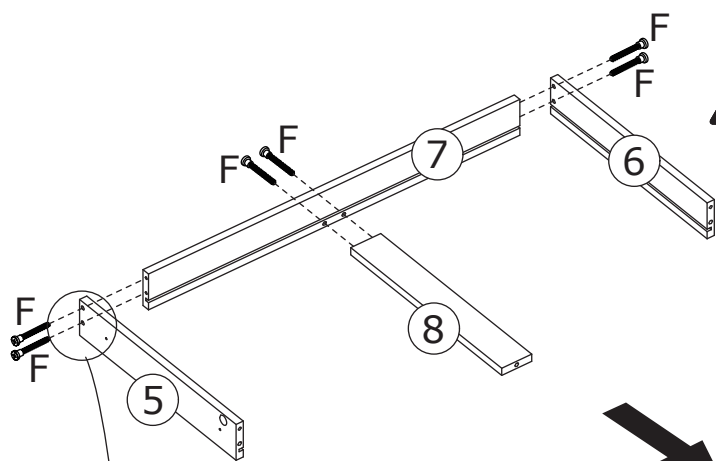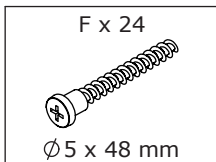   


Tighten screw F until it is completely flush with the panel. Otherwise, there is a risk of scratching the slide rails.

 x2

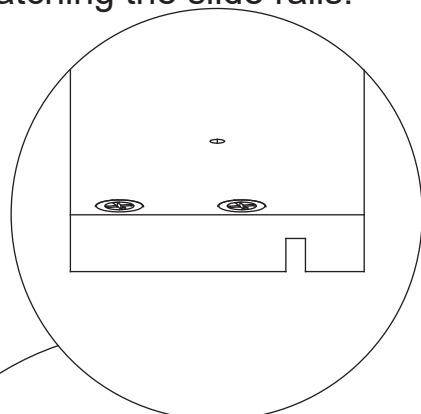

 
Tighten screw F until it is completely flush with the panel. Otherwise, there is a risk of scratching the slide rails.

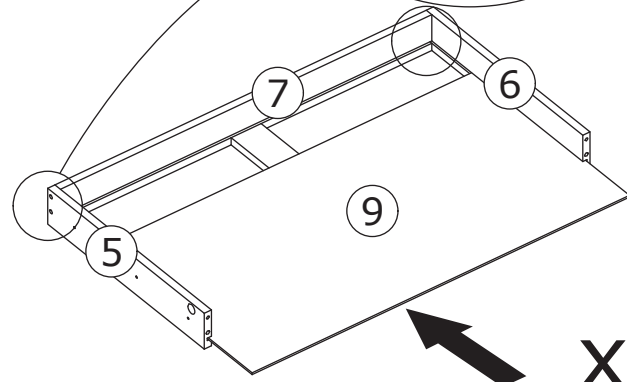

x2




 Secure part 5, 8, and 6 to part 7 using screw (F).
Insert part 9 along the grooves.

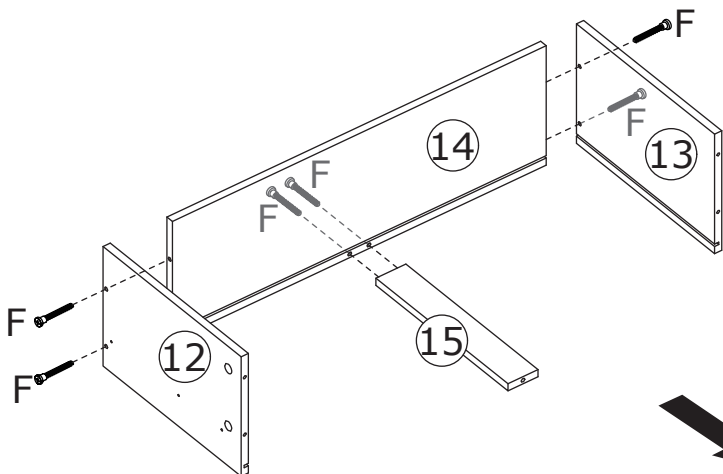

x2





 
Secure part 12, 15, and 13 to part 14 using screw (F).
Insert part 9 along the grooves.

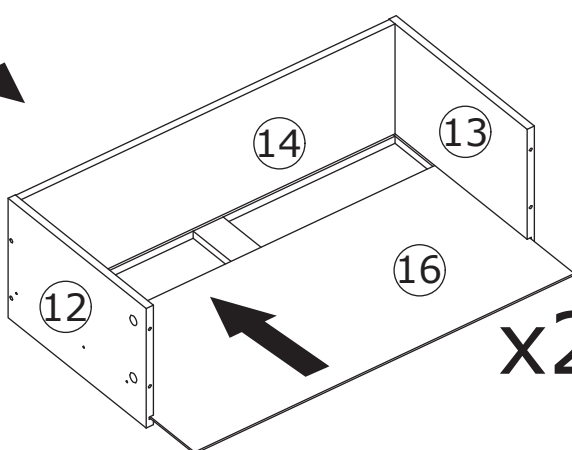


x2



    
 
10

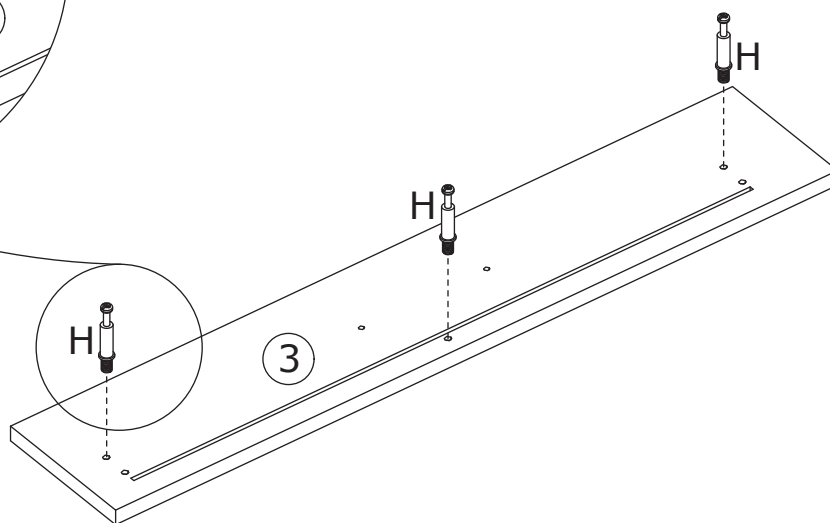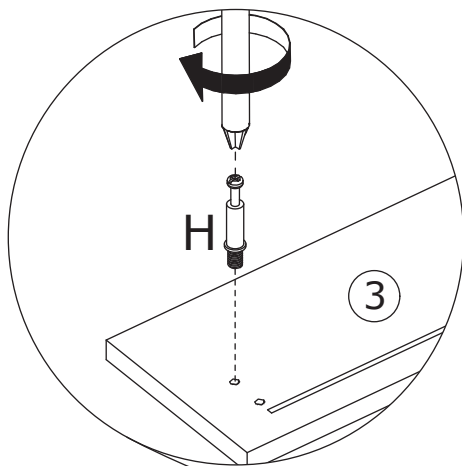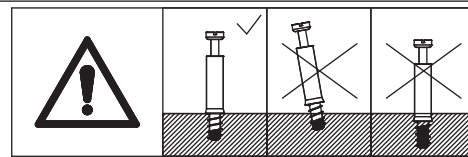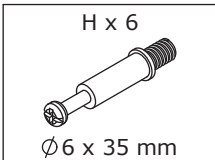

 
Screw eccentric rod (H) onto part 3 and 4.

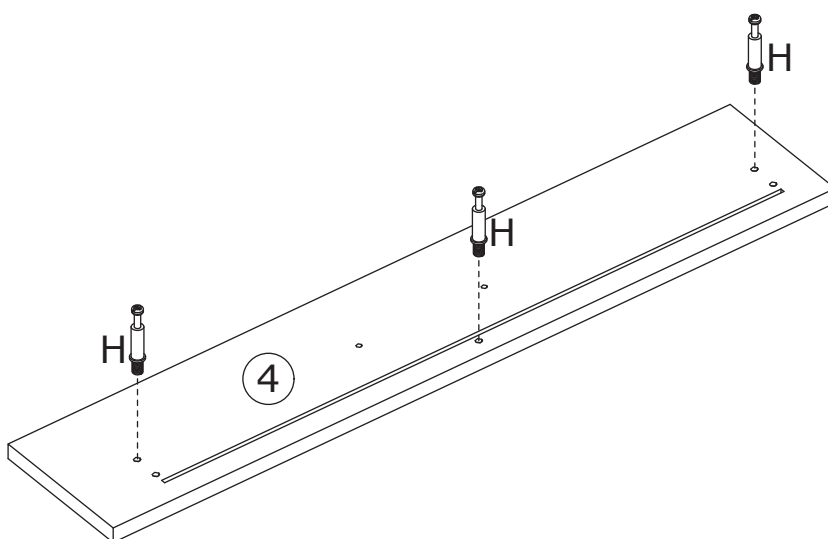



11

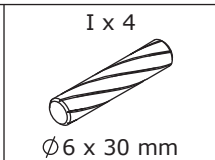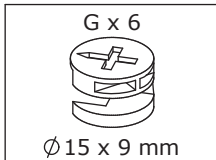  

 Connect part 3 and 4 to part 5, 8, and 6 respectively, using using dowel (I), then tighten by turning eccentric cam (G) clockwise.

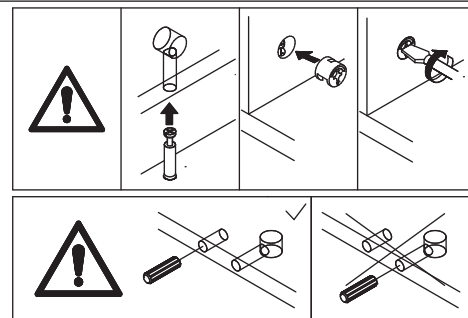

  Tighten screw F until it is completely flush with the panel. Otherwise, there is a risk of scratching the slide rails.

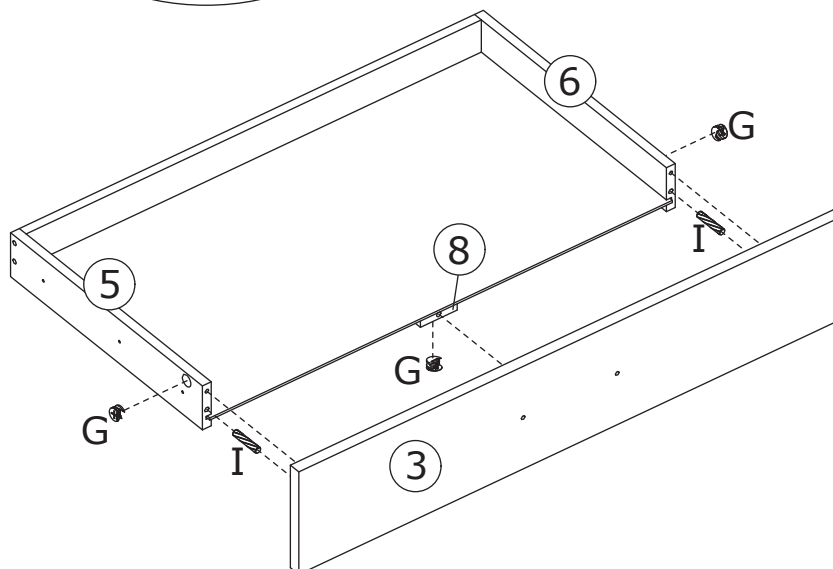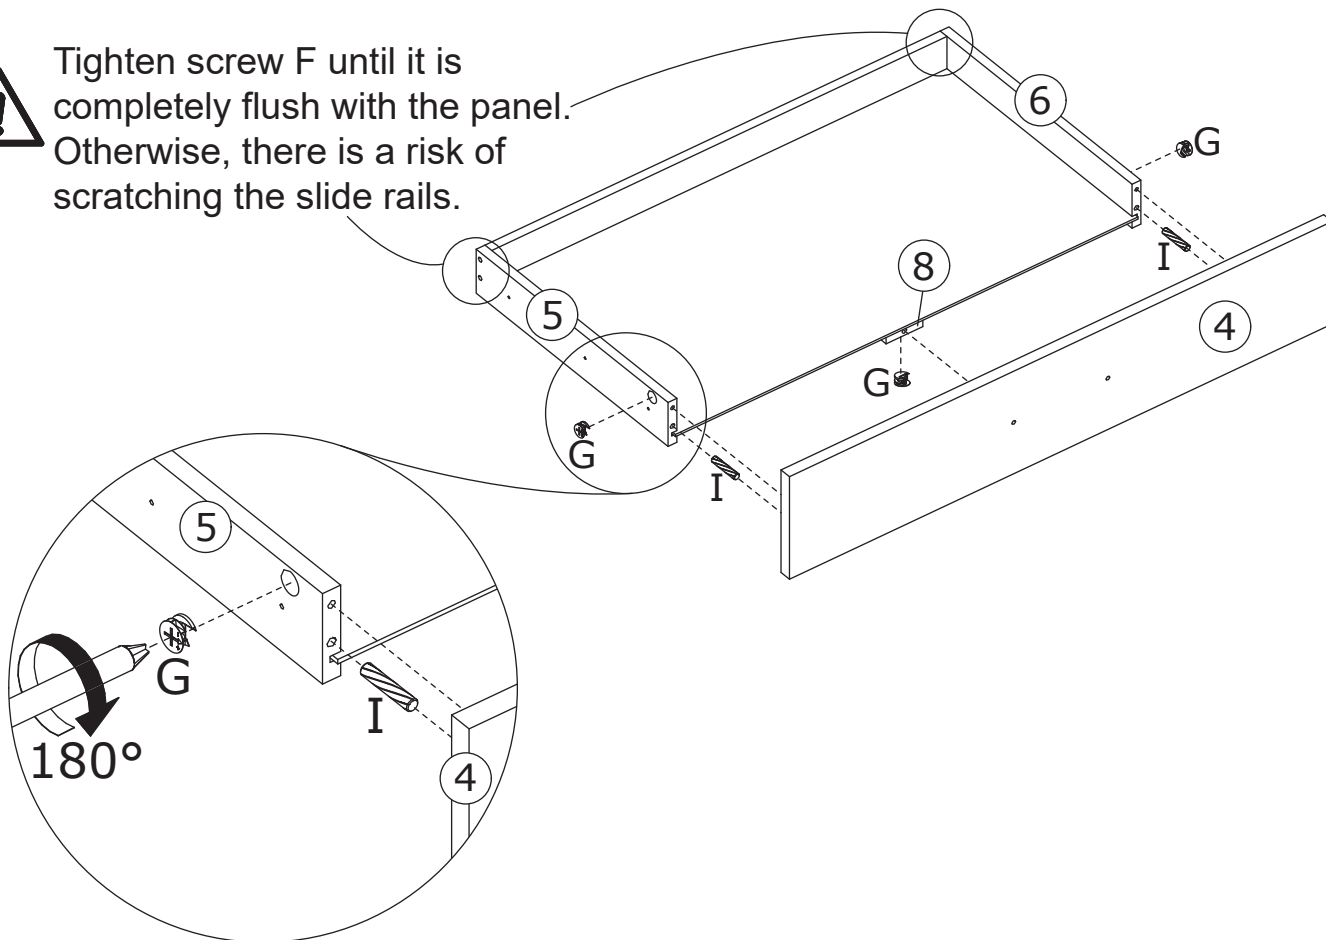


12

B x 12






Ø 3.5 x 12 mm

 
P x 4



P-2

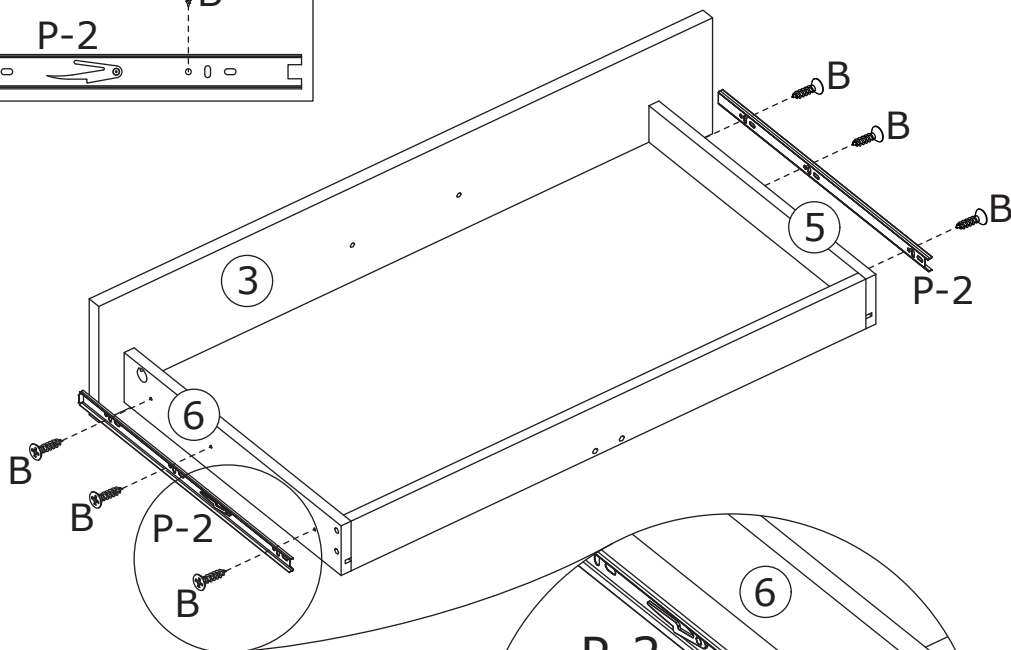 
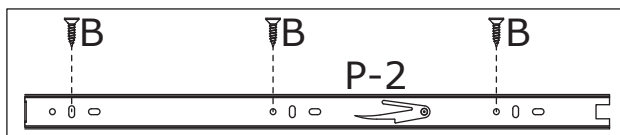 
 


 Secure slide rail (P-2) to part 5 and 6 using screw (B).

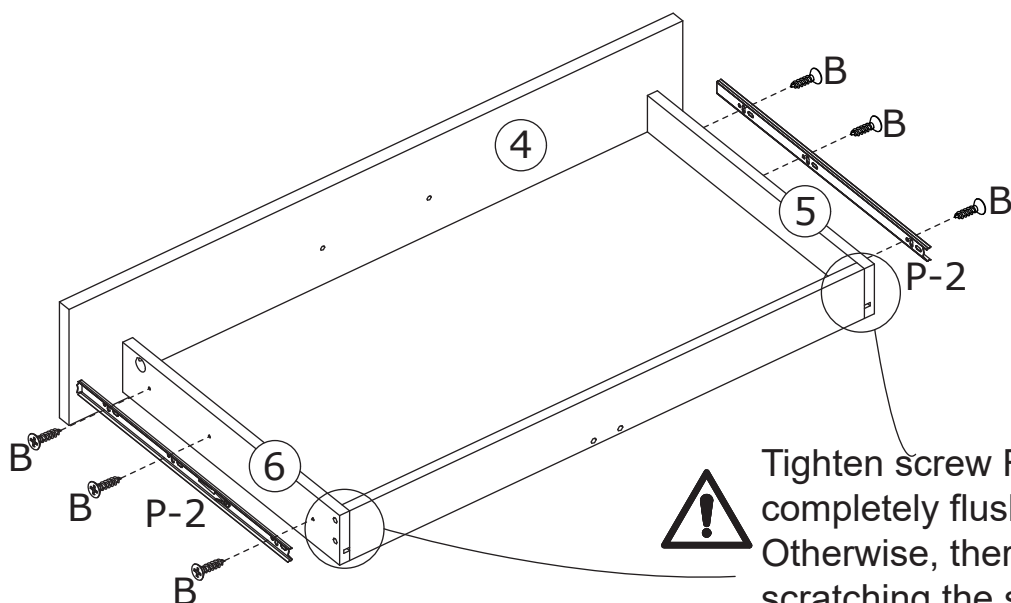


Tighten screw F until it is completely flush with the panel. Otherwise, there is a risk of scratching the slide rails.

 
 
 
13

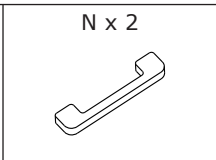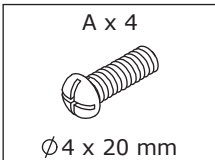



 
Tighten screw F until it is completely flush with the panel. Otherwise, there is a risk of scratching the slide rails.

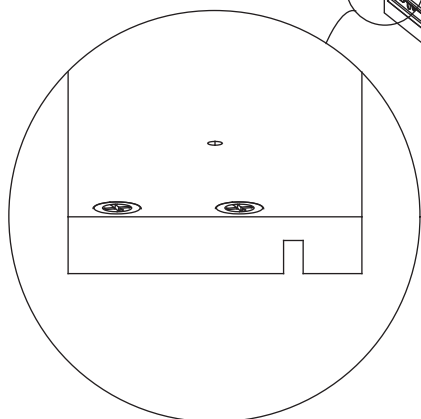

   
Secure handle (N) to part 3 and 4 using screw (A).

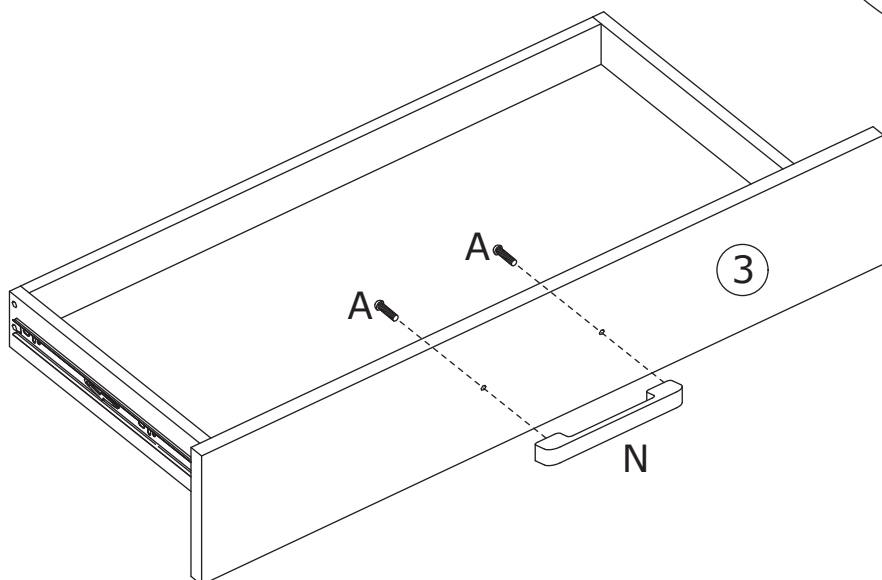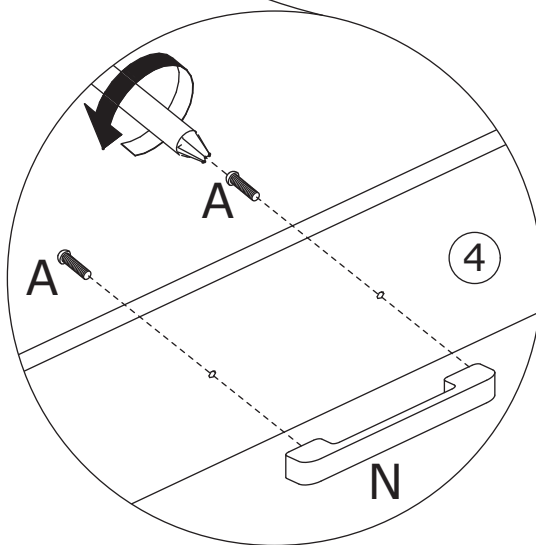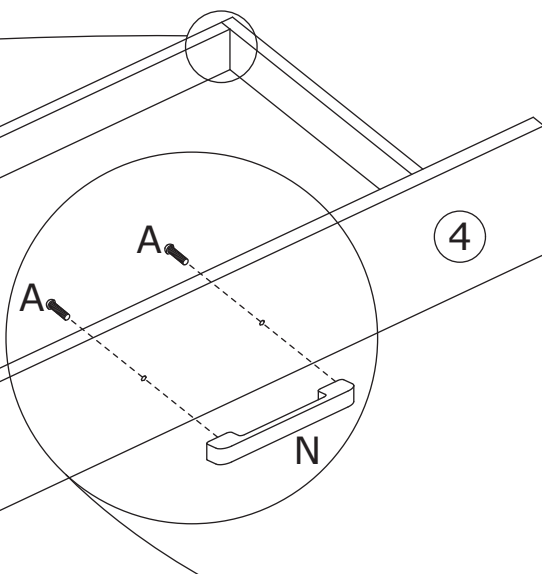

14

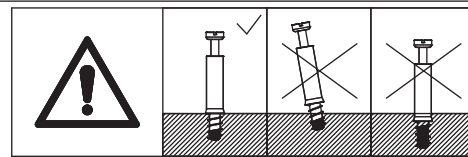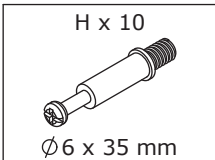   

 Screw eccentric rod (H) onto part 10 and 11.


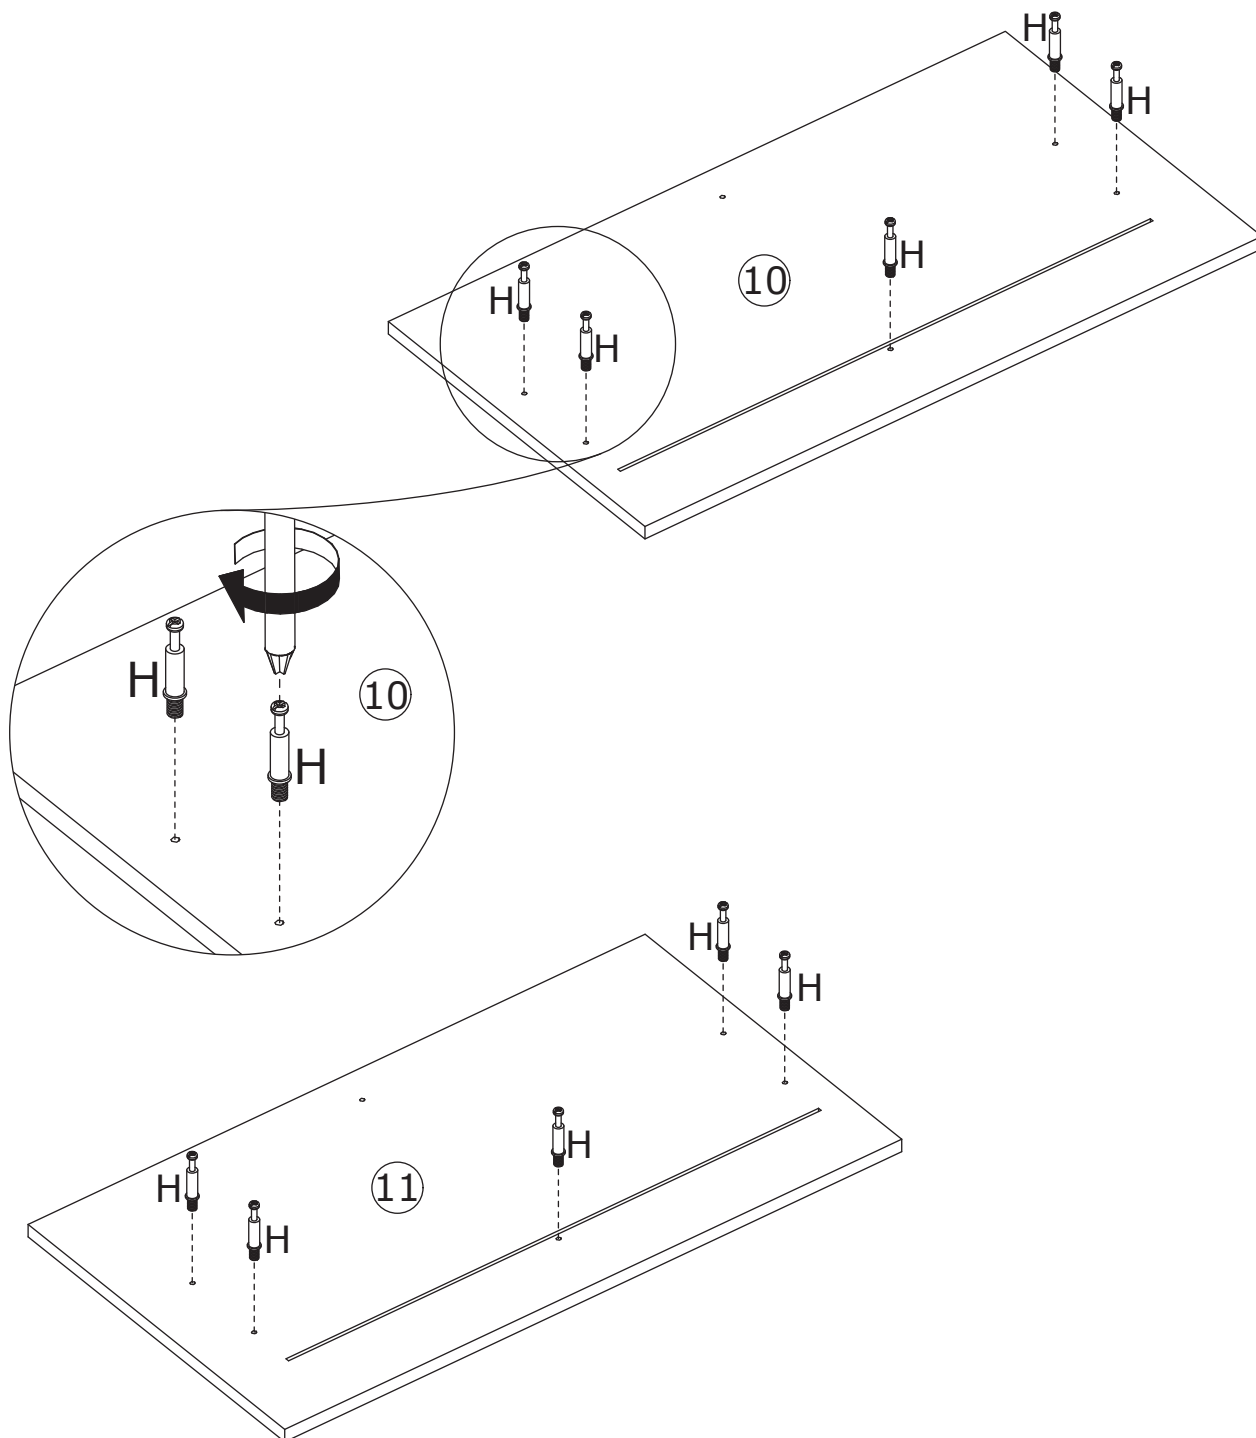


15


G x 10





 
 
Ø15 x 9 mm

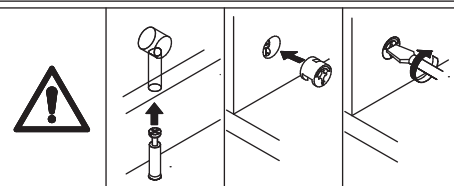


 
Connect part 11 and 10 to part 12, 15, and 13 respectively, then tighten by turning eccentric cam (G) clockwise.

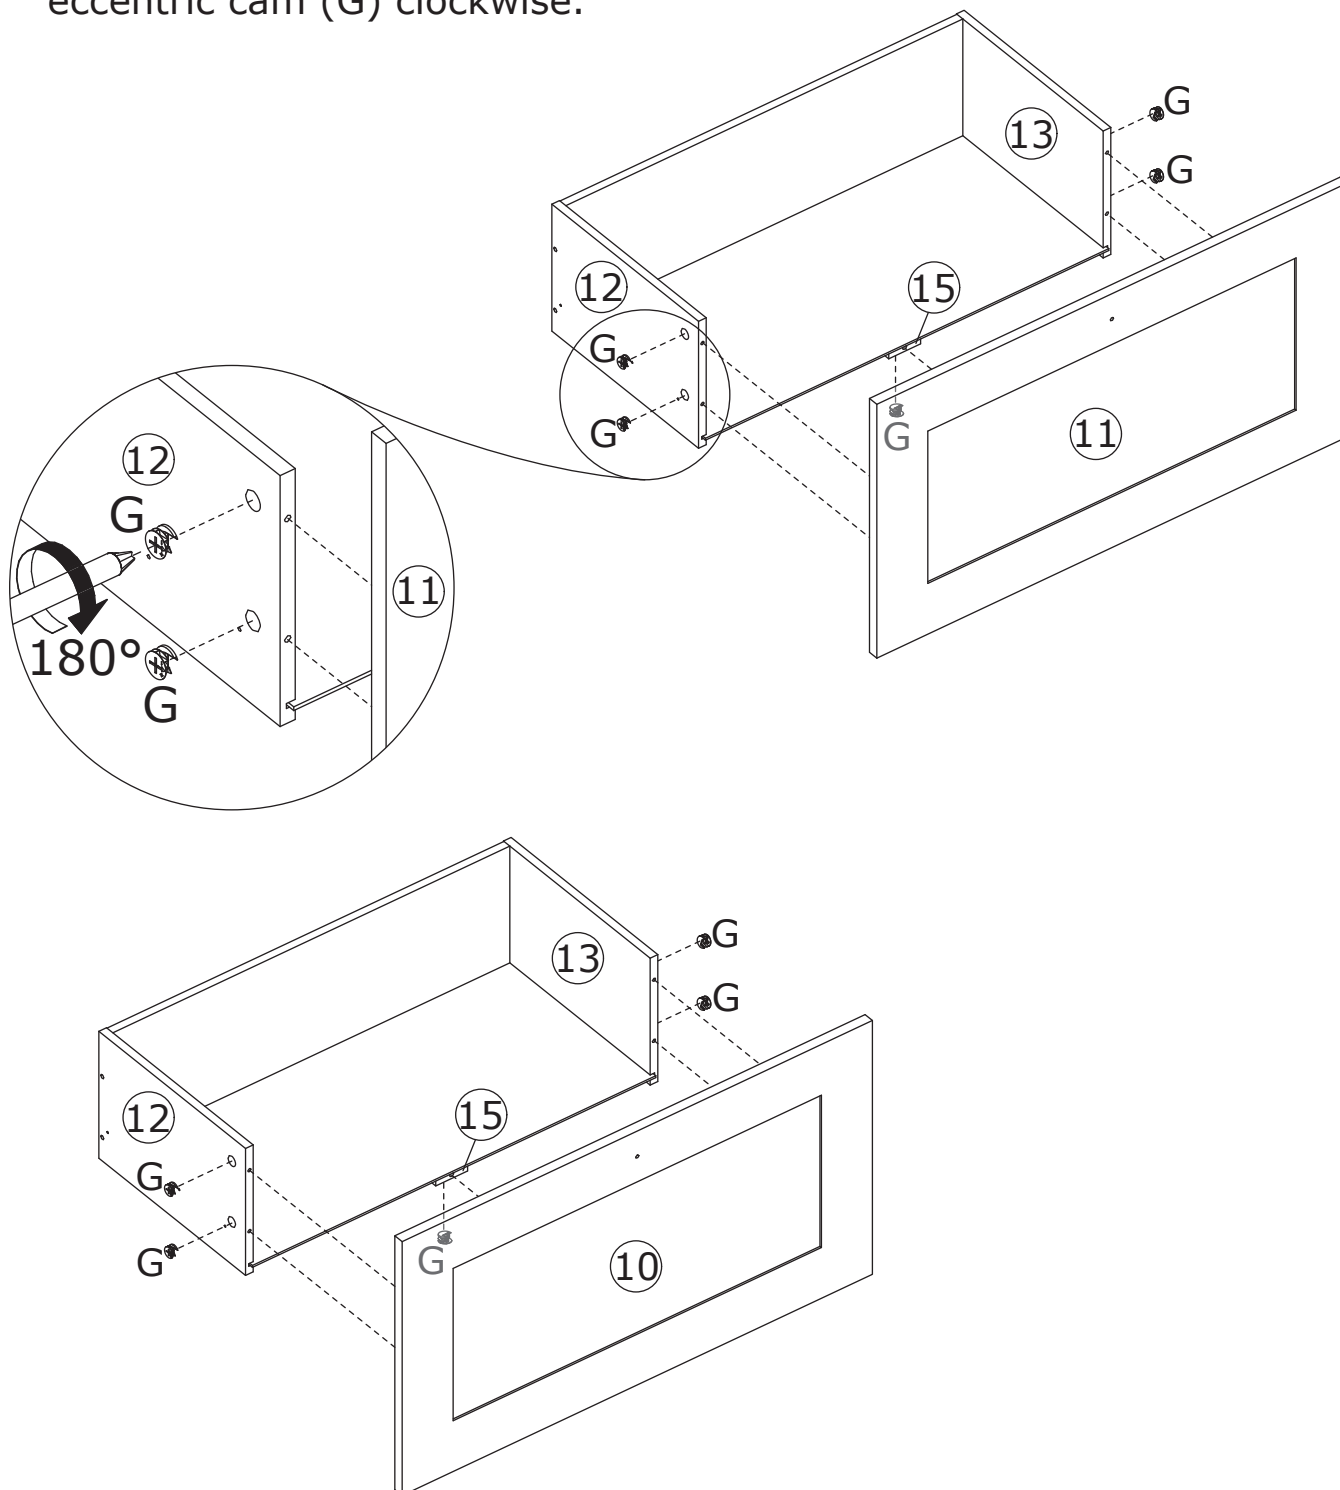


16

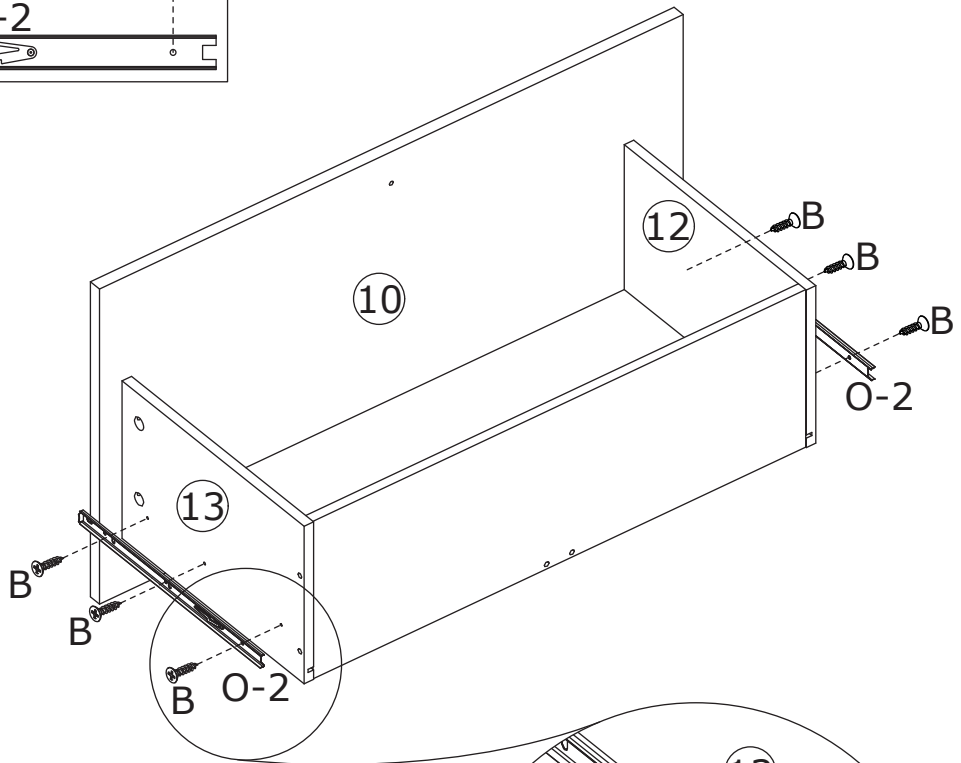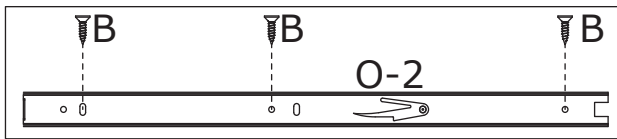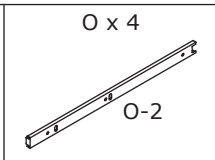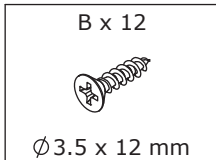    

  
Secure slide rail (O-2) to part 12 and 13 using screw(B).

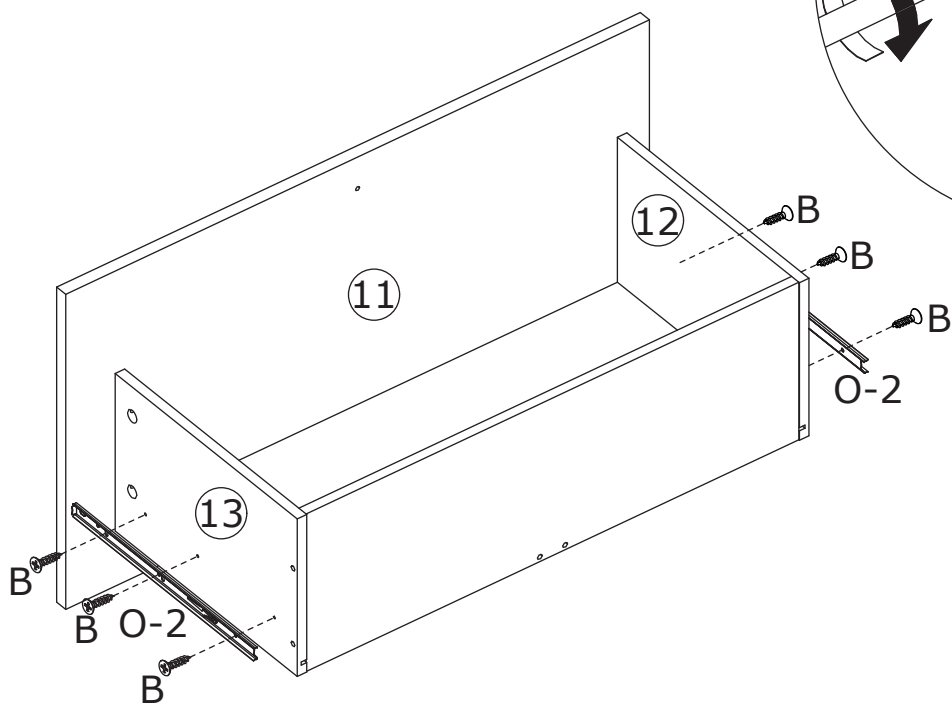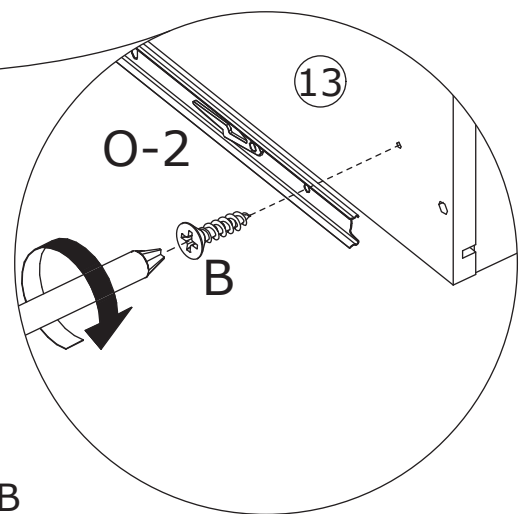


17

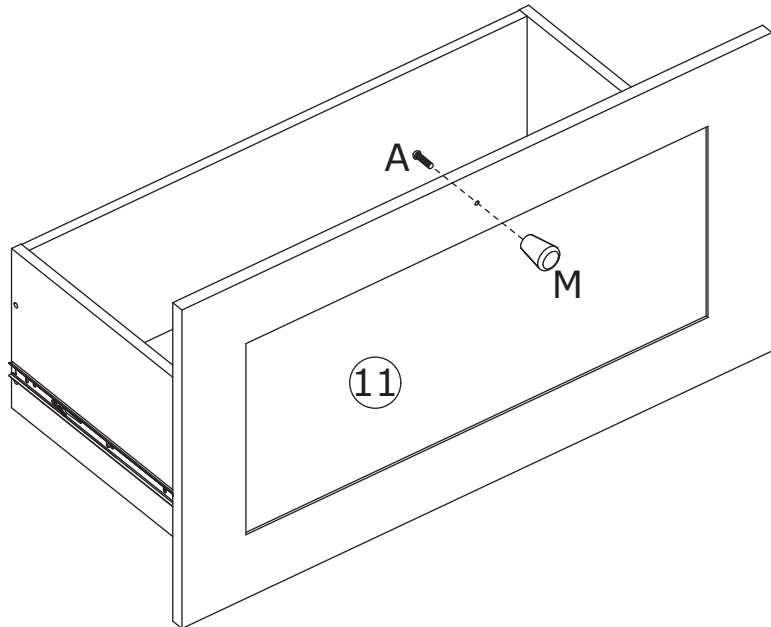 


  Secure knob (M) to part 11 and 10 using screw (A).

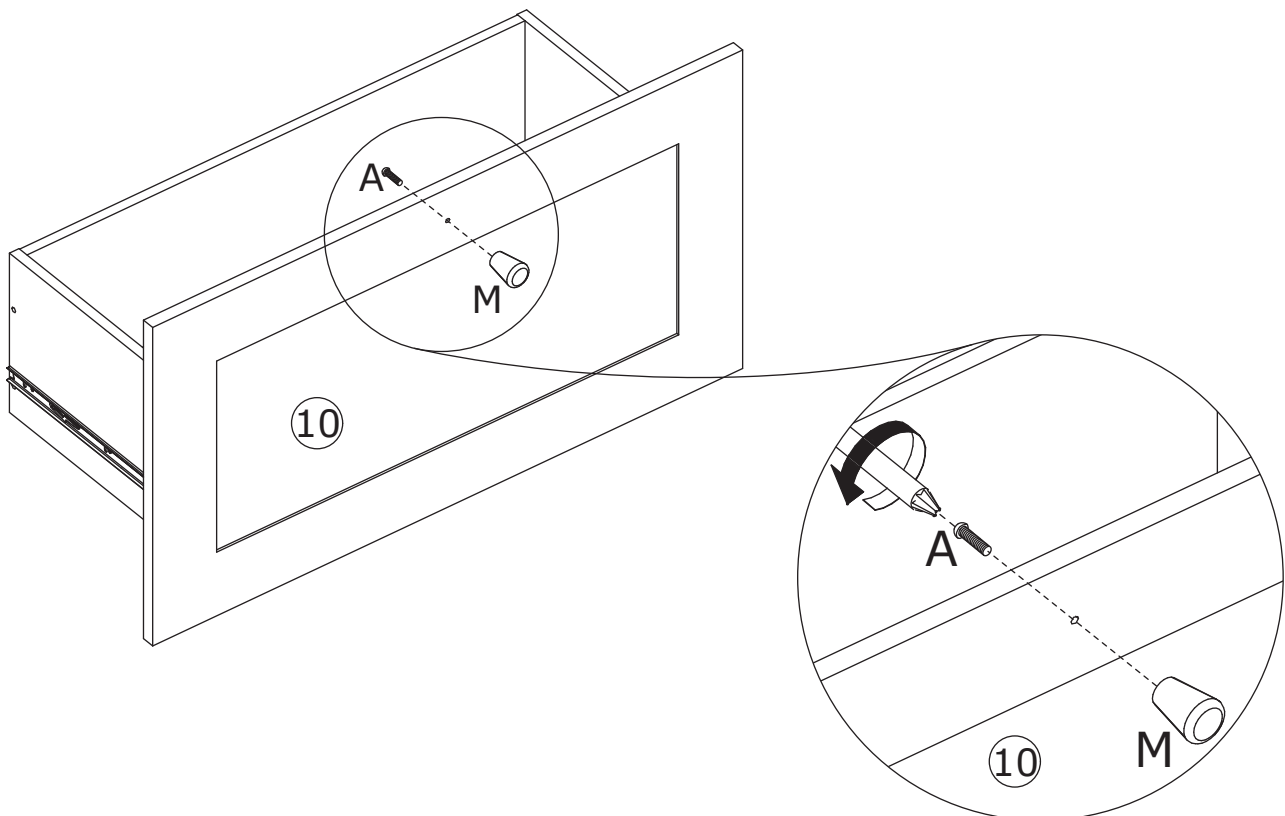

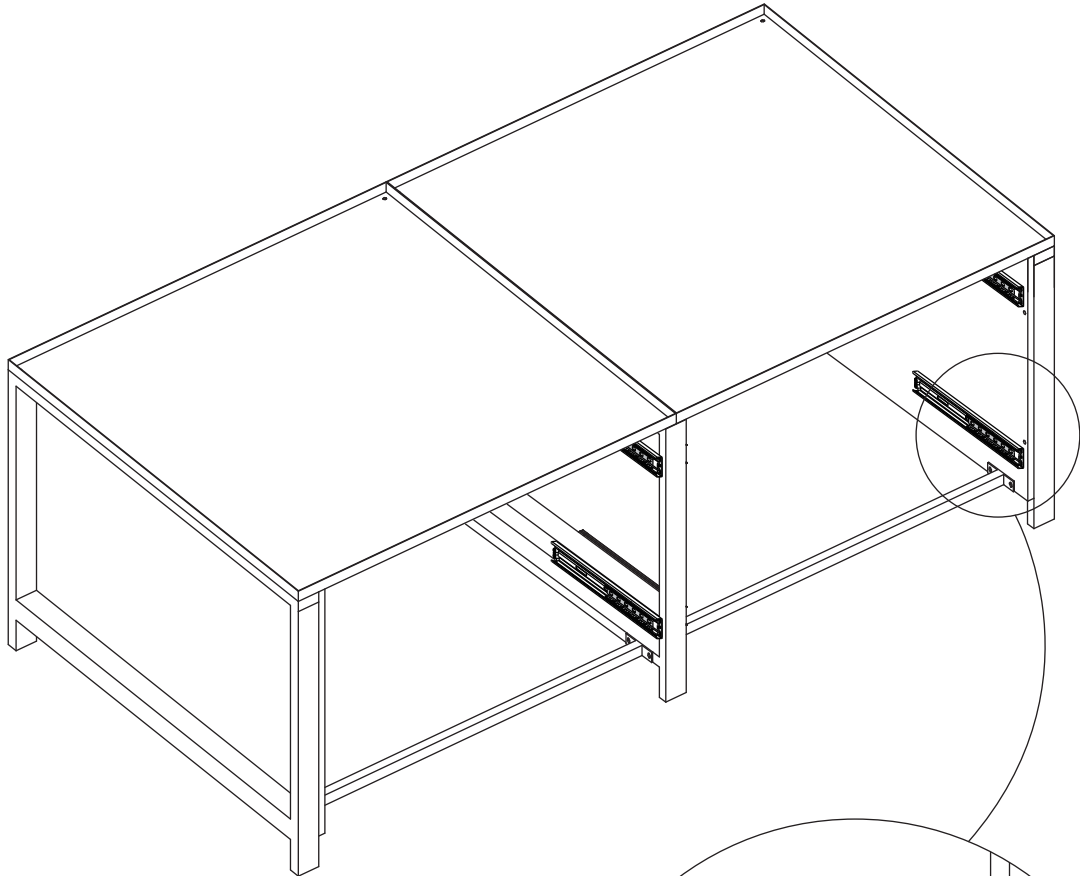


 Line up both slide grooves at the same time, then push the drawer in slowly.

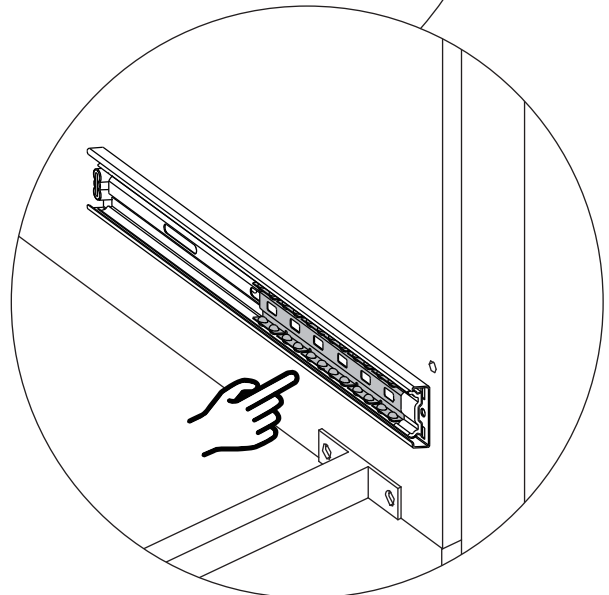



Move the balls of the slide rails on both sides to the position as shown in the figure.

 19

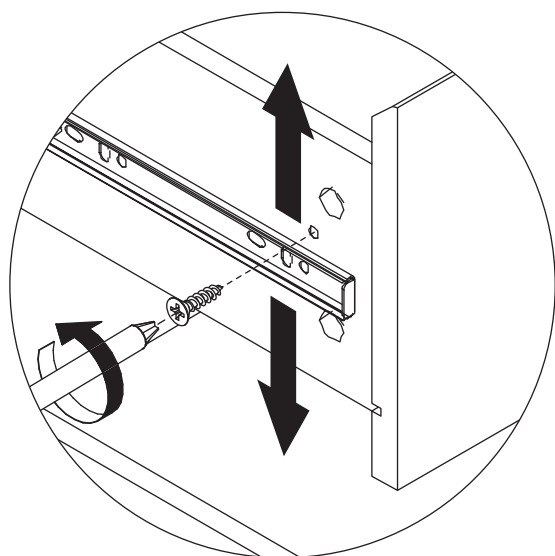

If the drawer collides with the top panel, you can adjust the hole positions on the drawer slides up or down.

  Insert the assembled drawer into the previously assembled cabinet body via slide rails O and P.

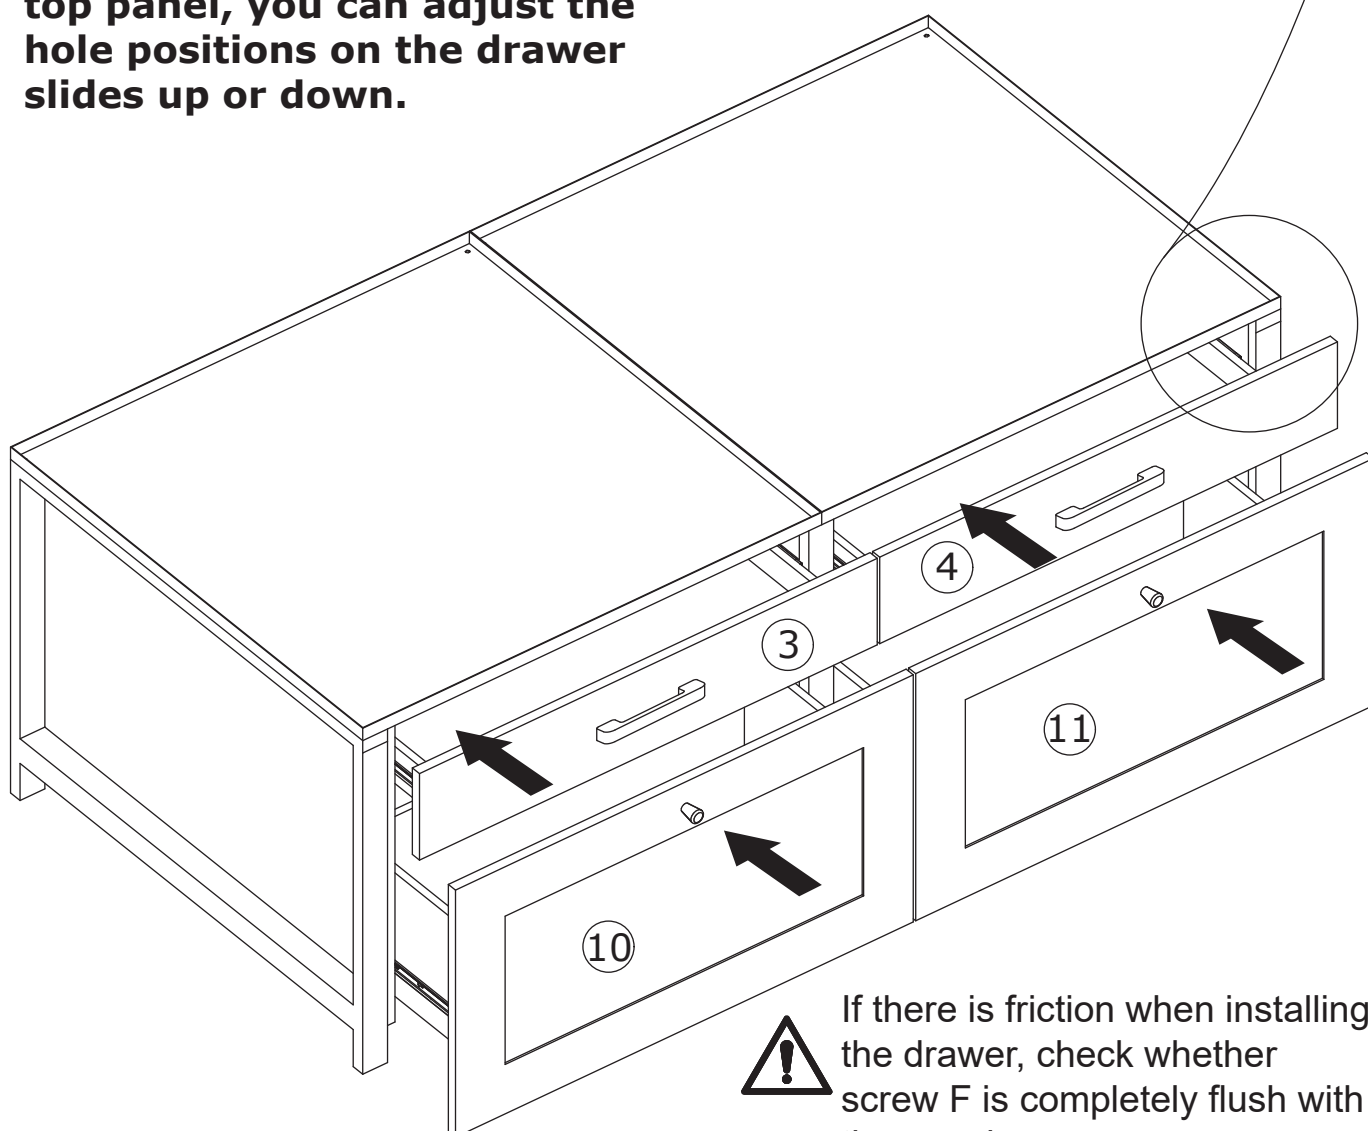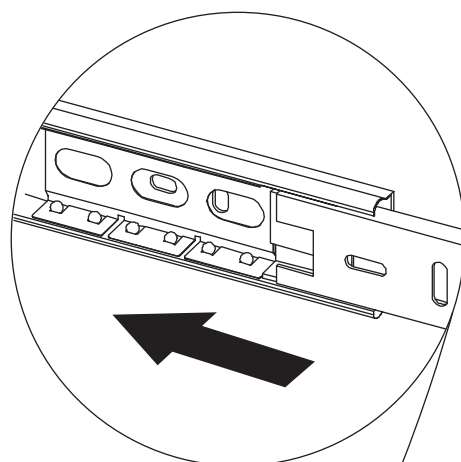

If there is friction when installing the drawer, check whether screw F is completely flush with the panel.

WARRANTY

WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

RETURNS

CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.

AFTER-SALES CONTACT



adelahu@fufugaga.com



208-820-0068