

Ax1



Bx1



Cx1



Dx3



Ex1



Fx1



Gx1



Hx3



Ix6  
M6x35



Jx12  
M6x13



Kx12



Lx6



Mx1

SPARE(Ersatzteile)



Ix1  
M6x35



Jx1  
M6x13




Kx1




Lx1


### Step1 (SCHRITT1)

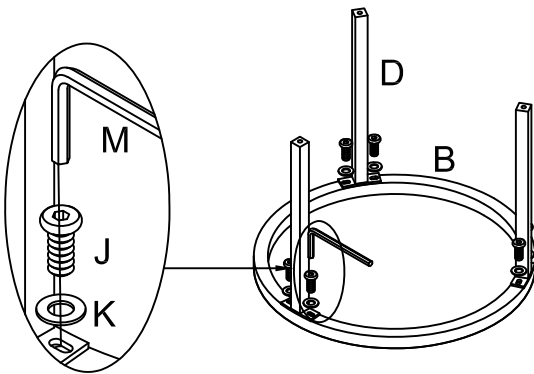


### Step2 (SCHRITT2)

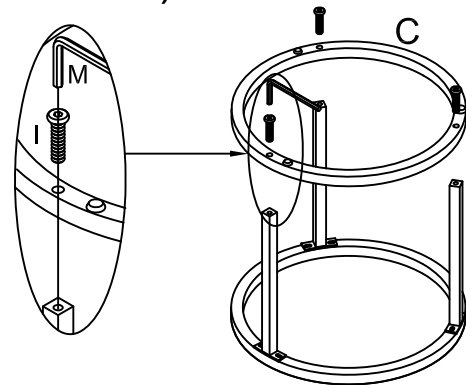


### Step3 (SCHRITT3)

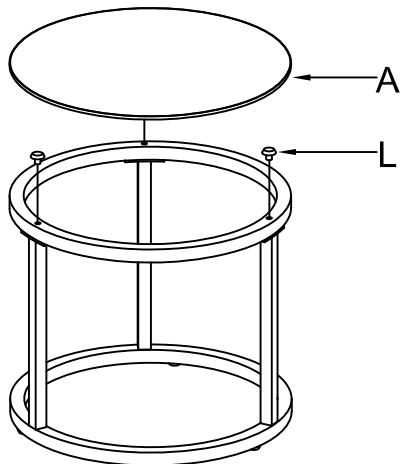

### Step4 (SCHRITT4)

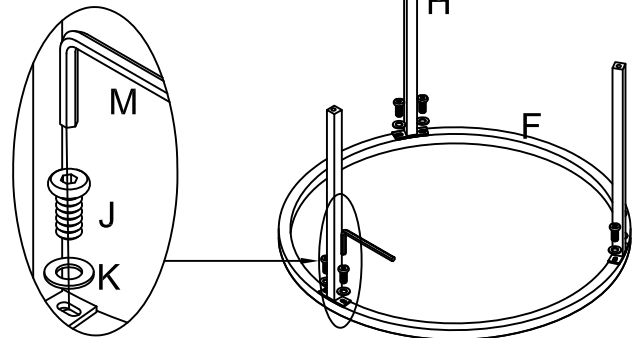

### Step5 (SCHRITT5)

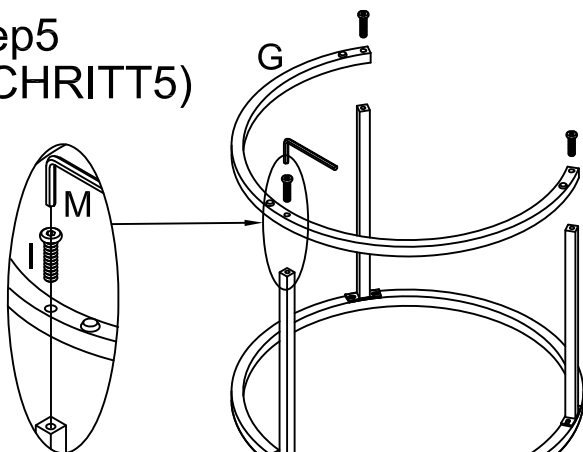

### Step6 (SCHRITT6)

