


Before Installation:

- a) Please don't install any dimmer switch. but you can use a simple "on/off" wall switch with this remote.
- b) If the ceiling fan you purchased is dimmable and you want to install a dimmer switch, please don't install this remote control then. Can not install both control unit one time.

Installation:

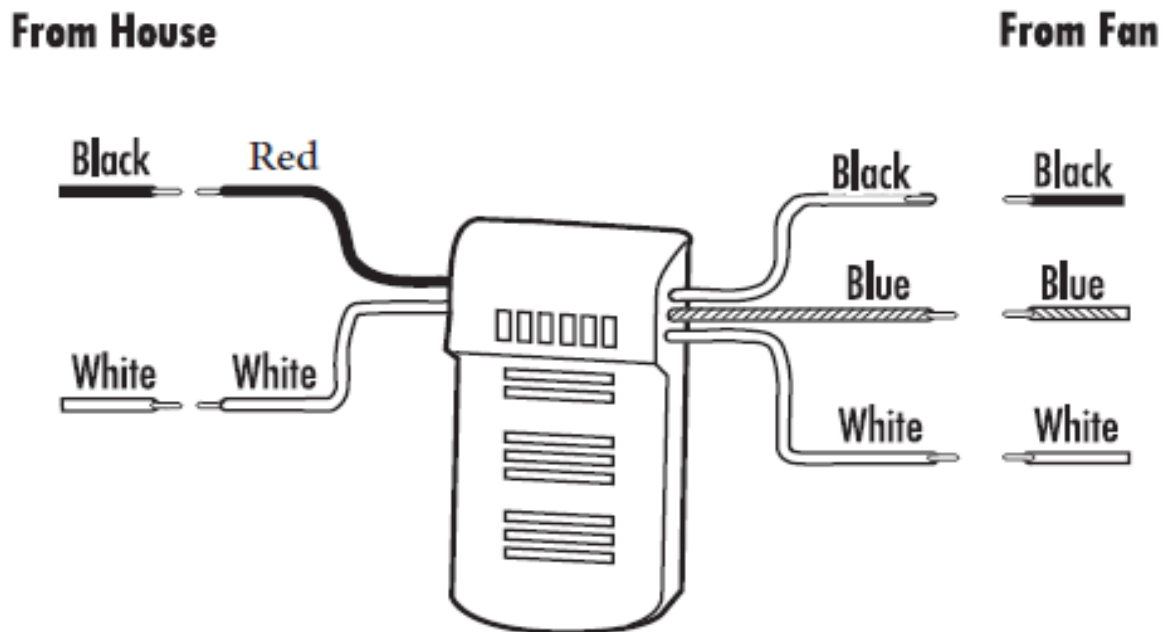

Note: The battery for the remote controller is not included for safety concern in transit, please use "12V-23A" battery.

Function:

Fan Speed: Low, Medium, High Speed. Turns off the fan

Light Control: Turn on/off the light.

*For some ceiling fans, press turn off/on button quickly, the light tone will change.

Timing the fan: Auto off after 1/2/4/8 hr

Re-Program:

- a) Turn OFF the main Power of the Ceiling fan for 1 minute, then Turn ON the main power
 - b) Press "Light ON/OFF" and "Fan High" for 5 seconds at the same time
 - c) The light will flicker 3 times
- Then please try the remote again.

If you have any questions, please contact us directly for professional and fast help: Support@BellaDepot.com