


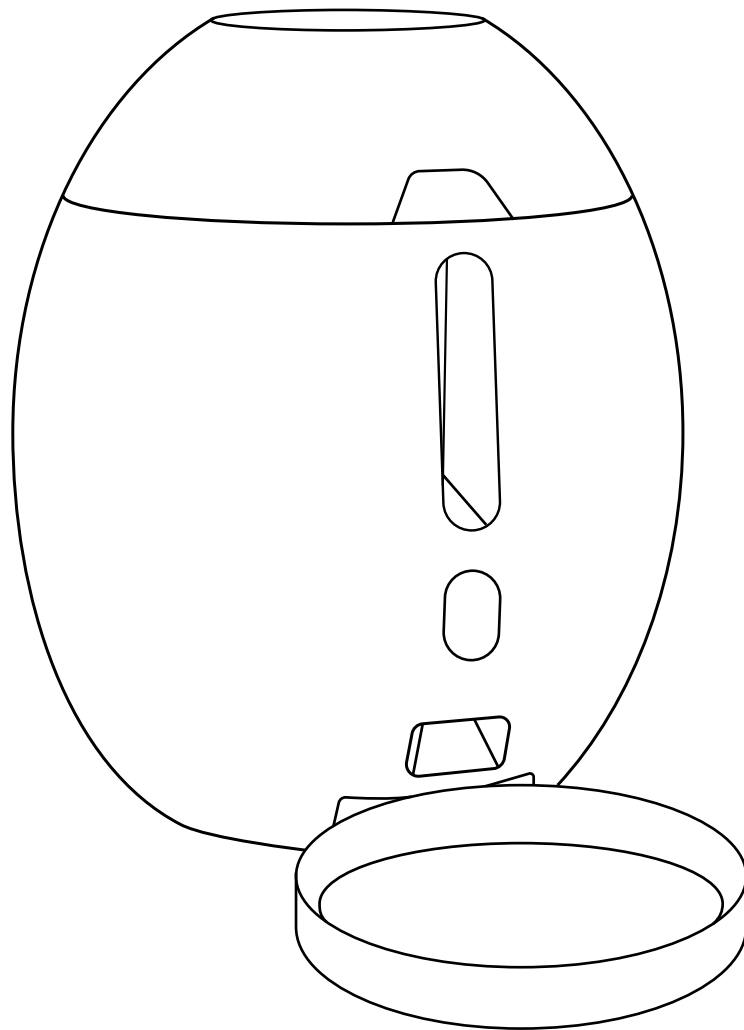

AUTOMATIC PET FEEDER

USER MANUAL

SP-APF0001



PRODUCT FEATURES:

- 🐾 **PRODUCT NAME:** Automatic Pet Feeder
- 🐾 **MODEL NUMBER:** PV001
- 🐾 **PRODUCT SIZE:** 11" x 10.5" x 13.7" (280 x 265 x 348 mm)
- 🐾 **SUGGESTED PET TYPE:** Small and Medium-sized Pets
- 🐾 **WEIGHT OF UNIT:** 7.7LB (3.5 KGS)
- 🐾 **RATED OF VOLTAGE:** 18 Watts (12VDC 1.5A)
- 🐾 **RATED POWER:** 7W

SETTING UP YOUR PET FEEDER:

Connect Power:

- **Plug the power cord into the pet feeder.**
- Ensure the feeder is on a flat surface.
- Connect the DC 12V 1.5A adapter to the power board.
- Use the "O" button for Off and "-" for On.

Fill Food Container:

- **Open the container cover.**
- Add dry kibble, ensuring it doesn't exceed the maximum capacity.
- Note: Do not use wet food.


Place Tray:

- **When the switch is on, all control panel indicators light up for one minute.**
- After one minute, the child lock engages, displaying only set parameters.
- To unlock, press and hold the "💡🔒" button for three seconds.
- Press and hold "🔧" for three seconds to cancel or restart the automatic vacuum function (after fifteen minutes of food dispensing).

Night Mode:

- **The automatic vacuum function is inactive from 22:00 PM to 8:00 AM.**
- The manual vacuum function is still operational during this time.

DISPLAY & OPERATION:

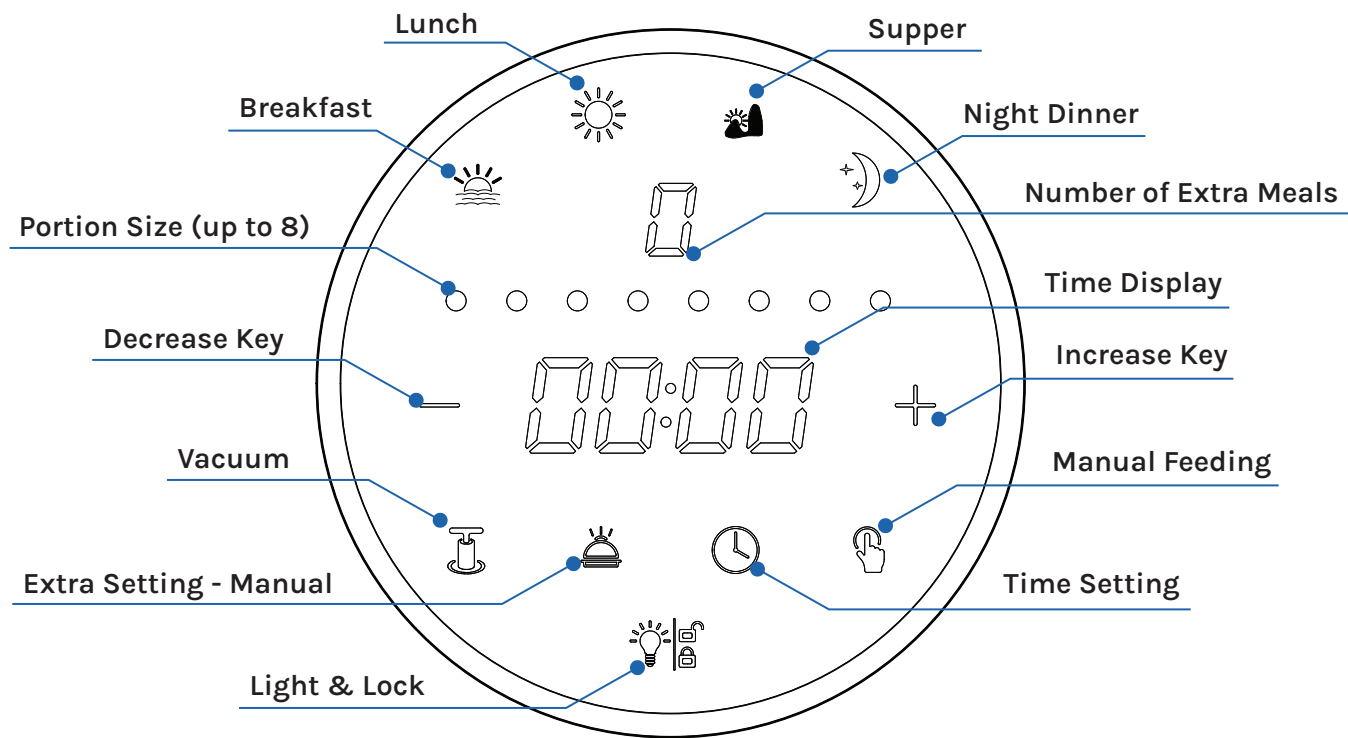

Time Adjustment:

Align the feeder with the current time on any clock, ensuring synchronization.



Light Control:

Touch to turn the light on/off.

Hold for 3 seconds to unlock; use any key to operate after unlocking.



Scheduled Feeding:

Touch to set a fixed time (8:00 to 12:00).

Or set food portions (max 8 portions, 10-15g each).

Larger dogs may need multiple portions per meal.



Afternoon Feeding:

Touch to set a fixed time (12:00 to 16:00).

Or set food portions.



Evening Feeding:

Touch to set a fixed time (17:00 to 20:00).

Or set food portions.

Red indicator signals low food; refill to avoid errors.

**Night Feeding:**

Touch to set a specific time (20:00 to 8:00).
Or set food portions.

**Immediate Vacuum:**

Touch for instant vacuum suction after each feeding.

**Feeding Frequency:**

Touch to increase or decrease feeding times (1 to 8).

**Extra Dinner Setting:**

Touch to prepare portion for an extra dinner setting.

**Increase Feeding Time:**

Touch to extend the feeding duration.

**Decrease Feeding Time:**

Touch to shorten the feeding duration.

**Display Setting Time:**

Touch to view the set time.

**Display Portion (1 to 8):**

Touch to view the set portion.

**Portion Adjustment Signal:**

Light flickers during portion adjustments.



SAFETY GUIDELINES

Placement

- Ensure the machine is on a flat surface.

Safety Precautions

- Prevent pet access to wires to avoid electrocution.
- Supervise children using the machine.
- Keep the upper housing clear; don't place items on it.

Pet Age Restrictions

- Don't use for baby pets under three months.
- Avoid using as the sole heat source for baby pets.

Ventilation Maintenance

- Keep heat sink, external machine air inlet, and infrared sensor unblocked for normal use.

Prohibited Actions

- Only maintenance personnel should handle machine decomposition.
- Do not attempt self-repair; consult professionals for assistance.

Faults and Replacement

- If the machine malfunctions, replace it through the manufacturer or professionals.

Water Avoidance

- Do not immerse the machine in water.

Pet Mat Care

- Regularly dry the pet mat to maintain cleanliness and dryness.