


Maintenance and Storage:


1. Clean the tanks regularly in order to achieve long term storage.
2. Lubricate the slide valve periodically with lubricants (Vaseline recommended)
3. Release the waste holding tank cap for long term storage.
4. Avoid strong sunlight and high temperatures.
5. If the piston pump is hard to pull up, pull it out and add lubricants to the built-in rings or open the fresh water tank cap to maintain pressure balance before use.

Accessories:

1. CHH-627 Handheld Sprayer

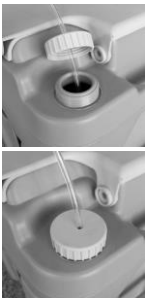

This cap can be screwed onto the M44 opening of all CHH products

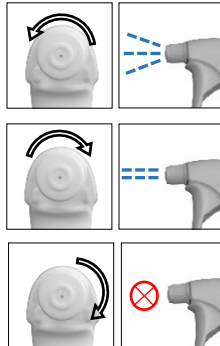

2. CHH-642-20 Toilet Carry Bag



QDCH-V2312


ASSEMBLY INSTRUCTION

BFTLPT-1007


Caution:

- Place on a flat surface.
- Ensure all latches are locked.
- Ensure the waste holding tank is assembled correctly and the cap is screwed on correctly.
- Weight bearing limit is no more than 200 kg.
- Do not lean on the seat cover during operation.
- Do not use water with a temperature higher than 40 degrees.

PARTS

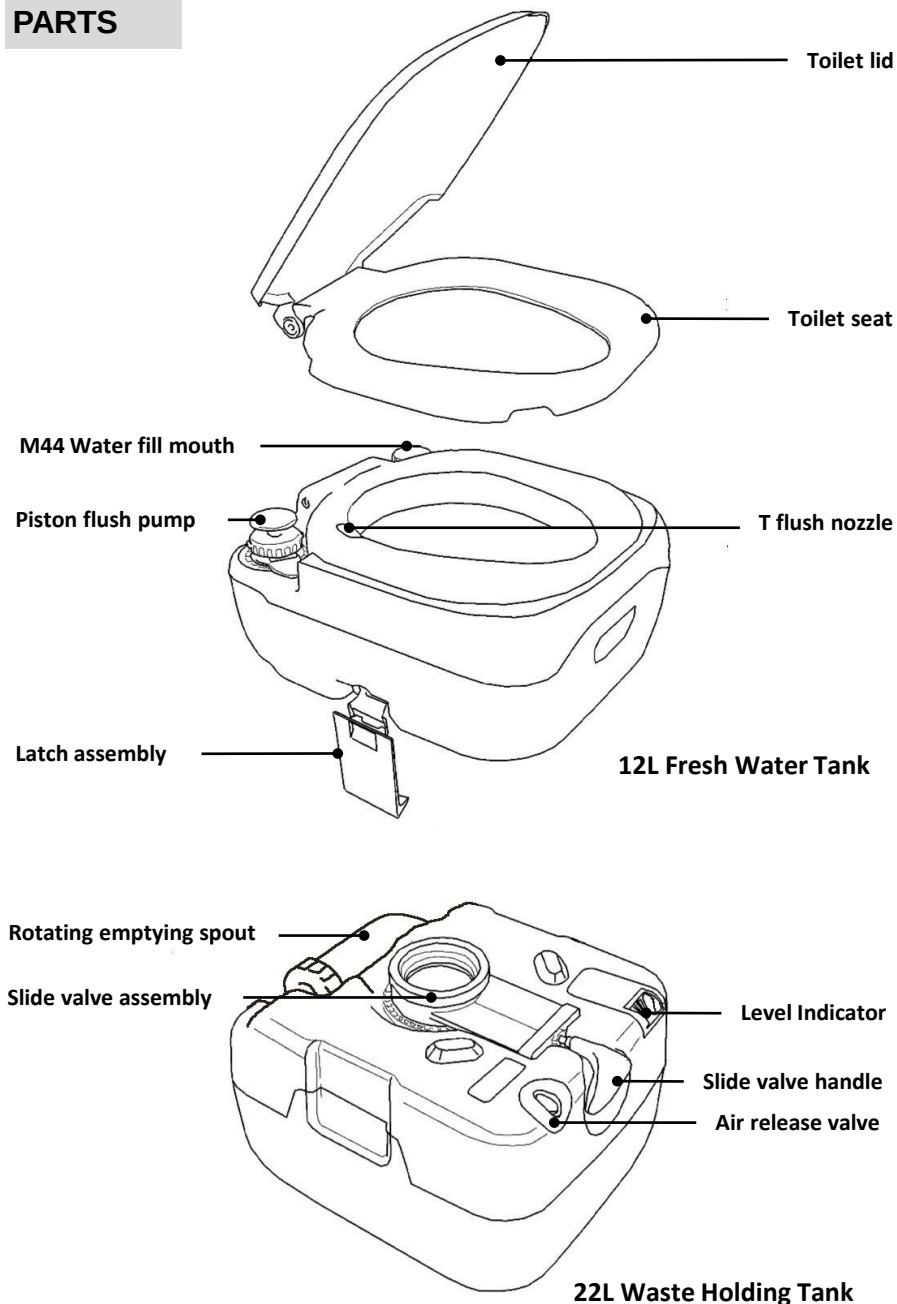


Using Instructions:

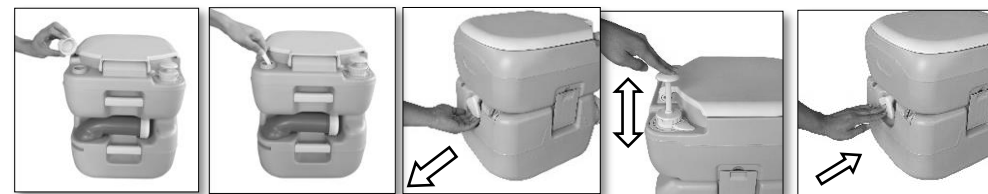

Clean Instruction:



Function:

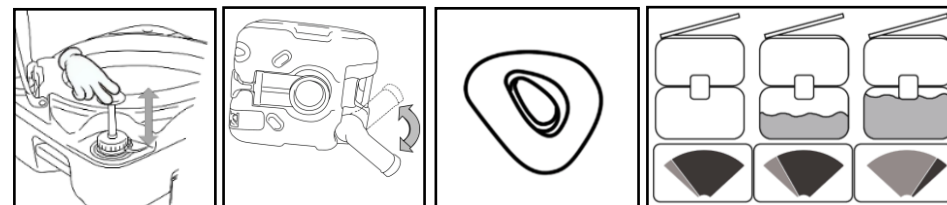

Piston pump

Rotating emptying spout Air release button

Level indicator