

### Instructions during use

1. Move the item gently to avoid collision.
2. Keep it away from direct sunlight.
3. Check to ensure that the center of gravity is on the hydraulic when in use.
4. Watch out your fingers when adjusting the backrest angle.
5. Use the handle adjuster under the seat to adjust the seat height. Do not press or pull the seat by force.
7. Do not place any heavy objects on the seat or armrests.
8. Keep the plastic parts away from direct sunlight.
9. Avoid abrasive cleaner for cleaning.

-8-

8

### ASSEMBLY INSTRUCTIONS



-1-

1

### Parts


Check and make sure you get the components on the list, contact us for any missing

<b>A</b> Backrest	<b>B</b> Seat	<b>C</b> Left armrest	<b>C</b> Right armrest
<b>D</b> Control unit x1	<b>E</b> Allen Key x1	<b>F</b> Central base tube	<b>G</b> Foot
<b>H</b> Casters	<b>J</b> M8*40	<b>K</b> M6*20	<b>L</b> Footrest pillow
<b>M</b> Gas lift	<b>N</b> Headrest	<b>O</b> Lumbar support	<b>P</b> Steel plate
<b>R</b> M8*25	<b>S</b> M5*10	<b>T</b> M6*20	<b>U</b> Plastic Caps
<b>V</b> Sliding Block	<b>W</b> M6*30	<b>X</b> Gasket	

-2-


2

### Reclining function

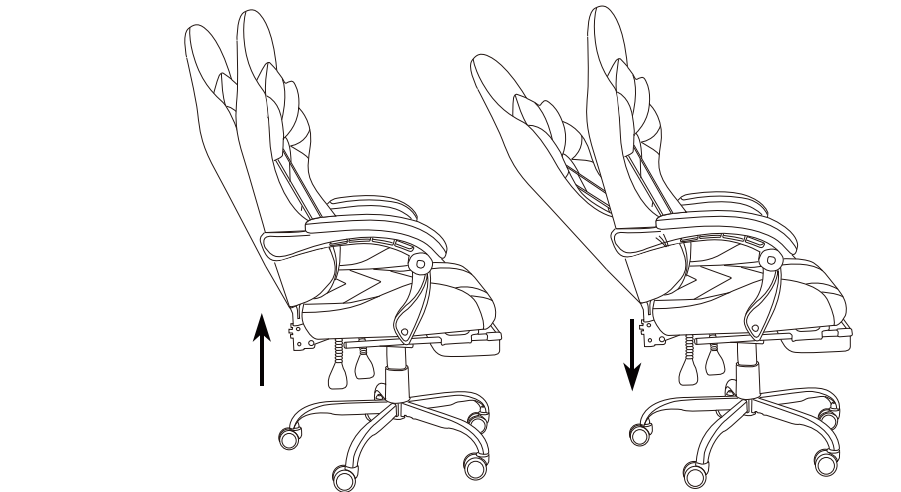

pull up on the rear control handle to adjust the reclining angle

pull down it to fix the backrest of the chair at the angle

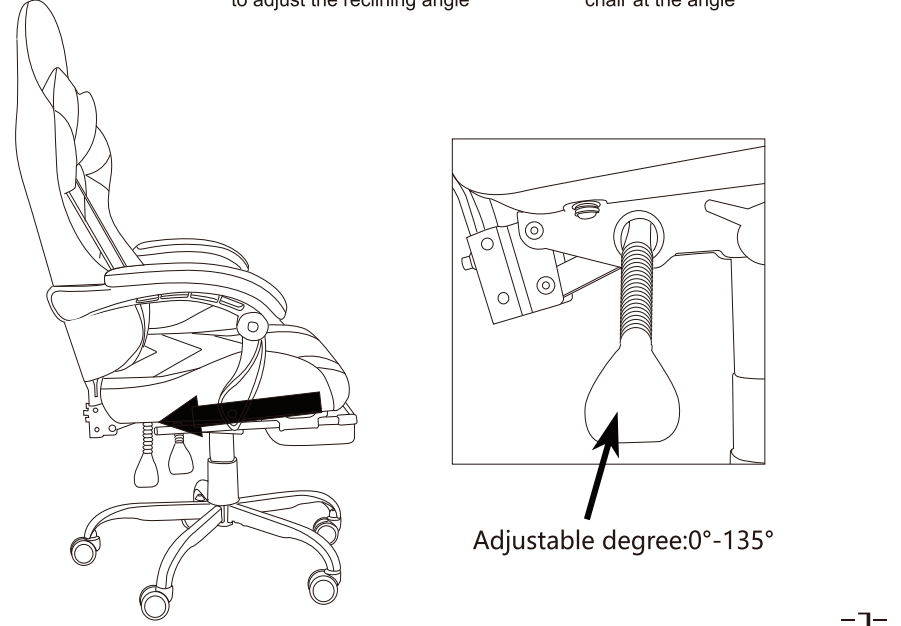

Adjustable degree: 0°-135°

-7-

7

### Function



1 Load capacity up to 330lb



2 Seat Height adjustment (pull up on the control handle to adjust)



3 360 degree swivel

-6-

6

### Assembly steps

1. Assemble five-star foot
2. Attach wheels
3. Insert the gas lift and plastic cover
4. Fix the control unit to the base of the seat
5. Insert the footrest into the anchor hole

-3-

3

6. Fix the footrest
7. Insert the gas lift into the control unit
8. Mount the steel plate into the control unit, mount the back on the steel plate

Notice: the correct way to install the steel plate

-4-

4

9. Attach belt clips together
10. Insert the elastic through the plastic hole. Tighten the elastic.

-5-

5