 

DA0344

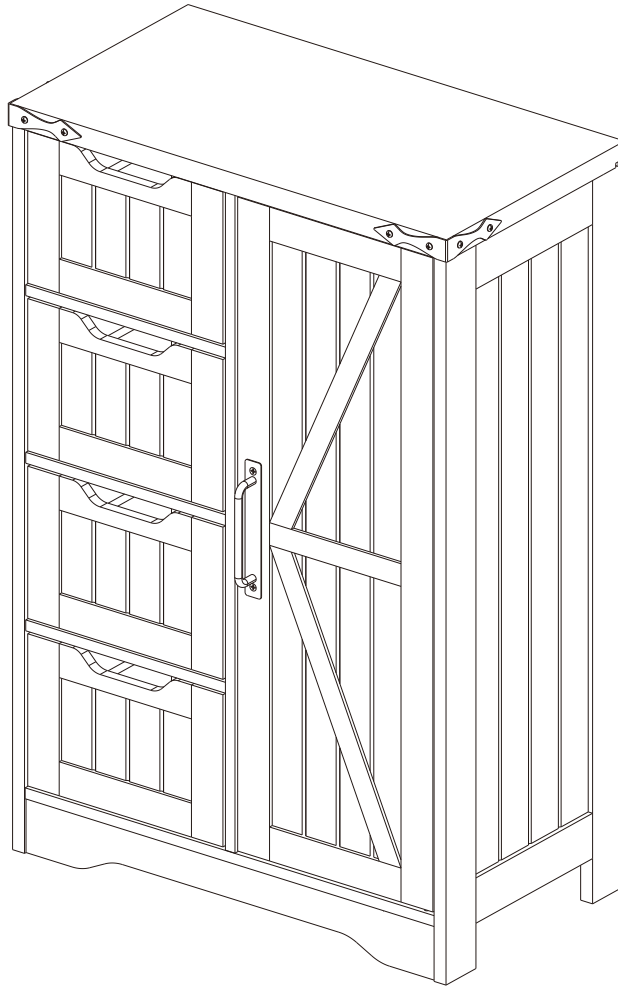 


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

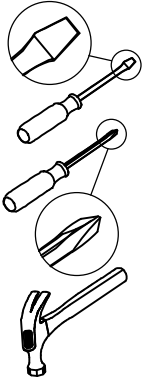

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.

- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an **R** (right) and **L** (left) for proper placement.



- Make sure to always face the point on the top of the Cam Lock towards the outer edge.

- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.



- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.



 
- Do NOT use harsh chemicals or abrasive cleaners on this item.




- Never push, pull, or drag your furniture.

Board Identification


Not actual size

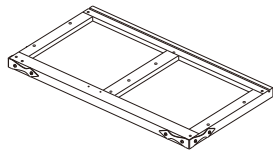


① x1

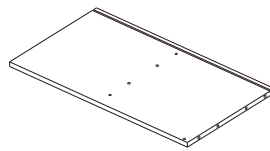 


② x1

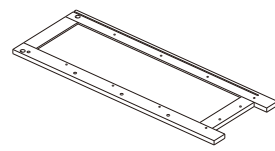 


③ x1

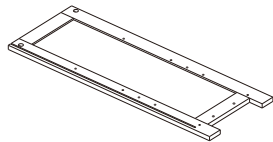 


④ x1

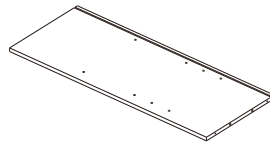 


⑤ x1

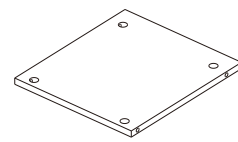 


⑥ x3

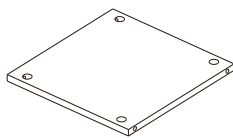 


⑦ x1

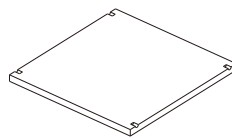 


⑧ x1

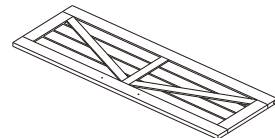 


⑨ x1

 

⑩ x1

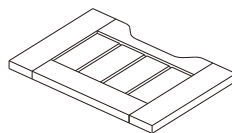 


⑪ x4

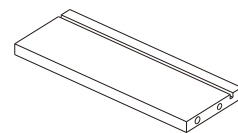 


⑫ x4

Board Identification

 
Not actual size

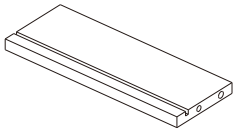


⑬ x4

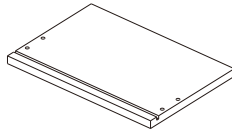 

⑭ x4

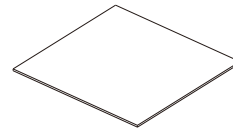 


⑮ x4

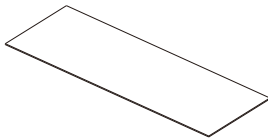 


⑯ x2

 
Part List

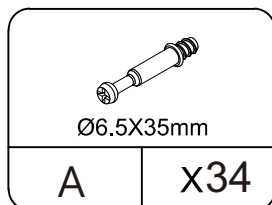


CAM LOCK
spare: 2

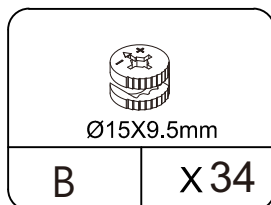 


CAM BOLT
spare: 2

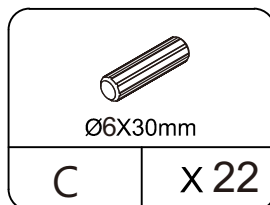 



WOOD DOWEL
spare: 2

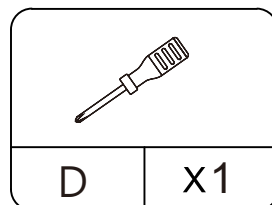 


CROSS SCREWDRIVER

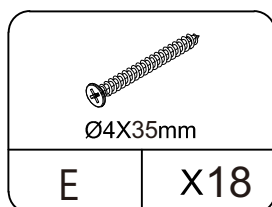 


SCREW
spare: 2

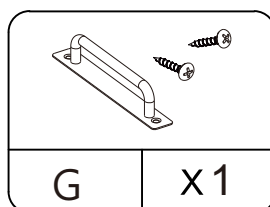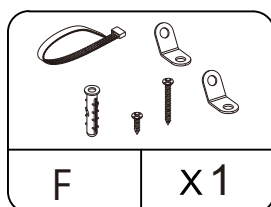  


SCREW

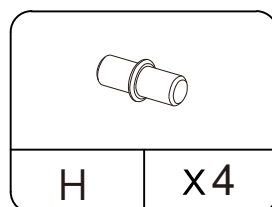 


SCREW
spare: 1

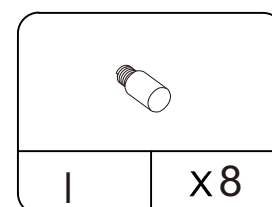 


LEFT CABINET
MEMBER

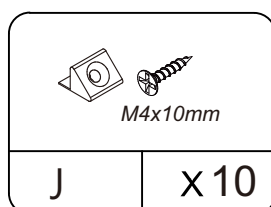 


WOOD DOWEL

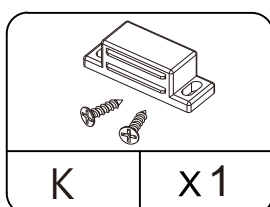 


HANDLE

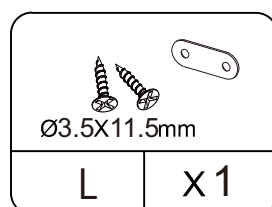 

HANDLE

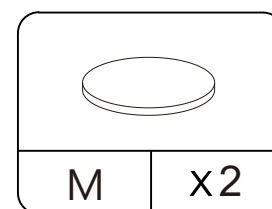 

LEFT CABINET
MEMBER

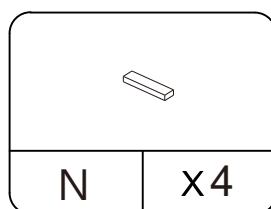 


Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

 
1

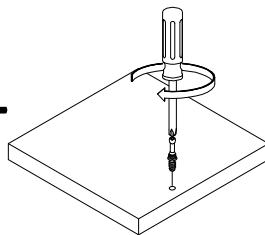

2

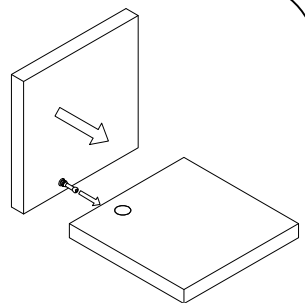 


3

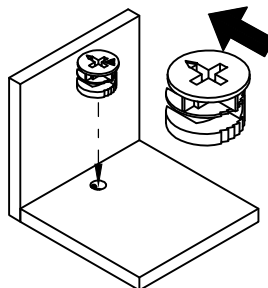 


The opening must point toward the edge of the board

 4





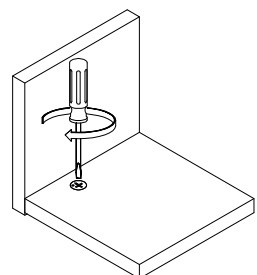


Board Identification


 
Not actual size

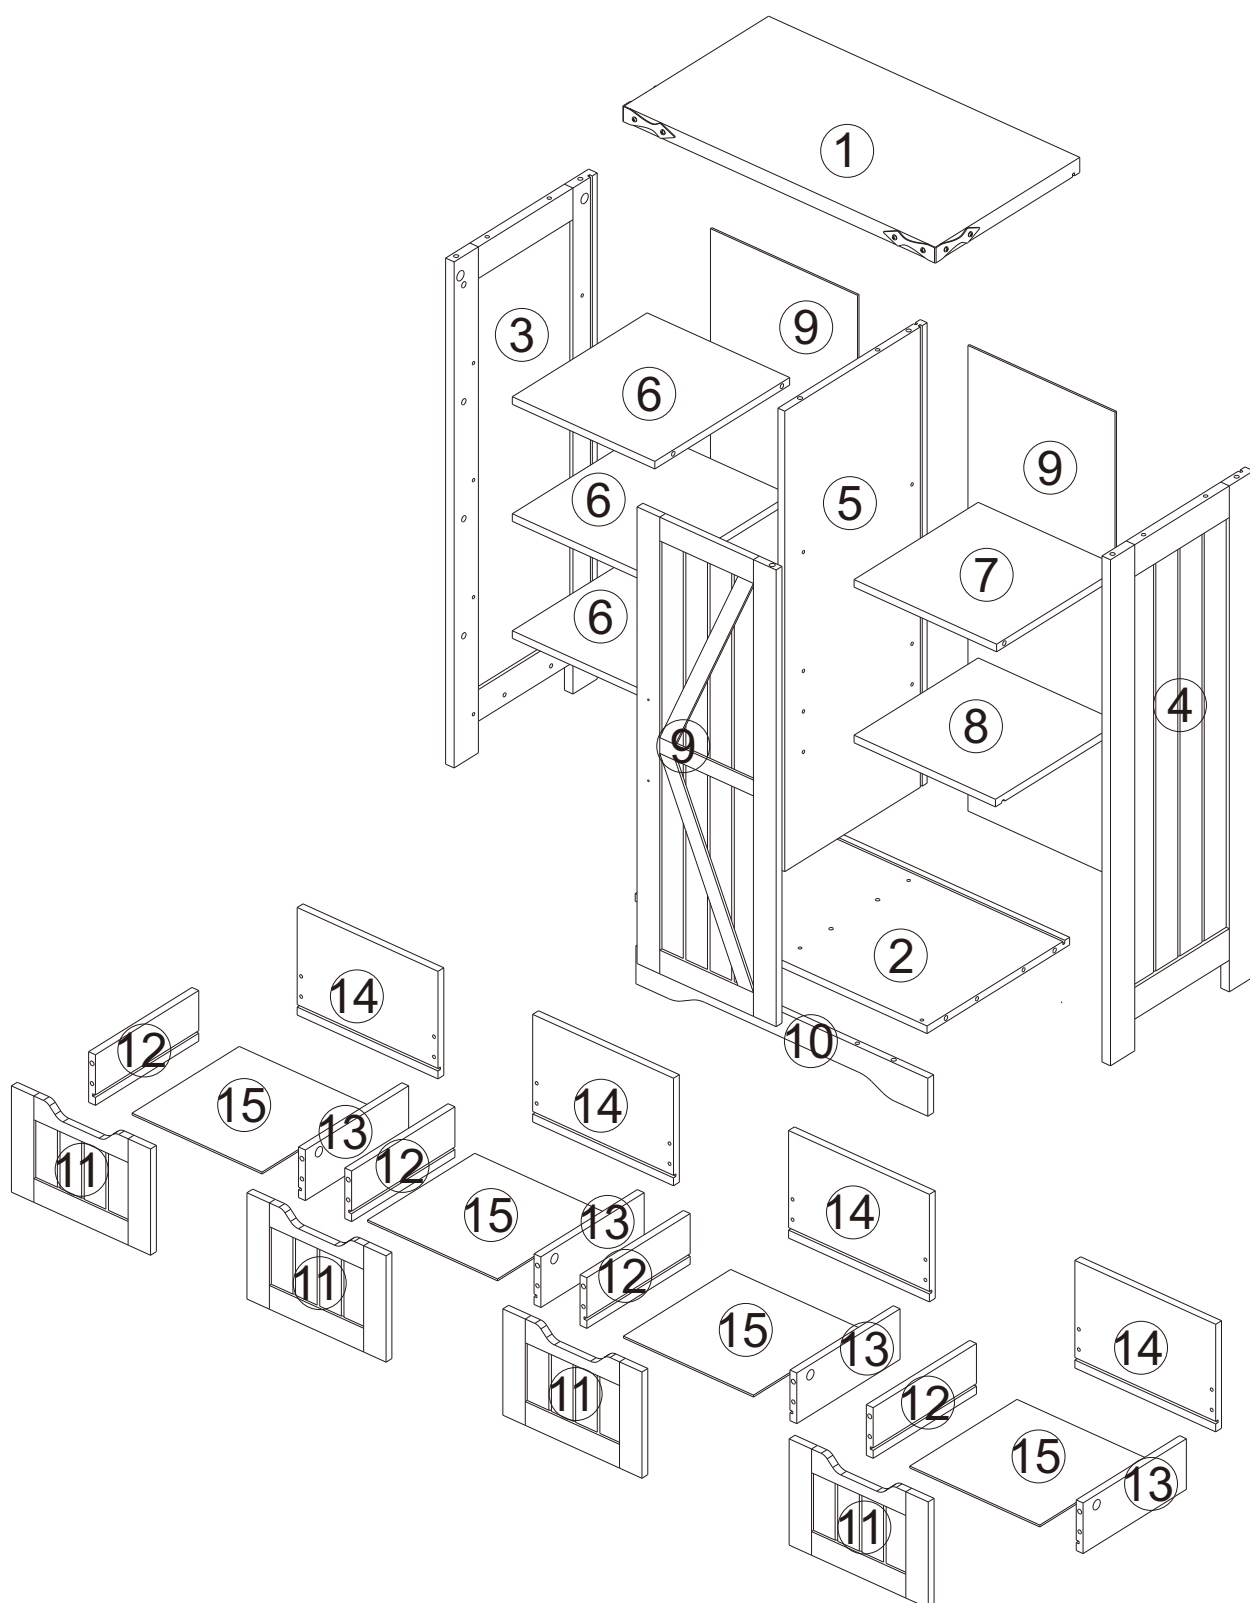

     STEP1

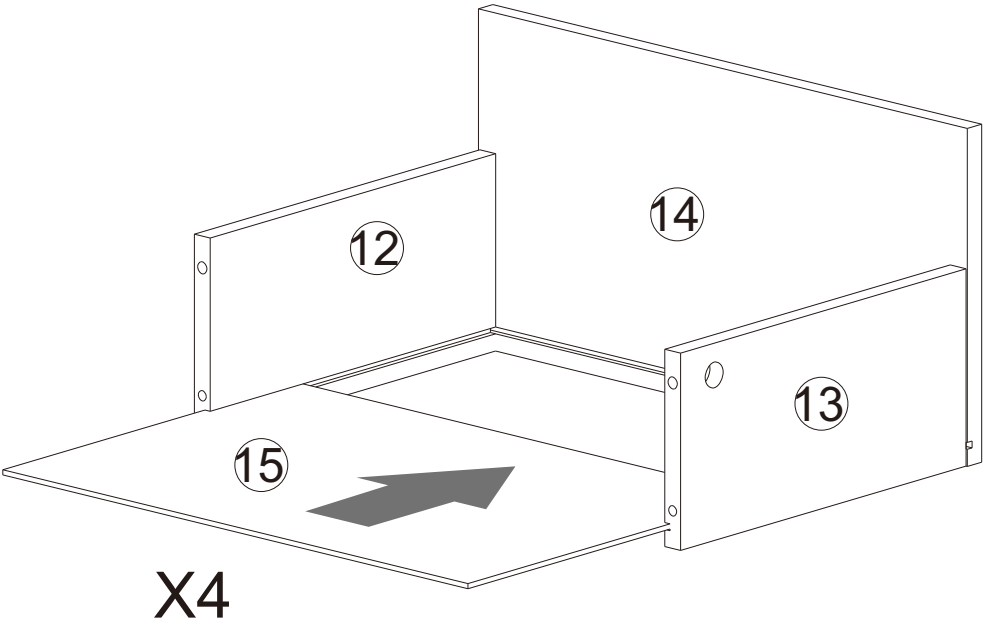
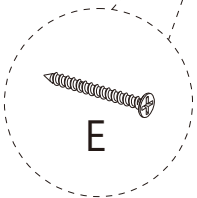
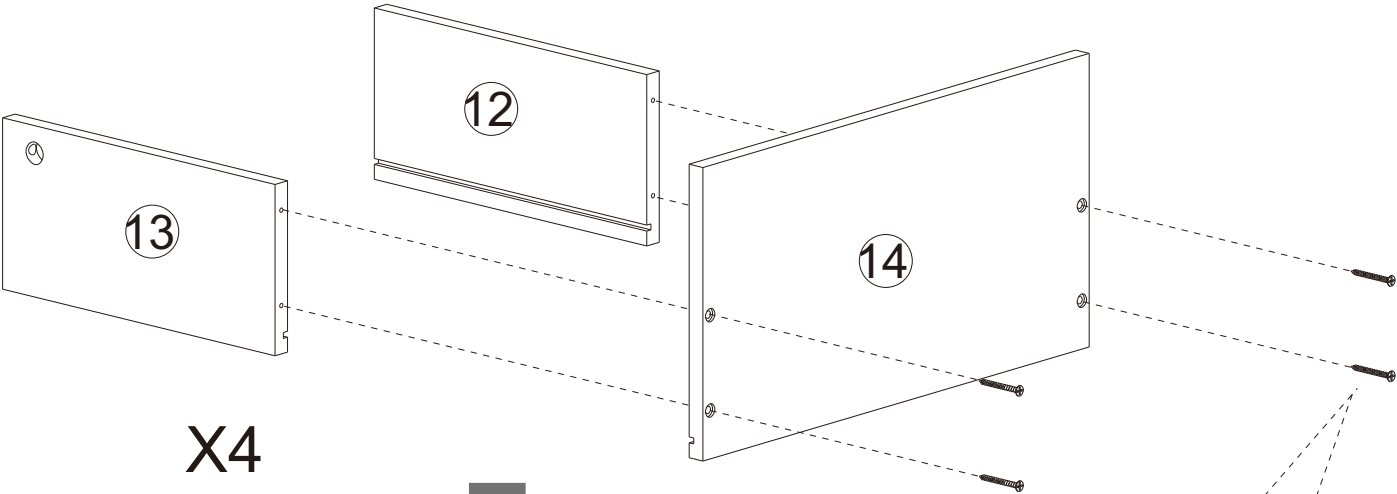
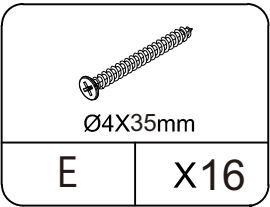
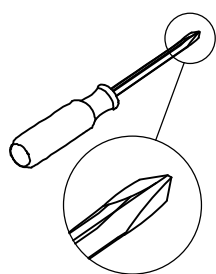


  STEP2




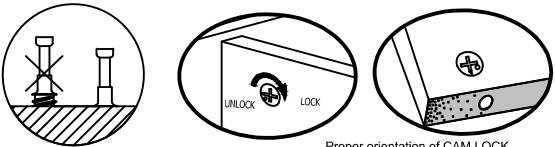
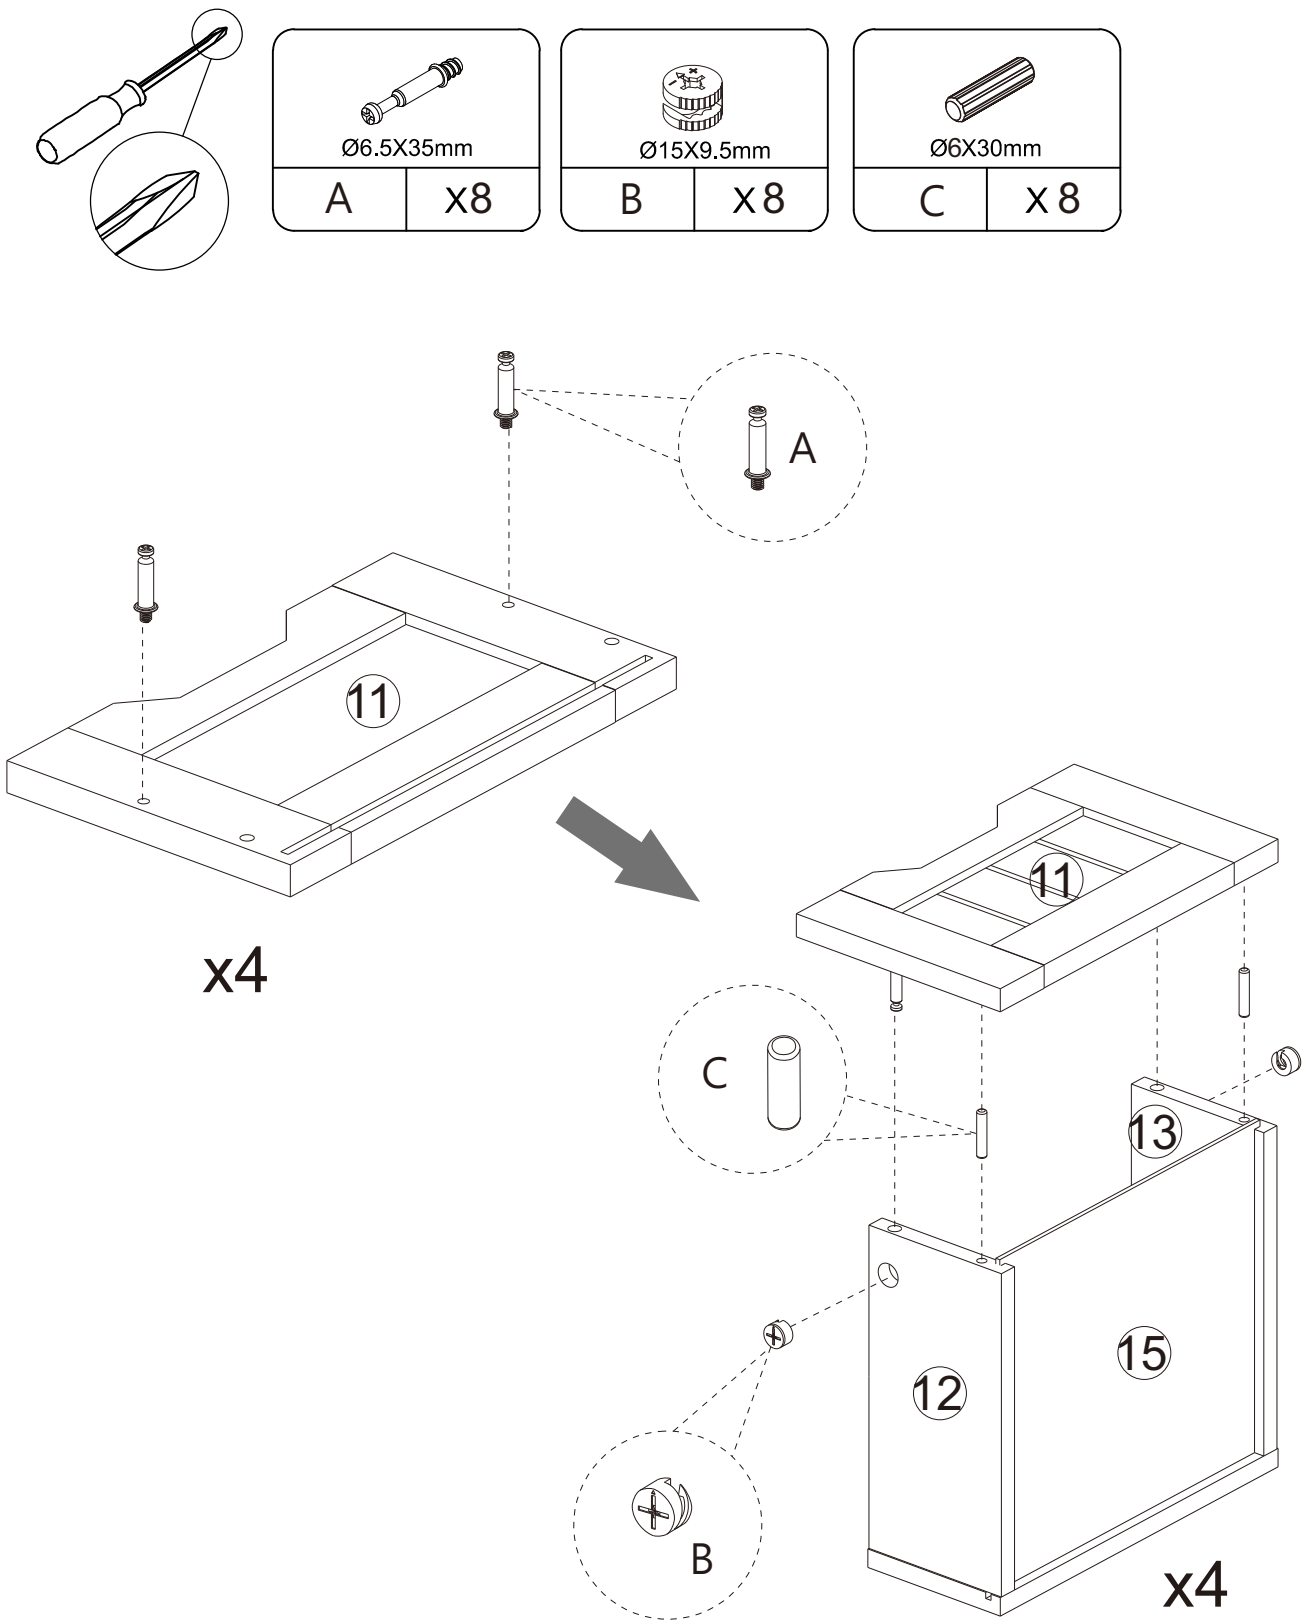


Proper orientation of CAM LOCK

    
 
STEP3

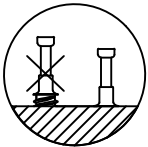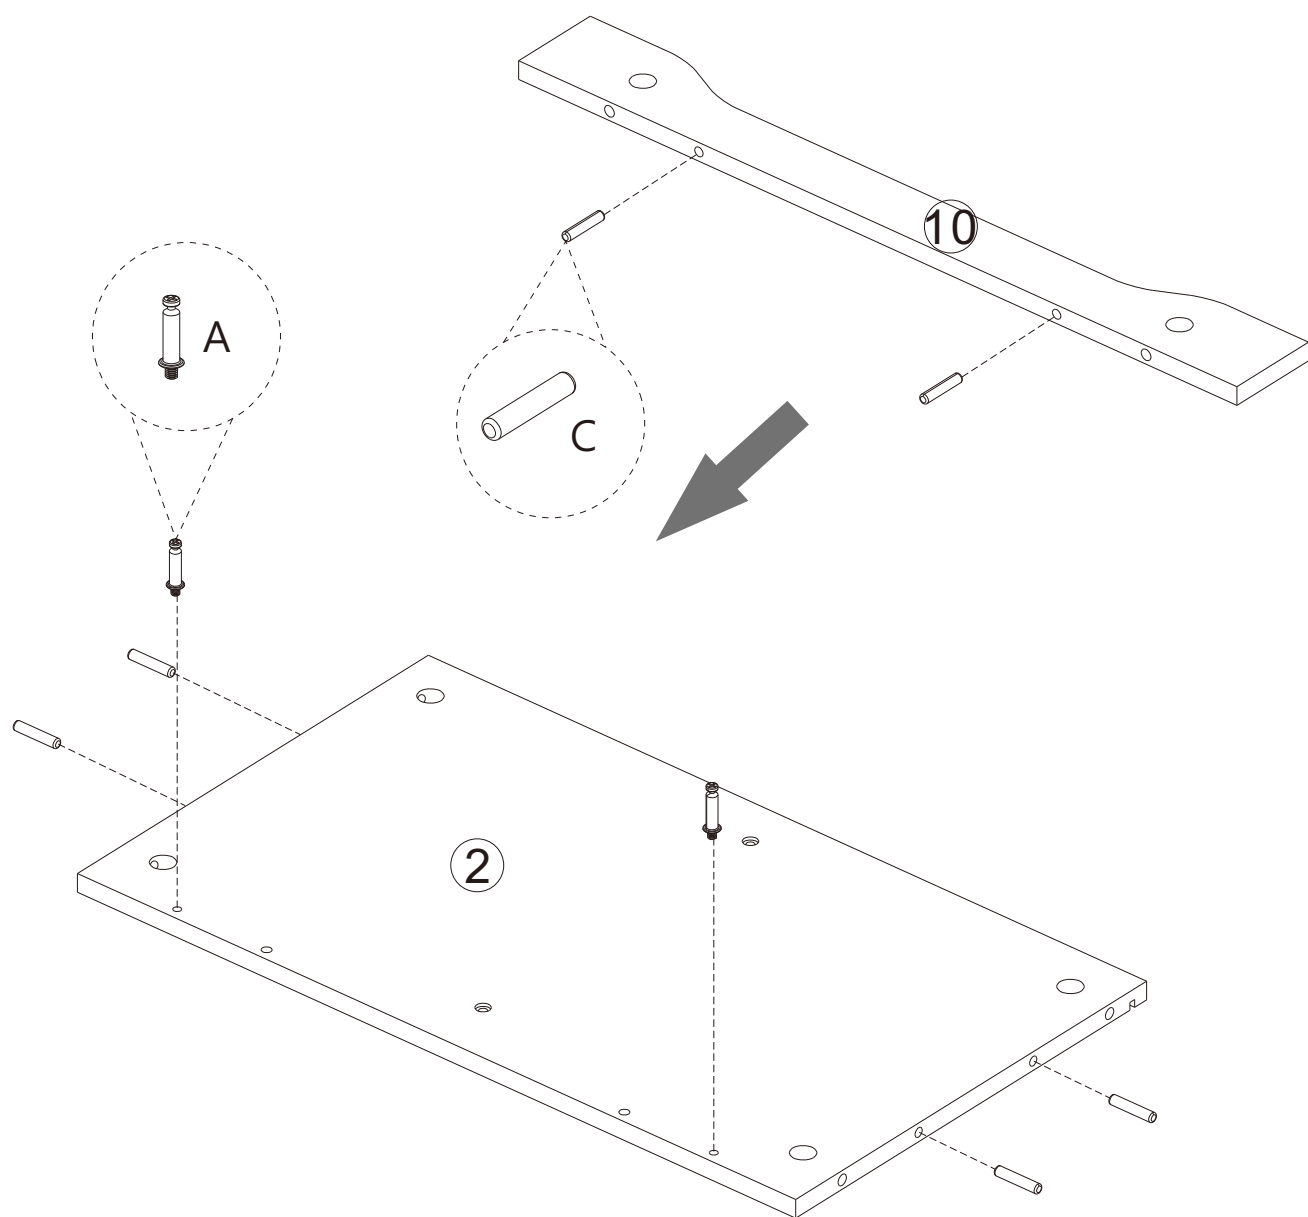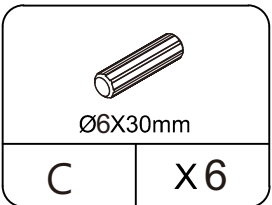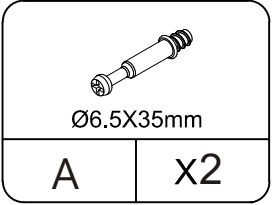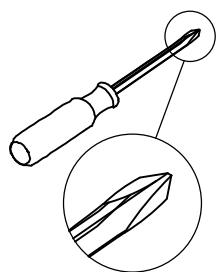

  
 
 
 
STEP4

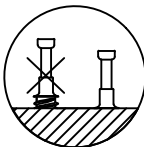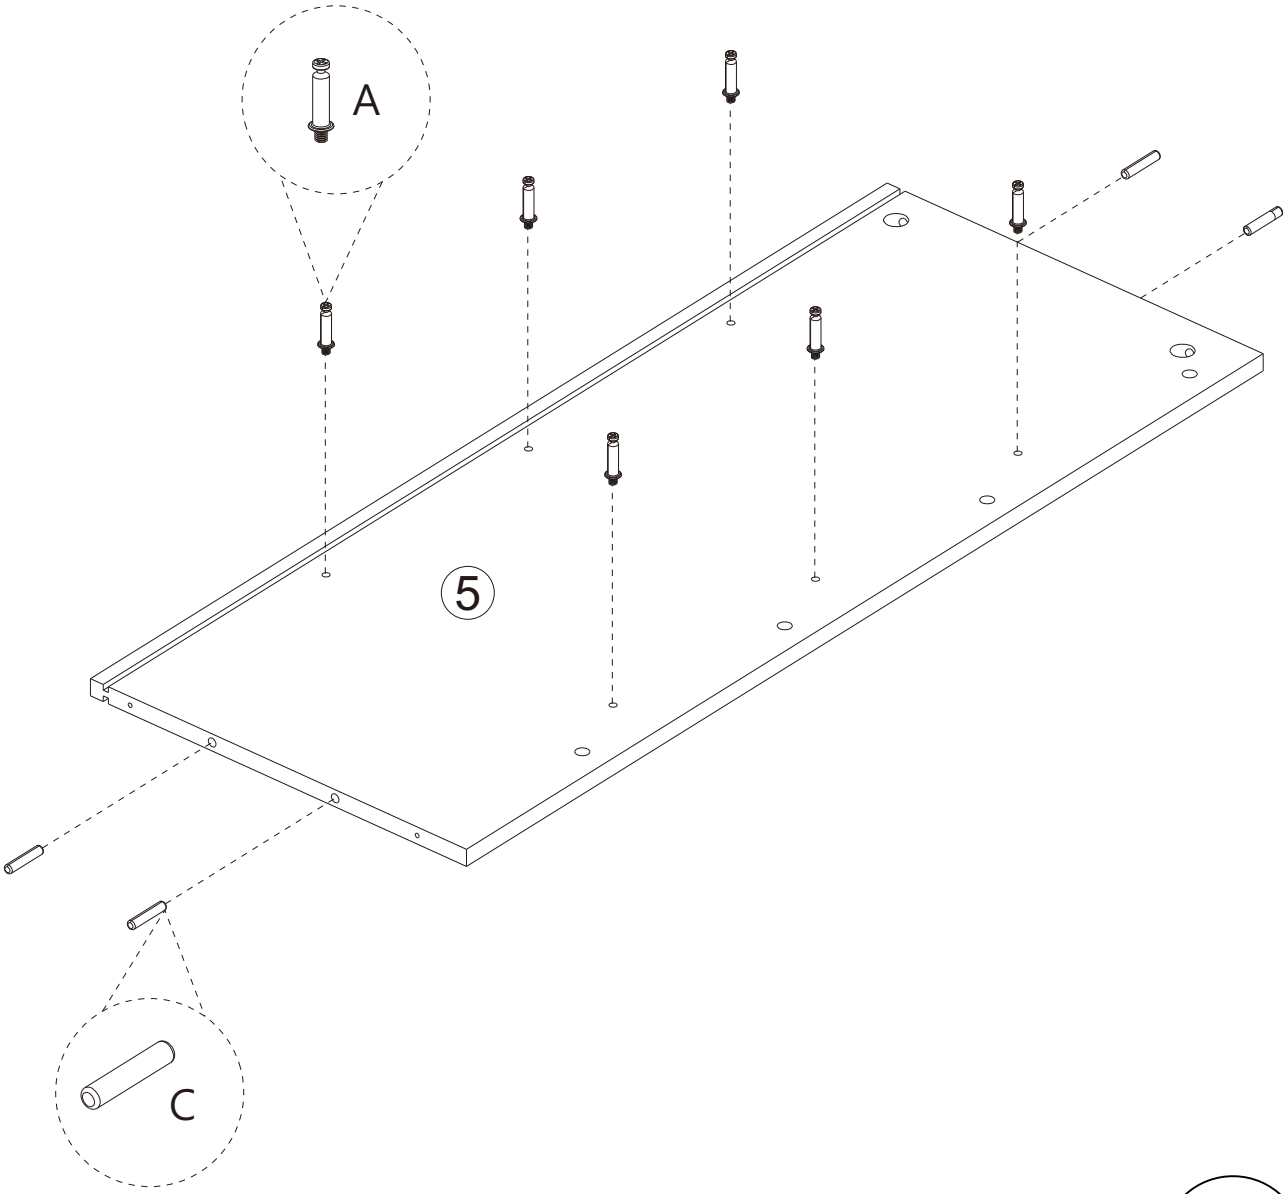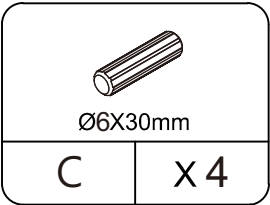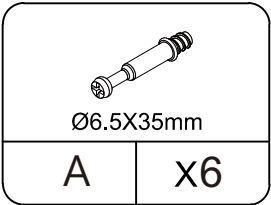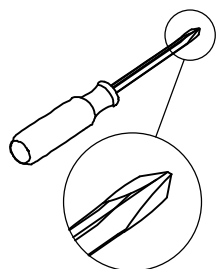




 
 
STEP5

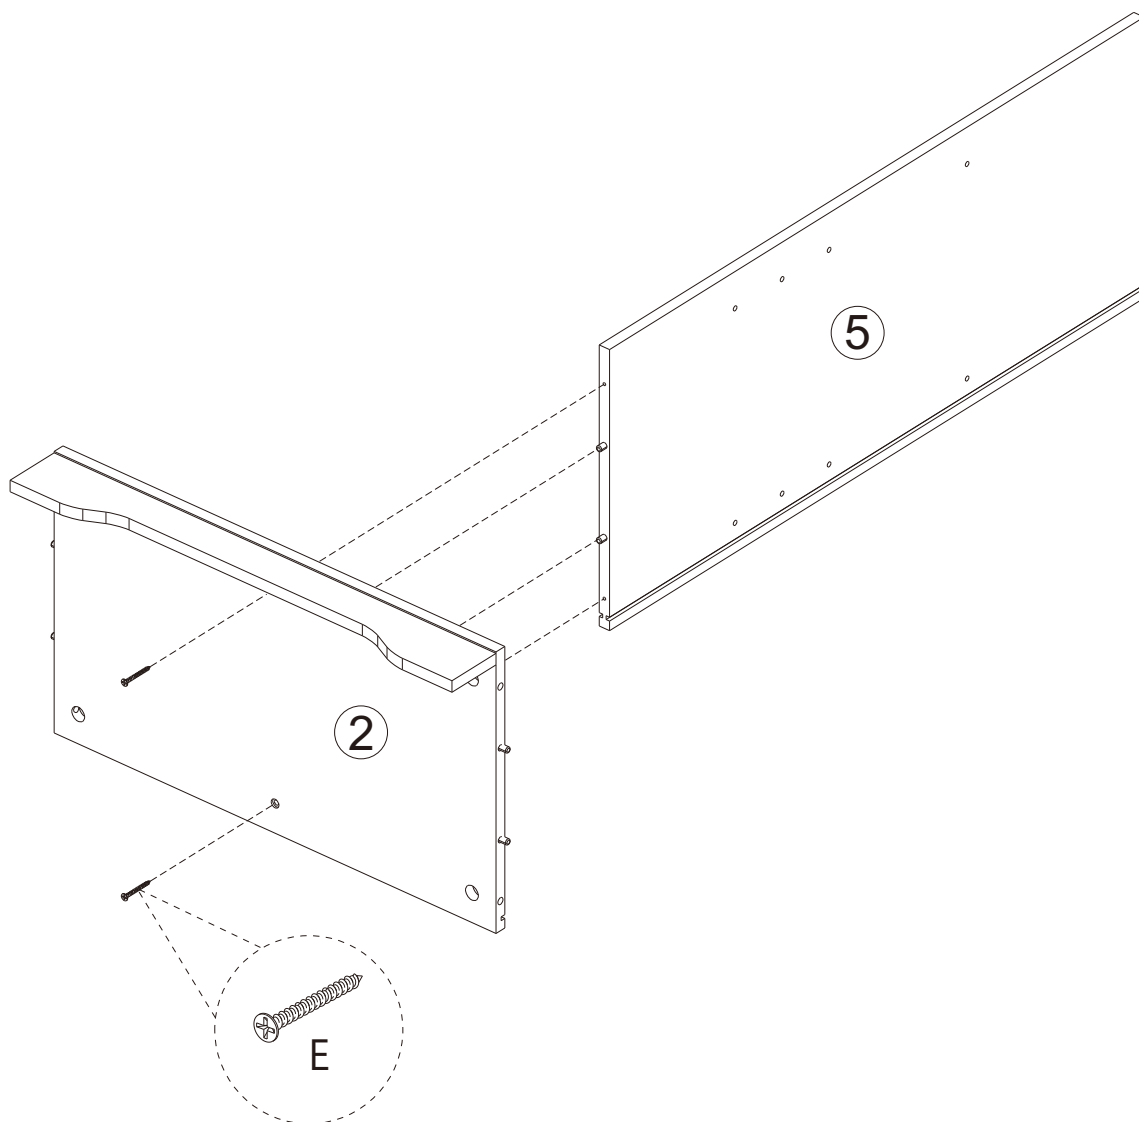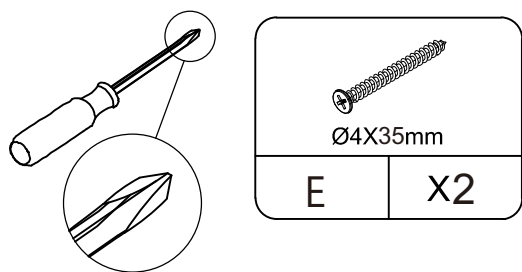


 
 
 
 
STEP6

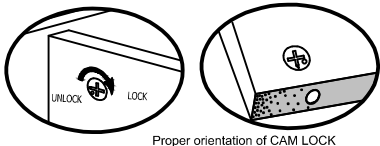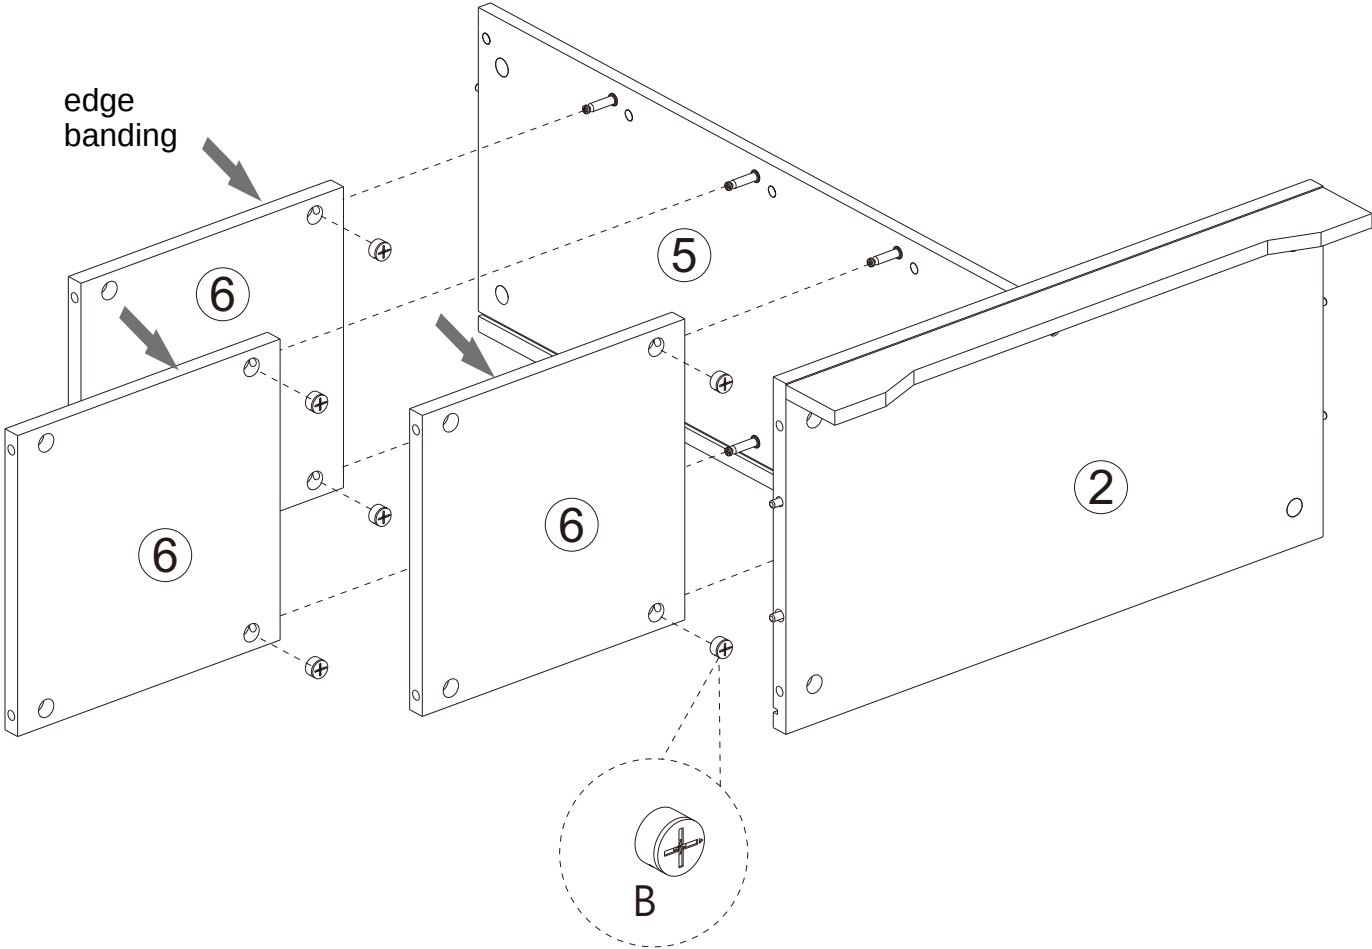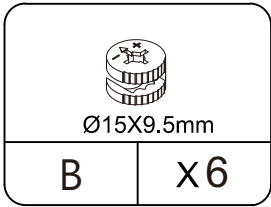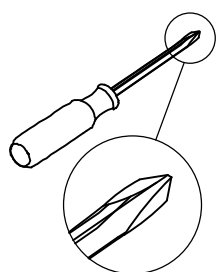

     STEP7

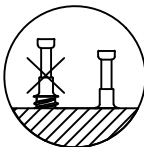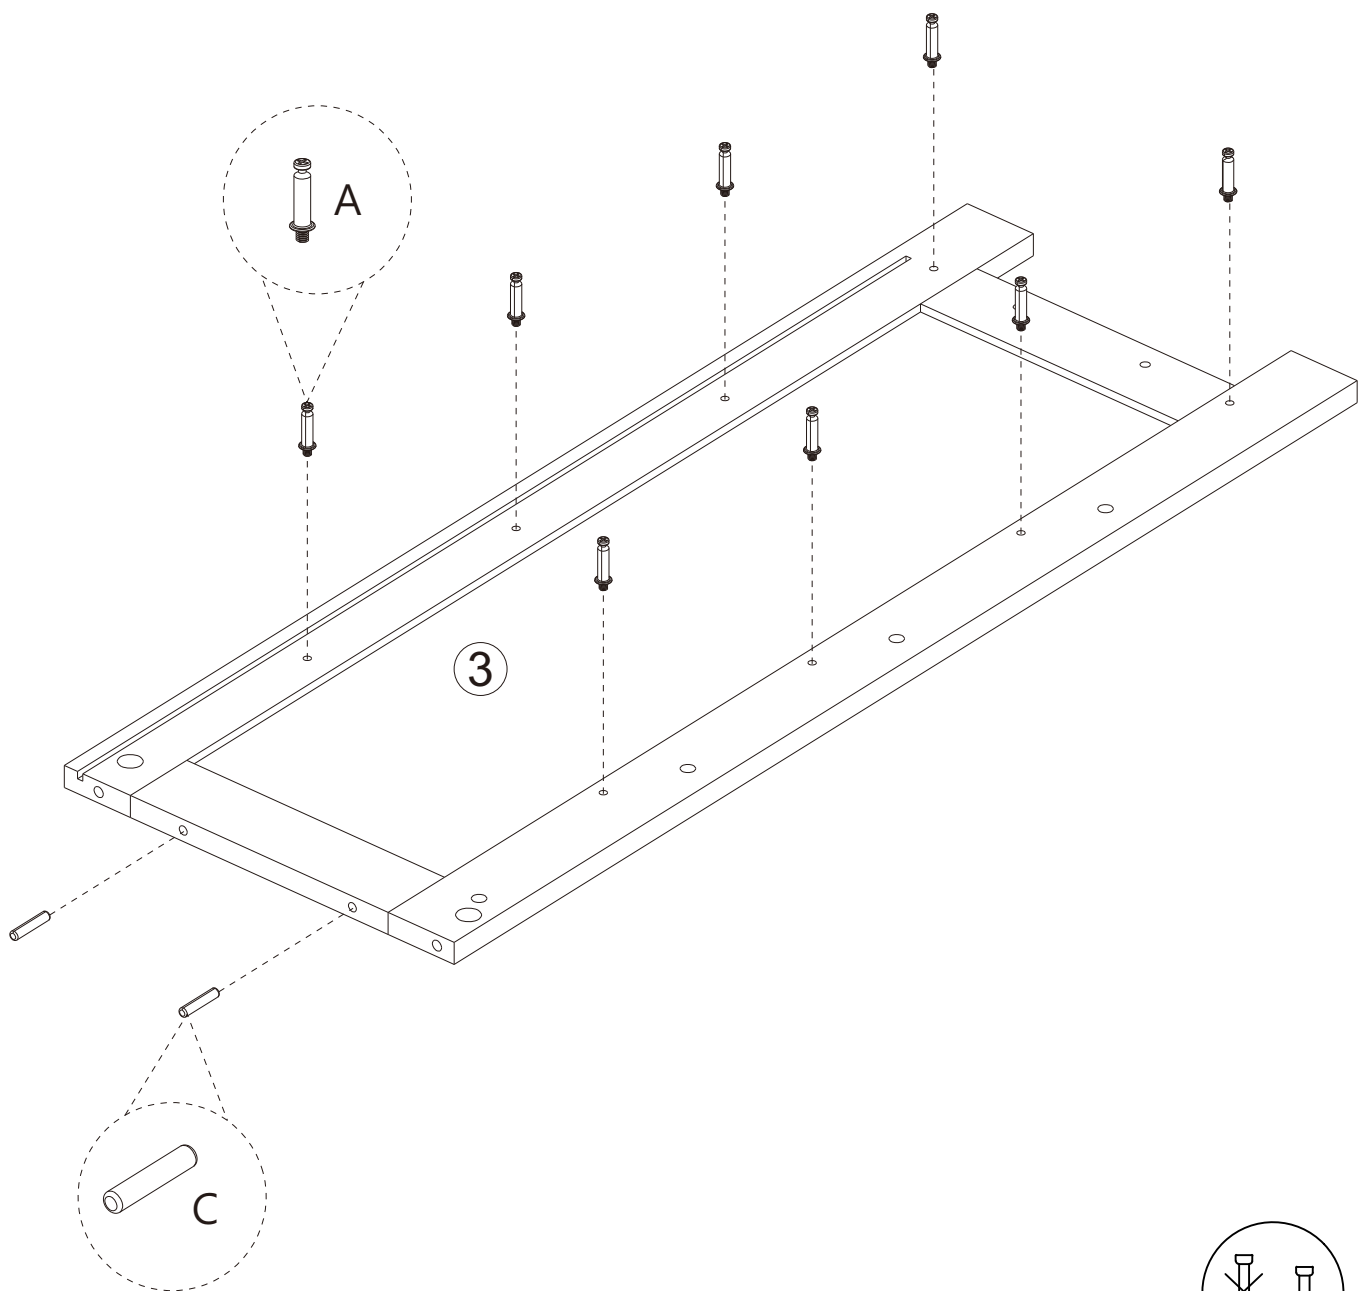
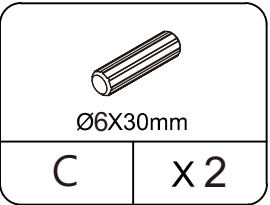
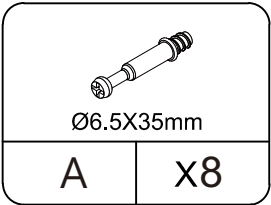
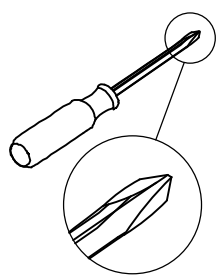


     STEP8

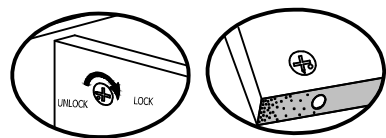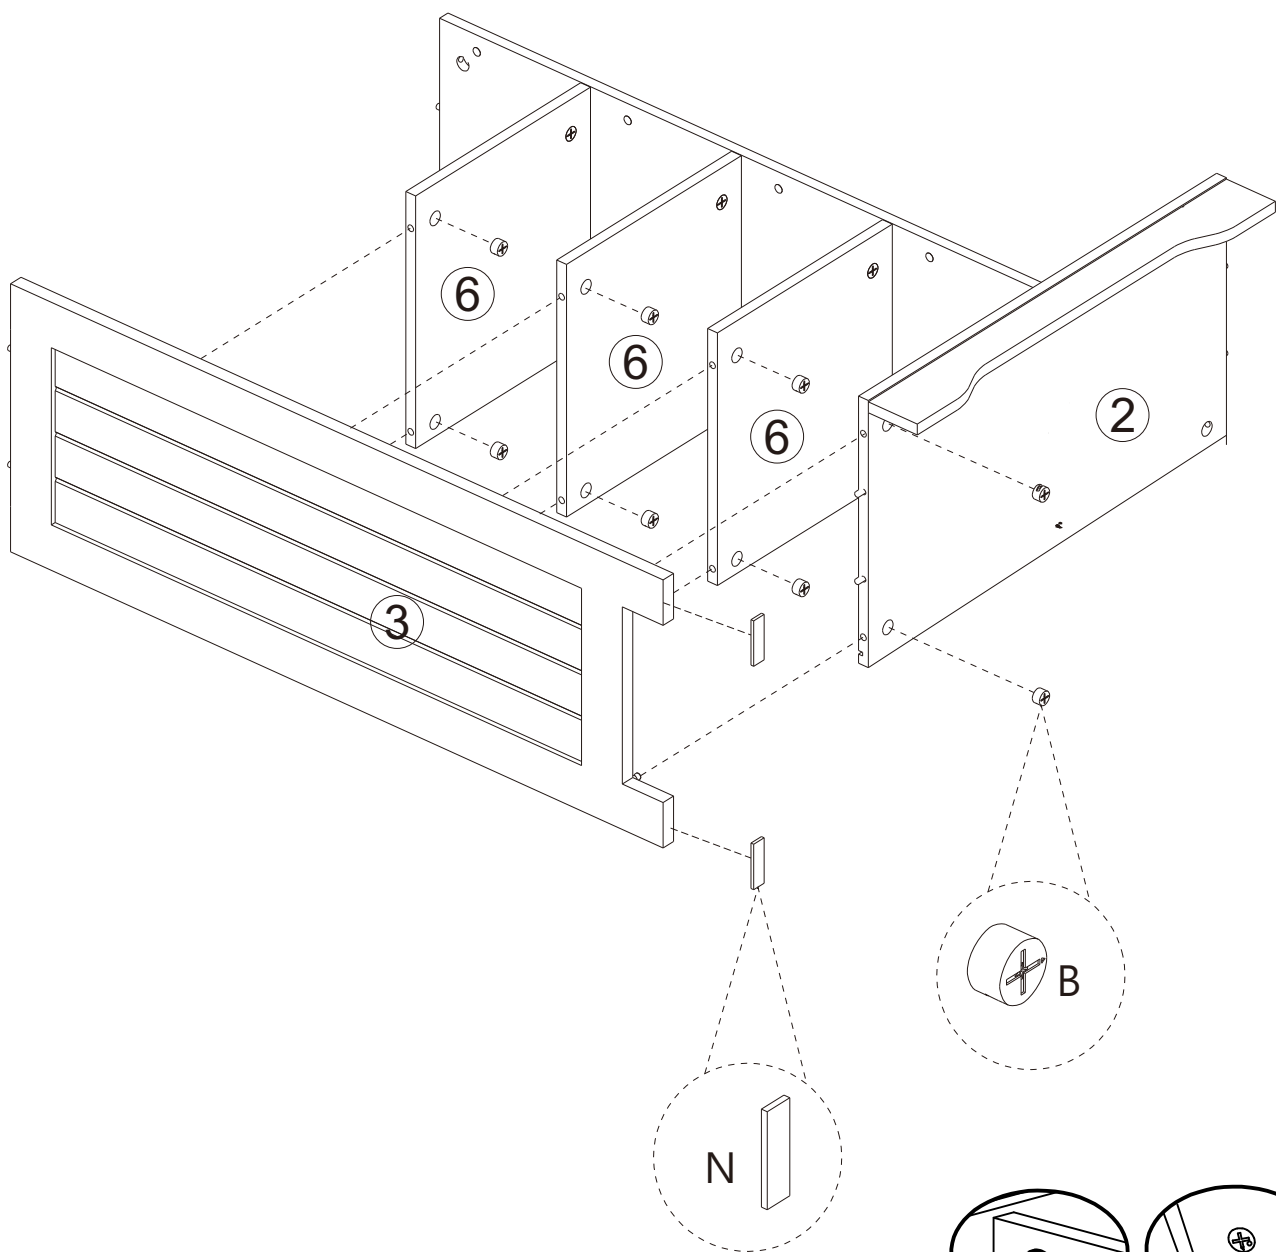
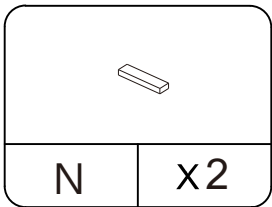
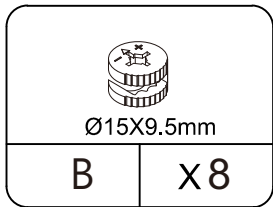
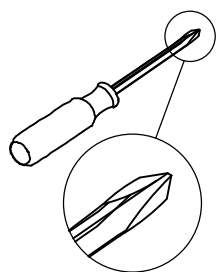


Proper orientation of CAM LOCK


 
 
 
 
STEP9

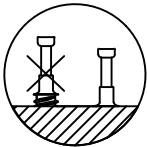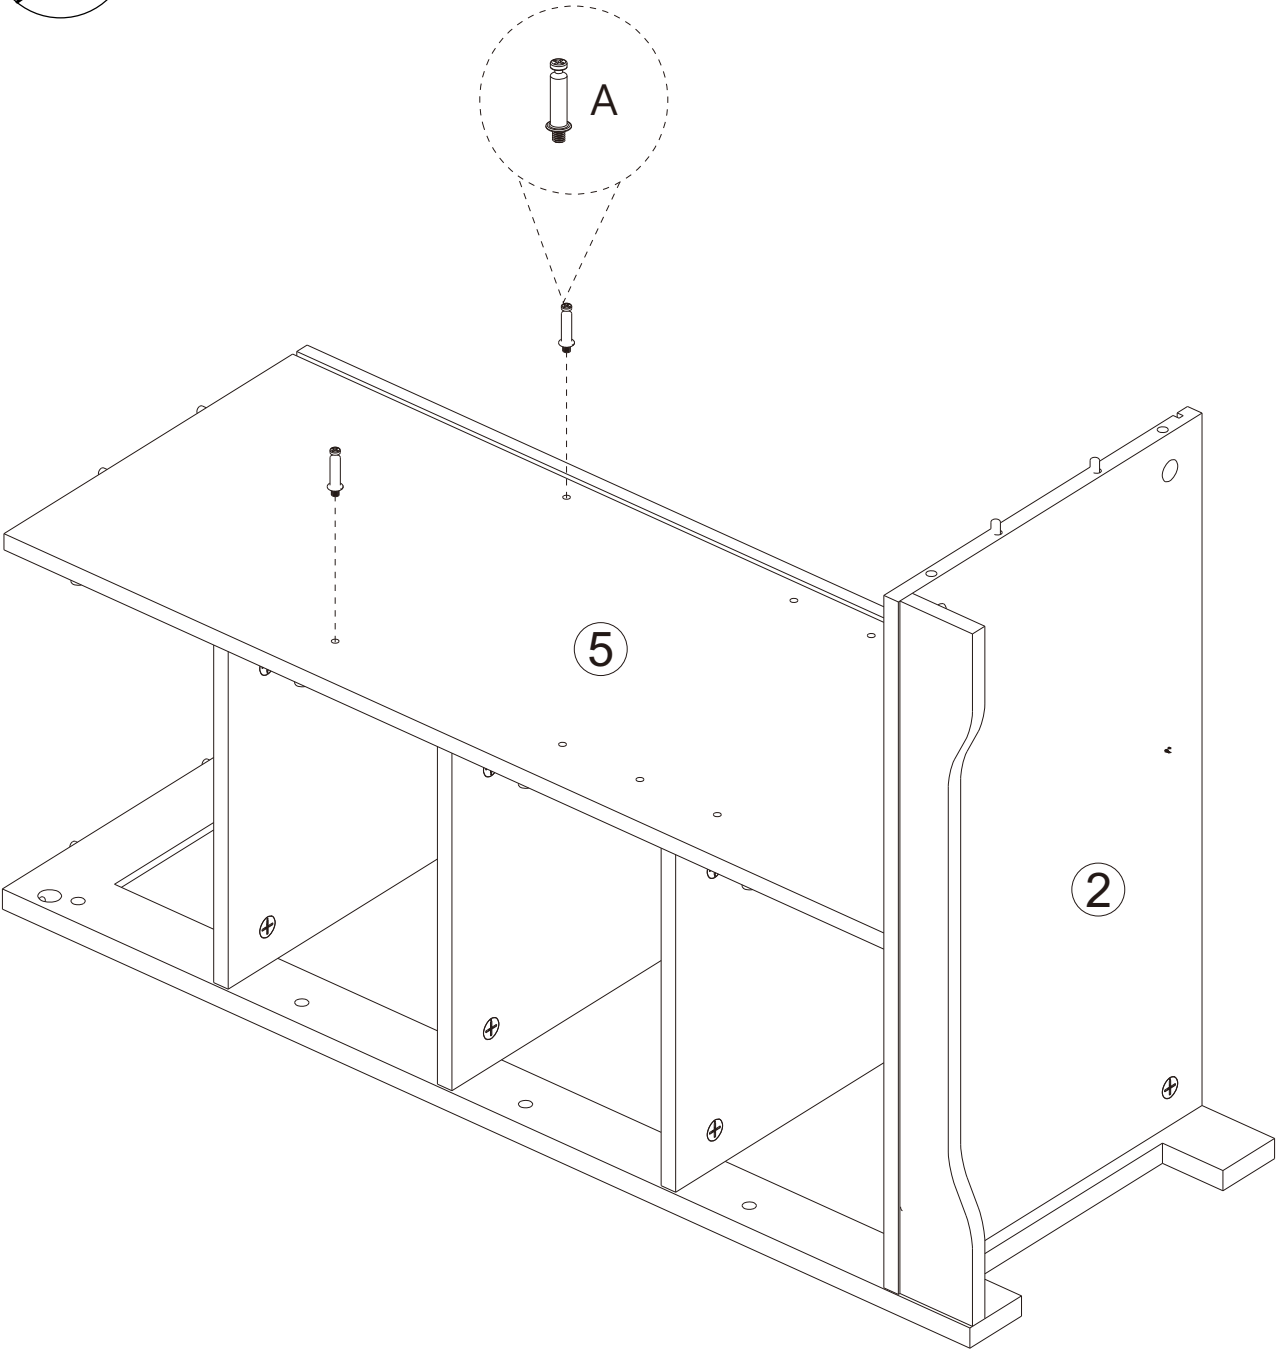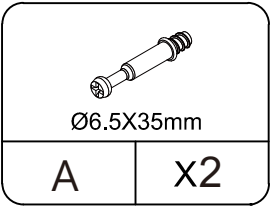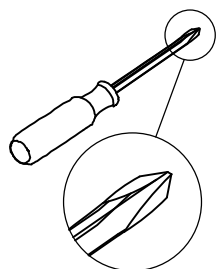


 
 
 
 
STEP10

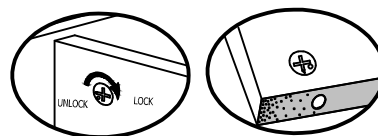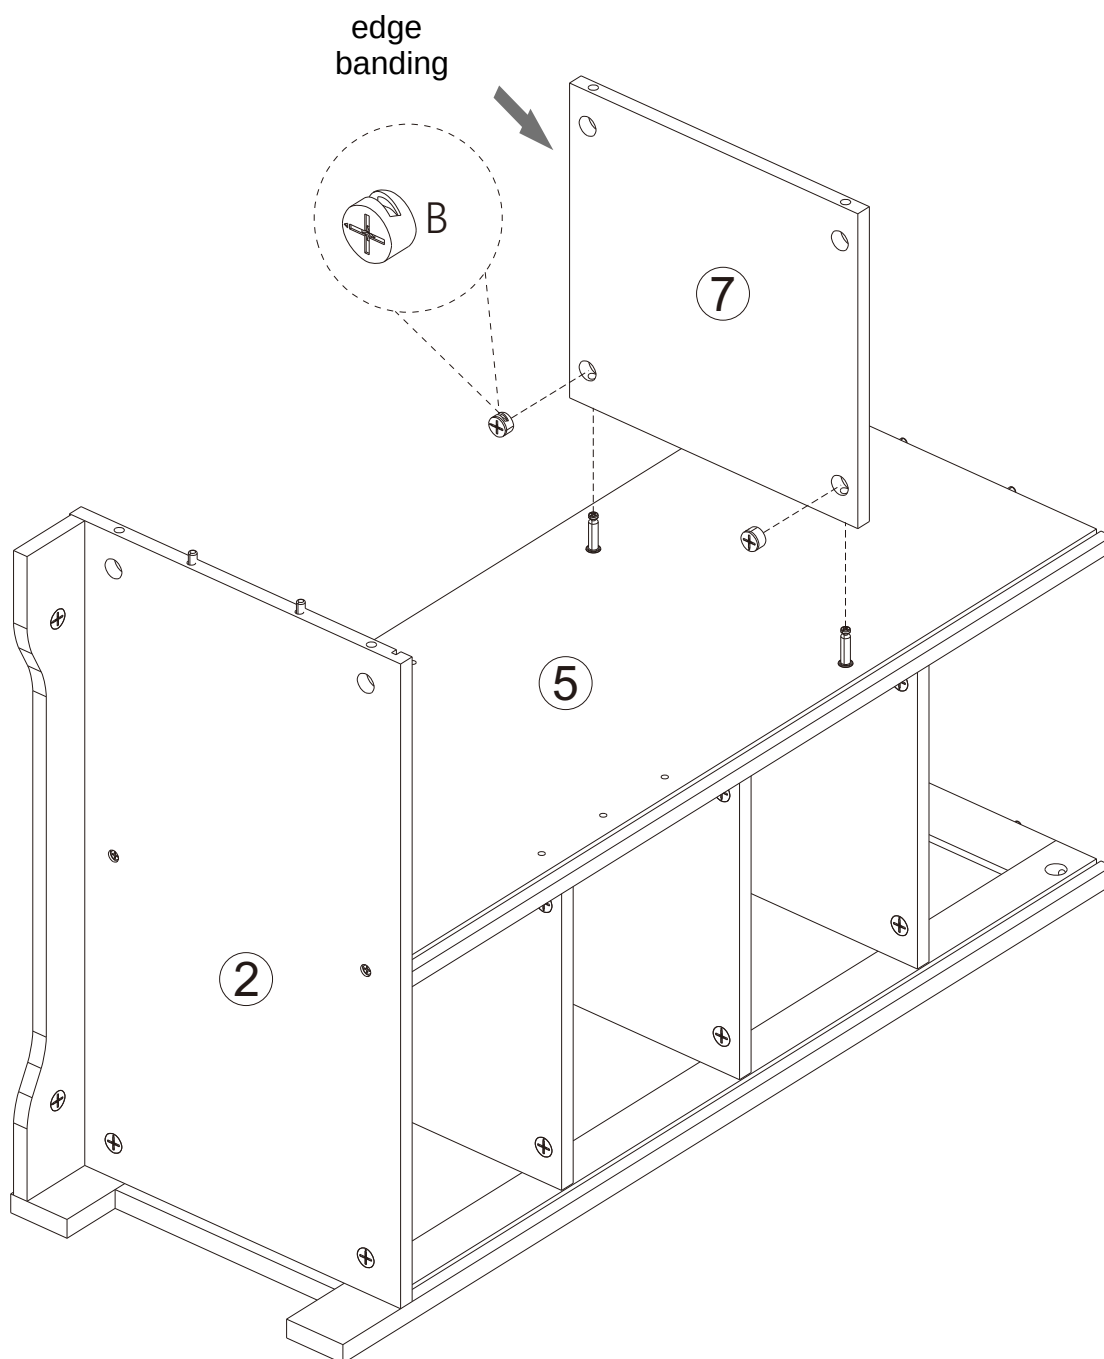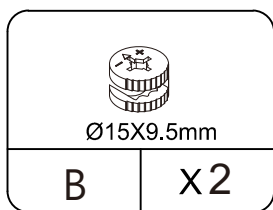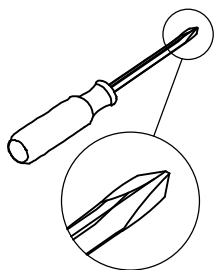

     
STEP11

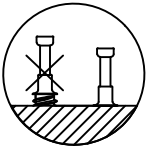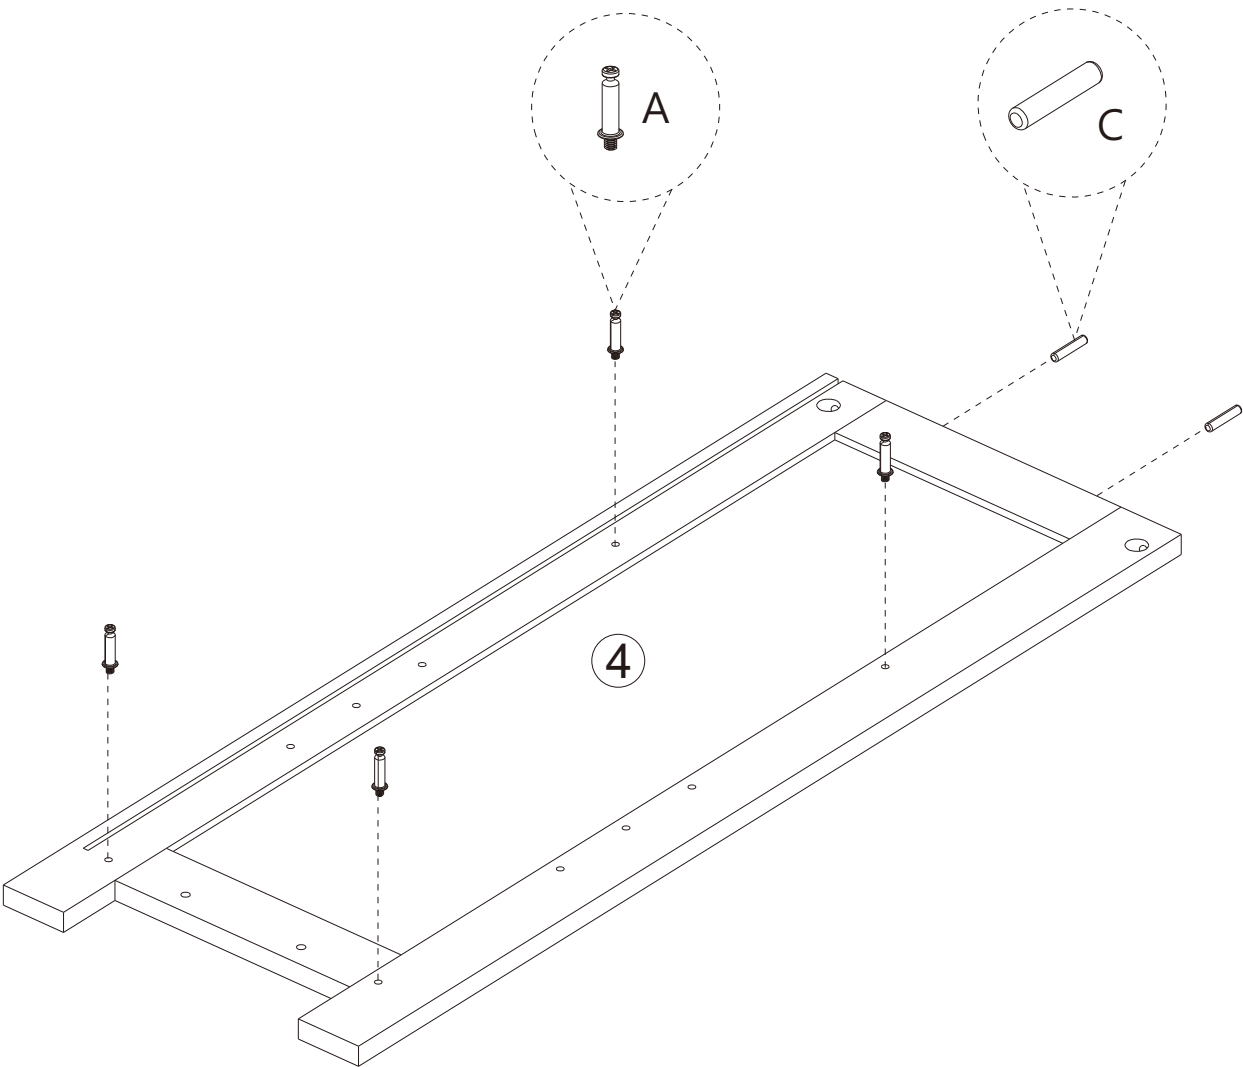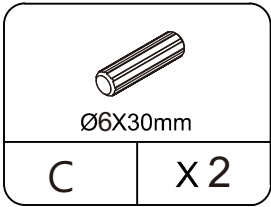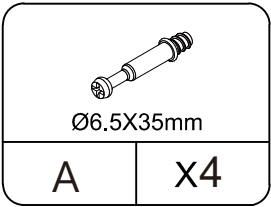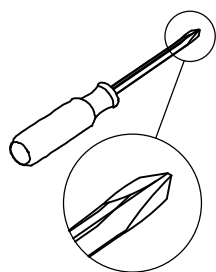

 
 
 
 
 
STEP12

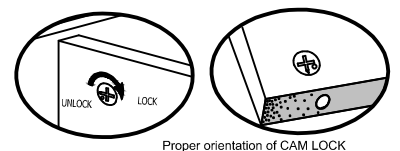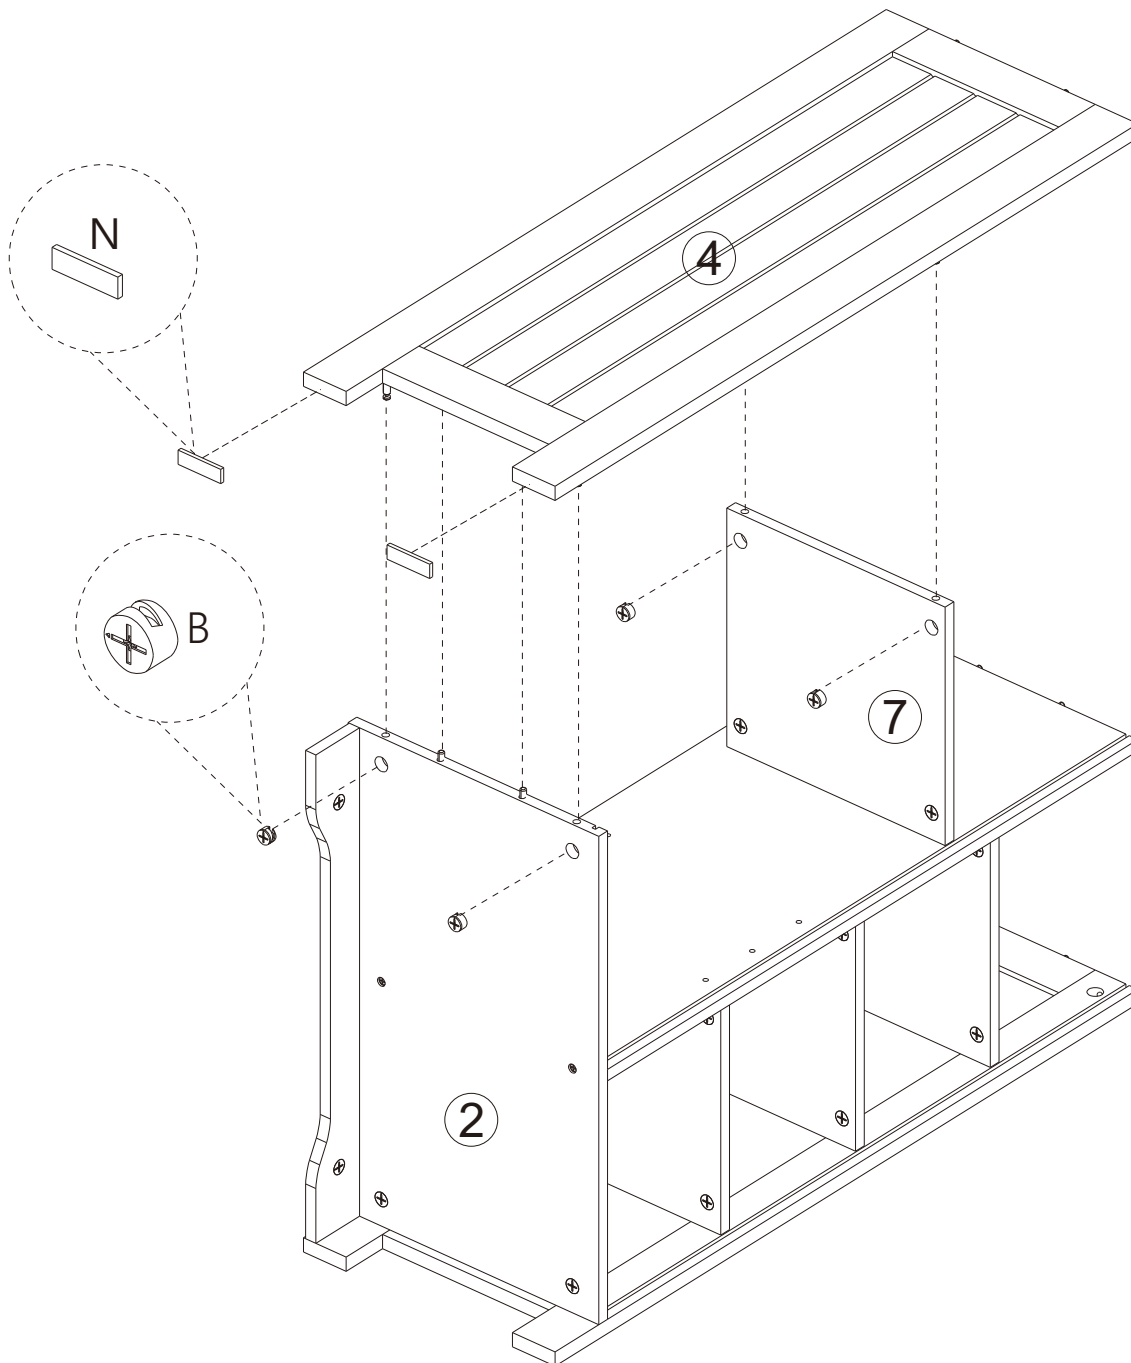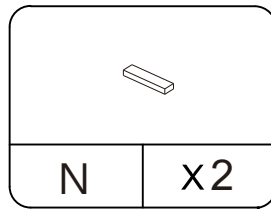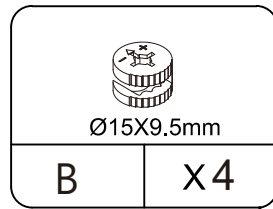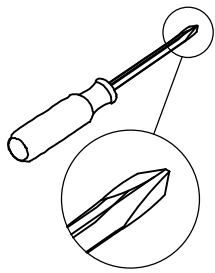





 
STEP13

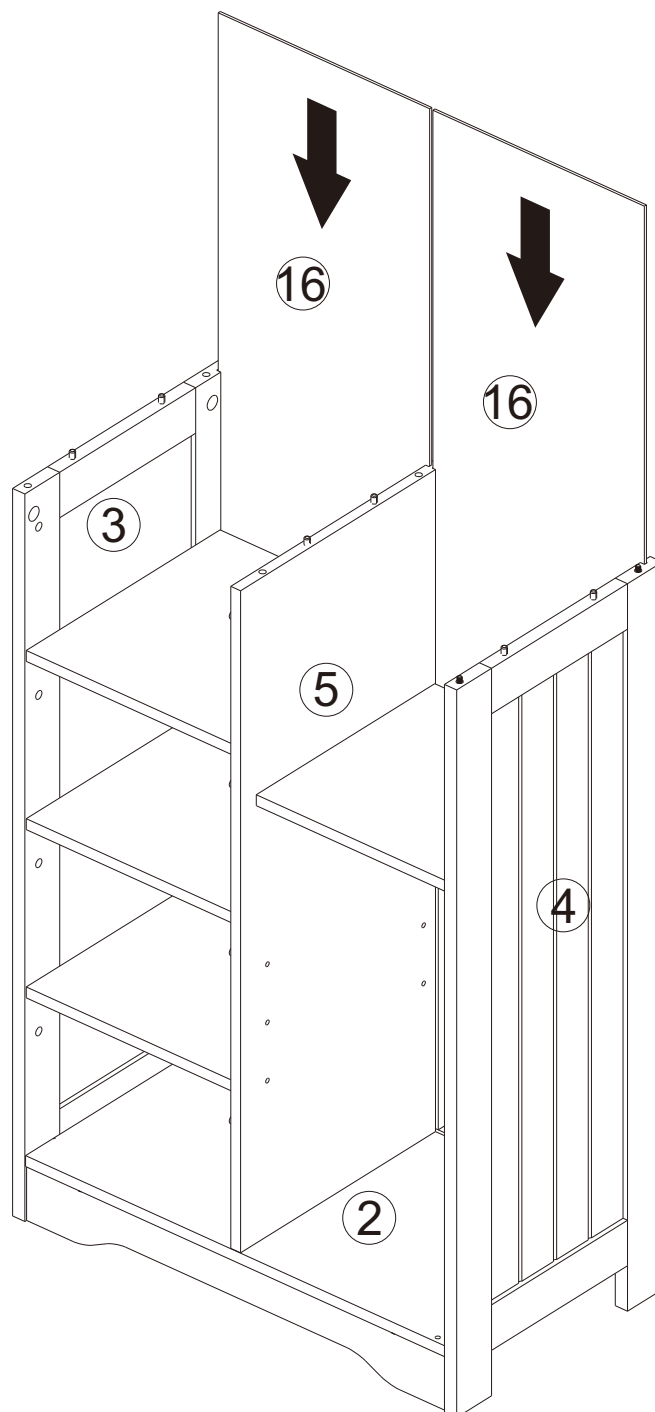

     STEP14

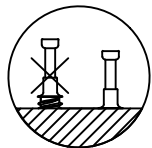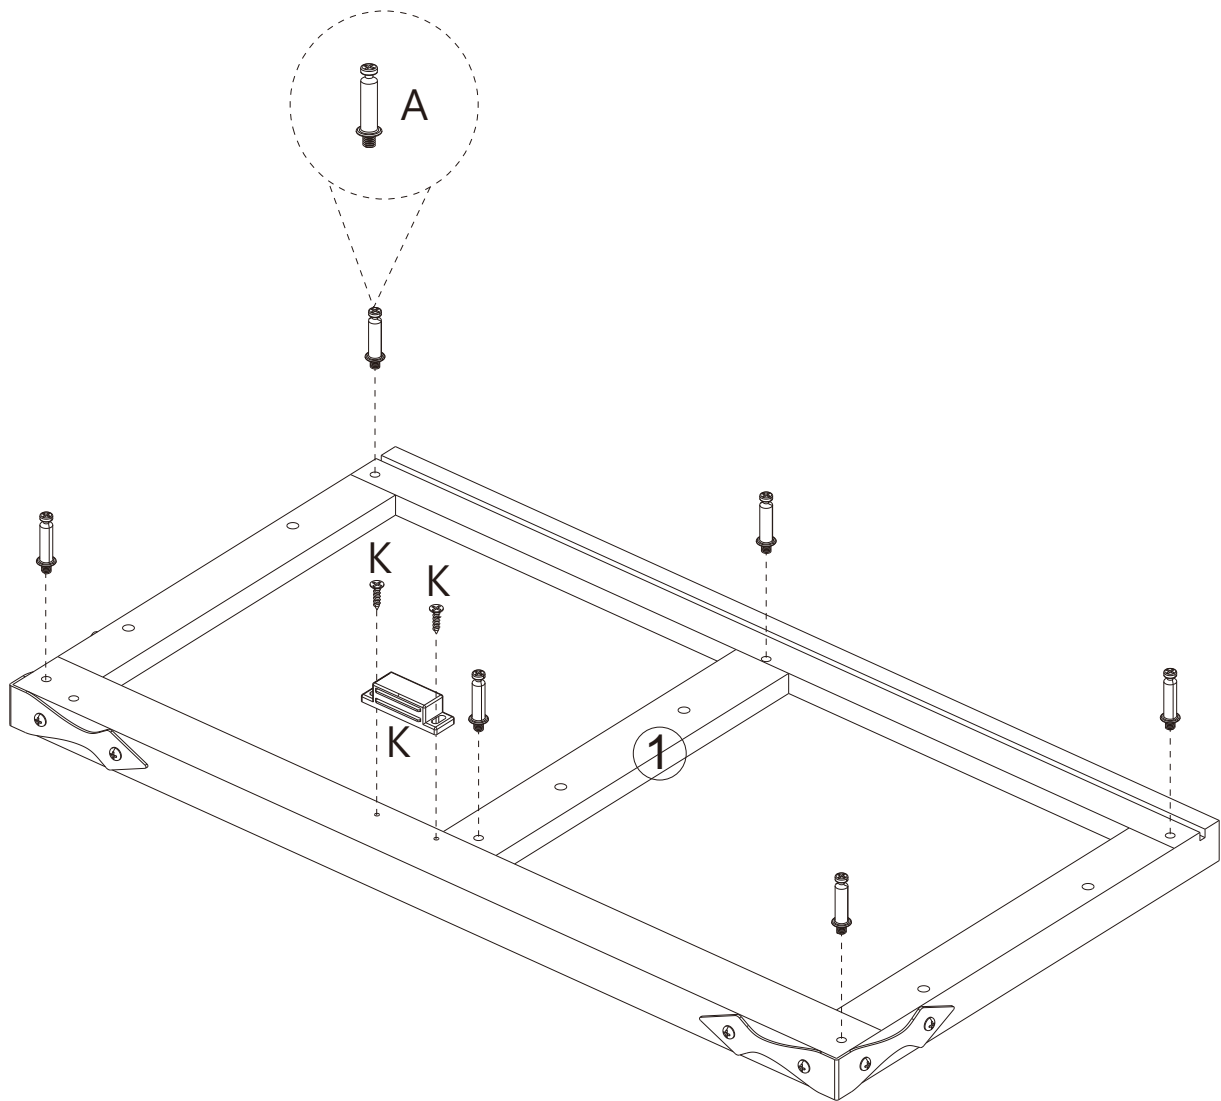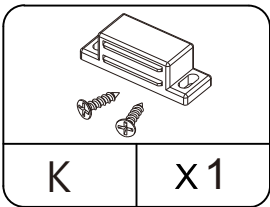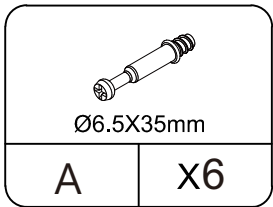
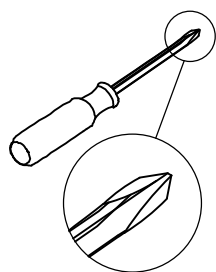


     STEP15

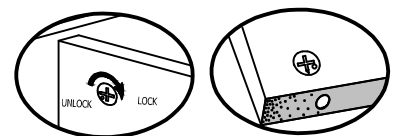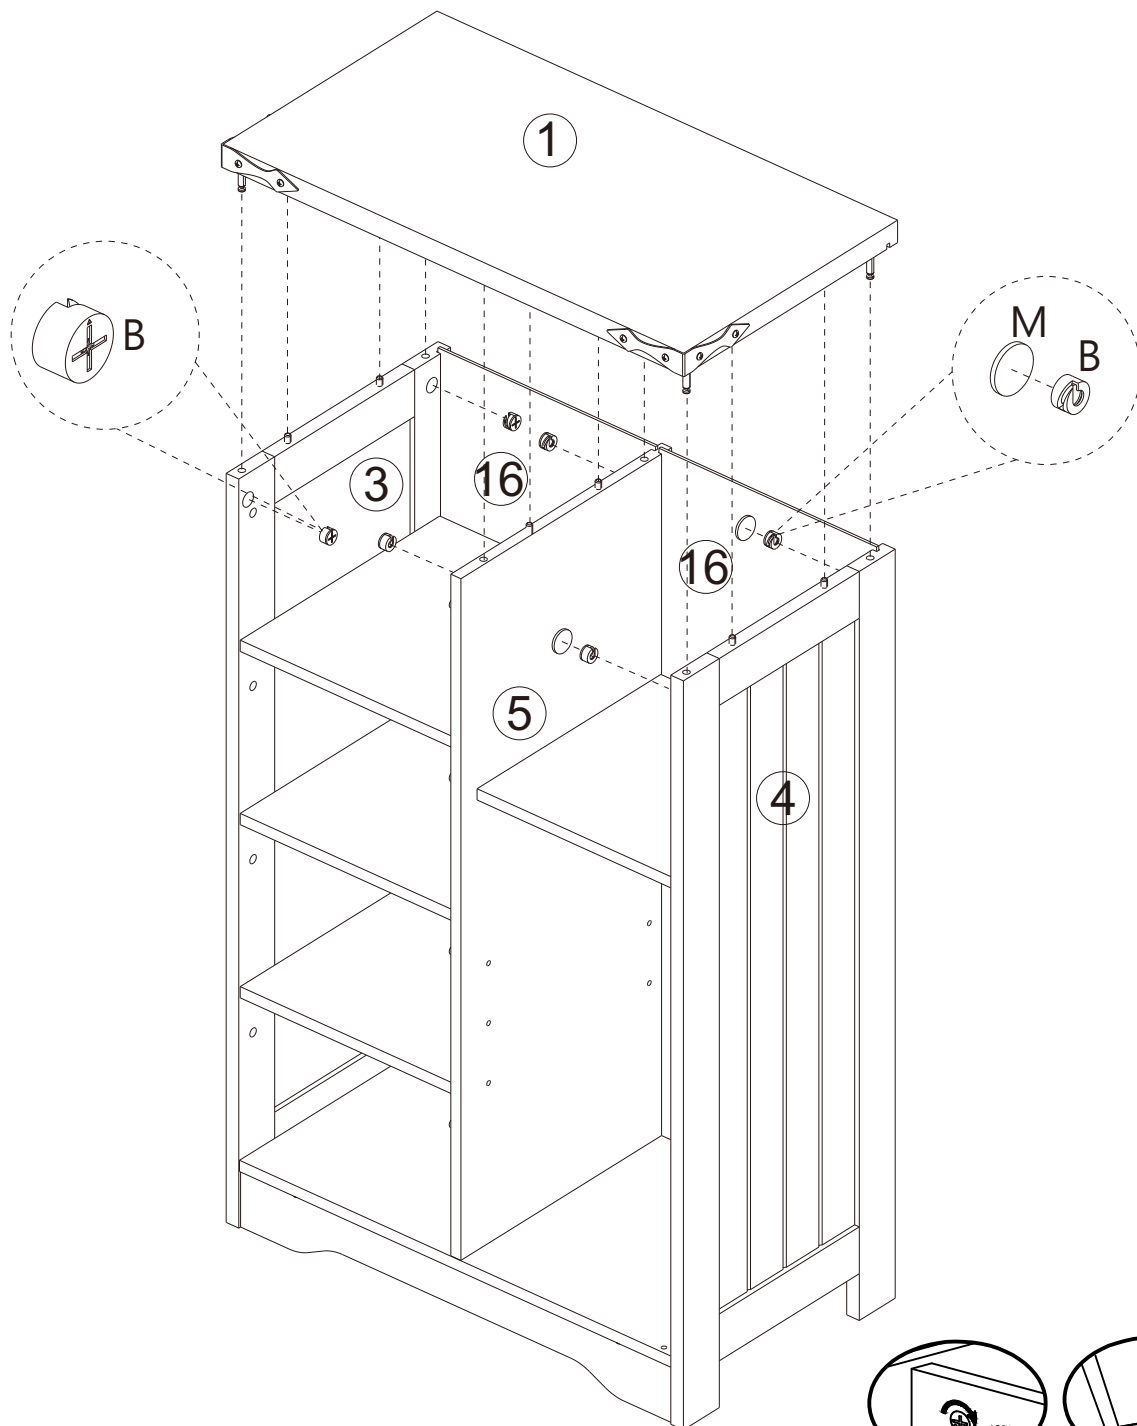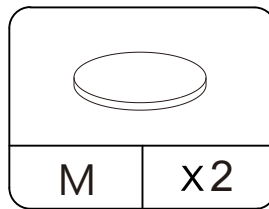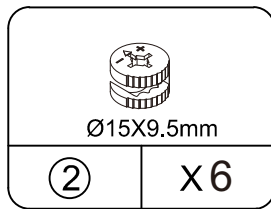
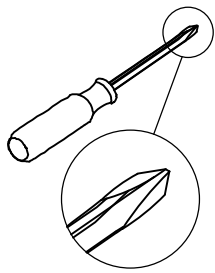


Proper orientation of CAM LOCK





 
 
STEP16

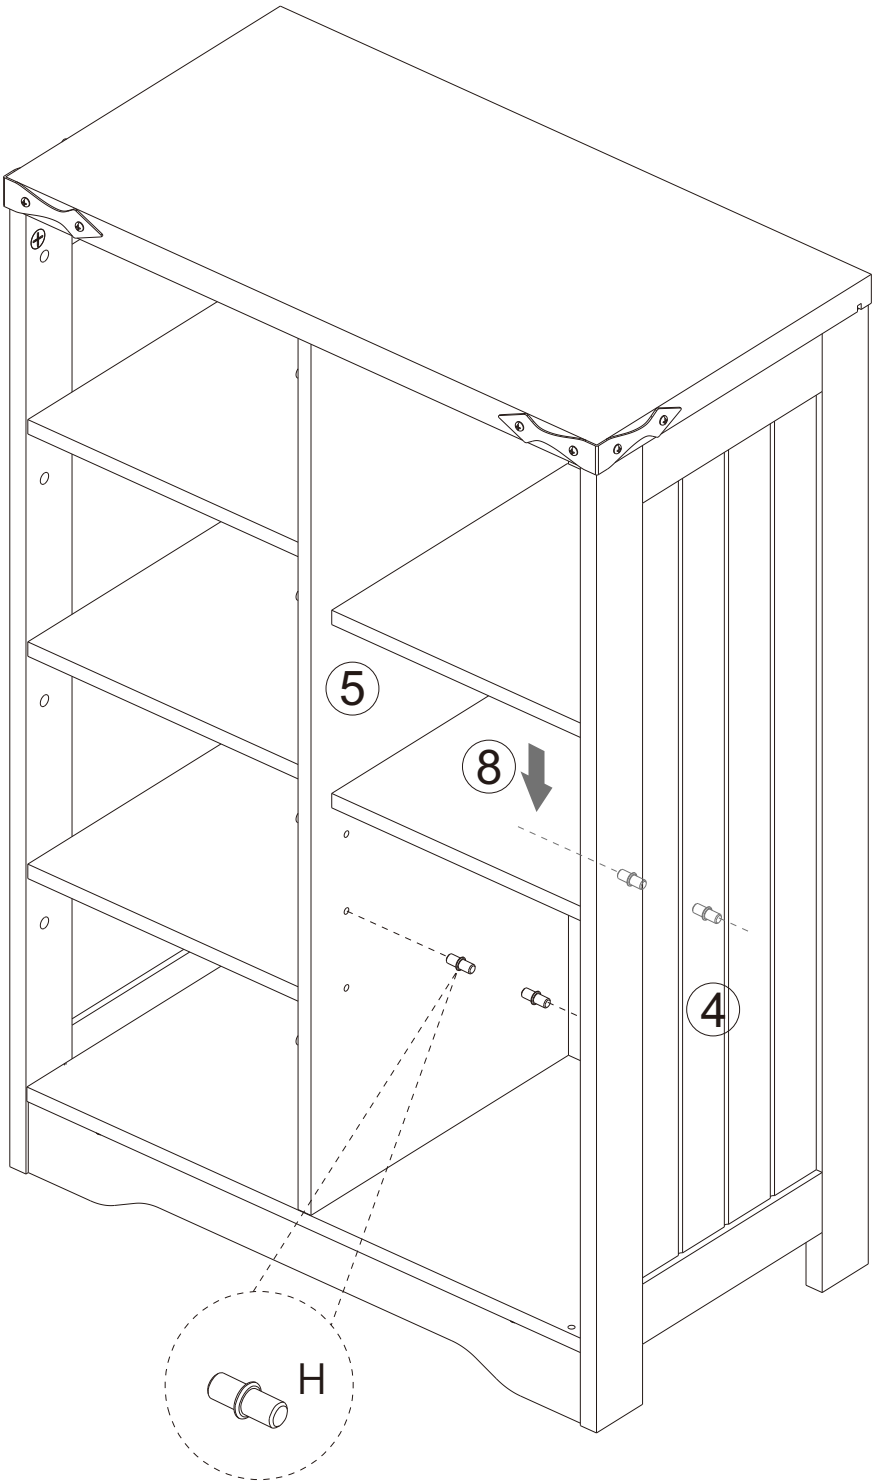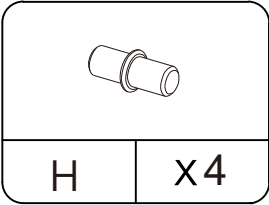

  
STEP17

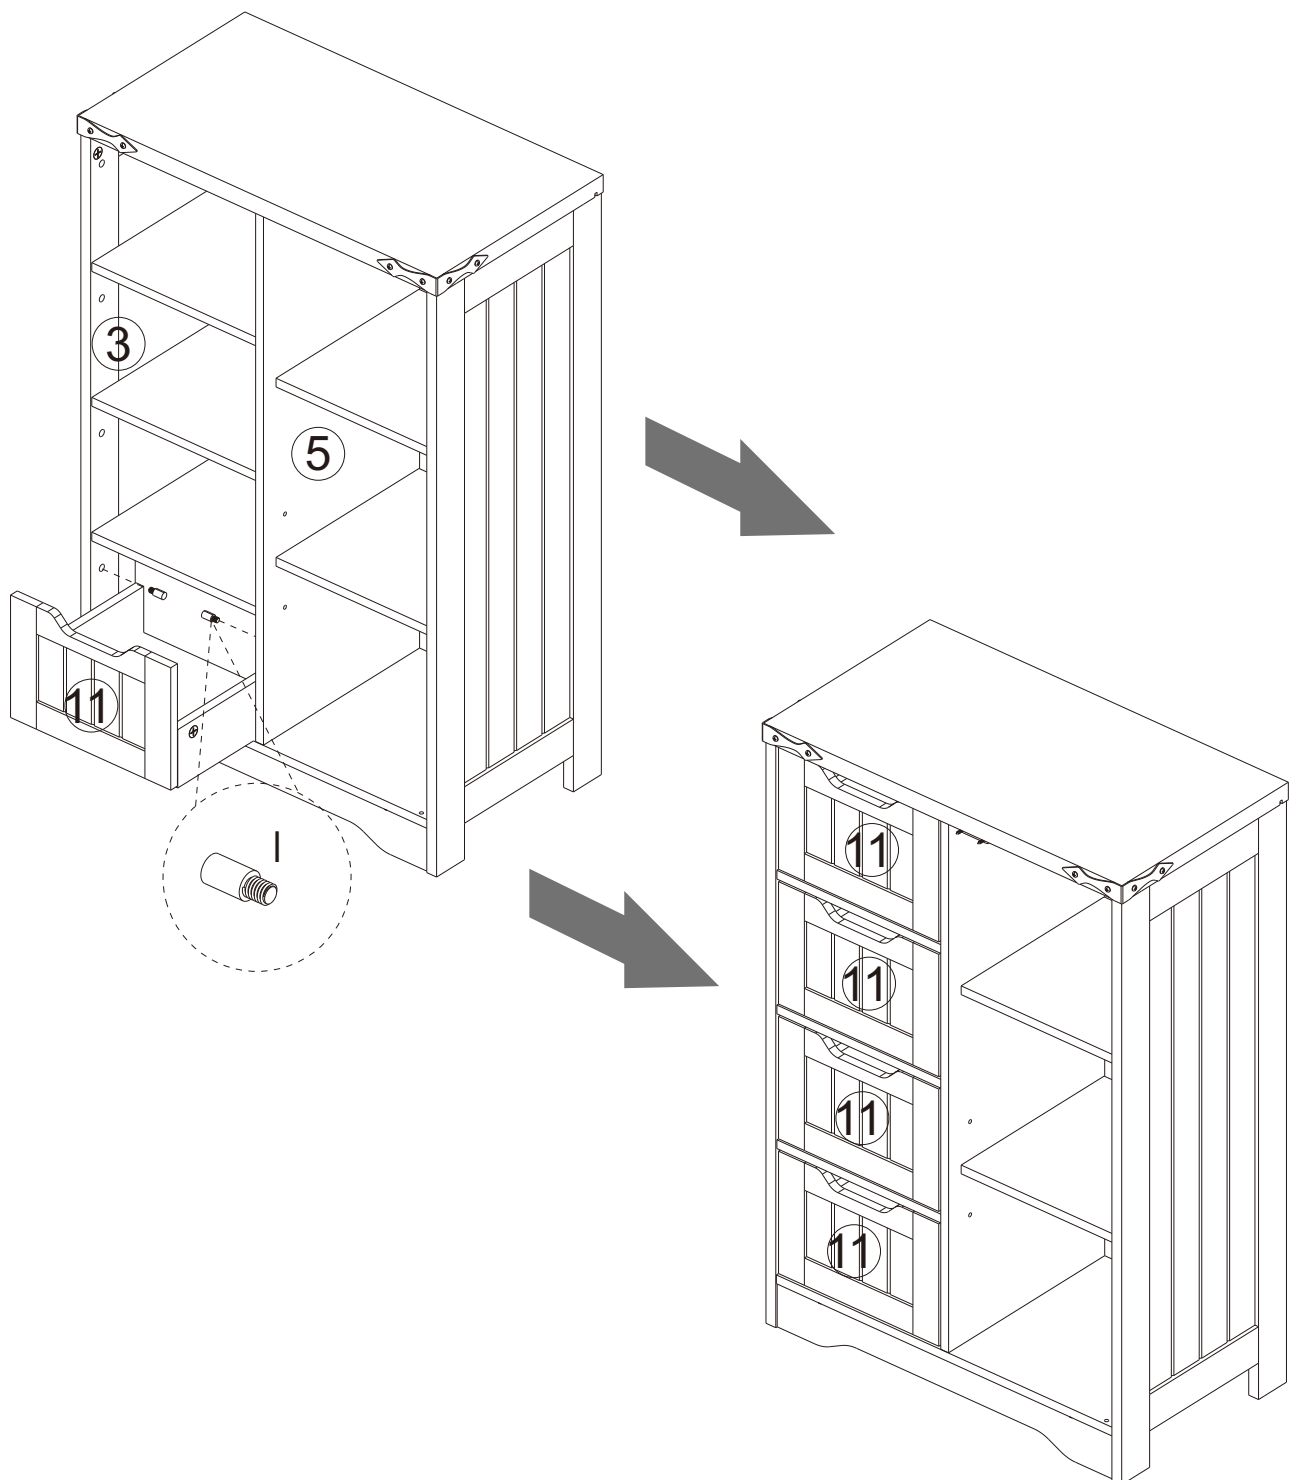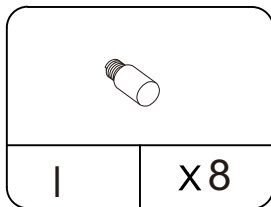

   
 
 
 
STEP18

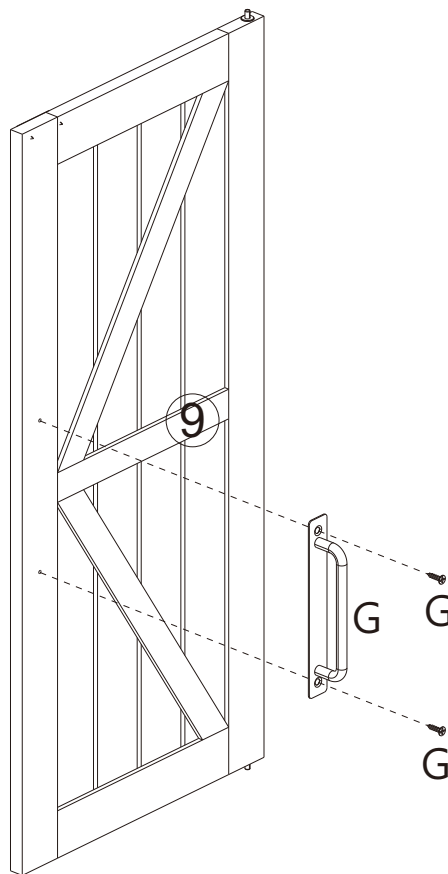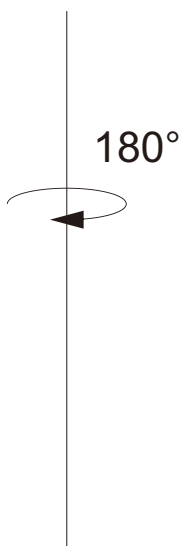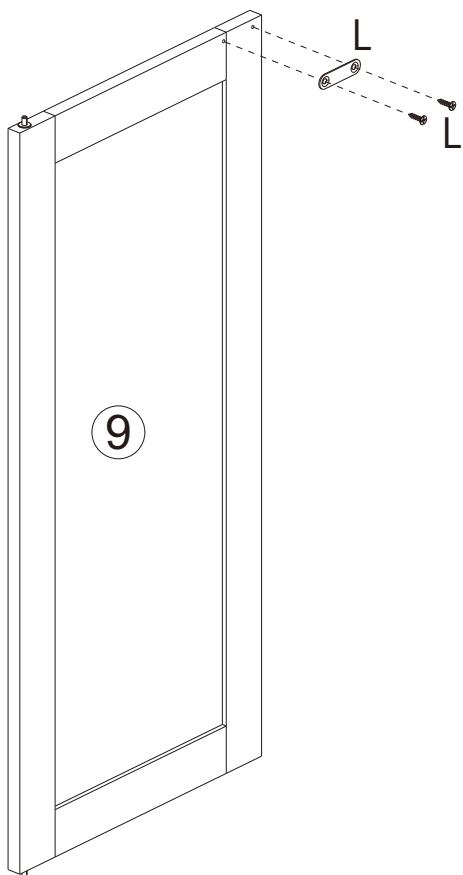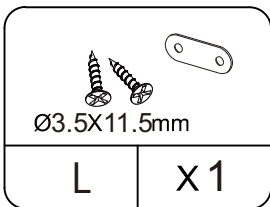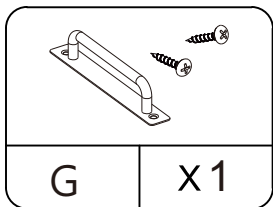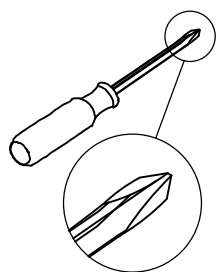


 
STEP19

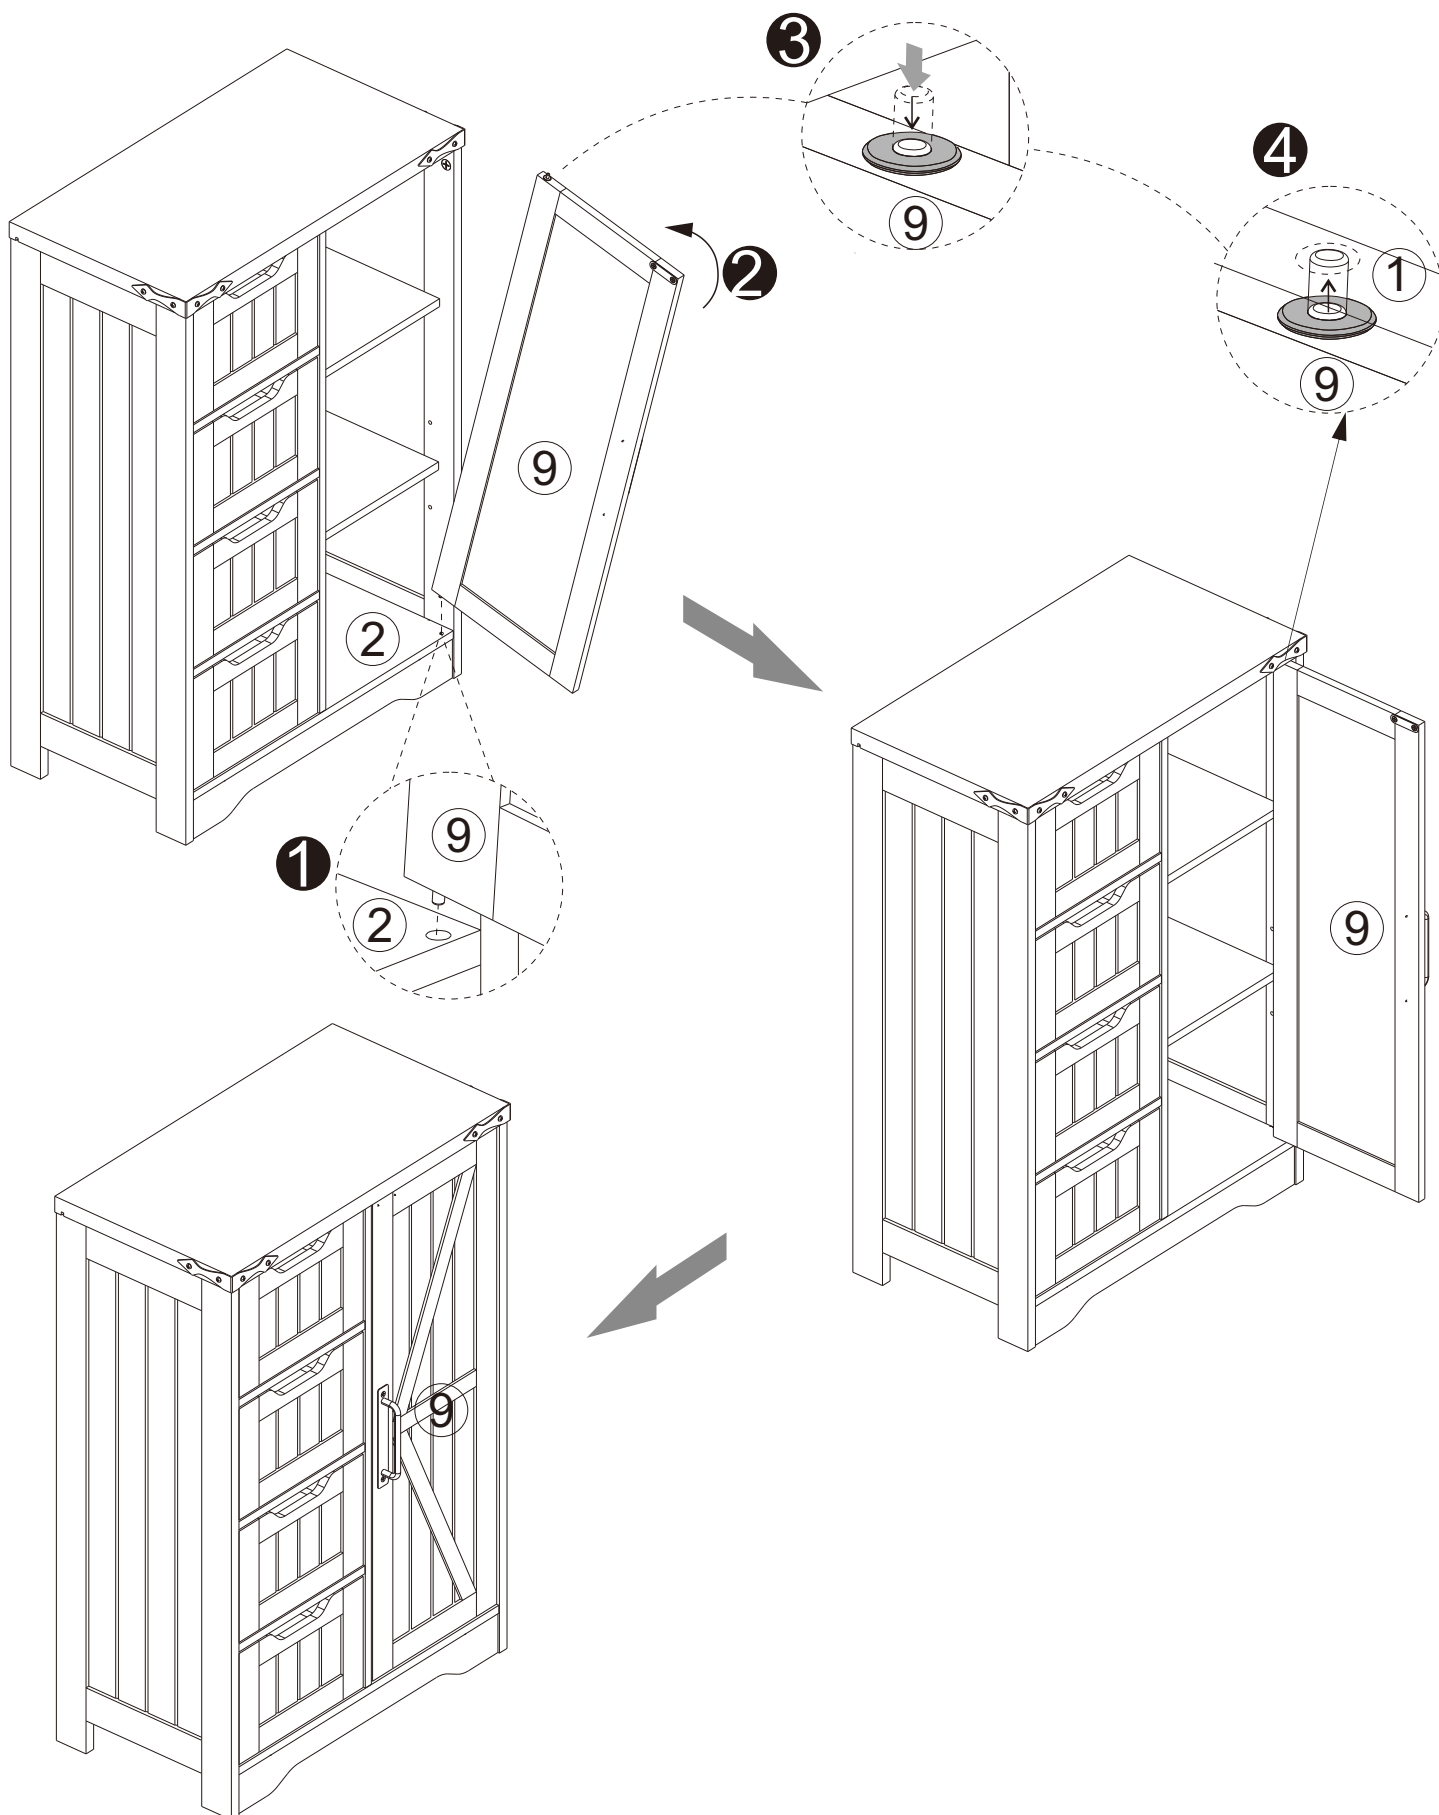

    STEP20

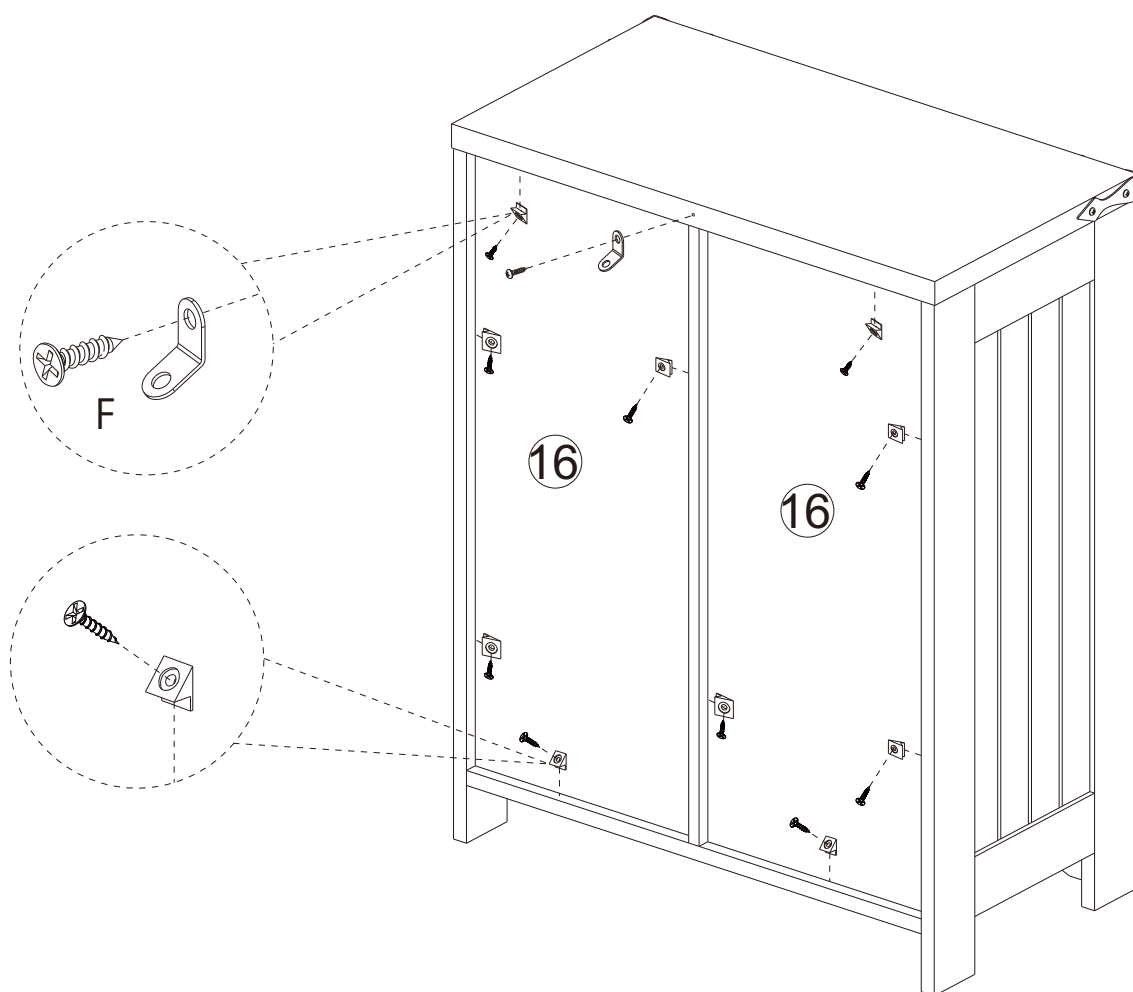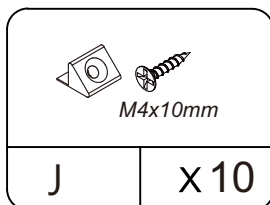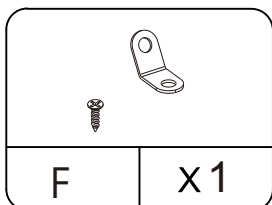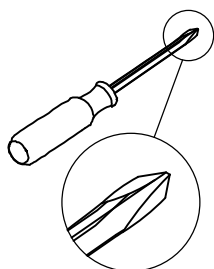

  STEP21

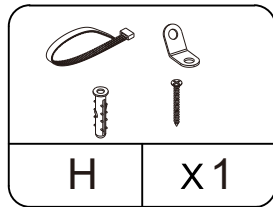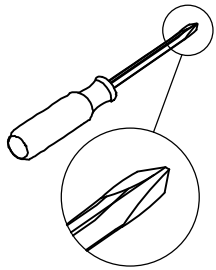


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.

NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.




Install the tipping restraint hardware

 1

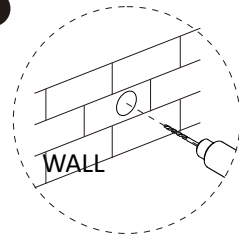


Drill a hole in the wall

 2

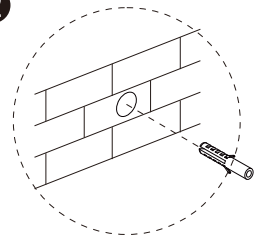


Put anchor in the hole

 
3

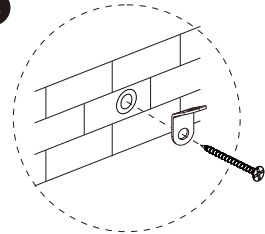

 Fix the device on the wall by the long screw

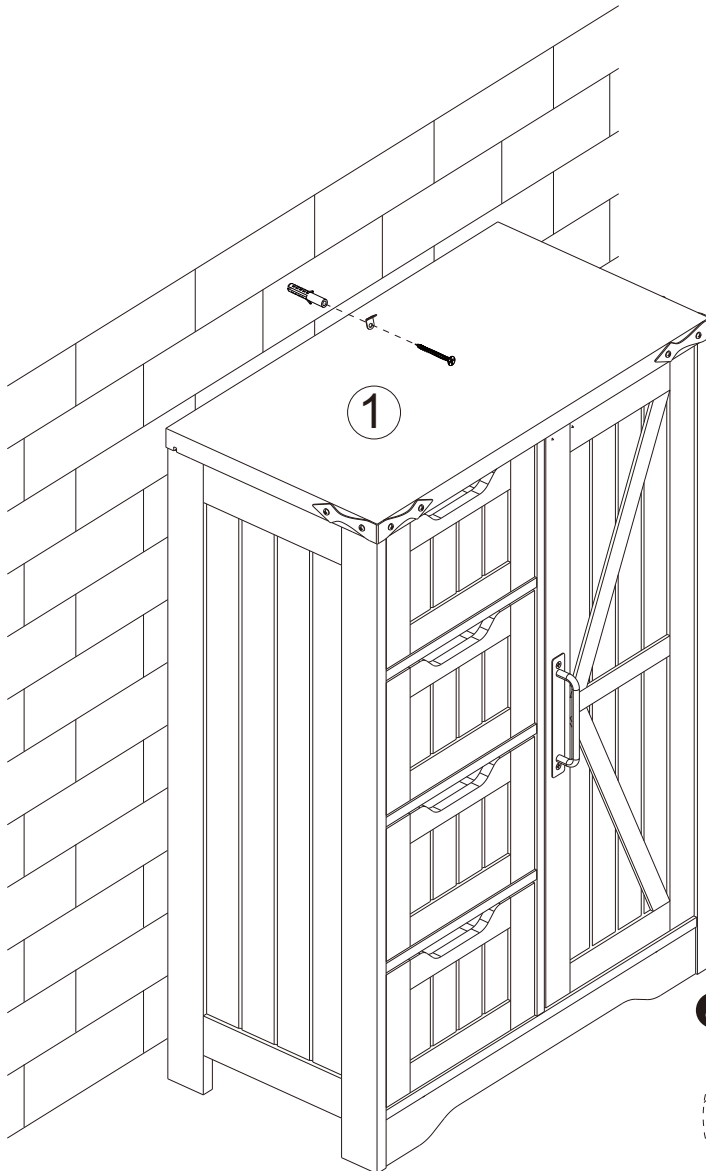

4

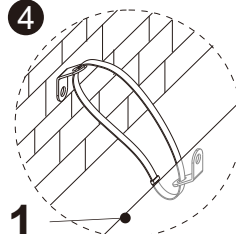 

1

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

WARNUNG



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!