


# Hinge Adjustment Guide

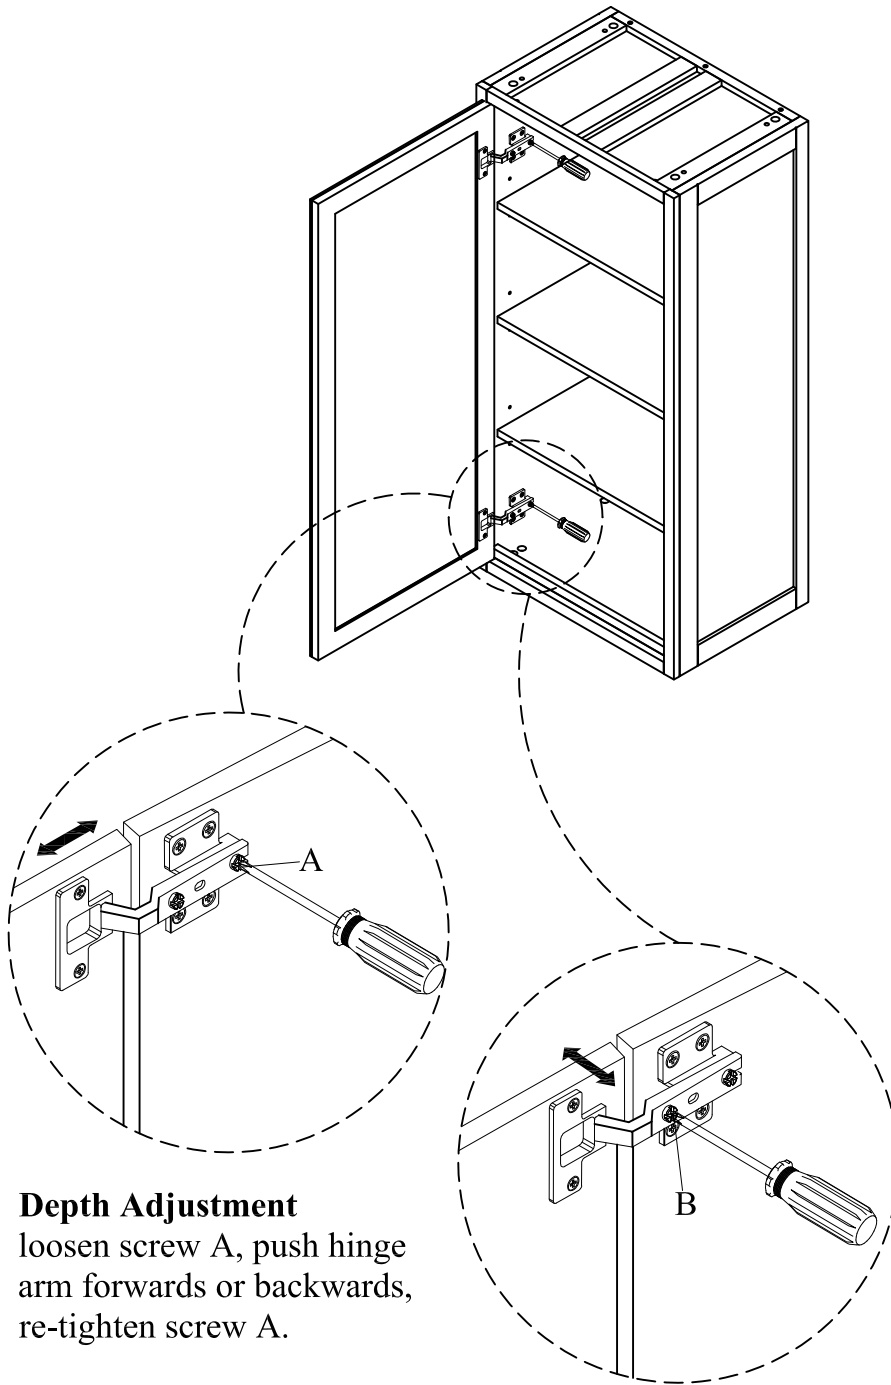

## Depth Adjustment

loosen screw A, push hinge arm forwards or backwards, re-tighten screw A.

## Side to Side Adjustment

loosen screw B, adjust gap with screw B and re-tighten Screw B.

The doors can be adjusted in all 2 directions to create an even fit between doors on this cabinet. Follow the appropriate directions above to adjust door(s) as necessary.