


MEDIUM TV MEDIA STAND

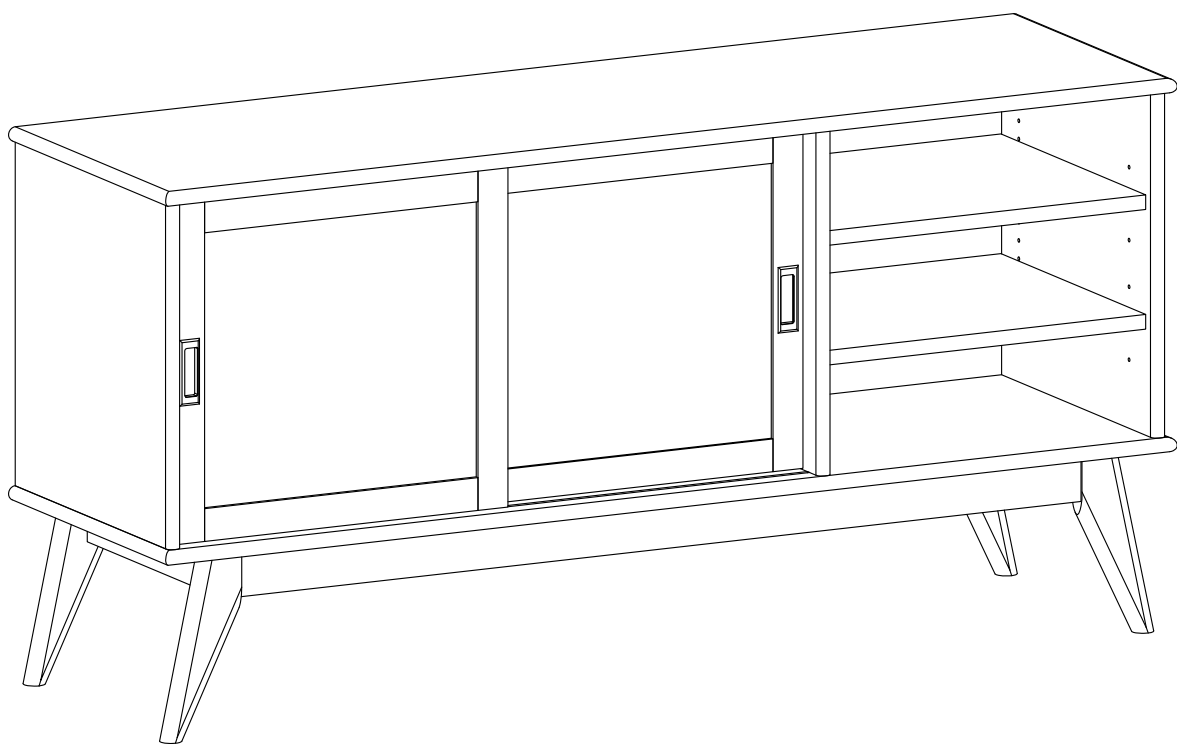



DO NOT RETURN

**FOR REPLACEMENT PARTS OR OTHER INQUIRIES
PLEASE CONTACT US
PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR
INSTRUCTION BOOKLET**

IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required.
Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. We do not recommend the use of power tools for assembly as this could damage the unit. Only use manual tools.

May require 2 people for ease of assembly.

CARE and MAINTENANCE













To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth.
Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish.
Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.
Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.

 
 

 




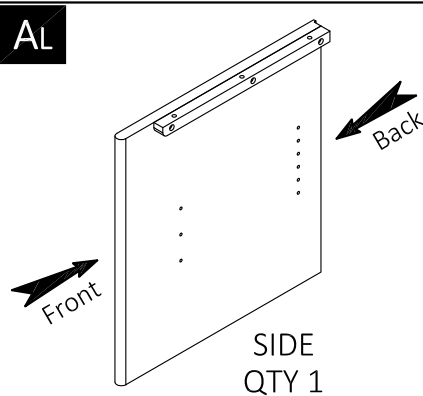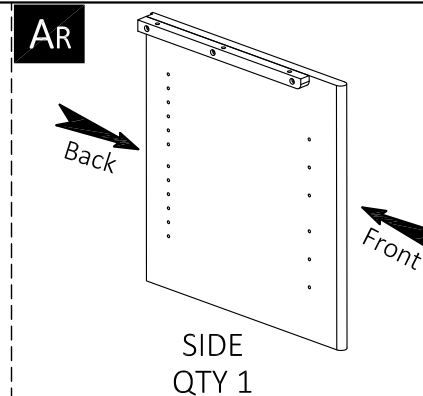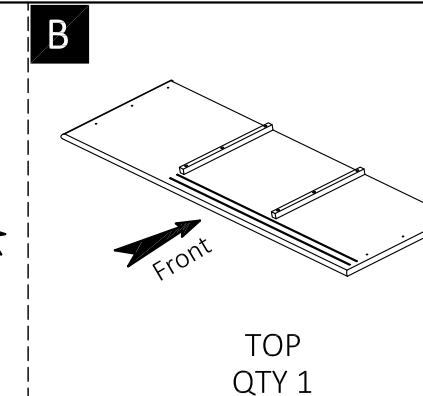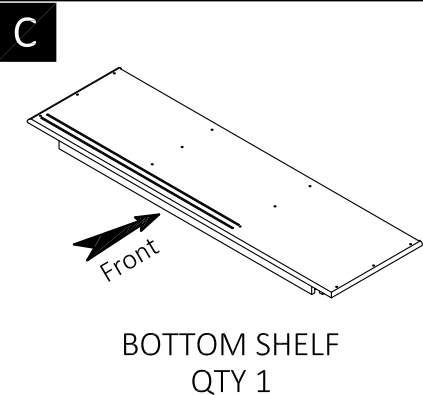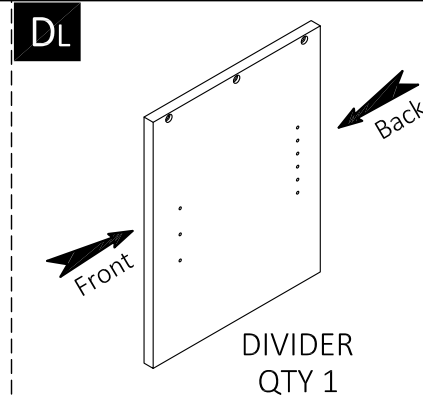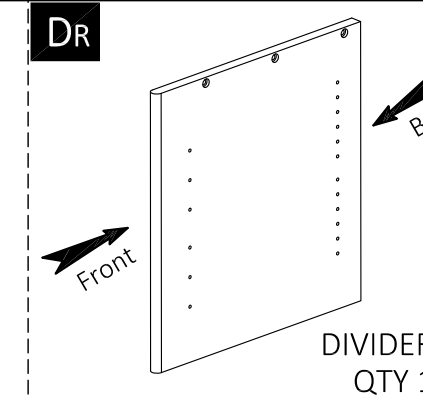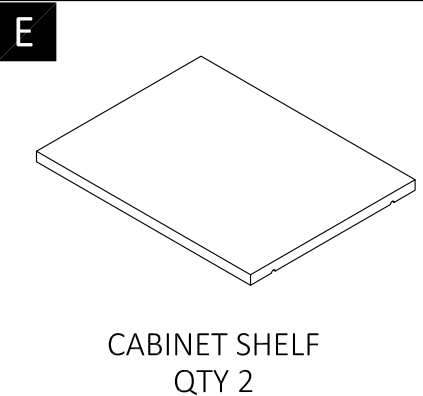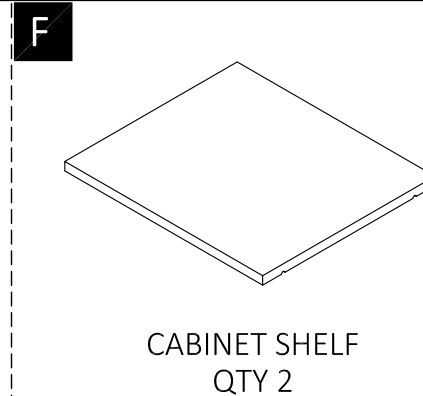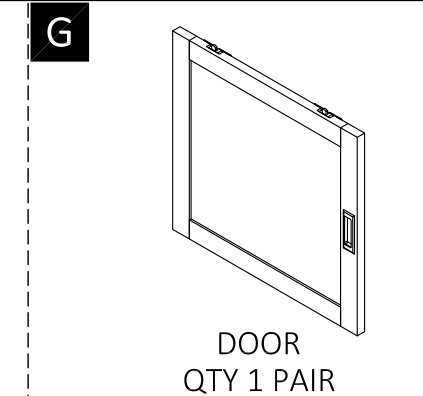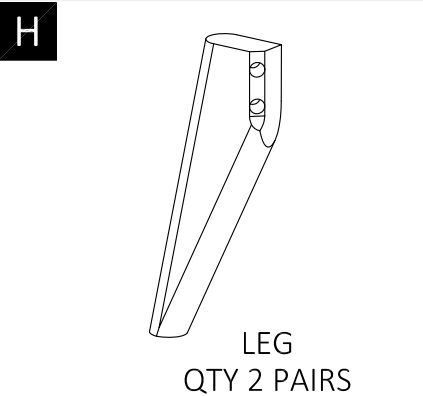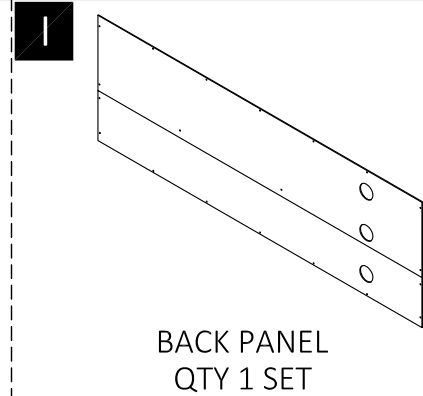


PRE-ASSEMBLY INFORMATION

PART DESCRIPTION

<div>AL</div> <div></div> <div>SIDE QTY 1</div>	<div>AR</div> <div></div> <div>SIDE QTY 1</div>	<div>B</div> <div></div> <div>TOP QTY 1</div>
<div>C</div> <div></div> <div>BOTTOM SHELF QTY 1</div>	<div>DL</div> <div></div> <div>DIVIDER QTY 1</div>	<div>DR</div> <div></div> <div>DIVIDER QTY 1</div>
<div>E</div> <div></div> <div>CABINET SHELF QTY 2</div>	<div>F</div> <div></div> <div>CABINET SHELF QTY 2</div>	<div>G</div> <div></div> <div>DOOR QTY 1 PAIR</div>
<div>H</div> <div></div> <div>LEG QTY 2 PAIRS</div>	<div>I</div> <div></div> <div>BACK PANEL QTY 1 SET</div>	<div>J</div> <div></div> <div>PLASTIC JOINING STRIP QTY 1</div>


NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

PRE-ASSEMBLY INFORMATION
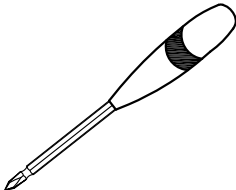
<div>1</div> <div></div> <div>ALLEN KEY SCREW M6 X 30mm QTY 24</div>	<div>2</div> <div></div> <div>BOLTS AND WASHERS M8 x 60 mm QTY 8 SETS</div>	<div>3</div> <div></div> <div>ALLEN KEY QTY 1</div>
<div>4</div> <div></div> <div>SHELF SUPPORT QTY 24</div>	<div>5</div> <div></div> <div>PHILLIPS SCREW ROUND HAED M4 X 15mm QTY 20</div>	<div>6</div> <div></div> <div>SMALL ALLEN KEY QTY 1</div>
<div>7</div> <div></div> <div>a.  M4 X 25mm - QTY 1 b.  M4 X 15mm - QTY 1 c.  M4 X 25mm - QTY 1</div> <div>TIPPING RESTRAINT QTY 1 SET</div>	<div></div> <div>Required - Phillips screwdriver Not Included</div>	


NEED HELP? For help with assembly or if you are missing a part,
Please call customer service

COMPONENTS – KEY DIAGRAM

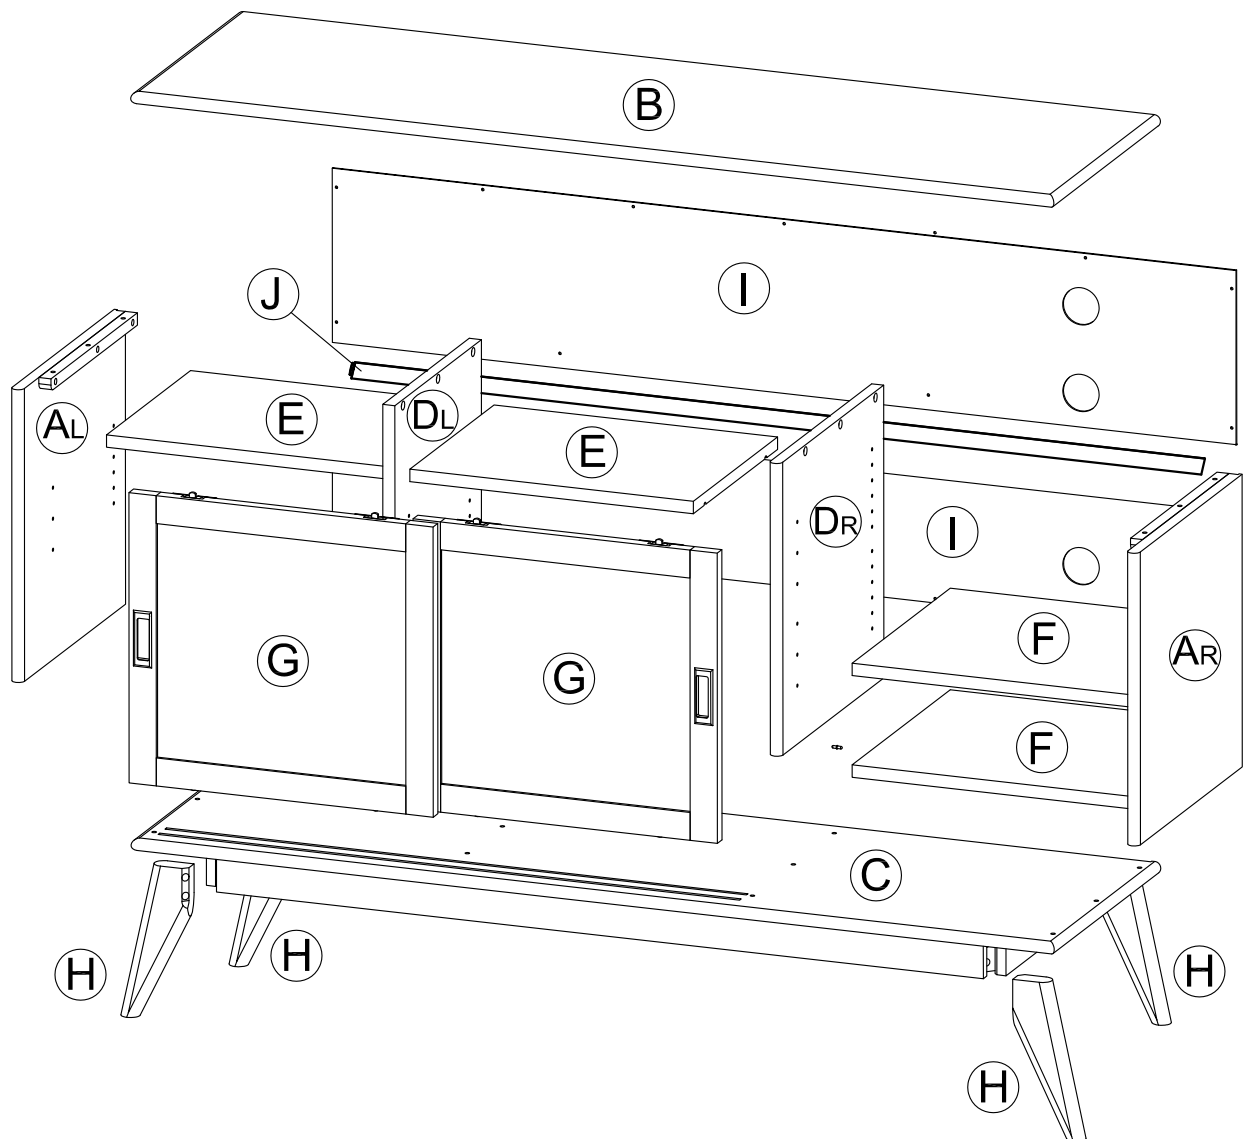


ASSEMBLY

STEP-1

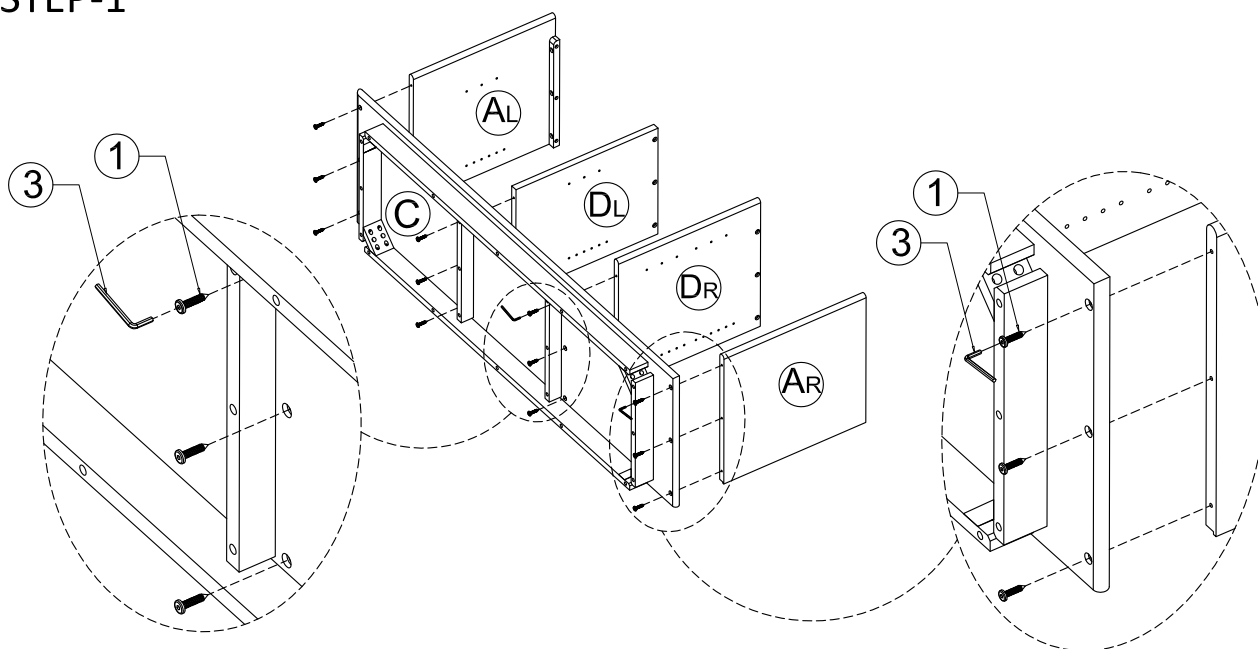

1. Attach Sides (AL), (AR) and Dividers (DL), (DR) to Bottom (C) using 12 Allen Key Screws (1) (3 screws on each Side and Divider).
2. Use Allen Key (3) to tighten Screws. Do not over-tighten.


STEP-2

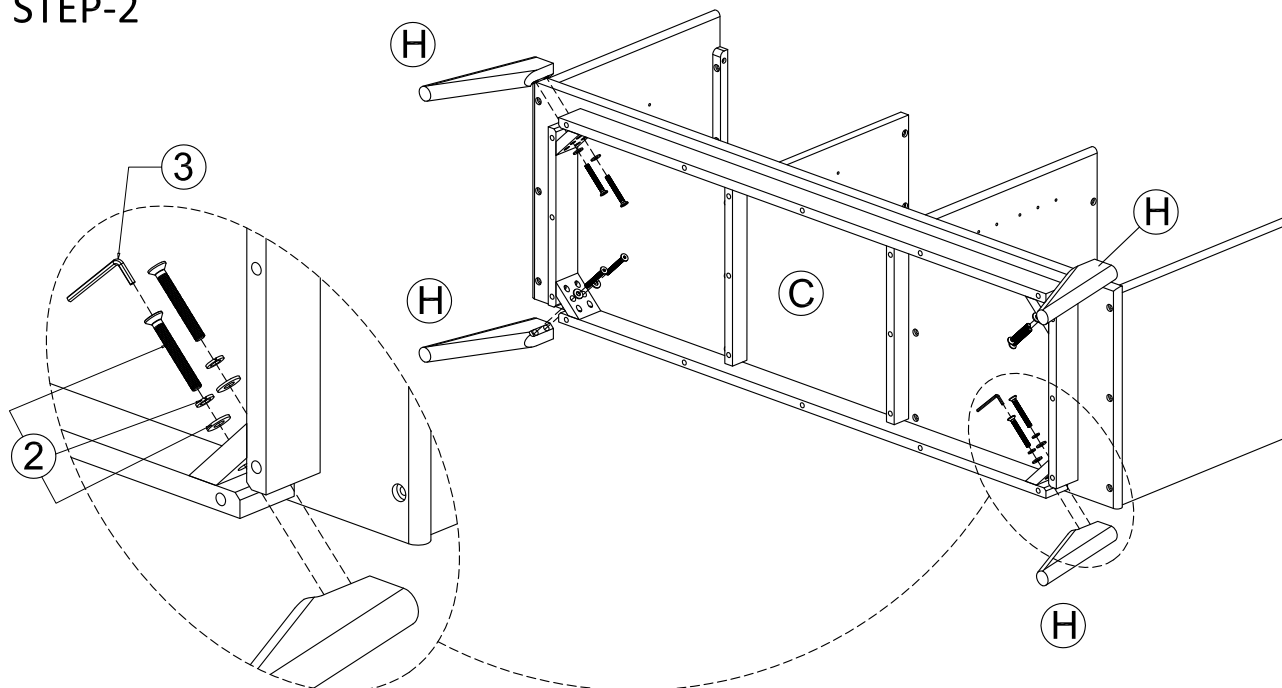

1. Attach Legs (H) to Bottom Shelf (C) using 8 sets Bolts and Washers (2) (2 sets on each Leg).
2. Use Allen Key (3) to tighten Bolts. Do not over-tighten.

ASSEMBLY


STEP-3

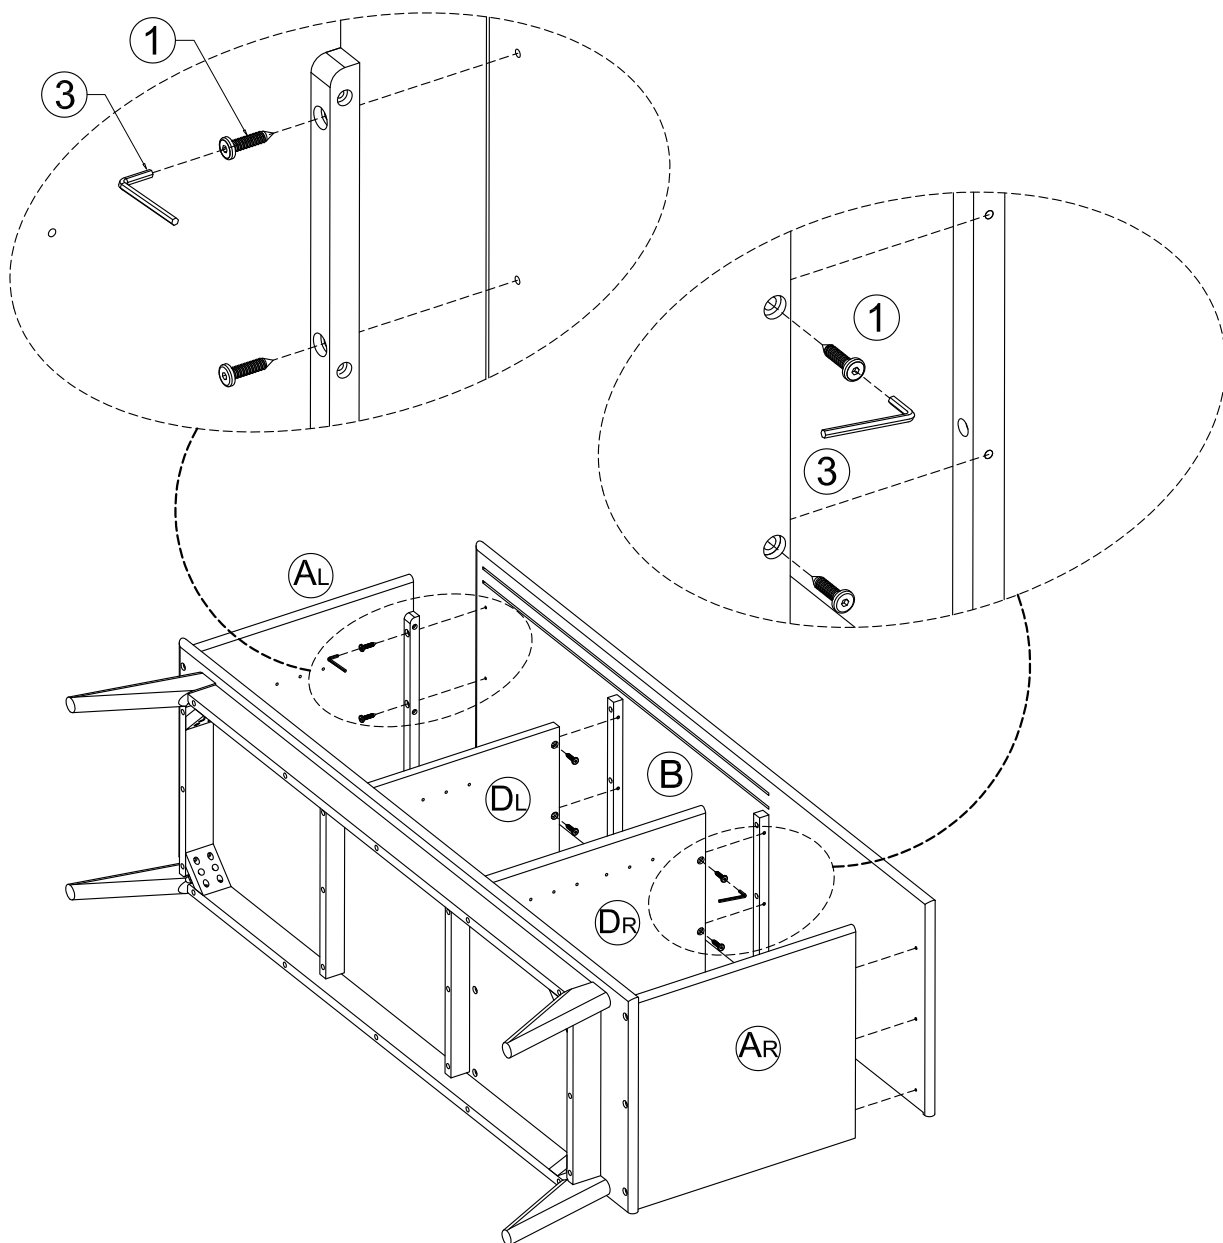

- 1. Attach Top (B) to Sides (AL, AR) and Dividers (DL, DR) using 12 Allen Key Screws (1) (3 screws on each Side and Divider).
- 2. Use Allen Key (3) to tighten Screws. Do not over-tighten.

ASSEMBLY


STEP-4

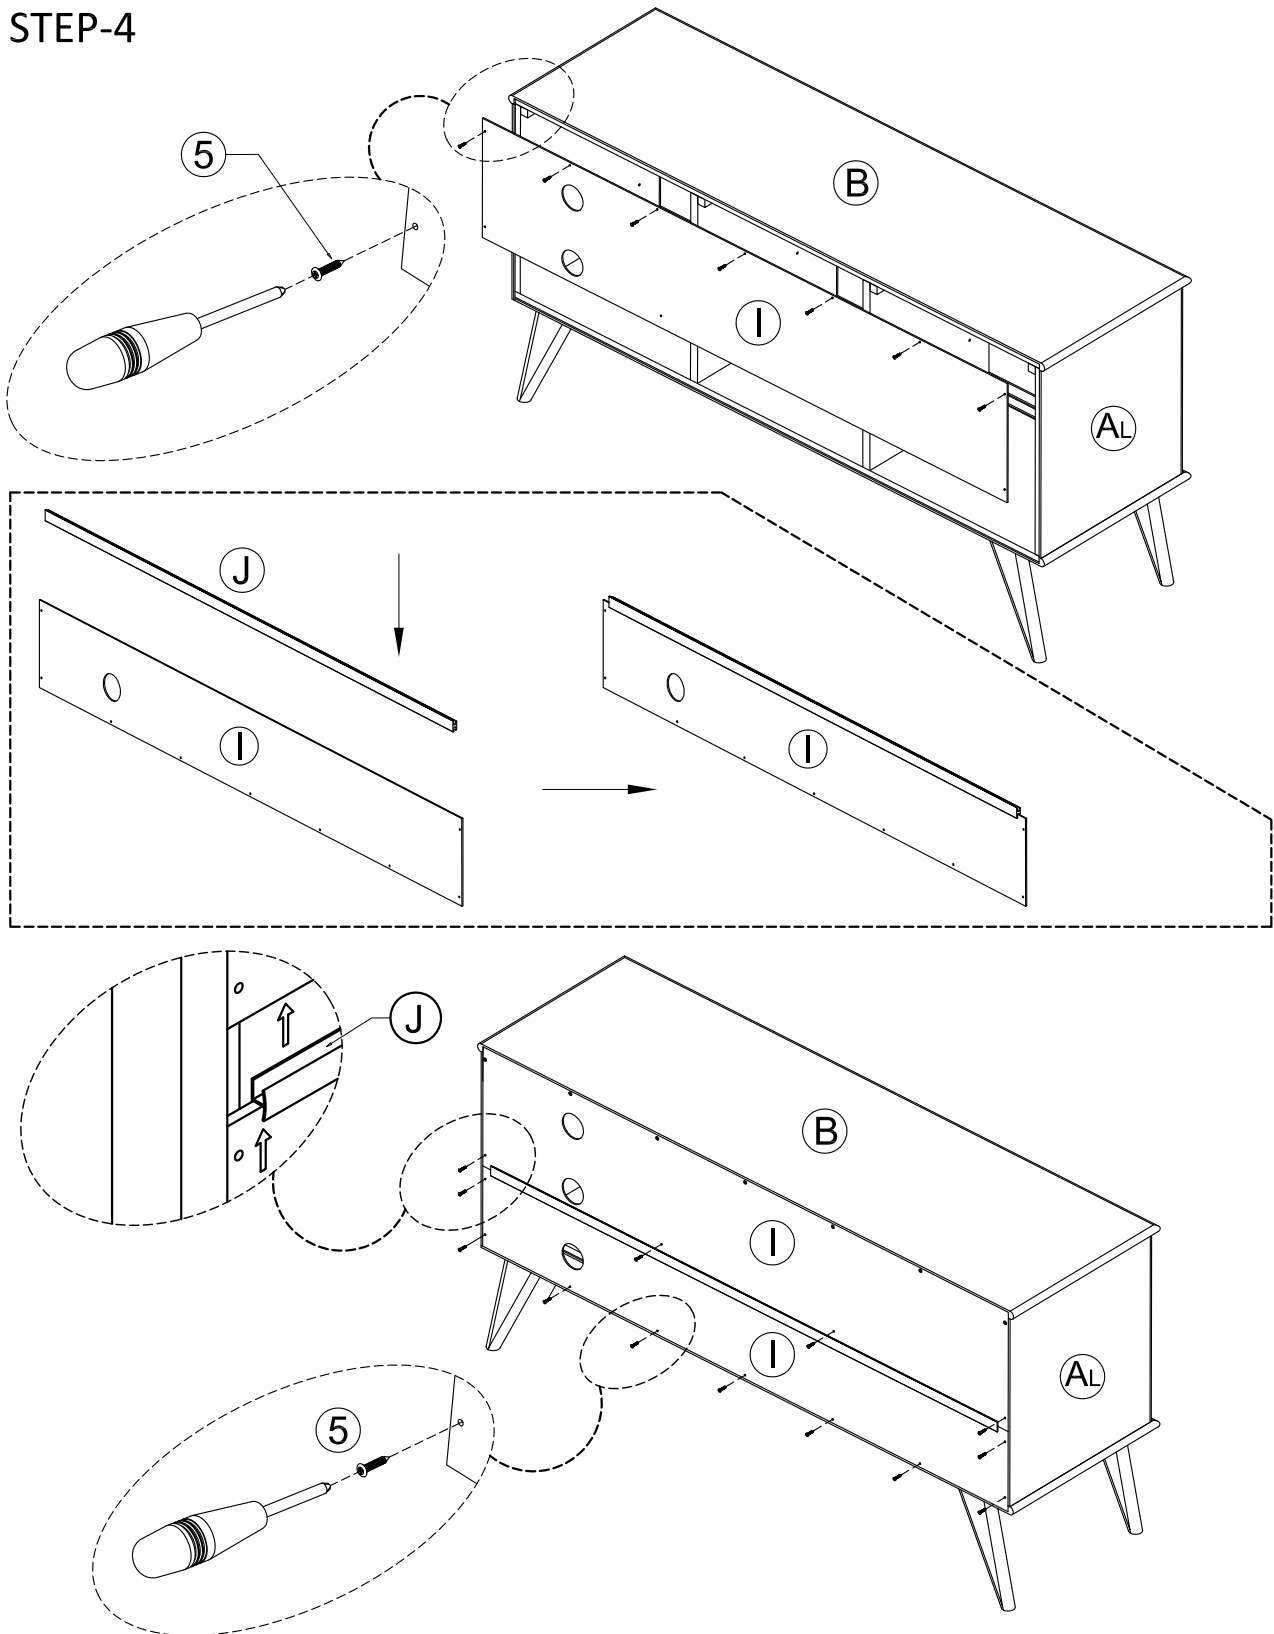

1. Attach the upper Back Panel ① to back frame by using Phillips Screws ⑤. Only 1st top row of screws (7 screws) to be screwed in advance.
2. Insert the lower Back Panel ① into the slot of Plastic Joining Strip ④.
3. Insert the entire set of Step 2 into bottom edge of upper Back Panel ① and attach both panels ① with screws ⑤.

ASSEMBLY


STEP-5

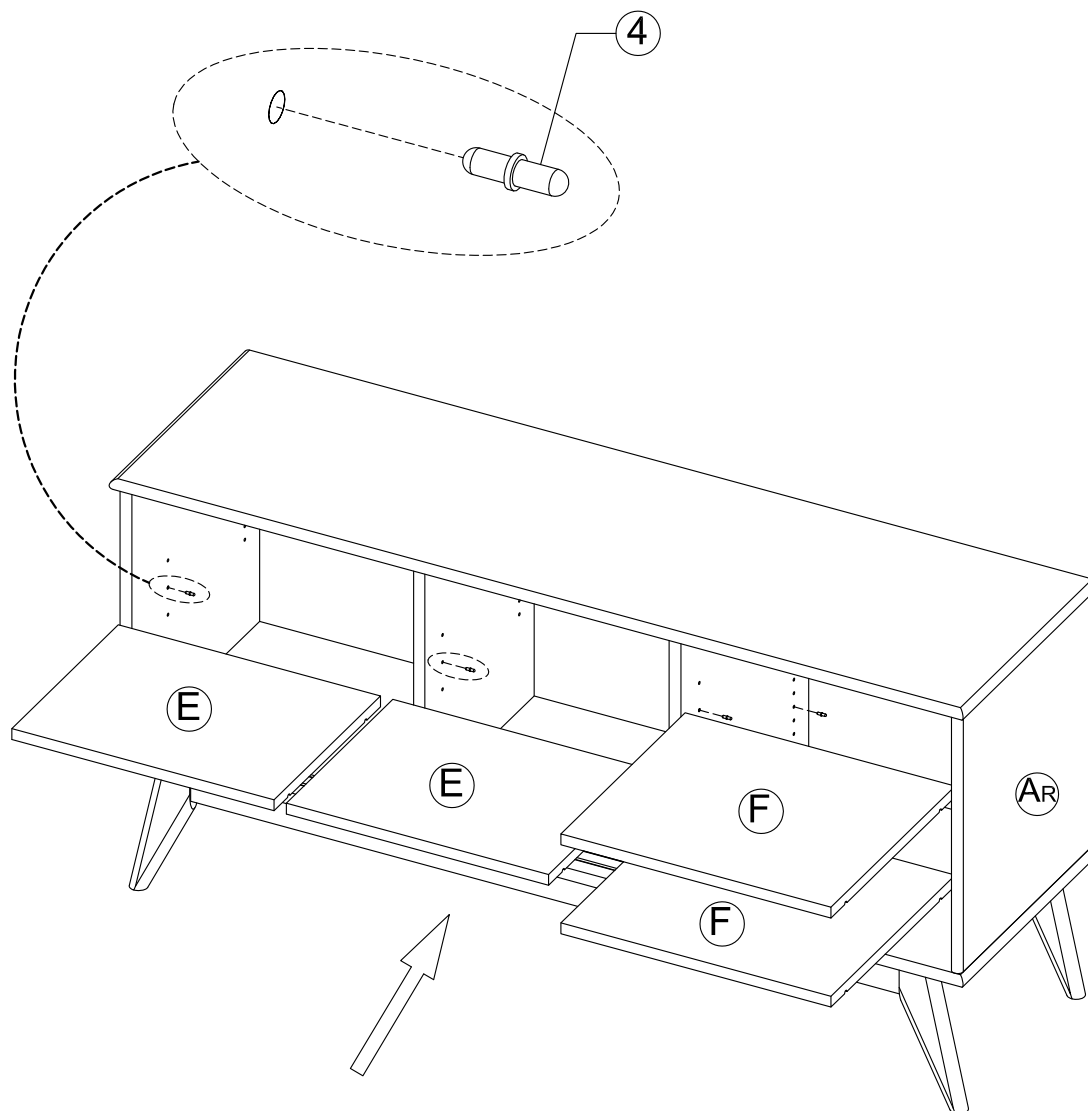

1. Use 4 Shelf Supports (4) for each Cabinet Shelf (E) and (F) in desired location.
2. 2 Shelf Supports (4) may be used on back top of each Cabinet Shelf (E) and (F) as a tipping restraint.

ASSEMBLY

STEP-6

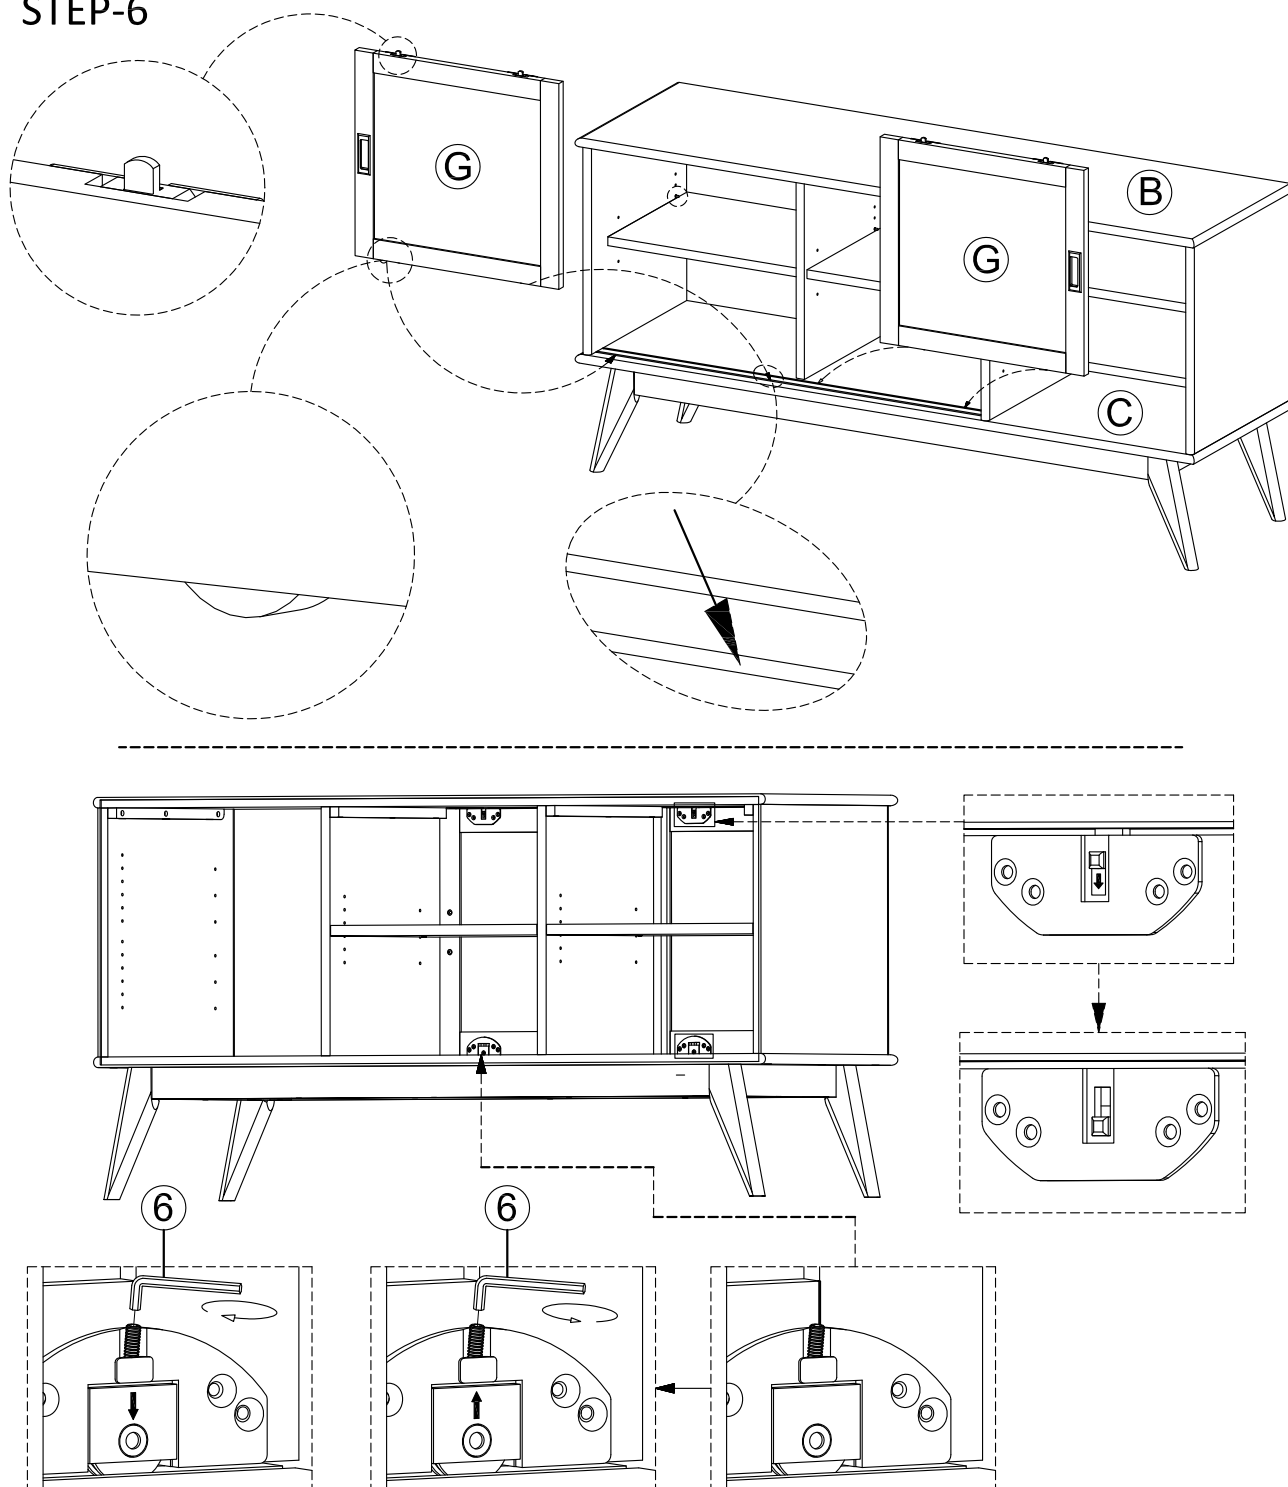


1. Slide the wheels on bottom of each door to the slots on Bottom Shelf (C).
2. Pull down the pins on top of each door then place the door to be parallel with the TV side post. Afterward release the pins. The pins will be inserted into the slots underneath of Top (B).
3. To adjust the height of wheels up or down, use the Small Allen key (6) to rotate the bolts on the wheels (Rotating clockwise will adjust the wheels higher, rotating counter clockwise will adjust the wheels lower).


ASSEMBLY

NOTE: Injuries and damage can occur from furniture tip-over. It is important to use the safety bracket included. If the tipping restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

 STEP-7



NOTE: The screwdriver is not included in the hardware pack.

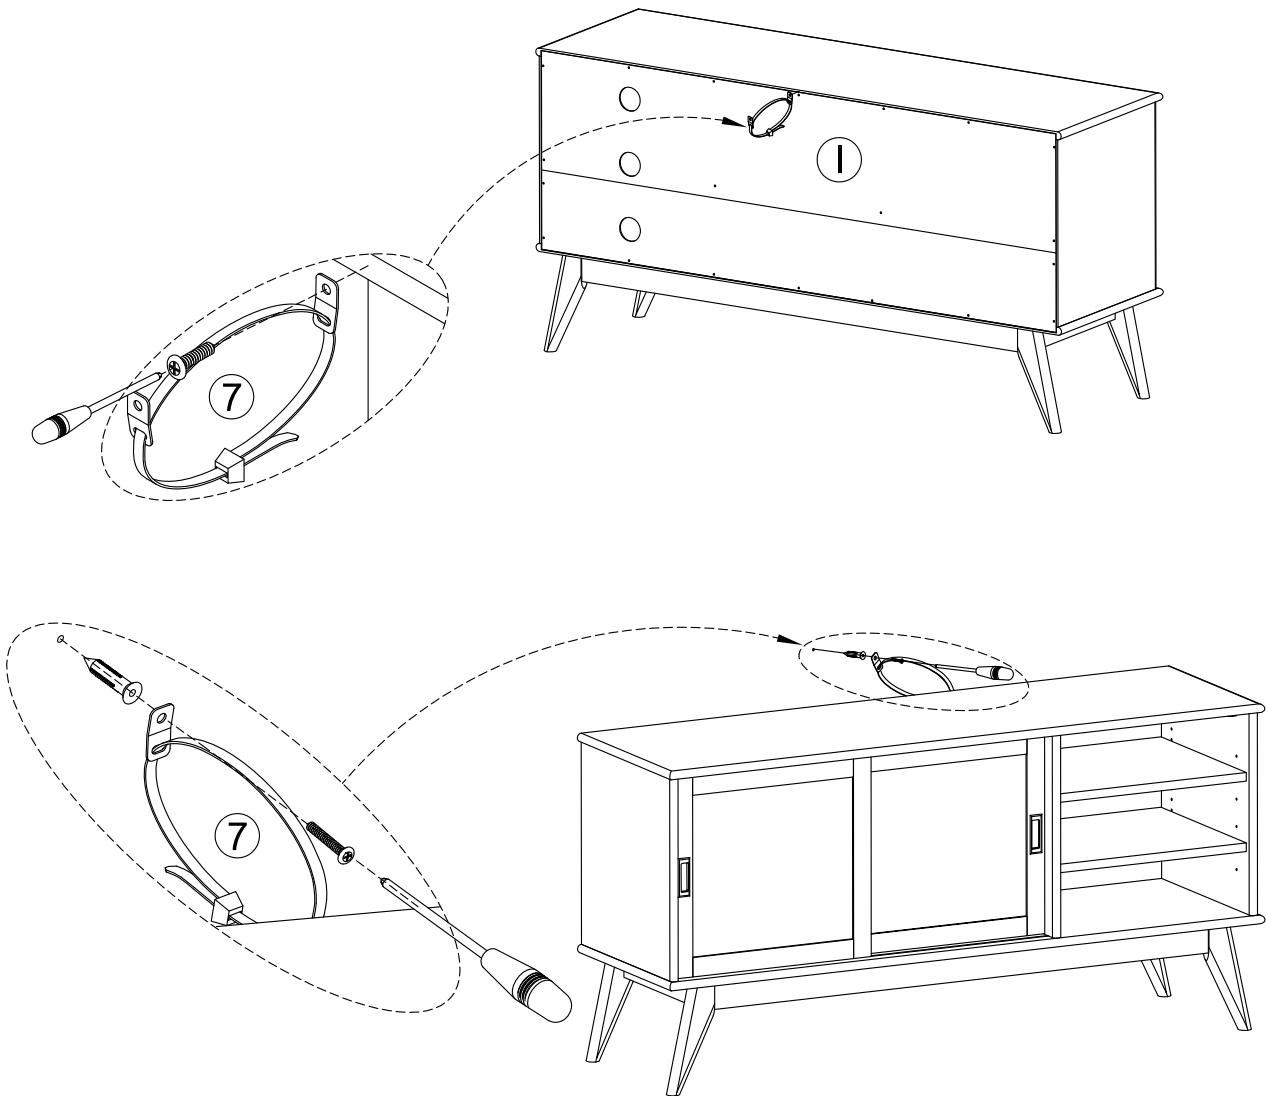

1. To attach Tipping Restraint ⑦, follow instructions on Tipping Restraint package.

When you determined the location for your unit, install the Furniture Tipping restraint. Carefully follow the instructions contained on the package.

WARRANTY

Thank you for purchasing a product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line or by email

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.

PLEASE NOTE: This item is hand-crafted and hand-finished with utmost care. As such, variations and imperfections should be expected and should be welcomed as the natural beauty of the wood.