


Assembly, Installation, Care, Maintenance and Use Instructions
Sky Pod 44" diameter
Model # CP-4979-S

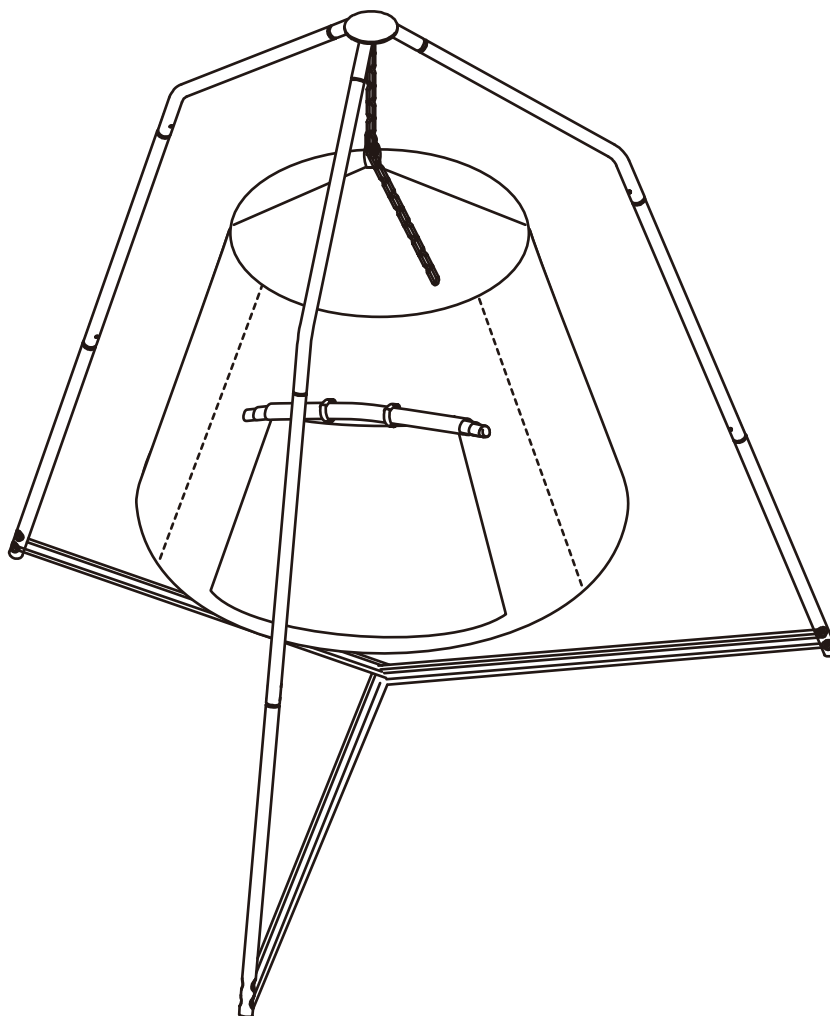

For customer service or replacement parts, please call 1-866-370-2131 Monday through Friday 9am-5pm EST. Visit our website: www.sportspowerltd.net or e-mail: customerservice@sportspowerltd.net .

RETAIN THIS MANUAL FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS

 
 
 


WARNING

- Adult assembly and installation required.
- Holds up to 250 lbs.
- Not intended for use as a swing, tent, spinner, gymnastics/playground equipment, climbing frame, or any combination.
- Not recommended for extended outdoor use.

CARE AND MAINTENANCE


- Do not leave product exposed outdoors for extended periods as product will be damaged by external factors such as UV rays, rain and wind. In particular, do not leave outside during windy days.
- Make sure the product is fully dry before storing, and store only in a cool, well ventilated and dry location when not in use.
- Product must be fully inspected before and after each use. This is very important to ensure proper safety and maintenance of the product.

Parts List

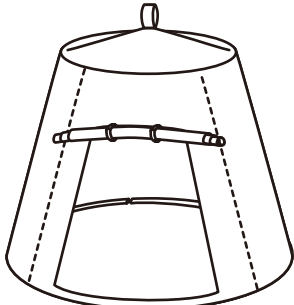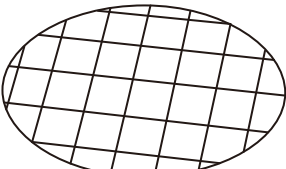Part No.	Description	Picture	QTY
(1)	Flat circular metal piece		1
(2)	Curved metal poles		3
(3)	Straight metal poles without ropes attached		3
(4)	Straight metal poles with stabilizing ropes attached		1
(5)	Small tubes		4
(6)	Large tubes		6
(7)	Sky pod		1
(8)	Pad		1
(9)	Chain		1
(10)	Hook		2


Assembly

1. Set up the stand as shown below. Make sure that all pop locks are securely locked.

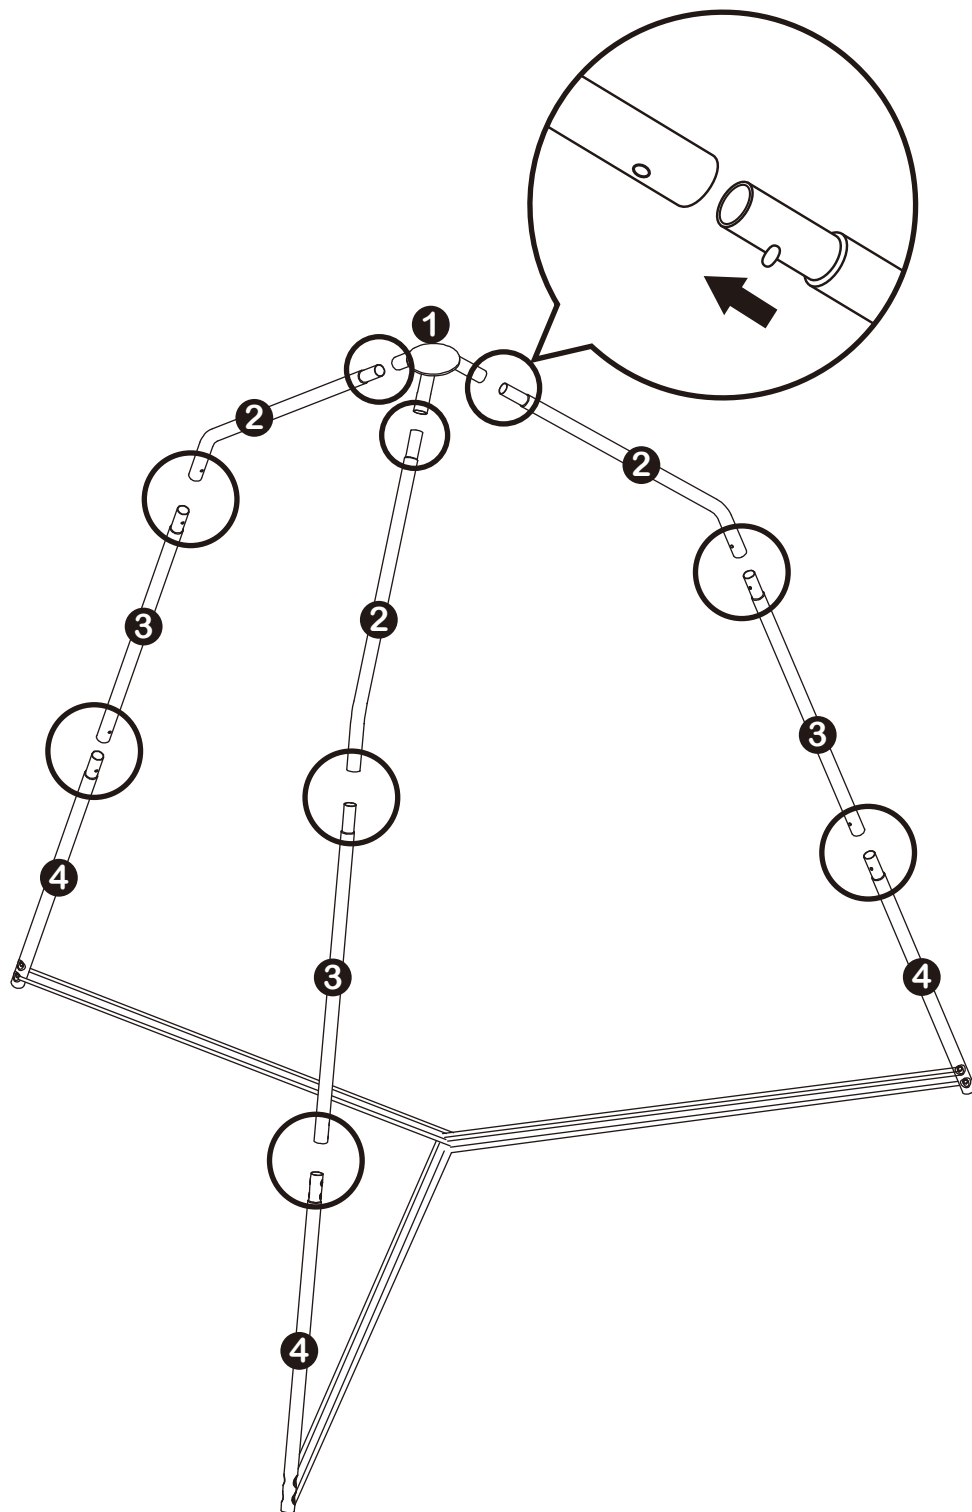




Assembly

2. Turn the top of the Sky Pod inside out. Thread the four small tubes into the top sleeve.

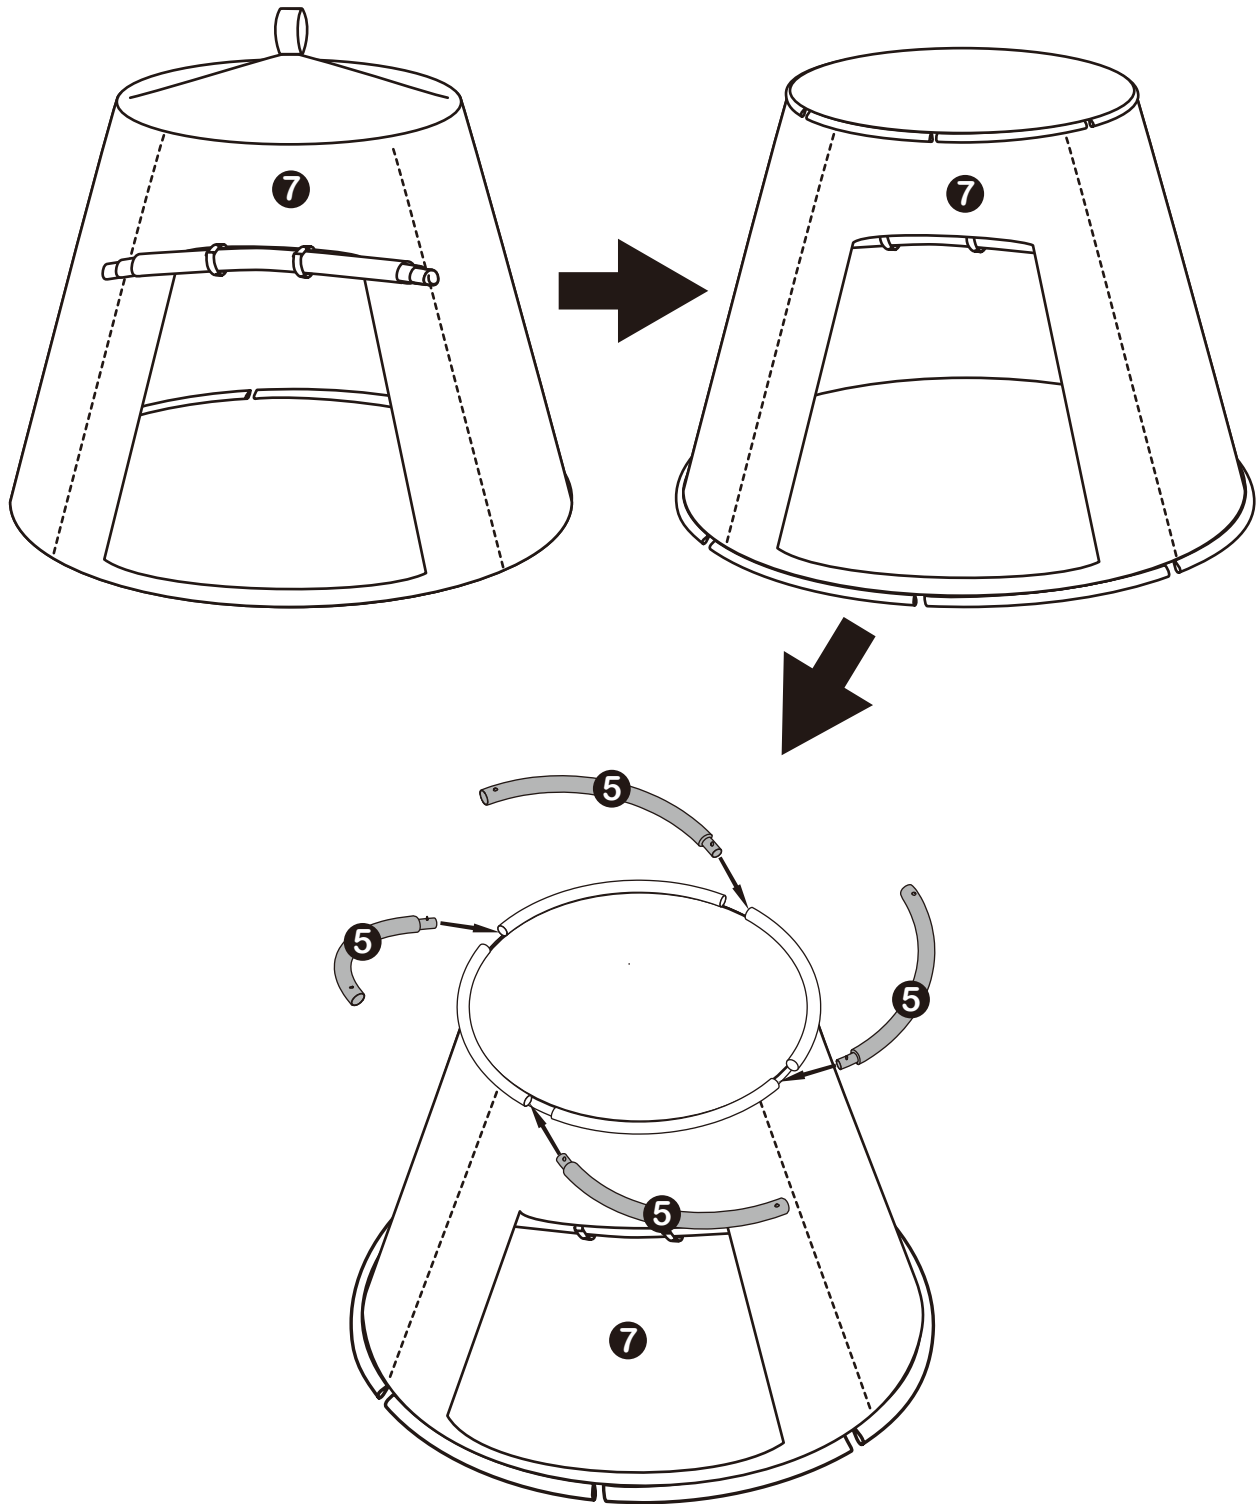


Assembly

3. Connect the four small tubes by pop lock and make sure that all pop locks are securely locked. Then turn the Sky Pod over.

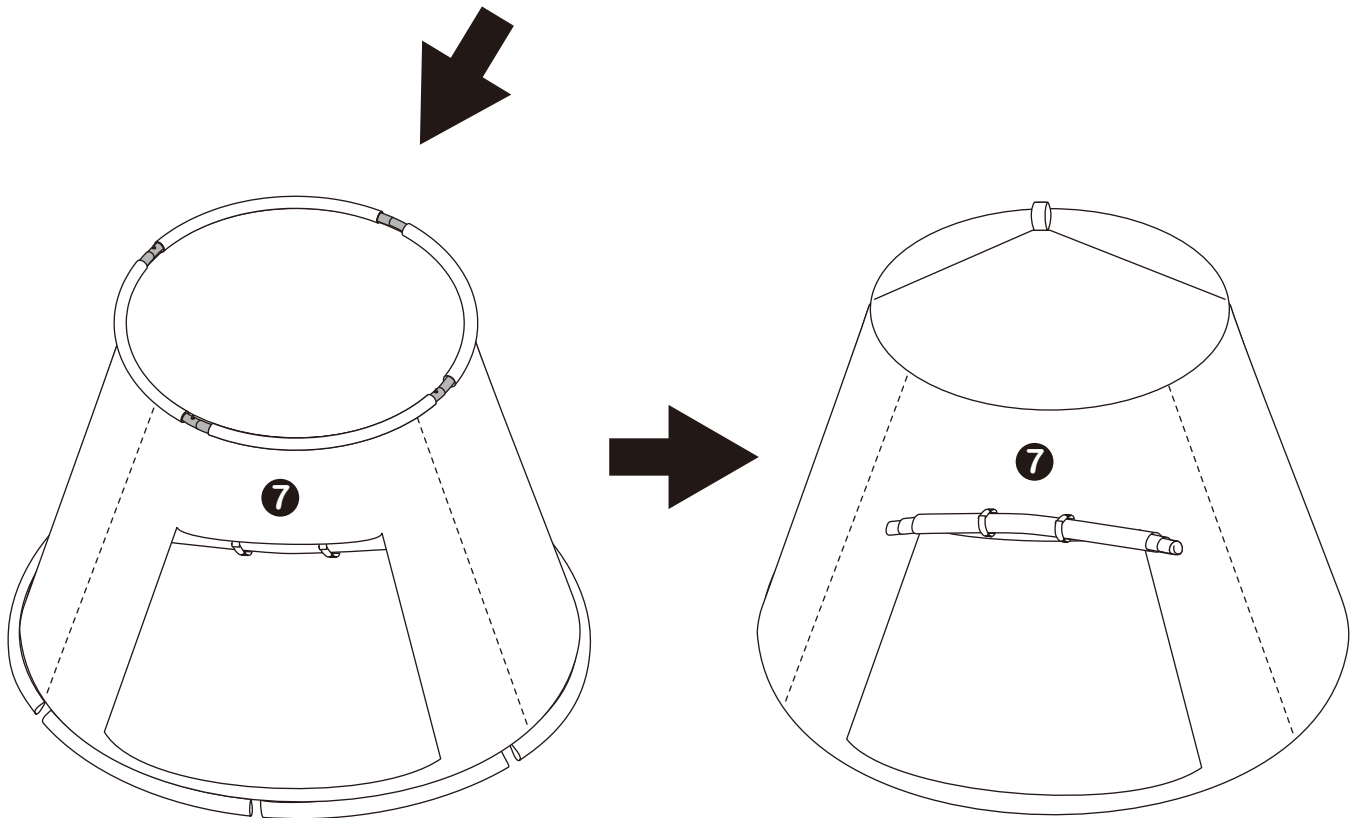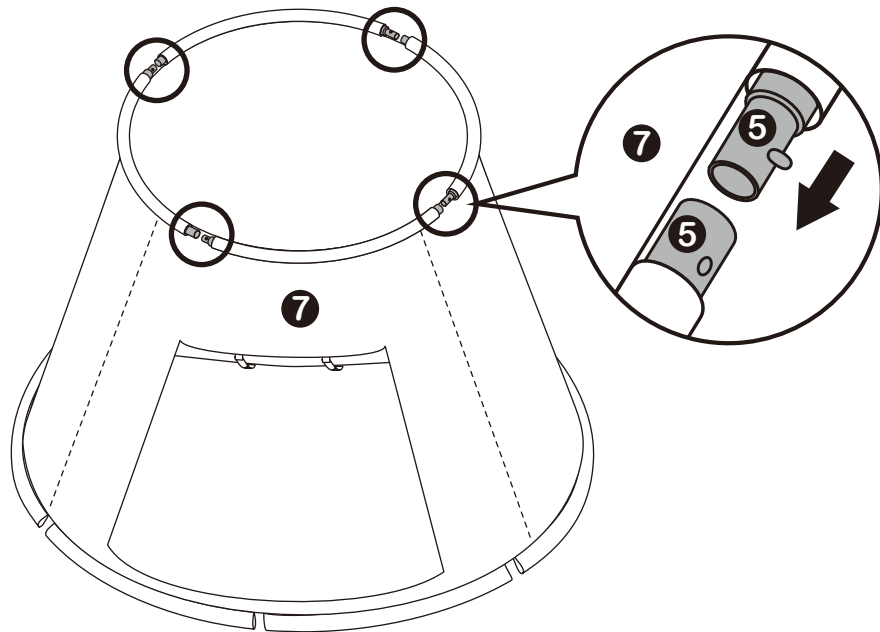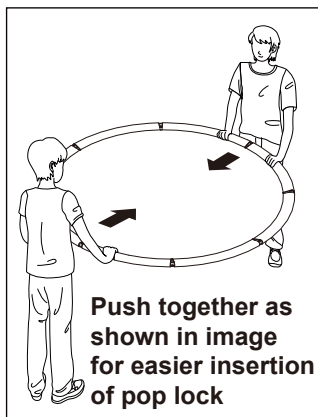



Assembly

4. Hang the Sky Pod so that it is touching the ground slightly.

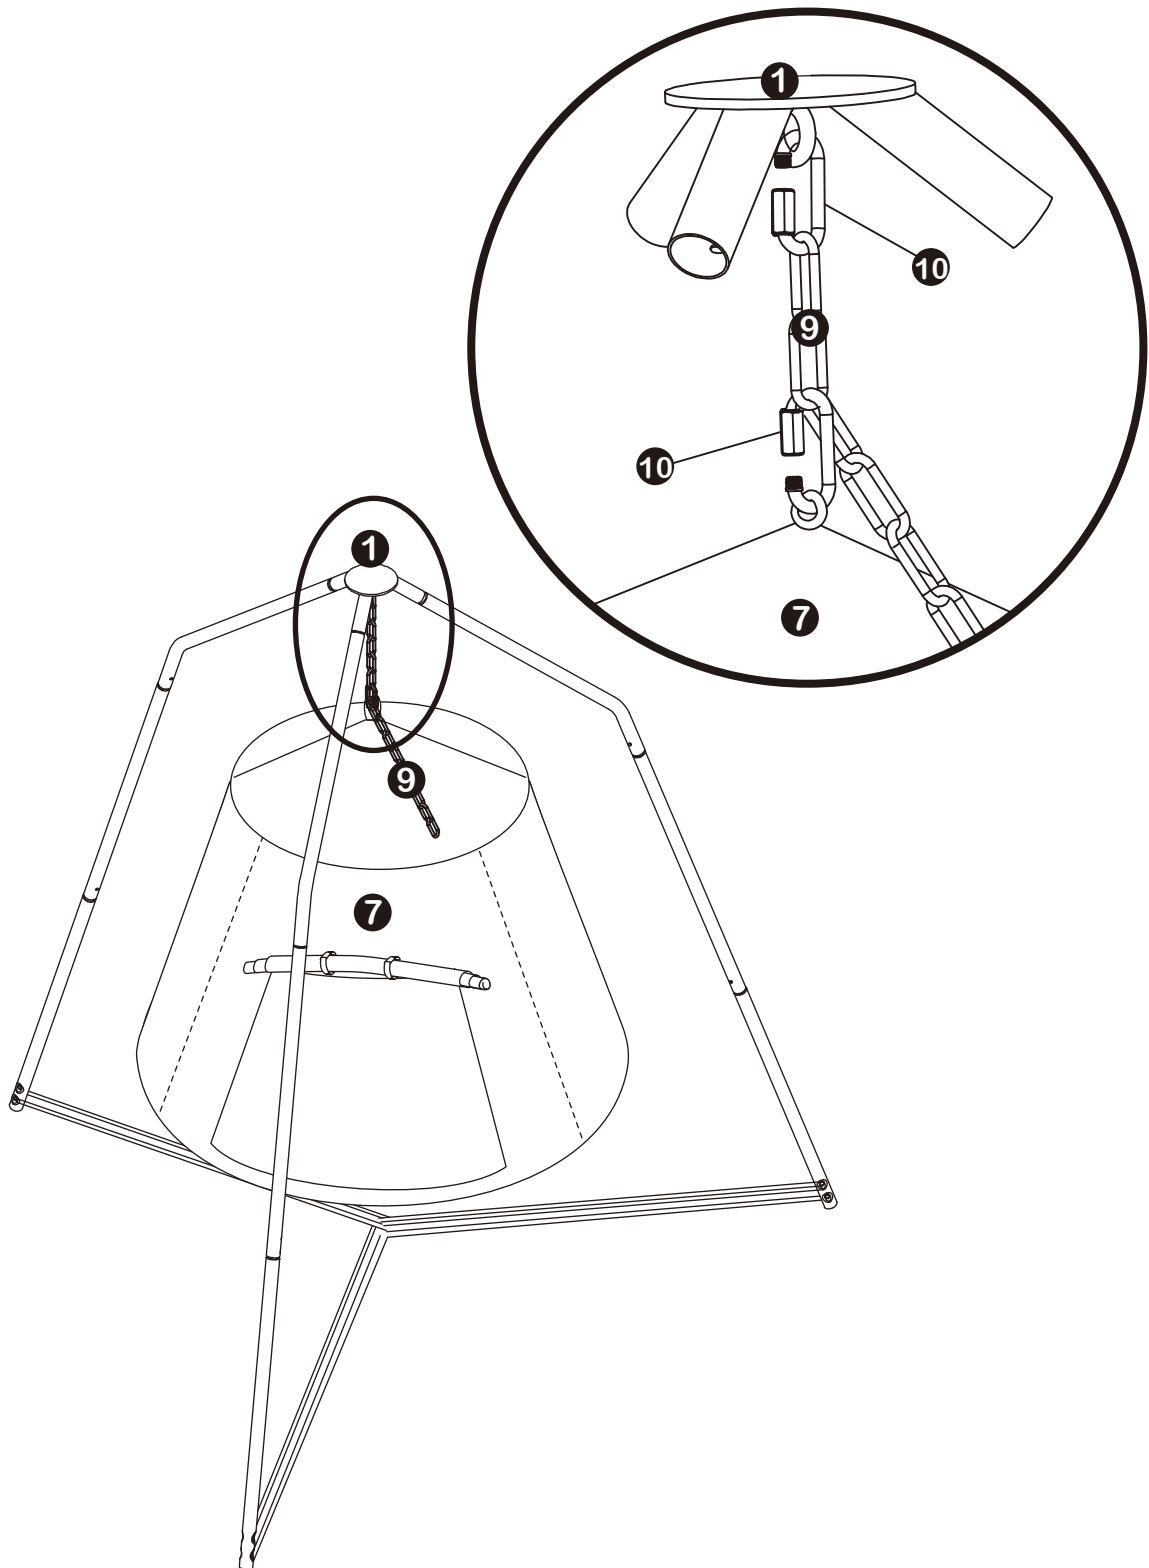


Assembly

5. Thread the six large tubes into the bottom sleeve and connect them by pop lock. Make sure that all pop locks are securely locked.

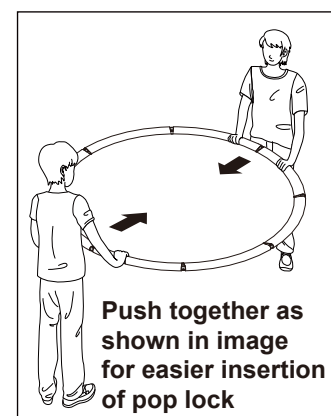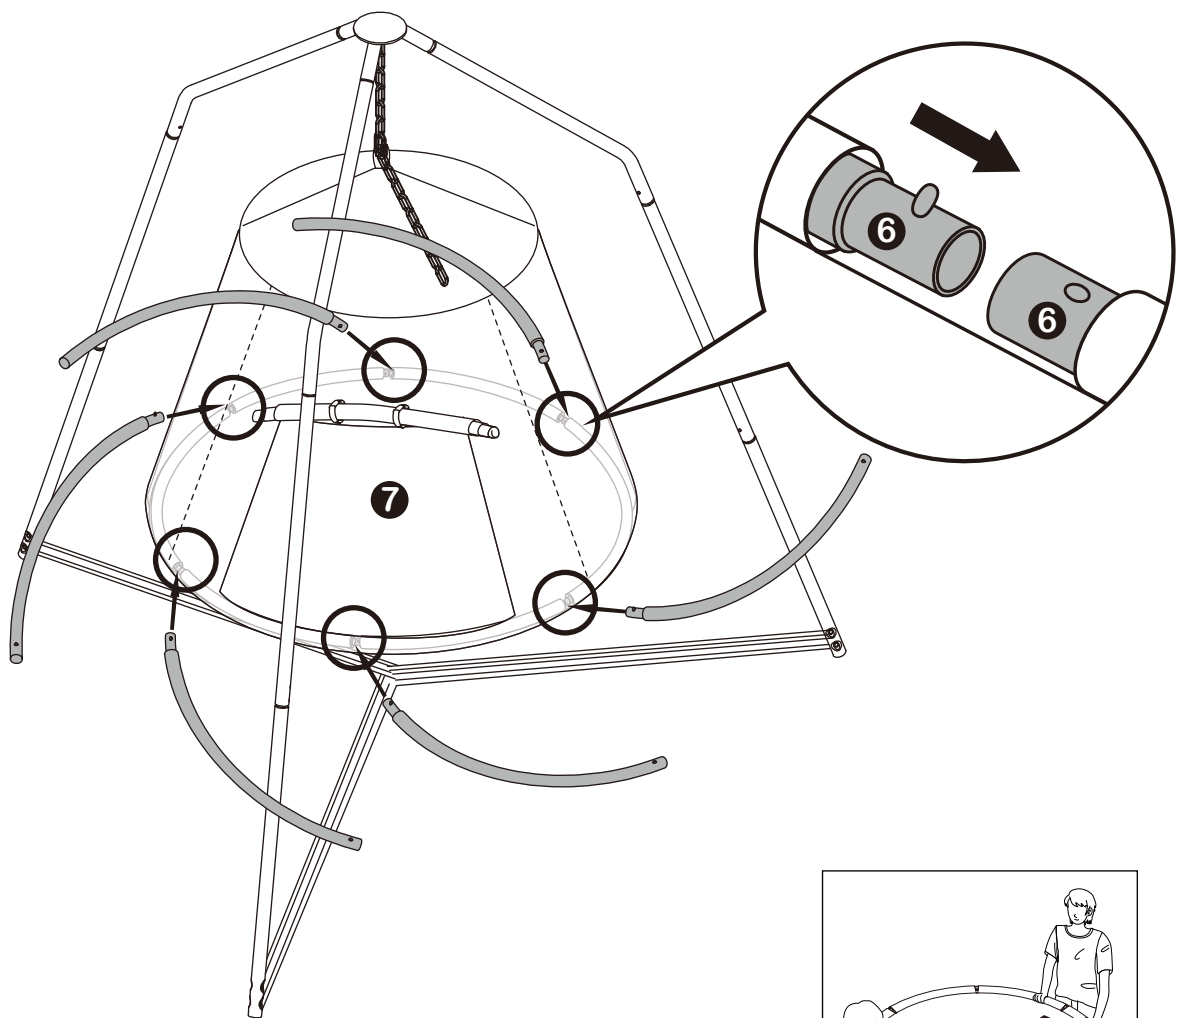

Assembly

6. Put the pad into the Sky Pod and enjoy!

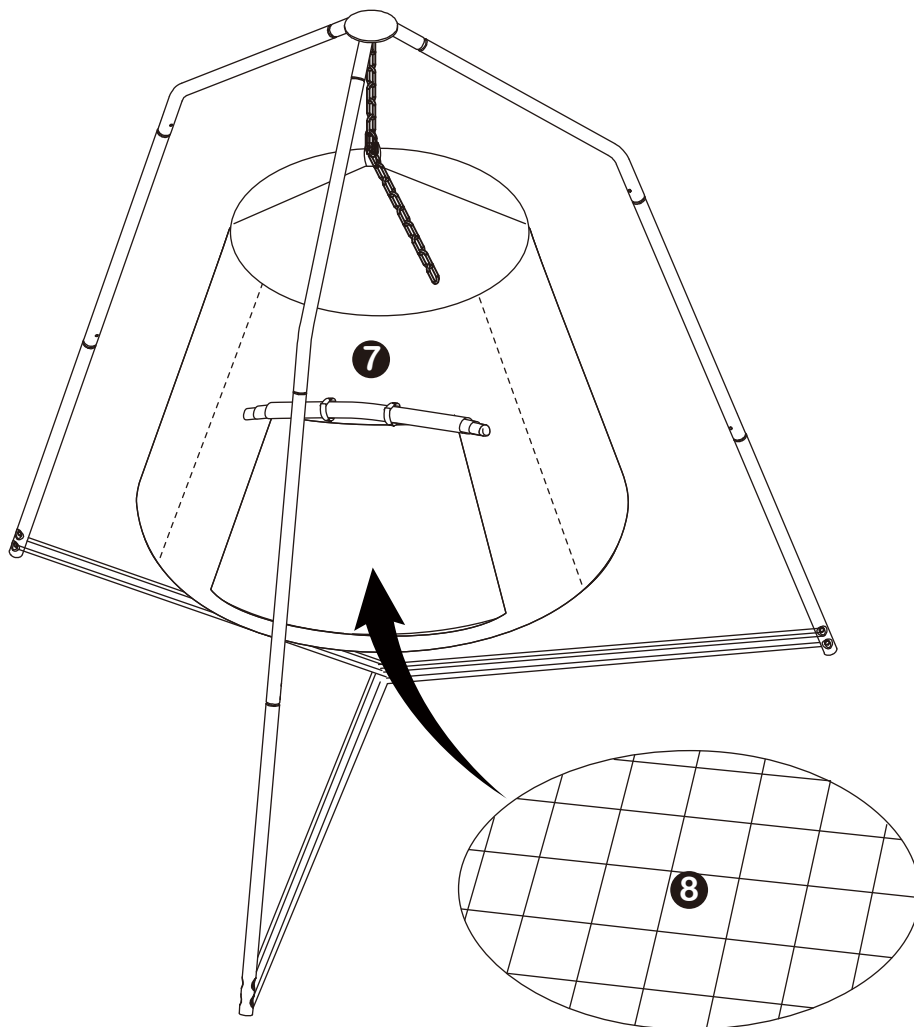

Warranty Information

- Sportspower Ltd warrants its products to be free from defects in material and workmanship under normal use and service conditions for ninety (90) days after the date of purchase.
- All warranty coverage extends only to the original purchaser of the product and is not assignable or transferable. The original store or online purchase receipt must be kept as proof of purchase in order for the warranty to be valid. These documents must be presented in the event of making a claim under warranty.
- During the warranty period, Sportspower will provide repair or replacement of defective equipment or parts thereof covered by the warranty. Any handling, transportation, delivery and other incidental charges in respect of the servicing of the equipment shall be borne by the Purchaser. If the product includes a number of accessories, only the defective part or accessory will be replaced.
- The warranty will become void if any defects or damages are associated with the use of unauthorized replacement parts. All replacement parts must be obtained from Sportspower authorized agents.
- All decisions made by Sportspower in respect of the servicing of the equipment (including repairs, replacements or issues relating to defects of workmanship or materials) shall be conclusive and the Purchaser agrees to be bound by such decisions. Any defective equipment or part thereof replaced shall become the property of Sportspower.
- In the event of a product or accessory being replaced during the guarantee, the guarantee on the replacement will expire at the original date, i.e. 90 days from the original purchase date.
- This warranty excludes defects caused by the product not being used in accordance with instructions, accidental damage, misuse or being tampered with by unauthorized persons.
- The Sportspower Ltd warranty does not cover:
 - a). Products used for commercial or rental purposes.
 - b). Loss or damage to product due to: (i) abuse, repairs and/or tampering by any person other than the authorized personnel of sportspower; (ii) negligence and/or misuse (including foreign object, accident, improper storage, exposure to sun/moisture, excessive temperature, sand, dust, dirt, other pollution or other environmental conditions and failure to follow precautions or proper operating instructions stated in the user's manual such as improper installations); (iii) fire, flood, lightning strike, wind storm or other natural disasters; (vi) freight or improper transport damages, and (v) improper usage (including use by underage, overweight or excessive number of users permitted as stated in the user's manual).

Warranty Information

- c). Defects, damages or accidents due to the malfunction, connection to or use of non-Sportspower or unauthorized parts. In such event, Sportspower reserves the right to cancel the limited warranty coverage immediately.
- To the extent allowed by the applicable local law, the remedies in the limited warranty are the purchaser's sole and exclusive remedies.
 - Sportspower is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of revenue or profits, loss of enjoyment or use, cost of removal, installation or other consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.
 - The warranty extended hereunder is in lieu of all other warranties and any implied warranty of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state. This warranty is valid only in the United States.

DO NOT RETURN TO THE STORE.

For customer service, please call 1-866-370-2131 Monday-Friday 9:00am-5:00pm Eastern Time or visit www.sportspowerltd.net or e-mail customerservice@sportspowerltd.net

Sportspower Ltd - LEVEL 20, PARKVIEW CENTRE, 7 LAU LI STREET, CAUSEWAY BAY, HONG KONG

WARRANTY REGISTRATION

Please register online at www.sportspowerltd.net to tell us more about yourself. This is not required for validation of the normal product warranty, but when you register online, we will offer to you extended warranty subject to proof of your purchase. Please refer to your manual for warranty details.

All data will be treated with strict confidentiality.