
Dining Table


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

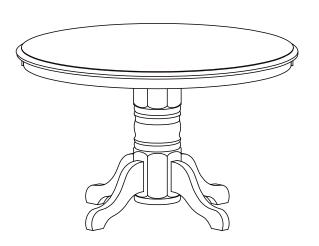

Part List

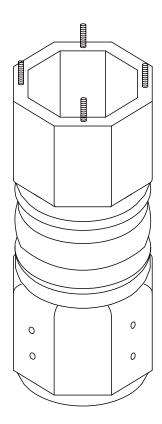

C. Post 1 pc.


For assembly see instructions in carton

Dining Table

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damage occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

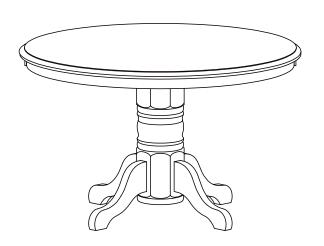




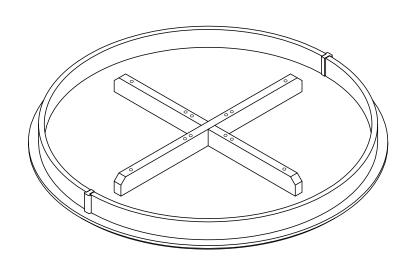


Table Top 1 pc.




Connector Panel 1 pc.

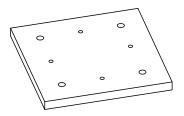

D. Leg 4 pcs.

Hardware List

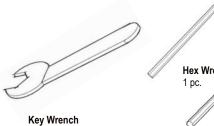



Small Wrench



Flat Washer (large) 12 pcs. (+1 extra)



Spring Washer (large) 12 pcs. (+1 extra)



Flat Washer (small) 4 pcs. (+1 extra)



Spring Washer (small) 4 pcs. (+1 extra)



12 pcs. (+1 extra)



M6x40 **Head Cap Bolt** 4 pcs. (+1 extra)

For assembly also need carton


Assembly Instructions 2/2


IMPORTANT

- * Please keep Hex Wrench and Key Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.
- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.

STEP 1

Attach Connect Panel (B) to Post (C) with Flat Washers (large), Spring Washers (large) and Nuts.

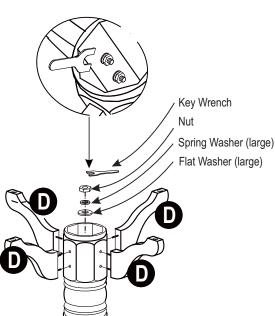

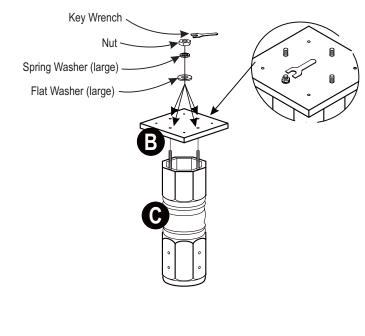

STEP 2

Turn the unit upside down on the soft cloth.

Attach Legs (D) to the unit with Flat Washers (large), Spring Washers (large) and Nuts.




Figure 1



STEP 3

Attach base unit from Step 2 to Table Top (A) with Flat Washers (small), Spring Washers (small) and Head Cap Bolts.

Turn the unit over to its' upright position.

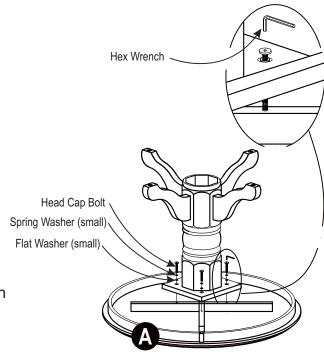

To level the unit, adjust the adjustable levelers on the bottom of unit. (See Figure 1)