

Description

Name	DK-P911
Battery	12V10AH / 12V14AH / 24V7AH / 24V10AH / 24V14AH
Motor	12V12000 RPM of 550# driving motor 12V3000 RPM of 550# steering motor 24V12000 RPM of 555# 200W driving motor 24V22000 RPM of 555# 240W driving motor 24V2800 RPM of WW4853# driving motor (Mute motors) 24V3000 RPM of 550# steering motor
Max load weight	50KGS/110LBS
Size	1480*900*560mm / 58.26*35.43*22.04 INCH
Speed	3-8 KM/H / 1.86-4.97 MPH
Charging time	8-14 hours
Remote control battery	AAA battery 1.5V*2 (not including)
Applicable age	37-95 months
Charger specification	Input: 220V / 110V 12V Output: DC12V1000mA 24V Output: DC28.8V800mA or DC24V1000mA

Charging the Drive Battery:



IMPORTANT! Before using the unit for the first time the battery needs to be charged for at least **8 to 14** hours - no more than **20** hours. Once battery is depleted, recharge for **8 to 14** hours - no more than **20** hours.

IMPORTANT!

Check the drive battery and charger (supply cord, connector) for wear and damage before charging. Do not charge the battery if damage has occurred. Only replace with the same type and voltage rechargeable battery and charger supplied by the manufacturer.

- Only use the rechargeable battery (or equivalent replacement) and charger supplied with your vehicle.
- Always turn power off and charge battery after riding.
- The drive battery should be charged when depleted, or if not used regularly, once a month. Failure to charge the battery as directed will cause permanent damage to the battery and will void the warranty.

STEPS:

1. Locate Charging Port.
2. Plug Charger plug into unit Charging Port.
3. Plug Charger into Wall outlet.
4. When battery is fully charged, unplug charger from the wall outlet and disconnect from charger port.

NOTE: The charger may feel warm during the charging. If excessively hot, unplug and replace.

NOTE: This product has charging protection: When charging, all functions are turned OFF.

Porsche 911 GT3



SKU NO.: FR9911

Model: DK-P911

Applicable age: 37-95 months

Maximum weight: 50 KG /110LBS

Execution Standard:

GB6675&GB19865 EN71&EN62115 ASTM-F963



© 2025 Porsche AG. Porsche Crest, Porsche Logotype, 911 and GT3 are trademarks of Porsche AG used under license.



Warning: This is a Child's Toy and NOT intended for Off-Road Use.

Installation steps

1. Separe parts list

Car body 1 PC	Window shield 1 PC	Rearview mirror 1 Pair
Steering wheel 1 PC	Driver's seat 1 PC	Passenger's seat 1PC
Rear cover 1 PC	Black decoration of rear cover 1 PC	
Rear tail wing 1 PC	Support parts for rear tail wing 1 Pair	
Wheel cover 4 PCS	Decoration of wheels 4 PCS	Wheel cap 4 PCS
Wheels 4 PCS: Under 2 motors version - there is plum blossom connection part on each rear wheel; Under 4 motors version - there is plum blossom connection part on each wheel;		
Remote control 1 PC	Charger 1 PC	Spanner 2 PCS
Manual 1 PC	MP3 line 1 PC (not including with MP4 version)	
Decoration on dashboard 1 PC (not including with the MP4 version)		
4.7 inch MP4 player 1 PC (Optional 1)		
7 inch Removable MP4 player 1 PC (Optional 2)		
Screw bag: 1 PC Including: M12 gasket - 5 PCS (1 PC for spare part); M4*12mm screw - 20 PCS (2 PCS for spare parts); M10 nut - 1 PC (Spare part); M16 gasket - 2 PCS (Under 2 motors version);		

Instructions

WARNING!

For safety reasons,

- *please use this vehicle under adult guidance and supervision.
 - *do not use this product on main roads, slopes, highways or other dangerous places.
 - *children must wear shoes and protective gears when operating the vehicle.
 - *children should be seated with the seat belt fasten when driving.
 - *only load a maximum of 50Kg on the vehicle.
 - *only children aged 37 - 95 months should be allowed on this vehicle.
 - *use this toy strictly according to safety manual.
 - *please check the tires, breaks, steering wheels, seats and seat belts before operating vehicle.
 - *this toy vehicle should be used with caution and requires skill to avoid fall or collision with third parties.
 - *Non-rechargeable batteries are no to be recharged;
 - *The supply terminals are not to be short-circuited.
 - *Rechargeable batteries are to be removed from the toy before being charged;
 - *The toy should be regularly examined for damage to the cord,plug,anclosure and other parts,and in the event of such damage,they must not be used until the damage has been repaired.
 - Only use the battery specified by the manufacturer
 - Only use the charger specified by the manufacturer.
- Pictures are for reference only,please adhere to the original Products as standard

The product must be assembled by Adults.

Warning! Not suitable for children under 36 months.

Long cord. Strangulation hazzard.

Pictures are for reference only, please adhere to the original products as standard.

WARNING:

The car contains battery that are non-replaceable.

The instruction manual must be retained since it contains important information.

WARNING:

For the purposes of recharging the battery, only use the detachable supply unit provided with this toy.DC adaptor.

WARNING:

The remote control is not a toy. It is for adult use only, and should not be used by a child. A close adult supervision is always required. Reception range may change significantly with weather, battery, and other environmetnal conditions.

WARNING:

RISK OF FIRE.DO not bypass. Replace only with JR1922RXS-RM DC 12V Max 35A or HY2025RX-RM-12V DC 12V Max 40A or HY2005RX-RM-24V DC 24V Max 40A.

Instructions

01. While driving , adult supervision is required all the time
02. Always wear a helmet when driving
03. Please don't drive near road or on the footpath.
04. It is not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
05. It is recommended to drive this vehicle on smooth surface only.
06. Please don't drive this vehicle outdoors when it is raining.
07. Make sure that the vehicle stop completely before changing direction from forward to reverse
08. Please don't allow children to operate the charger or play with the battery
09. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children about safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connection of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Please don't let children touch the wheels or be near them when the car is moving.
20. Please mind fingers when opening and closing doors.

WARNING:

 
To reduce the risk of injury, adult supervision is required. Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 2 riders.

Warning: This toy has no brake.

Warning: This toy cannot be used in the sands.

Installation steps

2. Names of spare parts

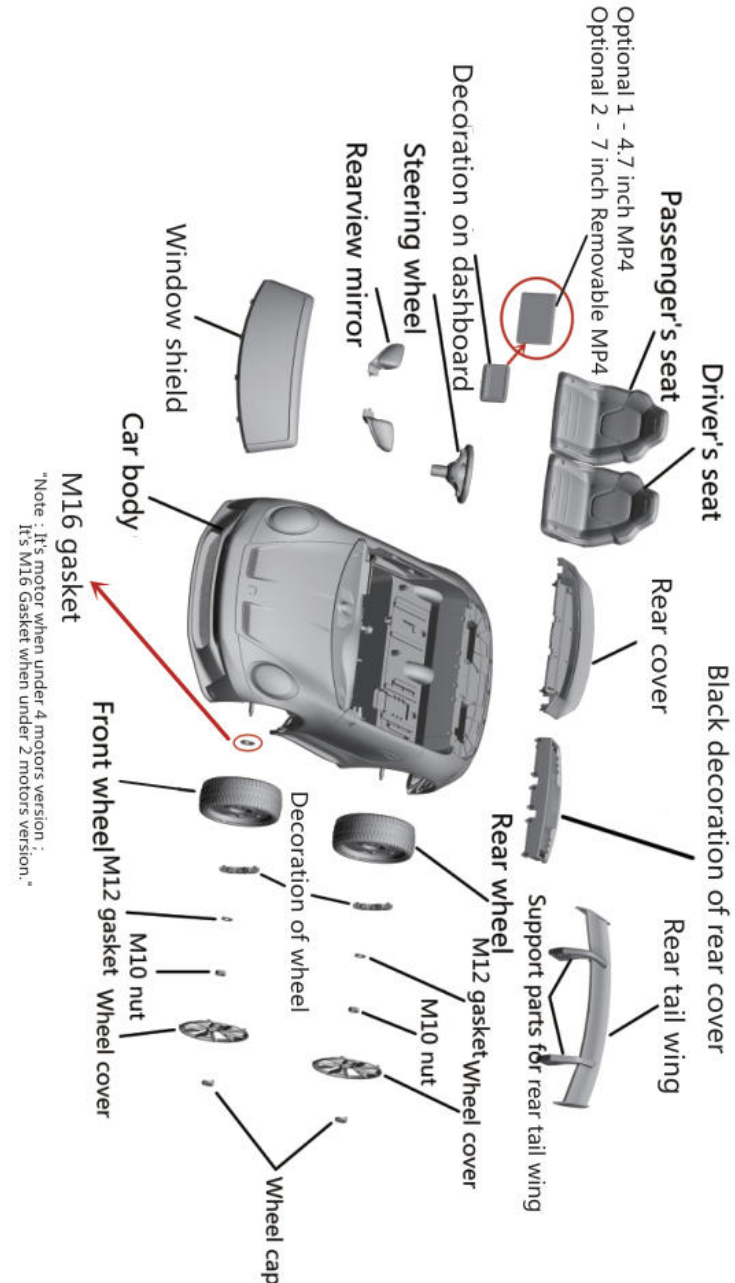

Installation steps

 
3. Installation steps

Step 1: Install front wheels

A: Install decoration of wheels onto the front wheels.

B: Under 2 motors version: install spare parts onto front axle following the sequences: M16 gasket - Front wheel - M12 gasket - M10 nut - Wheel cover - Wheel cap.

C: Under 4 motors version: install spare parts onto front axle following the sequences: Front driving motors(already installed) - Front Wheel - M12 gasket - M10 nut - Wheel cover - Wheel cap.

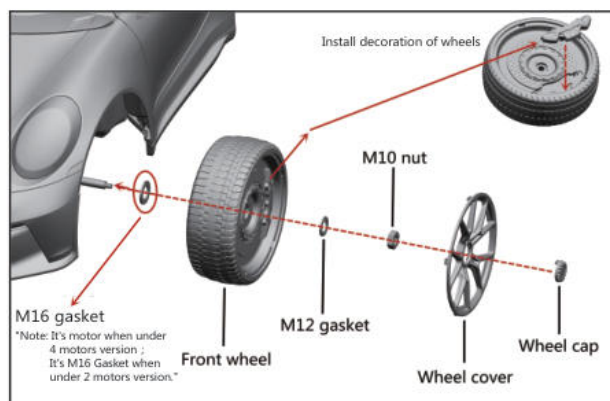

Step 2: Install rear wheels

A: Install decoration of wheels onto the rear wheels.

B: Install spare parts onto rear axle following the sequences: Rear wheel - M12 gasket - M10 nut - Wheel cover - Wheel cap



Instructions

Troubleshooting

Problem: The vehicle cannot be driven.

 
Cause of the problem: the battery is insufficient

Please charge in time after each use, and charge at least once a month. It is recommended to charge for 8-14 hours, not more than 20 hours.

Problem:The car does not move.

Answer: The battery is low, please charge for 8-14 hours but not exceeding 20 hours.

Charge at least once a month to keep the battery cells active.

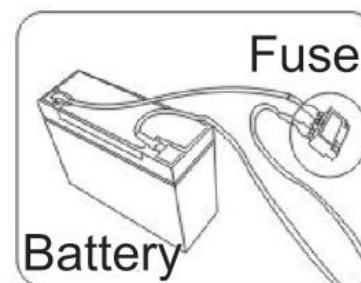

To avoid short fuse or power cut off:

1. Do not overload the product. Max load is 50 Kg.
2. Do not drag any item behind this product.
3. Do not allow water or any liquid into electric parts.
4. Do not change wire system without a professional.

TROUBLESHOOTING

Problem:The car only runs for a short time.

Answer 1: The battery is low, please charge for 8-14 hours but not exceeding 20 hours.

Charge at least once a month to keep the battery cells active.

Answer 2: The battery may need to be replaced depending on its charging history and age.

Problem:The sound does not work.

 
Please ensure the volume is turned up and the MP3 line is not connected. Sounds from steering wheel will not work when MP3 is plugged in.

Problem:Charger overheating.

It is normal for battery and charger to be slightly warm during charging. If the charger feel excessively hot, please check for a current overload or battery short circuit.

Instructions

6. Remote control frequency matching

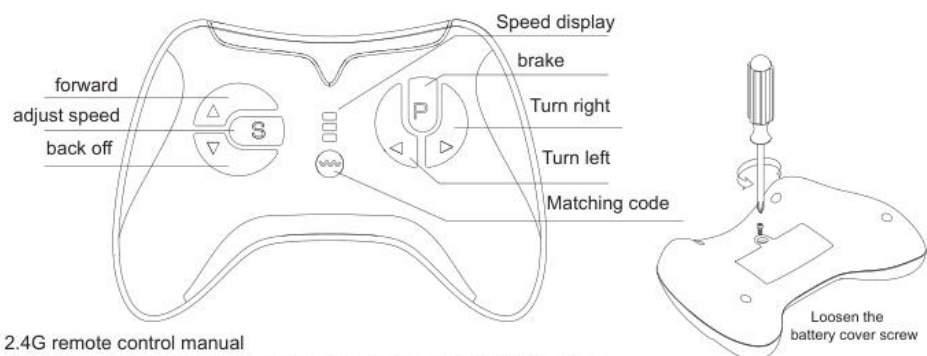

2.4G remote control manual

he first use requires code matching. This product has built-in memory, and it is unnecessary to code after replacing the battery.

1. Turn off the power of the car body, press and hold the "m" key of the remote control, the first indicator light starts to flash after 3 seconds, and then release the key

 
2. At this time, turn on the power switch of the car body, the first indicator light of the remote control will become normally on, and the code matching is successful

3. When the remote control is not in use, it will enter the sleep state after 10 seconds. Press any key to wake up.

4. Key function description: "forward", "backward", "left", "right", "s" speed regulation, "P" brake.

Press the "s" key to set the speed, one light is low speed, two lights are medium speed, three lights are high speed, only medium speed when reversing

Press the "P" key to enter the braking state, the indicator lights all flash, and press the "P" key again to exit the braking state

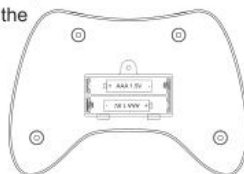

7. Remote control instructions

Warning! It is not suitable for children under 3 years old.

There are small parts inside and there is a risk of suffocation

-Install two AAA / 7 (1.5V) dry batteries as shown in the figure

-Use a non rechargeable battery, do not charge the battery

-Different types of batteries or old and new batteries cannot be mixed

-Take out the battery from the product in time when the battery runs out

-The positive and negative terminals of the power supply shall not be short circuited

-The package of this product contains important information, please keep it

Warning! The remote control should be used by a guardian.
There are small parts inside and there is a risk of suffocation.
Please keep away from children.

Installation steps

 
Step 3: Install steering wheel

A: Remove 1 PC of M5*35 screw and 1 PC of M5 nut from the steering shaft hole.

B: Connect the steering wheel properly with the lines on dashboard.

C: Insert steering wheel into dashboard, make sure align the steering wheel with the steering shaft hole.


D: Use 1 PC of M5*35 screw and 1 PC of M5 nut to fix.

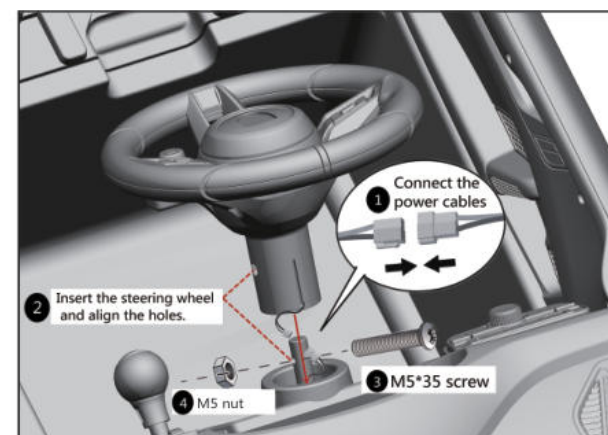

Step 4: Install decoration on dashboard or 2 kinds of MP4 players

A: Insert the decoration on dashboard or the 4.7 inch MP4 (optional 1) into the dashboard slot.

 
B: Insert the 7 inch Removable MP4 (optional 2) from top to bottom into fixing plate.

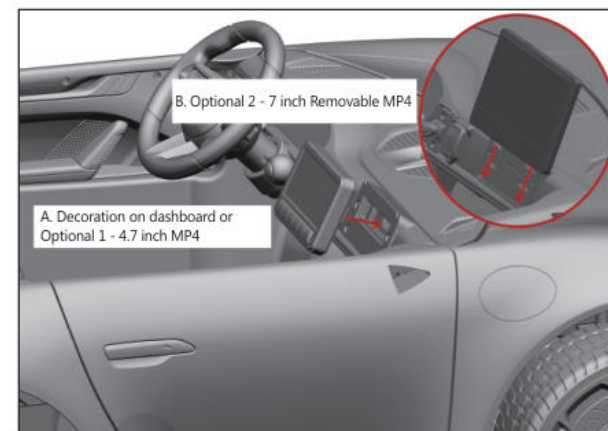

Installation steps


Step 5: Install window shield

 Stuck the window shield into the car according to the figure below.

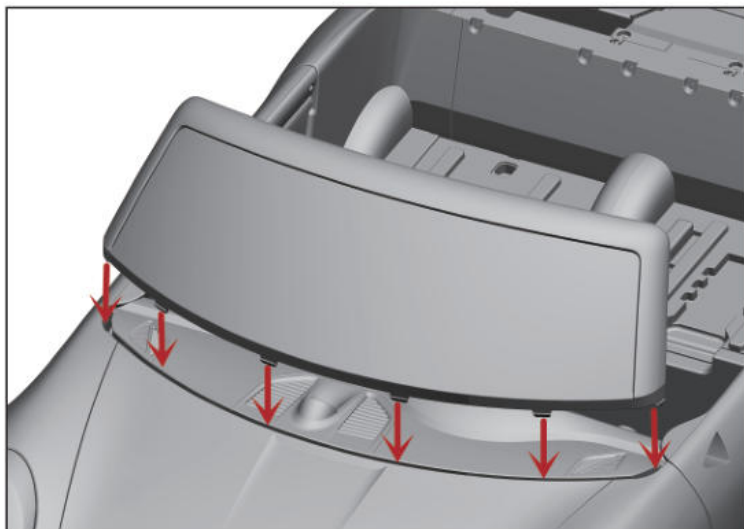


Step 6: Install rearview mirrors

 Stuck the rearview mirrors(left and right) into the sides of the car according to the figure below.

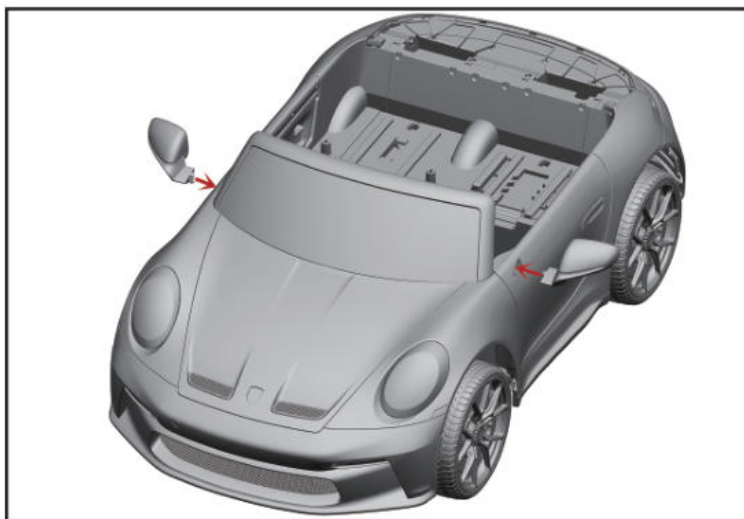

Instructions

 4. Introduction for switches

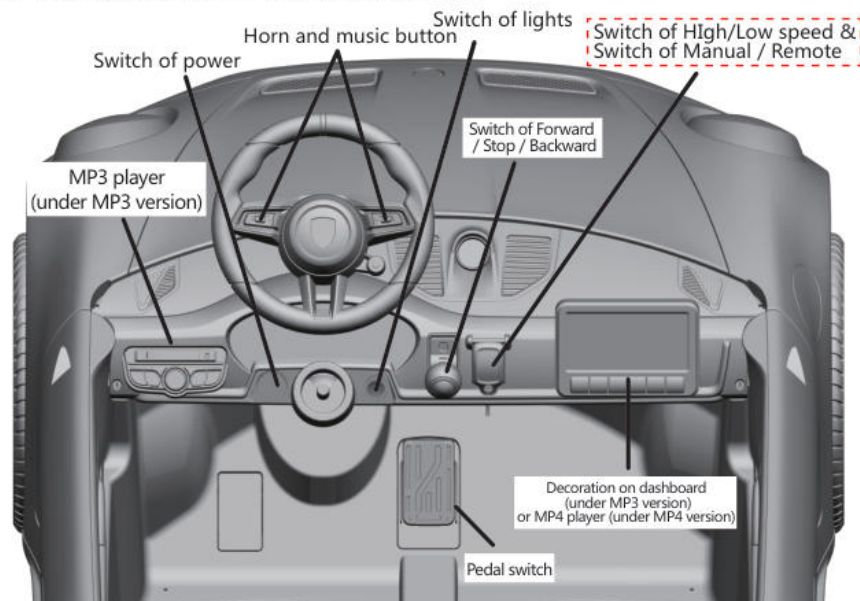


Description for the switch of Manual / Remote:

Under the Manual: the car only can drive by the child;

Under the Remote: the car only can drive by the remote control;

 5. Introduction for MP3

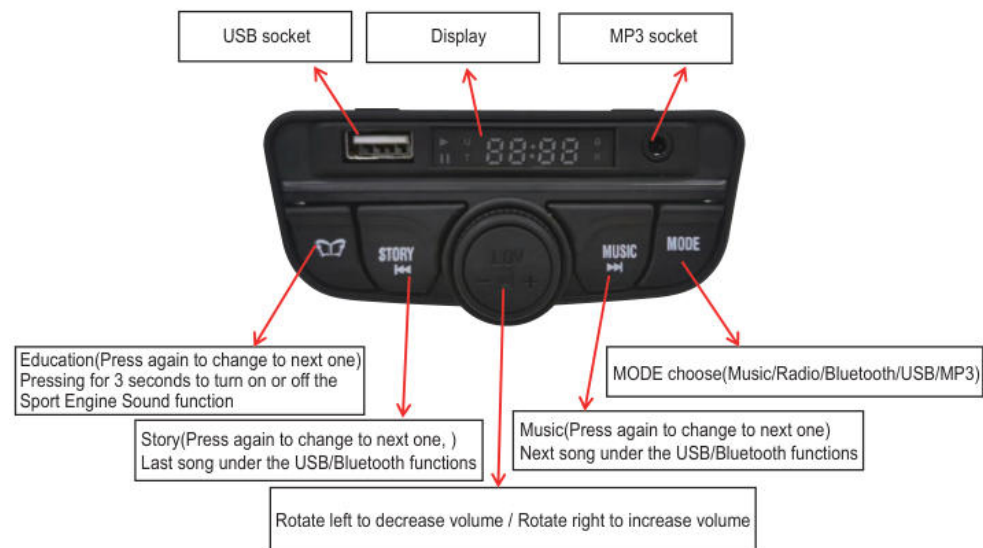

Instructions


Step 13: Install the assembled rear tail wing

Stuck the assembled rear tail wing into the car according to the figure below.



Diagram of the 2 hidden tugboats

 When the car is powered off, it can be easily pulled by adults. Adults need to pull out the 2 hidden tugboat under the car and lift the front of the car.

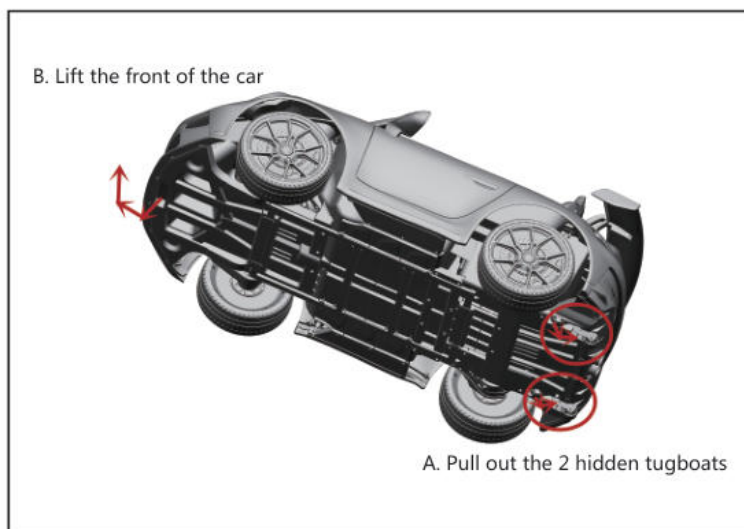


Installation steps

Step 7: Connect the power


Connect power cables with red plug in part.

 * Diagram of power connection and battery compartment as below:

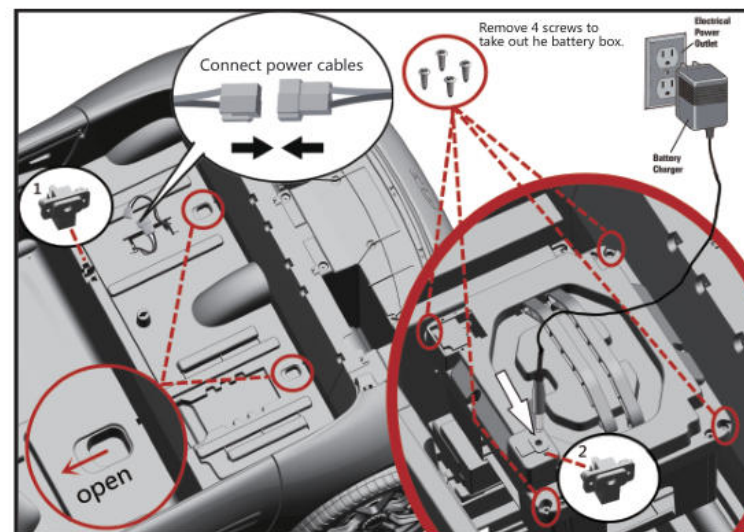

Step 8: Install rear cover

 
Insert the rear cover into the slot, and secure it with 4 pcs of M4*12mm screws.

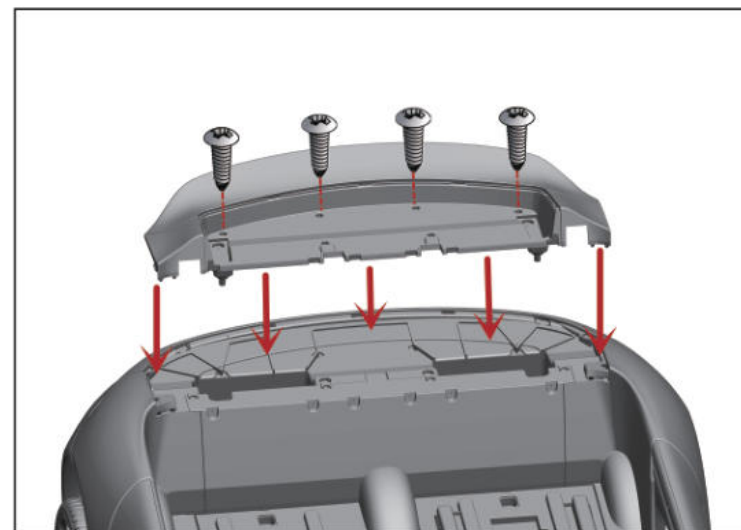

Installation steps


Step 9: Install black decoration of rear cover

 Insert the black decoration of rear cover into the slot, and secure it with 10 pcs of M4*12mm screws.

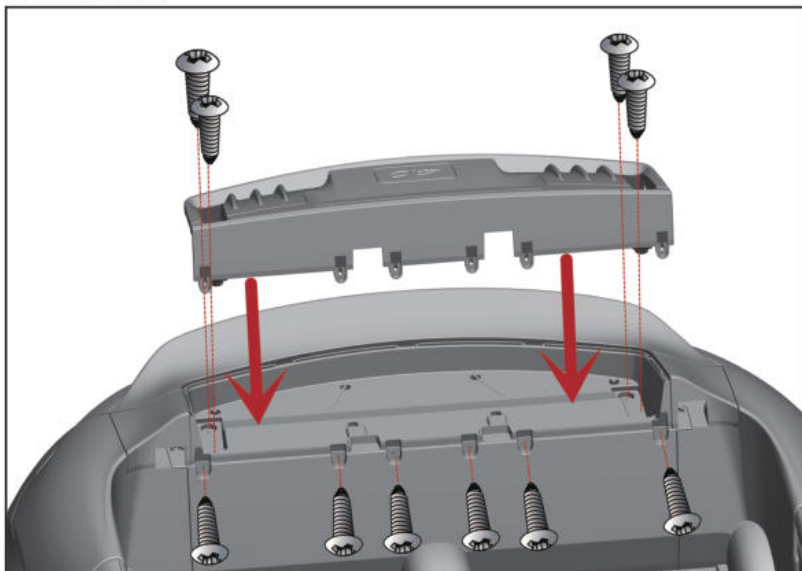

Step 10: Install passenger's seat

 - A: Put the passenger's seat into the car.
- B: Fix the seat by locking the lock catch.

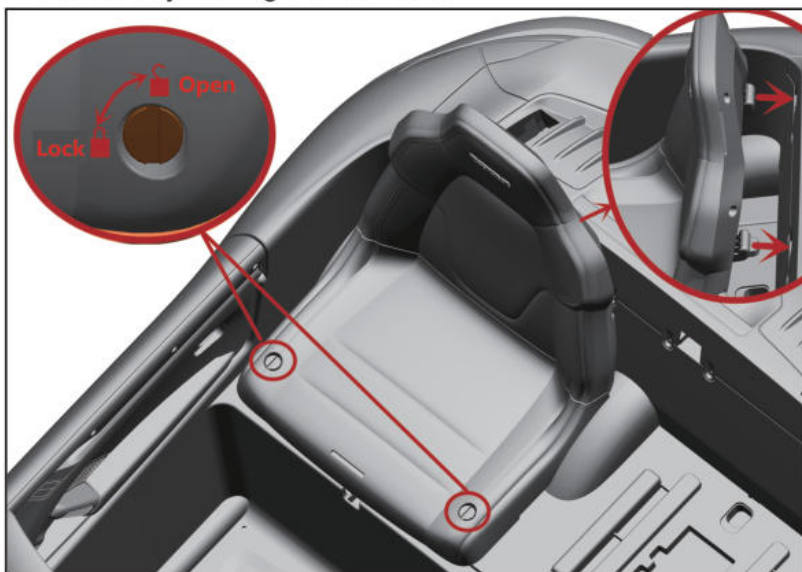


Installation steps

Step 11: Install driver's seat

A: Pull the driver's seat with the sliding handle under the driver's seat as shown in the figure;

B: Slide the driver's seat into the base slot, ensure that the driver's seat is properly secured to the base, then pull the driver's seat to the end to place it in the car body slot.

 * Driver's seat slides forward and backward with 3 gears.

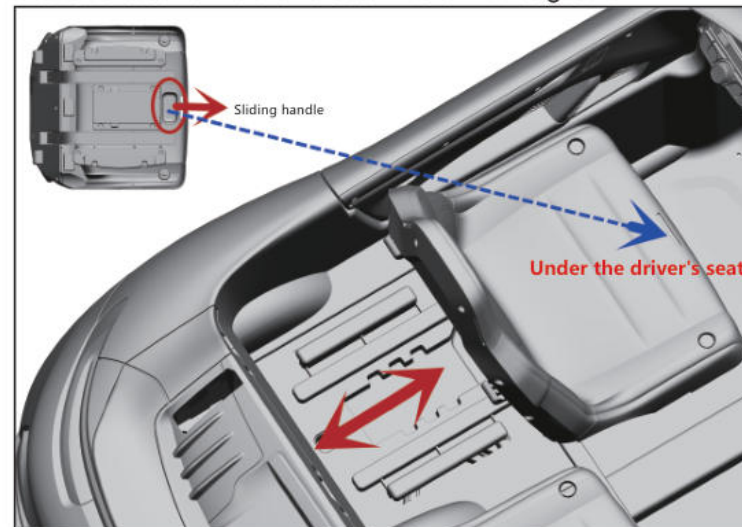

Step 12: Install support parts for rear tail wing

Insert the support parts for rear tail wing into the both sides of rear tail wing, and secure it with 4 pcs of M4*12mm screws.

