


Assembly Instruction


PART LIST

Ax4

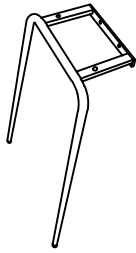


Seat leg

Bx2

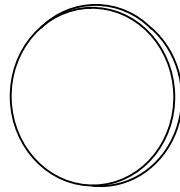


Cushion

Cx2

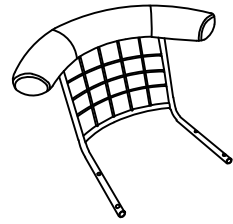


backrest

Dx2

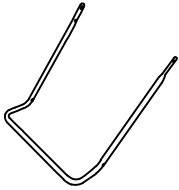

Footrest

Ex20

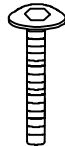

Long screw

Fx8




Short screw

Gx1




Wrench

Step 1

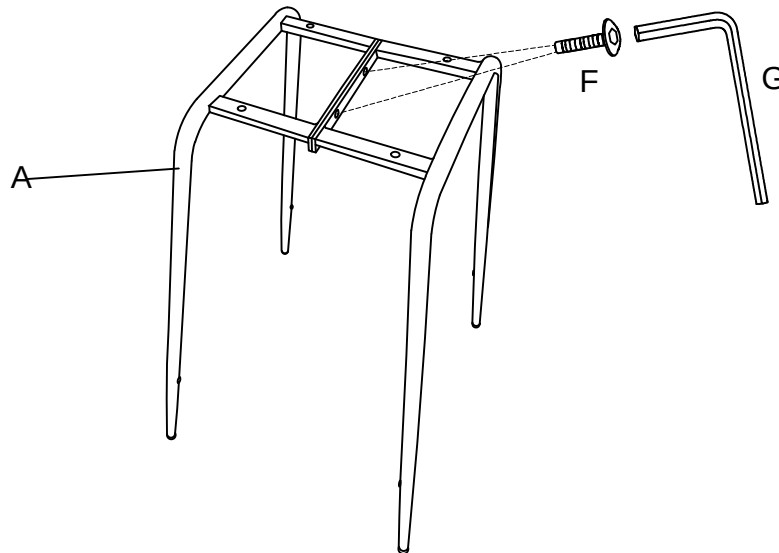


Fix the two legs with two short screws. Do not tighten the screws at this time. Adjust the four legs to be flat and then lock the screws.

Step 2

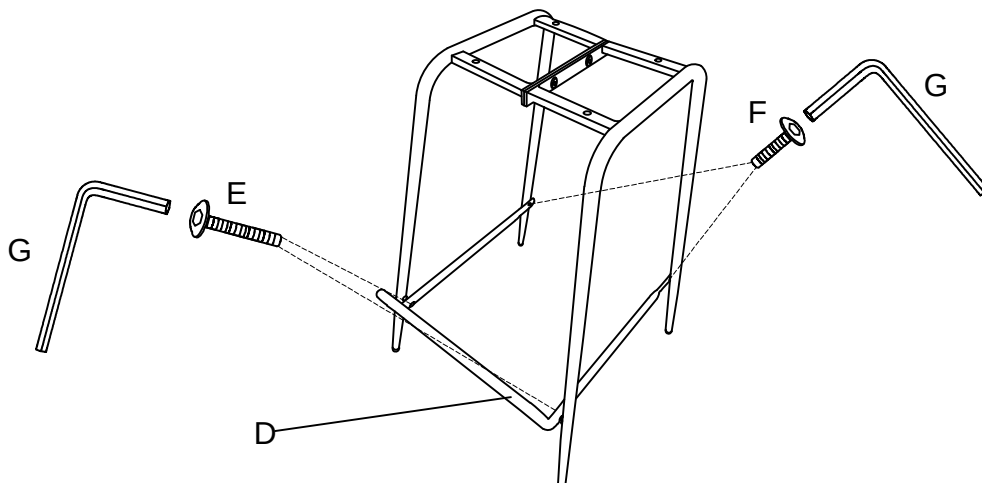


Install the front leg of the foot rest with two long screws and the rear leg with two short screws. If the hole position of the rear leg screw is not aligned, you can use force to break it to adjust the hole position.

Step 3

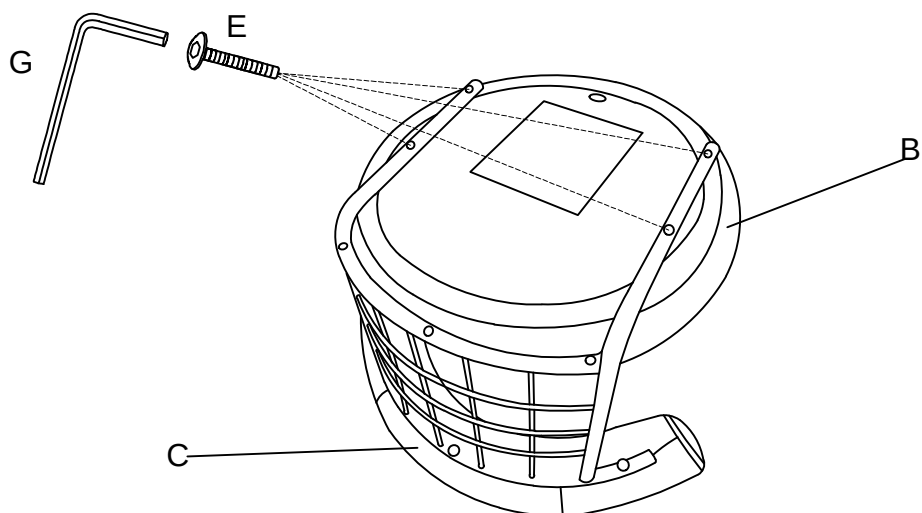

Install the cushion with 4 long screws.

Step 4

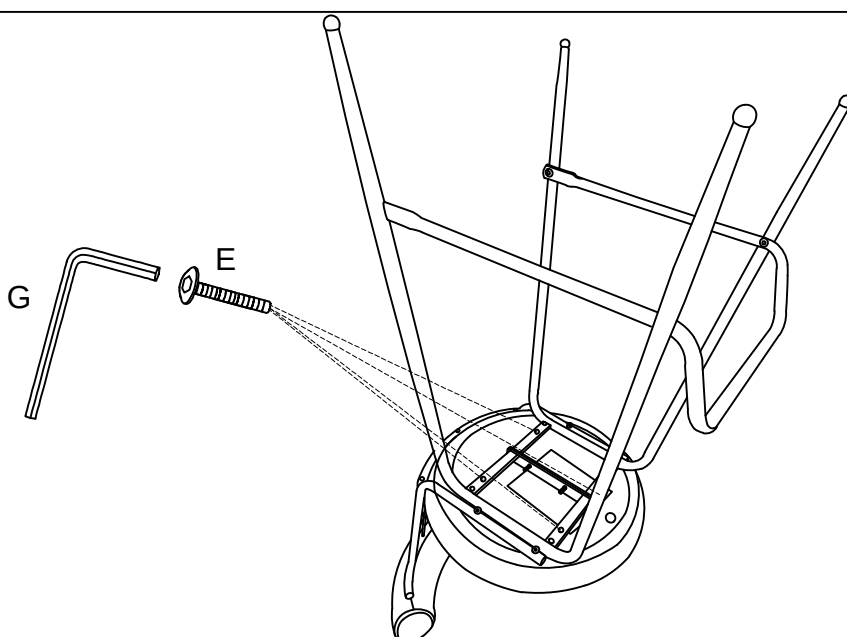

Install the foot with 4 long screws.

Step 5

