



SuncoastArcade.com
727-692-9762

516 & 3,516 Game Board Quick Start Guide

The 516 and 3,516 game boards are offered on several different models and styles of arcade machines from Suncoast Arcade. This guide is for all arcade machine styles that offer the 516 and 3,516 game boards.

Turning on the arcade machine:

Use the 3 prong cord that was shipped with your arcade machine. Plug the cord into the wall and turn on the arcade machine using the on/off switch directly above the plug.

Navigating the menu:

Use the joystick to highlight a game. Up/down will go 1 game at a time while left/right will go page by page. You can hit the 1 player button to bring up the search menu (shown in the picture to the right). This will allow you to search games or filter them by type.



Selecting a game:

Use the 1 player A button to select a game.



Exiting a game:

To exit a game press and hold the 1 player button for approximately 5 seconds.

Switching between vertical and horizontal on 3 sided Cocktail arcade machine:

On the 1 player side press and hold the B button for 5 seconds



Changing the volume:

Open the cabinet and located your game board.

On the back of the game board there is a small disk.

That is your volume control.

