

Instruction, Use & Care Manual

Please save this manual for future reference.

Thank you for purchasing this product. This product has been manufactured with the highest standards of safety and quality.

Product Name:	Holiday Inflatable
----------------------	--------------------

Operating Instructions

BEFORE USING THIS PRODUCT: READ, UNDERSTAND AND FOLLOW THESE INSTRUCTIONS.



Important Safety Instructions

- This is a seasonal decoration and is not intended for permanent installation or year-round use. It is recommended not to use for more than 90 consecutive days.
- Do not attempt to inflate during unusually strong winds. If it becomes too windy for safe operation, simply allow your inflatable to deflate, secure it, and wait for better conditions before re-inflating.
- This is an electric product – not a toy. Keep the product out of the reach of children to avoid any accidents or electrical shocks.
- Protect the electric fan and power cord from exposure to water. This precaution will reduce the risk of electrical shock.
- Do not use anything with this product that is not included in the original manufacturer's packaging when purchased.
- Do not expose the product to sharp items, as these may cause rupture and damage.
- The repair of the damaged main connection cable is only allowed for a qualified technician.
- Do not hang ornaments or other objects.
- Do not close door or window onto the power cord or extension cords, as this may damage the product's wire insulation.
- Do not secure the wiring of the product with staples, nails or other sharp objects, or place wiring on sharp hooks or nails.
- When the temperature is below 5° F (-15° C), the motor may temporarily stop running. The motor will begin functioning again higher temperatures.

Instruction, Use & Care Manual

Please save this manual for future reference.

Product Name:	Holiday Inflatable
----------------------	--------------------



WARNING:

This inflatable has a plug that will fit into a polarized outlet only one way. This is a safety feature. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug. Reference the National Electrical Code. ANSI/NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.

For a cord-connected or direct plug-in power unit. do not install or use Within 10 feet of a pool.

For a cord-connected or direct plug-in unit, do not use in a bathroom.

This is an electric product – not a toy. Keep the product out of the reach of children and pets, to avoid the risk of fire, burns, electrical shock, or serious personal injury. Extra caution is necessary when using this product near children. Do not allow children or pets to play near the product.

Always unplug the product from the electrical outlet when leaving the house, retiring for the night, or when it is not in use.

Do not mount or place near a gas or electric heater, fireplaces, candles, or similar sources of heat.

Do not use attachments not recommended or sold by the product manufacturers, as a risk of fire, electrical shock, or serious personal injury.

Do not use anything with this product that is not included in the original manufacturer's packaging when purchased.

Instruction, Use & Care Manual

Please save this manual for future reference.

Product Name:	Holiday Inflatable
----------------------	--------------------



WARNING: Risk of Electric Shock. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover. Mount the unit at a height greater than 1 foot from the ground surface. Don't plug in the power when it is in the box.



WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Instruction, Use & Care Manual

Please save this manual for future reference.

Product Name:	Holiday Inflatable
----------------------	--------------------

To Set Up and Use

Remove contents from packaging.

1. Place inflatable in a clean, open area, free from obstruction or other debris.
2. Roll out fabric and lay out the contents.
3. Plug in the adaptor in the appropriate electric outlet.
4. Turn unit upright. Make sure the air intake of fan is clear of fabric and free of obstruction.
5. Be sure the zipper is closed in order to let the inflatable figure fully inflate.
6. For quicker inflation, lift figure up when fan is blowing.
7. To secure the Inflatable from winds, insert a metal stake into the ground through each of the holes in the lower tabs of the inflatable figure.
8. Secure upper body using strings provided to side tabs and attach to additional ground stakes.
9. To deflate, unplug fan. For faster deflation, open zipper after unplugging adaptor.

Care and Maintenance

- Periodically check to ensure there are no holes or tears in the inflatable figure. If you find any tears in the fabric, you can repair them with needle and regular thread. Special thread is not necessary.
- Only use mild detergent with cold water and use a soft damp cloth to wipe clean the figure.
- Periodically unplug the product from the electrical outlet to allow the transformer and fan to cool down to avoid overheating and/or product damage.
- Neatly fold and store the product in a cool, dry location that is away from sunlight or heat sources.
- Unplug, roll up and store in original package or similar size box.
- Always keep the air vent of the motor base unobstructed and free from dirt and/or debris.

Troubleshooting Guide :

Item will not fully inflate.	Ensure zippers on the back of each inflatable figure are closed. Inspect fabric for tears and holes; repair if necessary. Make sure the fan is not obstructed by any debris or snow. Unplug fan from the electrical outlet and let cool down completely, before clearing debris.
Fan does not operate.	Ensure fan is plugged into a working outlet (for indoors, a standard AC outlet, for outdoors a GFCI outlet). Fan may be overheated. Unplug the fan from the electrical outlet and let cool down completely.

MADE IN CHINA