 


Operating Manual

STEAM FLOOR POLISHER

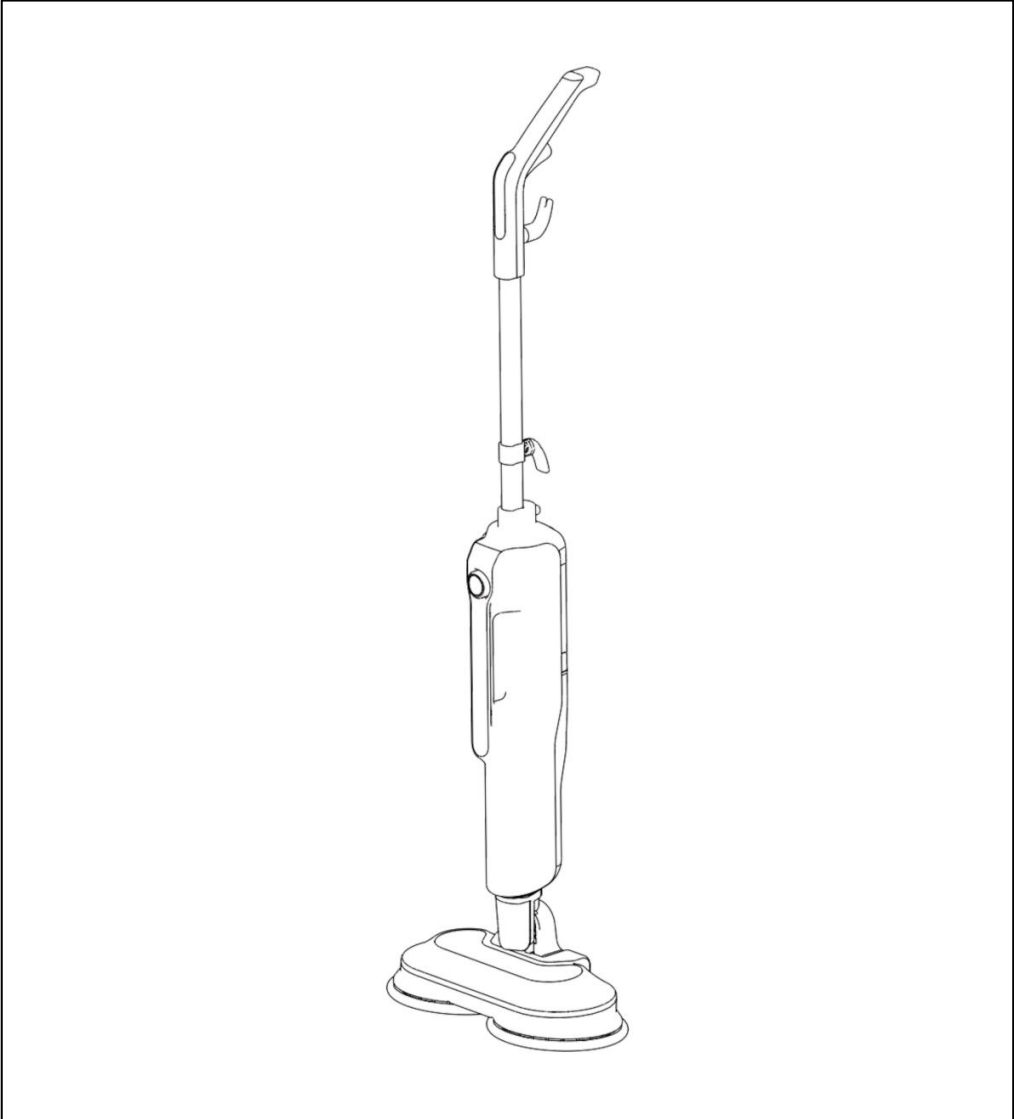

GUARANTEE

At Russell Hobbs, we take all our customer feedback seriously.

Feel free to contact our Customer Services Team who will be more than happy to assist you.

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship, the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which are supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.
- This does not affect your statutory rights.

IMPORTANT SAFETY INSTRUCTIONS

- It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to electrical parts.
- Do not remove parts from the appliance such as screws.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Do not use with damaged cord or plug.
- This product is intended for household use only. Do not use outdoors.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
- Do not direct at people, animals, electrical outlets, or equipment containing electrical components.
- The use of accessory attachments, detergents or cleaning solutions not recommended by the appliance manufacturer may cause fire, electric shock, injury or damage. Use only those as recommended by the manufacturer.
- Descale the product monthly using 50% white vinegar & 50% water solution.

IMPORTANT SAFETY INSTRUCTIONS

- Do not use in enclosed spaces filled with vapour, such as paint thinner, moth proofing substances, or any flammable or combustible vapours.
- Do not use on leather, wax polished floors, natural wood and/or unsealed floors, and any fabric not recommended for steam treating. If in doubt, consult the flooring manufacturer and test an inconspicuous area.
- Do not store with a wet pad attached.
- Do not immerse in water, such as for cleaning.
- Clean pads at least monthly.
- Distilled or demineralized water will maximise the performance of the mop.
- Quality testing during manufacture may result in water droplets remaining in the tank. This is normal.
- If you shake this product, the water cut-off valve will make a rattling noise. This is normal and is not a defect.
- **The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.**
- **The appliance has to be unplugged after use and before user maintenance.**
- **A hazard may occur if the appliance runs over the supply cord.**
- **Only use water in this appliance, the max capacity for the water tank is 350ml.**

Important: Please ensure the power cable is wrapped loosely on the cable holders. Wrapping the power cord too tightly can cause damage.

IMPORTANT SAFETY INSTRUCTIONS

WARNING- THIS APPLIANCE MUST BE EARTHED

 
 
This appliance is designed to operate from a mains supply of 220-240V~ 50/60Hz. Check that the voltage marked on the product corresponds with your supply voltage.

This product is fitted with a **10A** fuse complying with BS1363. If this plug is unsuitable, damaged or needs to be replaced, contact customer services.



Symbol IEC 60417-5597 (2002-10) is used on the unit to indicate that this unit operates with hot water vapour (steam). To avoid scalding and burns take extra care when in use.

PRODUCT OVERVIEW

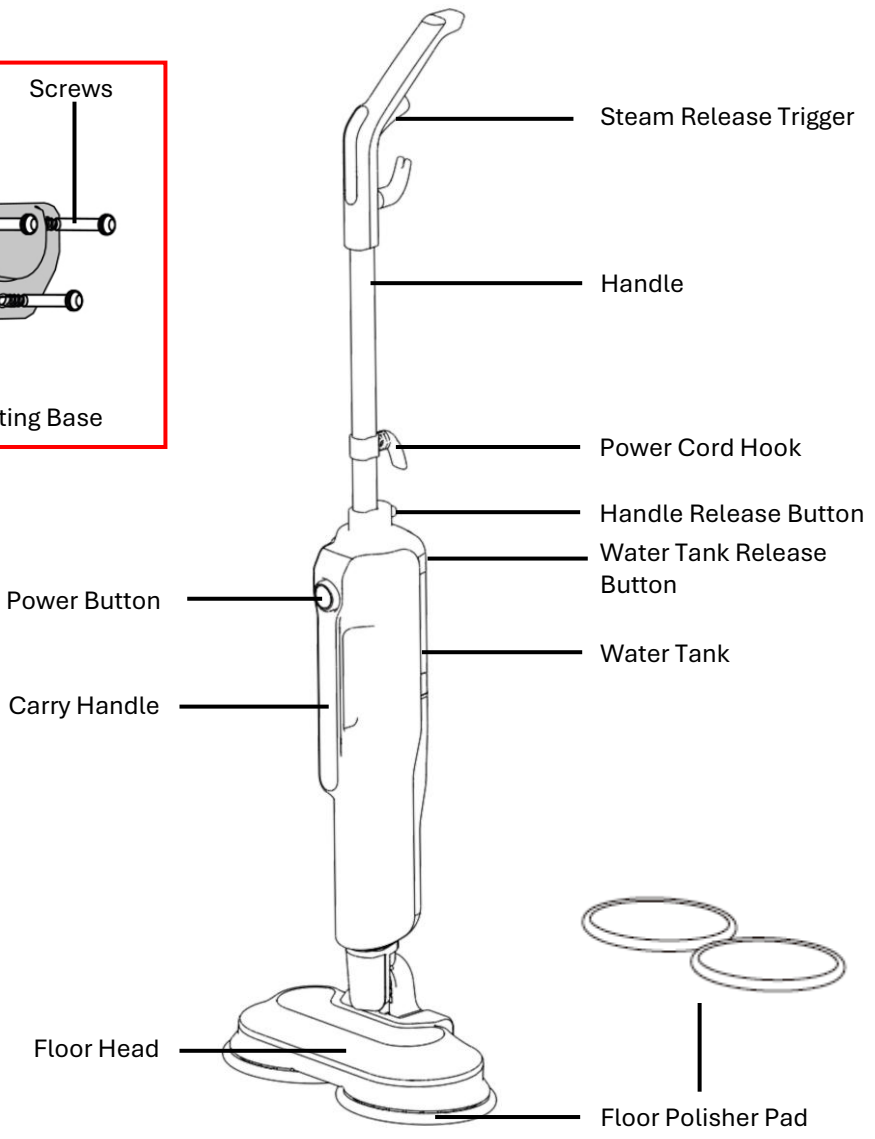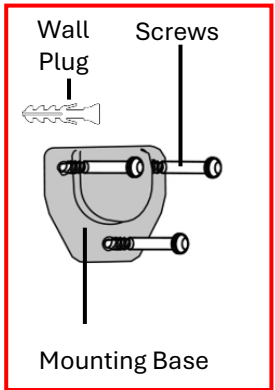

ASSEMBLY

Installation of Main Body

Insert the handle and floorhead into the corresponding position of the main body until a click is heard. To disassemble, press the 'Handle Release Button'.



Installation of Mop Pads

Attach the mop pads to the floor head, ensuring the loop and hook fasteners are aligned.



 
Note: The floor head may scratch floor surface if the unit is operated without the mop pad attached.

OPERATION GUIDE

Filling the Water Tank

Press the 'Water Tank Release Button' and slide the water tank out of the main unit.


Fill up to the max line with clean water and re-insert the tank into the main unit. **The maximum capacity of the water tank is 350ml.**

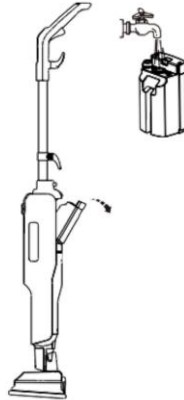

Note: Use of detergent or shampoo is not recommended for this unit. Use clean water only.

Using the Steam Floor Polisher

 1. Plug in the power cord.
2. Press the power button and the indicator light will flash to indicate the mop is preheating. When the light remains solid, the mop is ready to use.
3. Press the steam release trigger to operate the rotating mop pads.

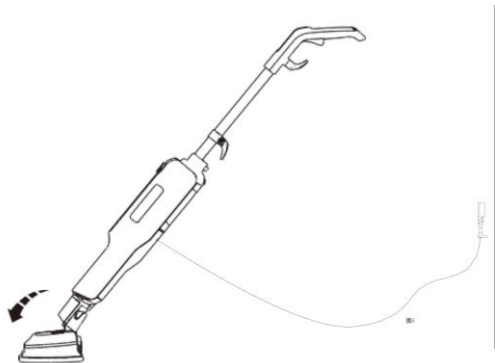


CARE AND MAINTINENCE

Storing the Steam Floor Polisher

Unplug the floor polisher and wrap the power cord around the power cord storage hooks.

Always remove the mop pad after cleaning has been completed.

 Wipe down the unit with a damp cloth to clean

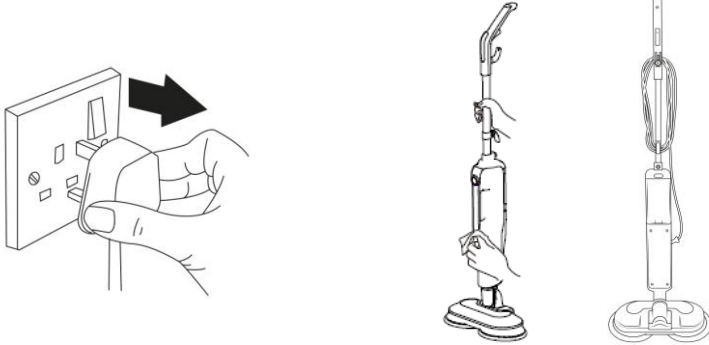


Note: Ensure the power cable is wrapped loosely on the storage hooks. Wrapping the power cord too tightly can cause damage.

Wall Mounting

Drill 3 holes in the appropriate positions to appropriate position and press wall plugs flush with the wall.

Use a screwdriver to attached the steam mop mounting base to the wall.

 The mounting base should be fixed at the same height as the steam mop handle to allow the mop to be stored upright.

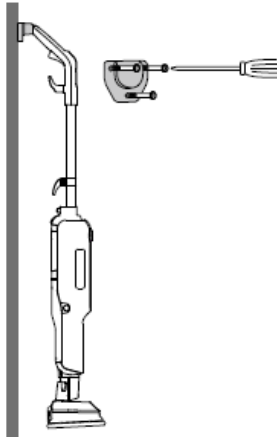


CARE AND MAINTINENCE

Replacing the filter

To prevent water hardness and blockages caused by limescale build up, it is recommended to replace the water filter every 6 months.

To replace the filter, remove the water tank from the main unit and then remove the filter.

 Insert the replacement filter and push down until a click is heard to confirm this has been fitted securely.

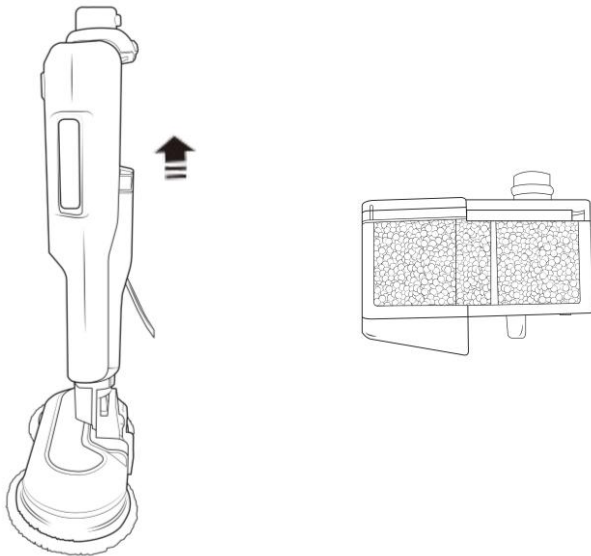

Note: Replacement filters can be purchased direct from Russell Hobbs and selected retailers.

 
Washing the mop pads

The mop pad is machine washable up to 40°C. Allow to air dry complete before re-using. Do not iron the mop pad.

REPLACEMENT MOP PADS

Only use official Russell Hobbs microfibre mop pads with this appliance.

Replacement pads **sets** can be purchased direct from Russell Hobbs and selected retailers.

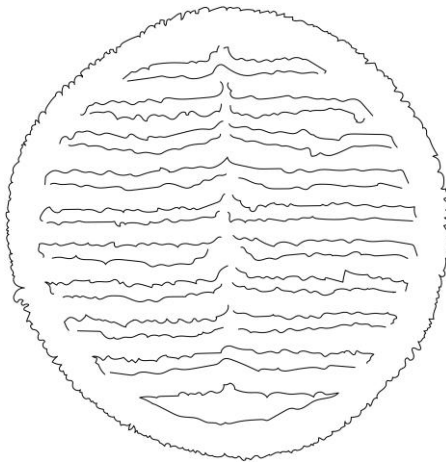

WARNING

Symbol IEC 60417-5597 (2002-10) is used on the unit to indicate that this unit operates with hot water vapour (steam). To avoid scalding and burns take extra care when in use.



WARNING: Danger of scalding

PROBLEM SOLVING

Reduced steam/no steam is coming out	<ul style="list-style-type: none">• Check the water tank is filled• Check the appliance is plugged in correctly
The appliance smells	<ul style="list-style-type: none">• Check the microfiber pad is clean• Wash the microfiber pad in a washing machine or warm soapy water and allow to dry naturally• If first time use, new parts heating may cause a smell but this will dissipate quickly
A puddle has formed/the floor is soaking wet	<ul style="list-style-type: none">• The mop pad is saturated• Wash the mop pad and allow to dry naturally, or replace with a new pad• If still too much water, contact customer services
Parts have broken	<ul style="list-style-type: none">• Contact customer services
The mop pads aren't cleaning in the washing machine	<ul style="list-style-type: none">• Pads need replacing• Visit your local retailer, or contact customer services to purchase additional pads
The floor polisher has cut out	<ul style="list-style-type: none">• Allow the floor polisher to cool for 1 hour.

ENERGY CONSUMPTION

Product information for power consumption and maximum time to reach applicable low power mode

Off mode	Power Consumption (Off Mode)	0.3W
	Setting and the maximum time needed to reach the applicable low power condition	At once after the switch was turned off
Standby mode	Power Consumption (Standby)	Not applicable
	Setting and the maximum time needed to reach the applicable low power condition	The appliance does not incorporate a standby mode

TECHNIAL SPECIFICATION

Model Number	01
Rated Voltage and Frequency	AC 220-240V 50-60Hz
Net Capacity Clean Water	0.35 litres
Rated Power Input	1350-1550W
Dimensions	(H) 116 x (W)27 x (D)31 cm