 


- Press the power button briefly to wake the device from sleep mode; the battery indicator light will illuminate. Press and hold for 1.5 seconds to turn on the device, illuminating the display screen and blue ambient lighting.
- Press the power button repeatedly to switch between the washing timer modes: Quick Wash--Standard--Intensive. After selecting the desired mode, the machine will start after 2 seconds. The washing cycle consists of a 10-second forward rotation, a 1-second pause, and a 10-second reverse rotation.
- When washing is complete, the machine will stop operation, turn off the display, and enter sleep mode after 20 seconds.
- When the machine is in operation, Short press the function key to pause operation.press and hold the function key for 1.5 seconds to put the machine into standby mode.
- When the battery power is low, the power indicator light will flash to warn you, followed by a buzzer alarm and then shutdown.
- When the device is charging, the battery indicator flashes. Once fully charged, it remains lit. (Charging time is approximately 3-4 hours.)
- **Important note:**
  1. The machine will automatically enter sleep mode after 20 seconds of inactivity in standby mode.
  2. Do not turn on the machine to wash clothes while it is plugged in and charging.


## Specifications/Parameters

Charging Voltage	DC5V/2.0A	Waterproof Rating	IPX4
Power	10W	Battery Capacity	7.4V(2500mAhx2)
Model	YH-X1	YH-X2	YH-X3
Water Capacity	3.0L	4.0L	6.0L
Net weight	0.76kg	0.85kg	0.97kg
Gross weight	0.95kg	1.05kg	1.18kg
Product Size	185X185X200mm	185X185X260mm	185X185X318mm

## Product Components

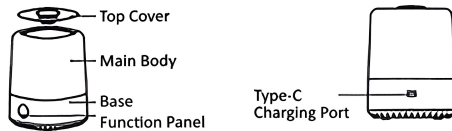

## Function Panel Description

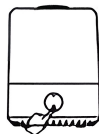

Function	LED display
Power indicator light (flashes when low on power or charging, stays on when fully charged)	
Quick Wash Mode (6-minute countdown)	06:00
Standard Mode (12-minute countdown)	12:00
Intensive Mode (20-minute countdown)	20:00

## Safety Precautions

- For your health, please do not mix your personal undergarments with other laundry.
- When using a charger with this device, please verify that the adapter parameters match those of the device. (5V/2.0A)
- Before use, ensure the power plug is dry, and do not plug or unplug the adapter with wet hands.
- Before first use, fully charge the battery. When the battery is low, please recharge it promptly.
- The product should not be exposed to direct sunlight for long periods of time, as this may damage its components.
- This machine is specifically designed for small underwear items. Do not overload it with excessive clothing and avoid adding too much water to prevent overflow.
- The base of the main unit should not be rinsed with water, and should not be used in humid environments.
- When using the machine, close the lid before turning it on to prevent water from spilling out when the machine is agitating.
- When the wave wheel is rotating, do not manually stop it, as this may damage the machine.
- Children should not play with this product.
- This product is not suitable for people with physical or mental disabilities, or those who lack necessary experience and knowledge, unless used under the supervision of someone responsible for their safety.

## Packing List

Open the carton and check that the box should contains the following accessories.

Product:1pc

Manual:1pc

TYPE-C Data Cable:1pc



## Attention

- After each use, please fully charge the battery so that it is ready for the next use.
- After continuous operation for 20 minutes, please wait 10 minutes before using again to protect the service life of the machine.
- Do not put your hands into the machine while it is operating.
- Do not immerse the machine in water.

## Troubleshooting

If your appliance is not working properly, please refer to the information below to resolve the issue or contact us for assistance.

Troubles	Reasons	Troubleshooting Methods
Clothes rotate abnormally	Excessive clothes or insufficient water added	Add an appropriate amount of clothes or water as instructed
Device does not power on	Power supply is not properly connected	Check the socket and ensure the power adapter is properly plugged in
Unable to charge	Check whether adapter parameters match the required specifications or not	Replace with a charger that meets the device's parameter requirements
Automatic shutdown	Automatic shutdown	Automatic shutdown occurs after the set washing mode is completed

## How to use

① When using the machine, first place the items to be washed in the laundry basket. (Suitable for washing items: underwear, socks, baby summer clothes, beauty sponges, etc.)

**Note: Do not mix different items for washing!**



③ Select the wash time as needed. Quick wash: 6 minutes of continuous washing; Standard: 12 minutes of continuous washing; intensive: 20 minutes of continuous washing.



② Add an appropriate amount of laundry detergent or specialized detergent for underwear, pour in enough water that covers the clothes, then close the lid.



④ After washing the clothes, remove them, drain the water, and rinse the inside of the washing machine with clean water. For the outer shell of the main body, wipe it with a damp cloth first, then dry it with a soft, dry cloth. Do not rinse it with water to avoid water entering the base.




### WARNING

- After each use of the machine, be sure to drain all water from the washing tub. Do not leave water in it for long-term storage, as this may lead to bacterial growth.
- Do not use cloths impregnated with chemical solvents, gasoline, kerosene, or polishing powder to wipe the machine.

## MINI WASHING MACHINE

### Manual

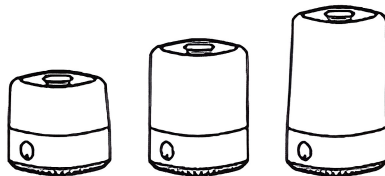

Model	YH-X1	YH-X2	YH-X3
Water Tank Capacity	3.0L	4.0L	6.0L
Baby Summer Clothes	1 piece	1 set	2 set
Underwear	2 piece	3 piece	4 piece
Socks	2 pairs	4 pairs	6 pairs

Suggest referring to the number of clothing items, please refer to the actual situation.

Thank you for purchasing our mini washing machine. Please read this manual carefully before using the product. After reading, please keep this manual for future reference. Pictures are for reference only. The product is subject to the actual item.