


POP-UP CANOPY TENT

Instruction Manual

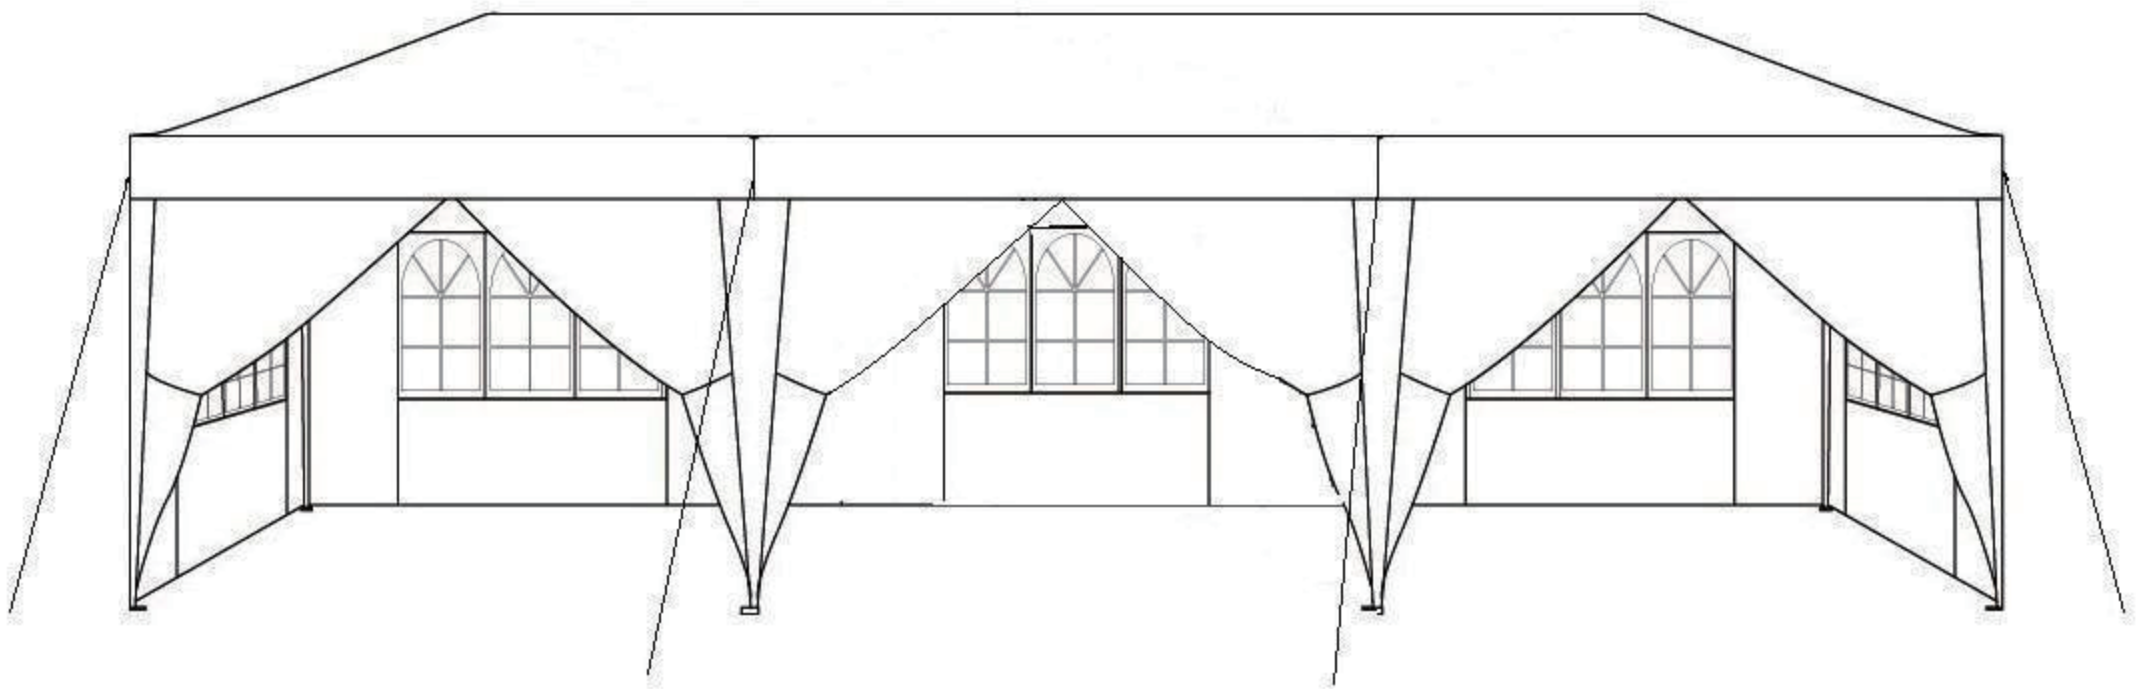

CONTACT US:24H,Mon~Sun.

✉ service@kmcglobe-us.com

☎ (USA) +1 213-816-4788

MADE IN CHINA

Save this manual for future reference

Read Before Assembly

- ⓔ ⚠ WARNING : Keep away from open flames.
- ⓓ ⚠ WARNUNG: Von offenen Flammen fernhalten.
- ⓕ ⚠ AVERTISSEMENT : Tenir à l'écart des flammes nues.
- ⓖ ⚠ AVVERTENZA: Tenere lontano da fiamme libere.
- Ⓢ ⚠ ADVERTENCIA: Manténgase alejado de llamas abiertas.
- Ⓝ ⚠ WAARSCHUWING: Uit de buurt houden van open vuur.
- Ⓟ ⚠ OSTRZEŻENIE: Trzymaj z dala od otwartego ognia.


English




01-06

PACKING INCLUDES


Frame X 1PC

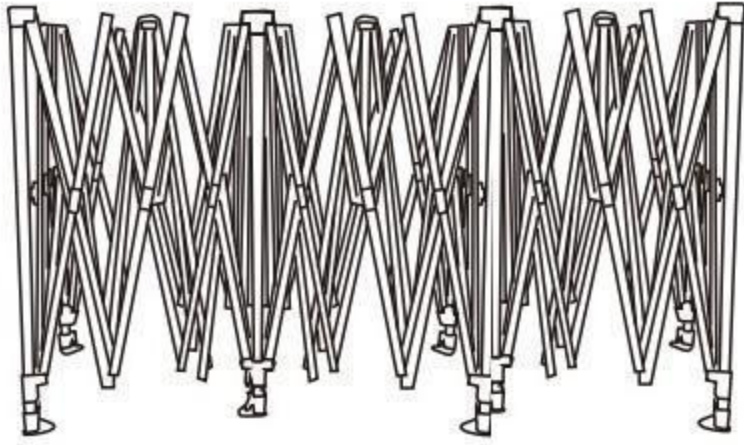

Canopy Top X 1PC

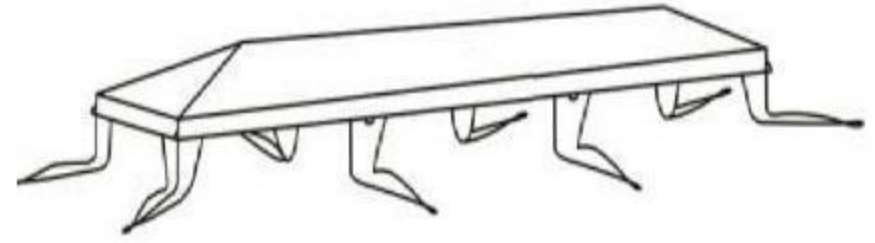

Sidewall with window X 5 PCS

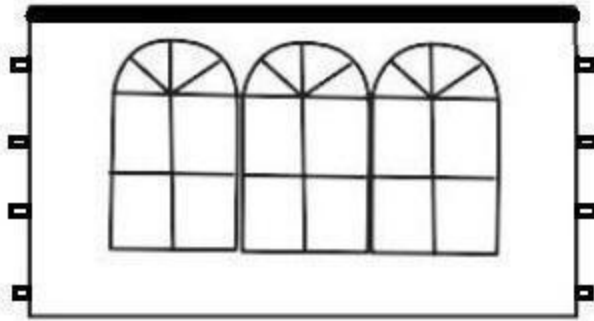

Zipper sidewall X 3PCS




Tent Stake X 16 PCS



Rope X 8 PCS



Carrying bag X 1 PC

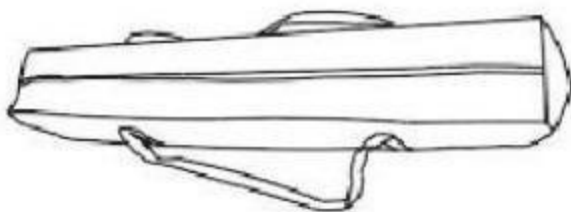


Sandbag X 4PCS




1. OPENING THE CANOPY FRAME

- With a person on each end, lift and partially pull the canopy frame apart.

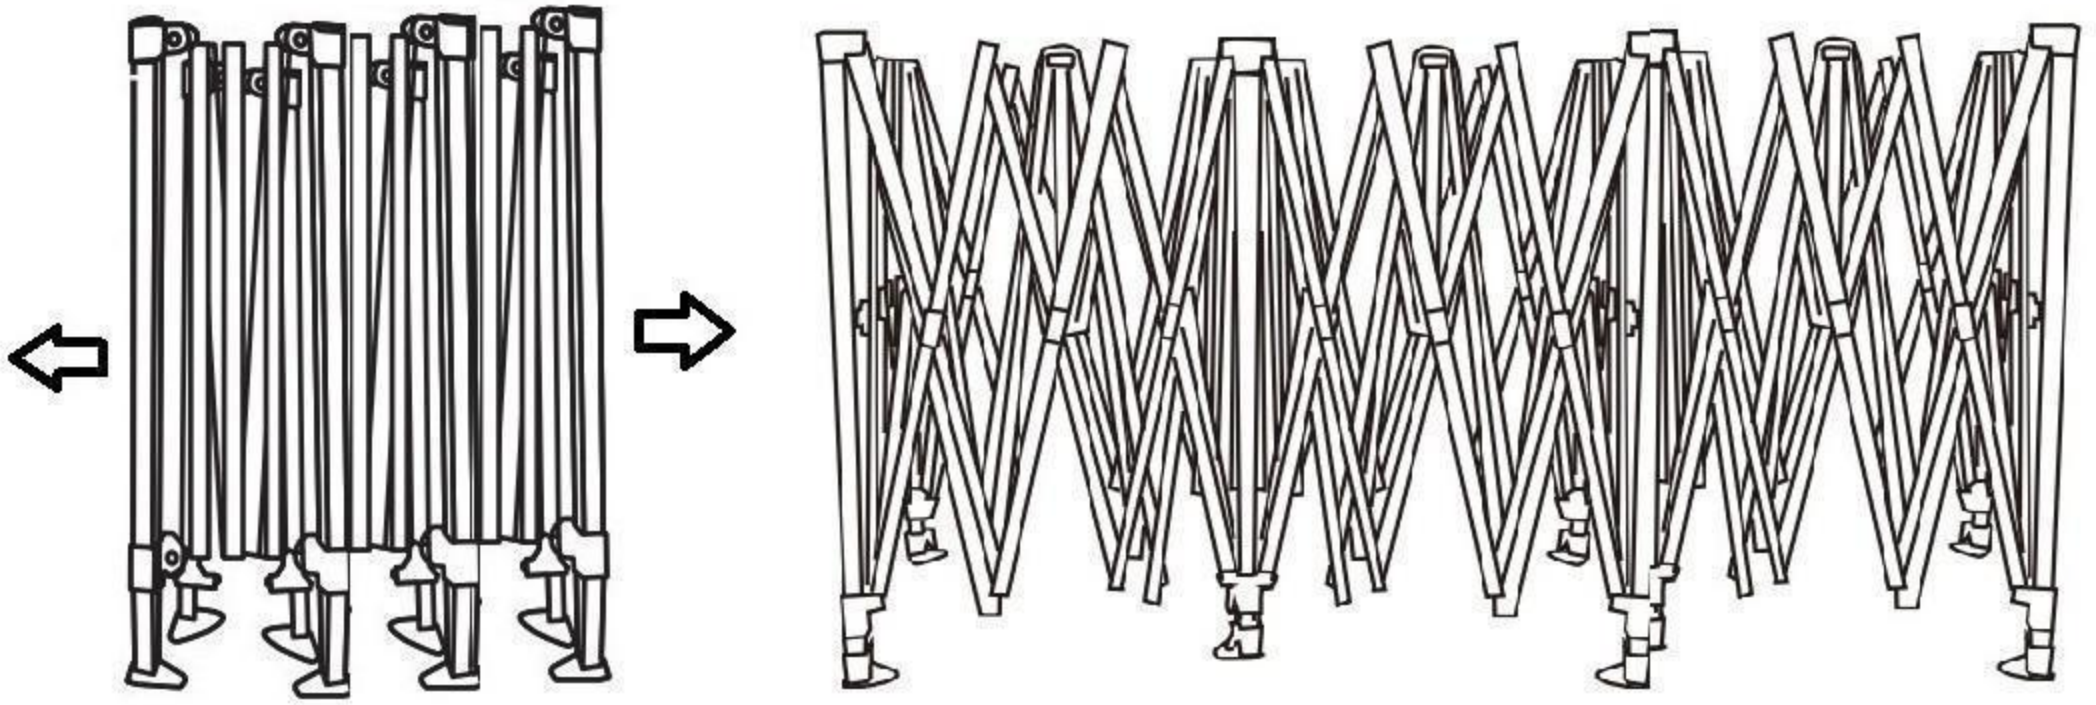


2. ATTACHING THE CANOPY TOP

- Unfold the canopy top and place on top of the canopy frame.
- Secure the canopy top to the corners of the canopy frame using the Nylon adhesive tape.

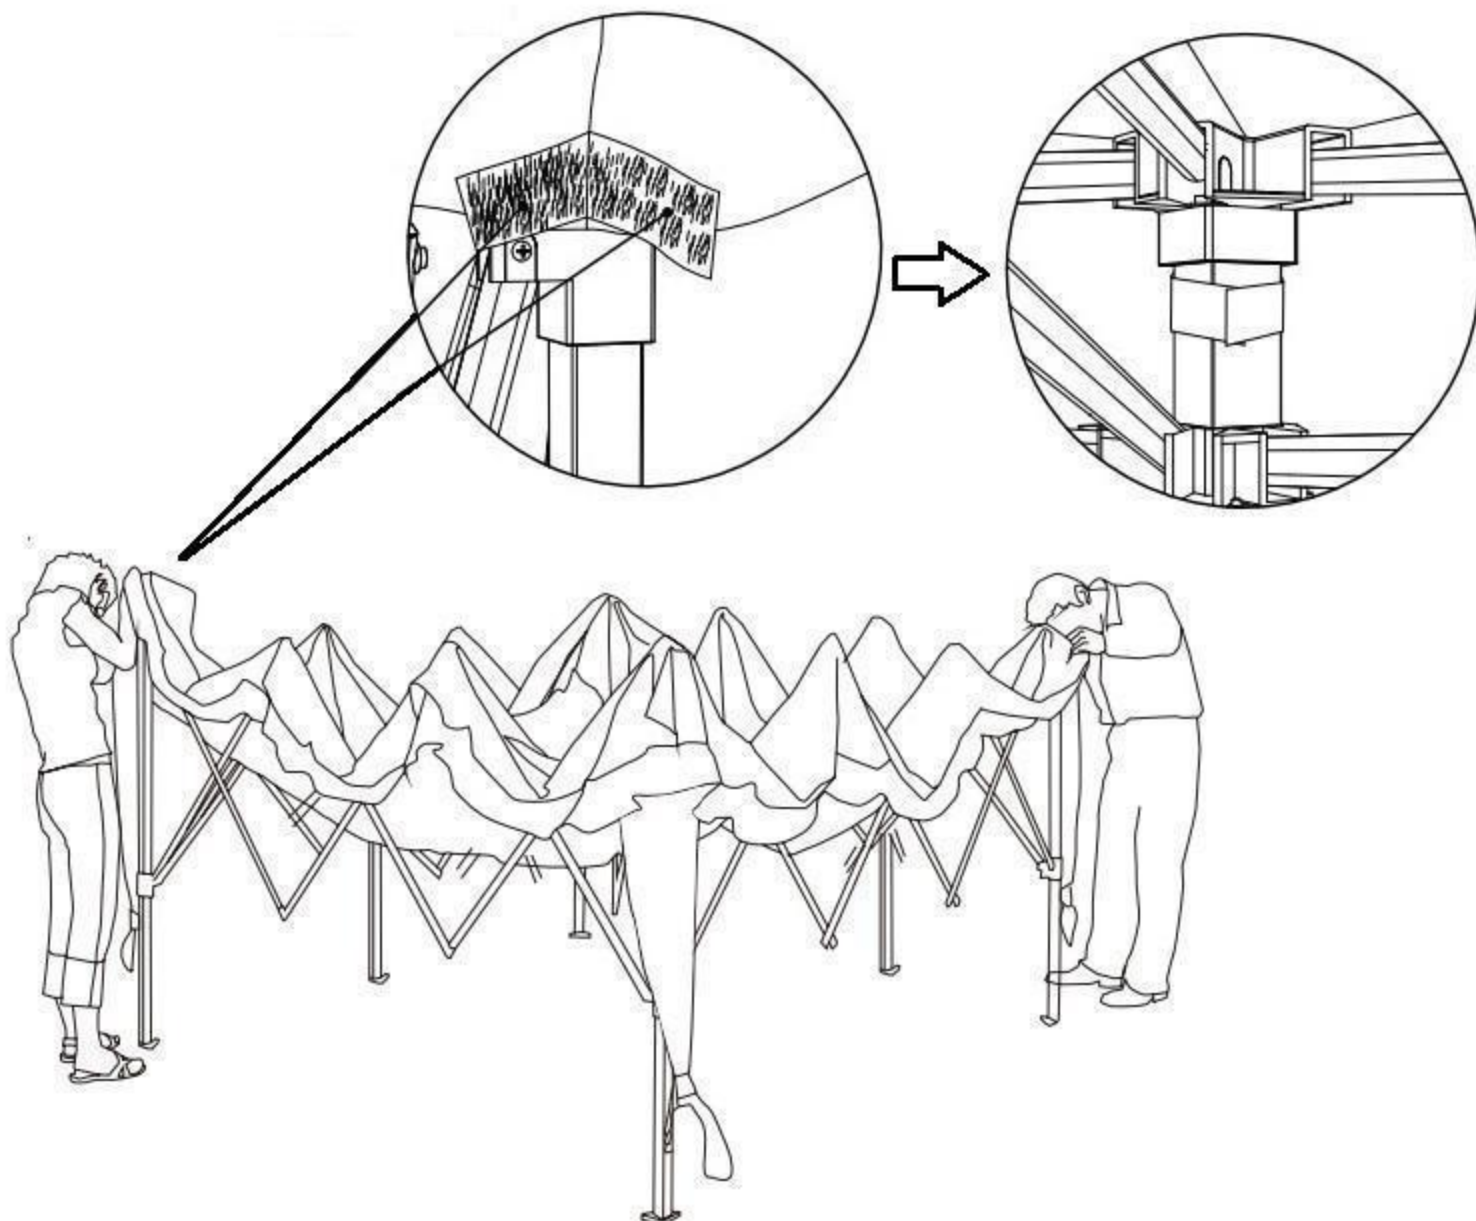


3. LOCKING THE FRAME

- From under the canopy, place one hand on the upper frame and use the other hand to push the central hub straight up until it clicks into the central pole.
- Finish attaching the large canopy inside the canopy frame using the Nylon adhesive tape.

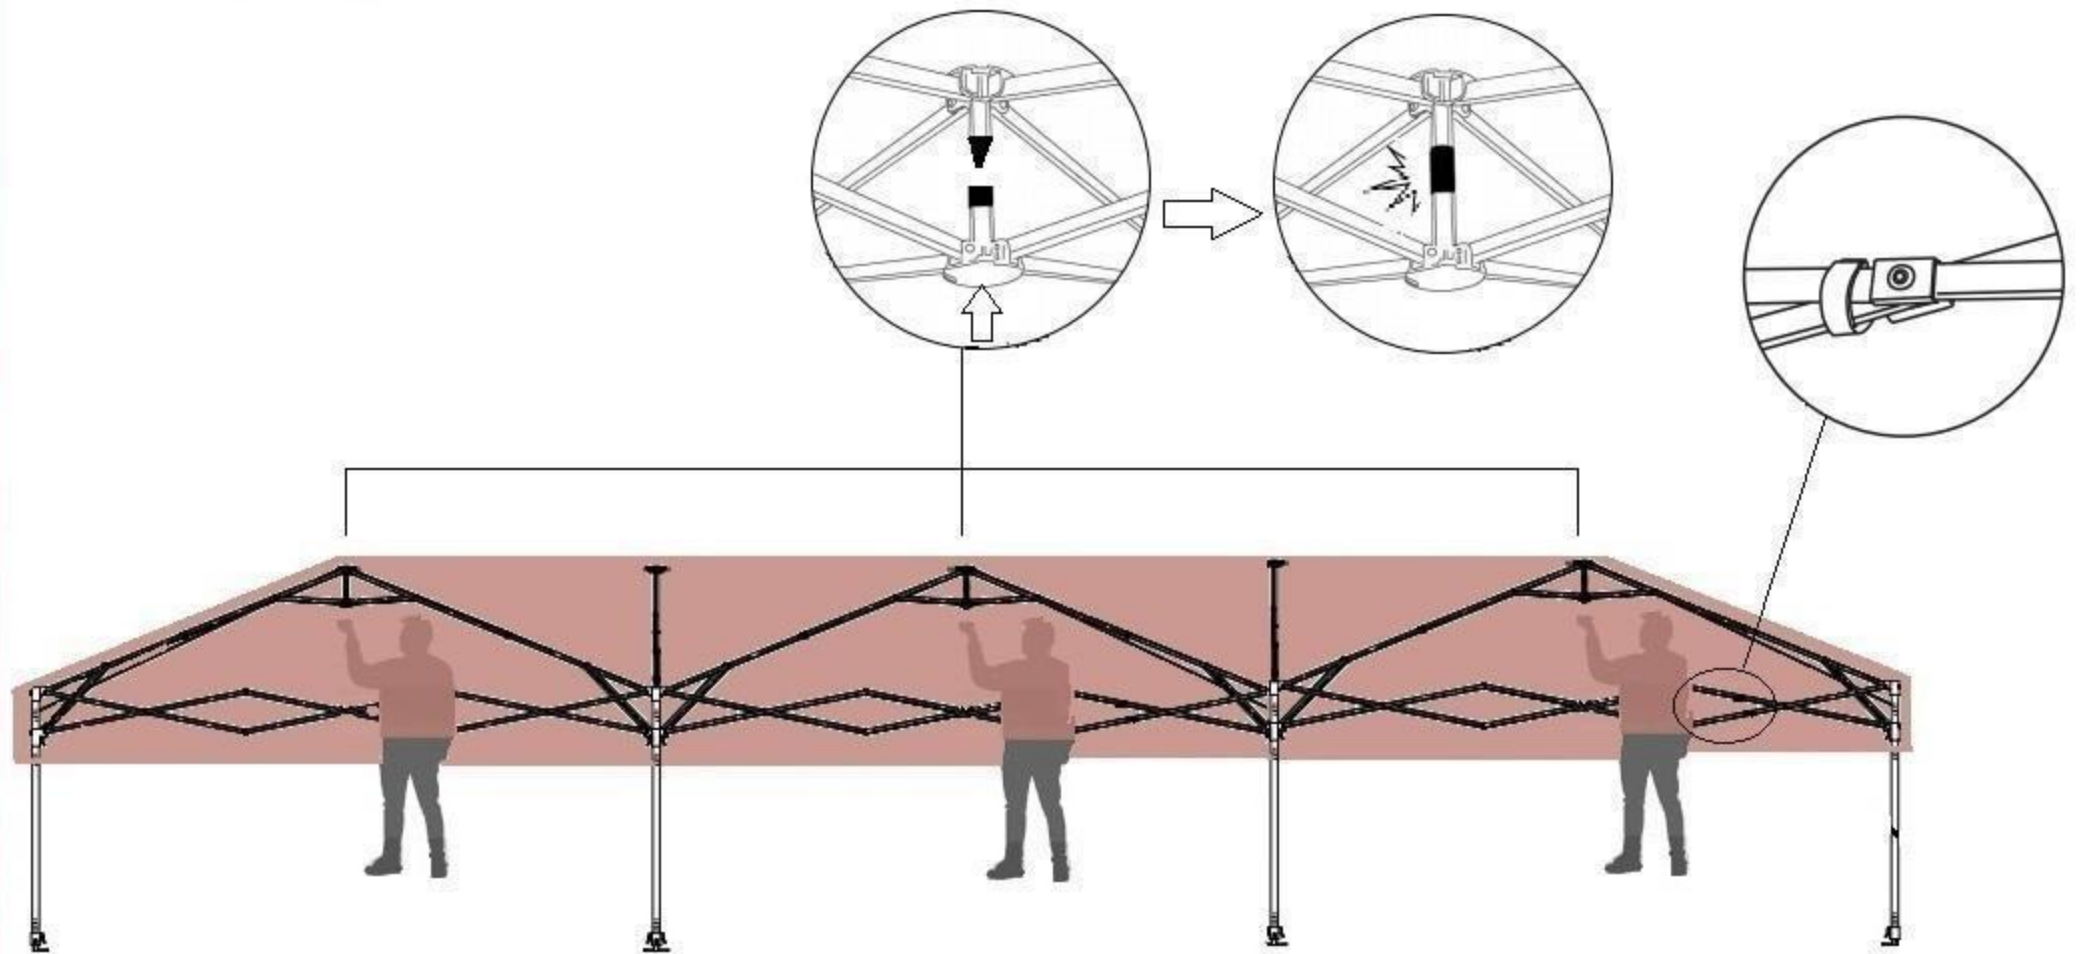


4. ADJUSTING THE CANOPY HEIGHT

- Press the red button on each leg and raise or lower to adjust the canopy height.
- Attach the iron hooks to the legs of the frame.

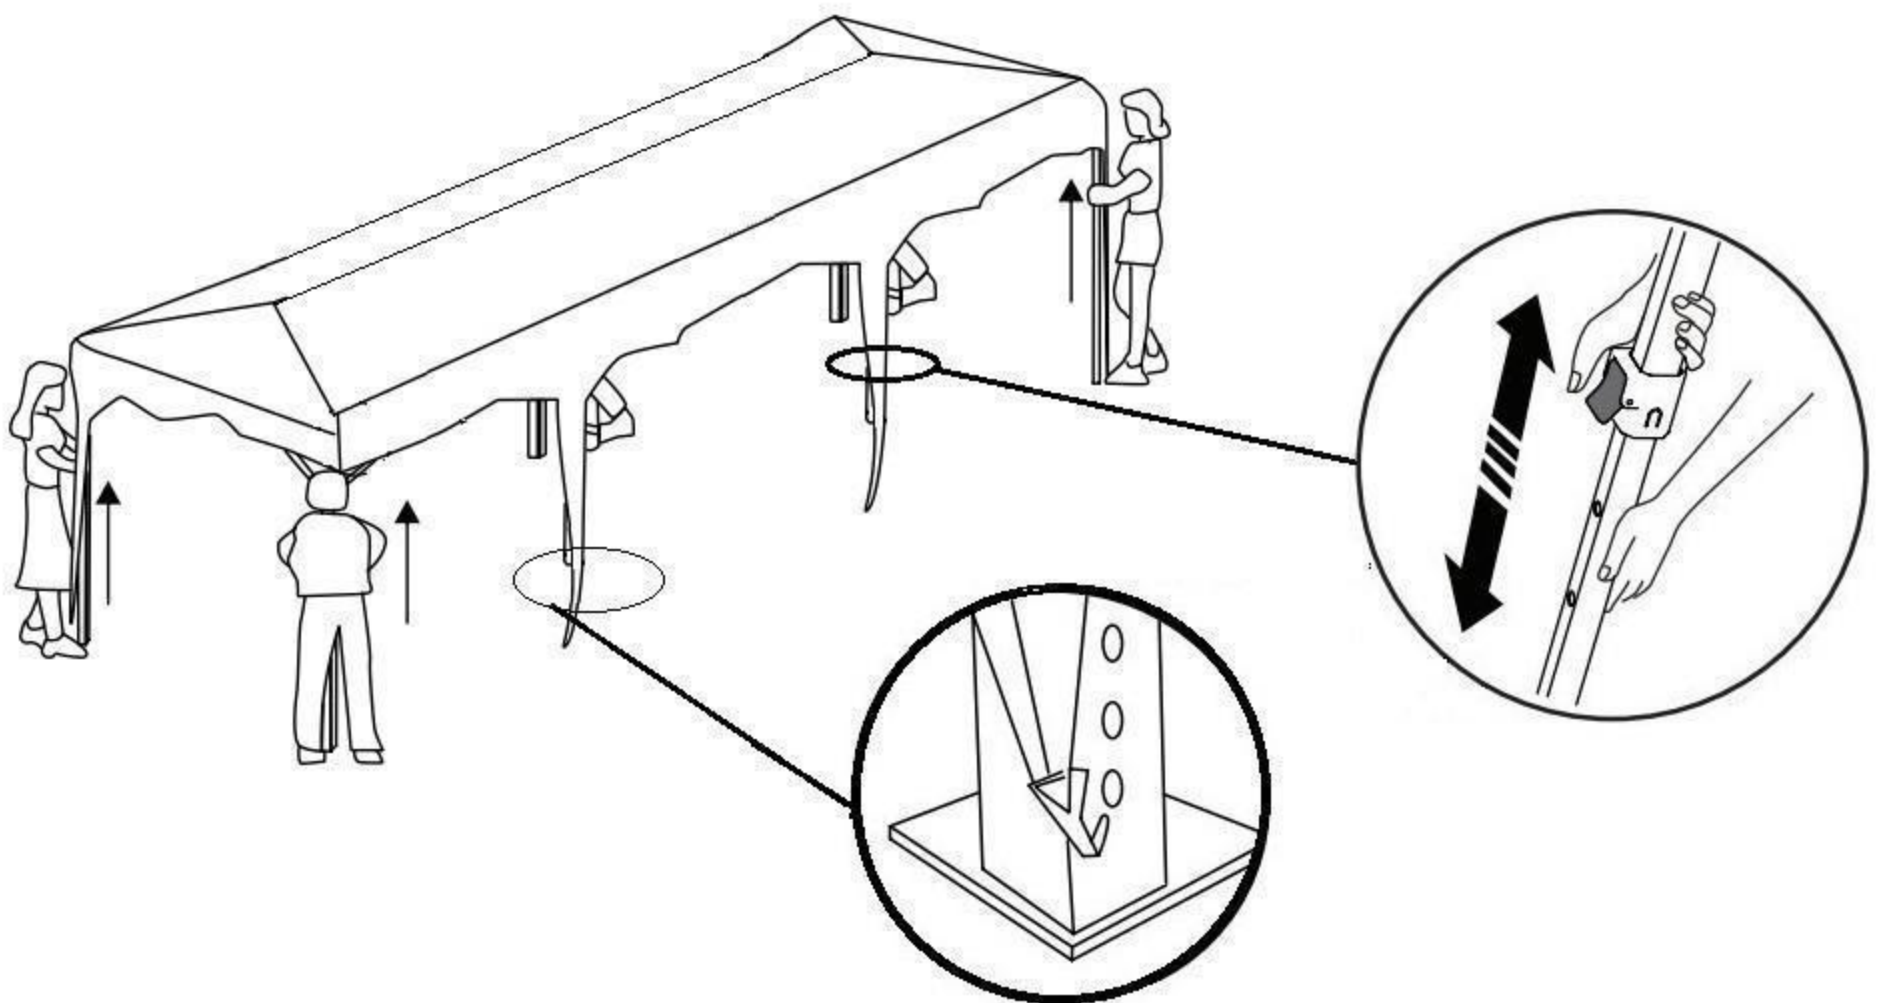


5. Attaching the Sidewalls

- Attach the sidewalls bying up the Nylon adhesive tape.

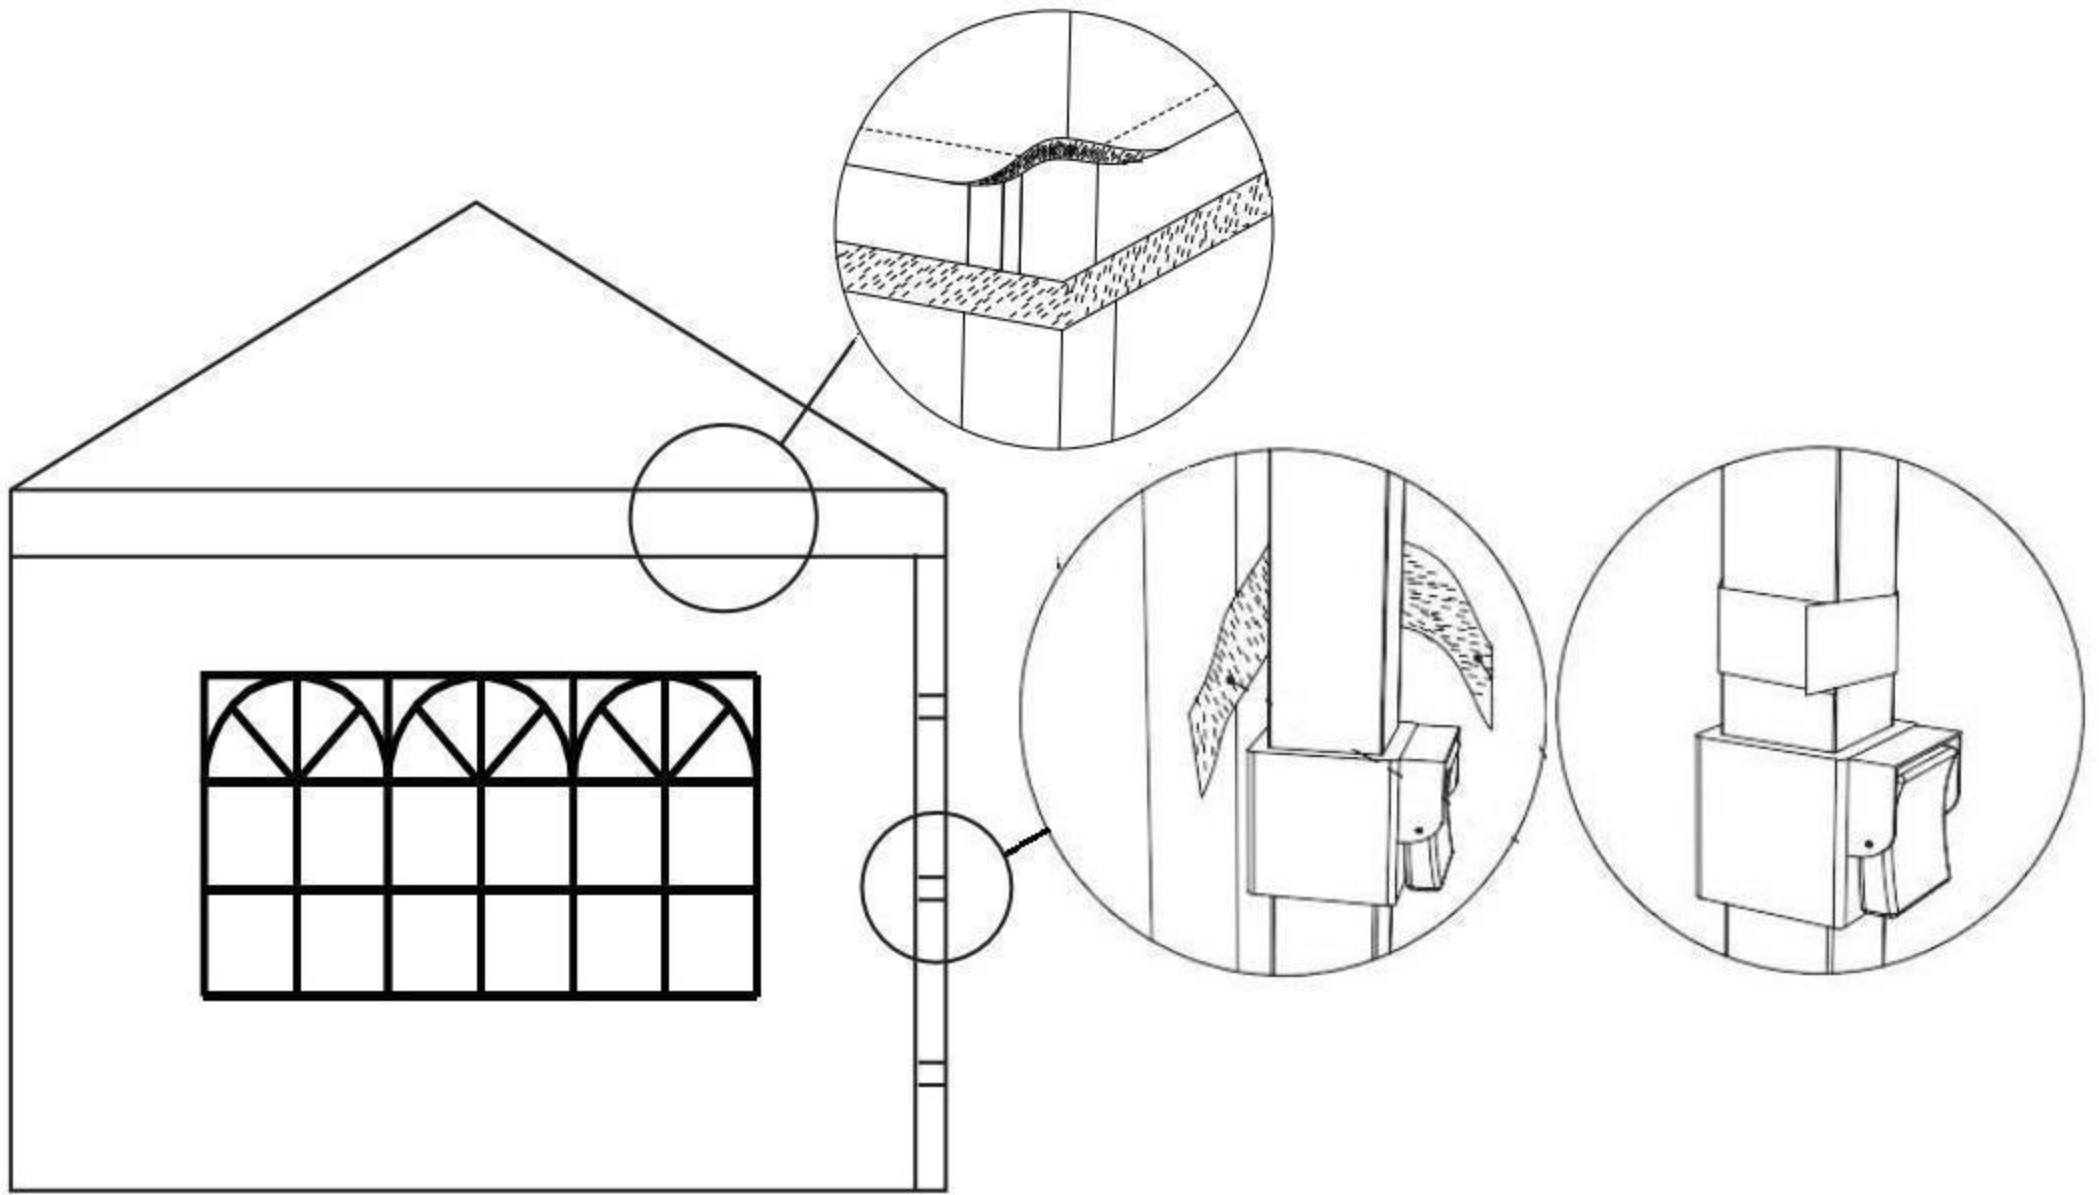


6. SECURING THE CANOPY IN PLACE


- Insert a stake into the foot of each canopy leg.
- secure eight stakes to the ground at a proper distance from the canopy Tie the canopy ropes to the stakes .
- Fill up the sandbags and fix them to each leg.

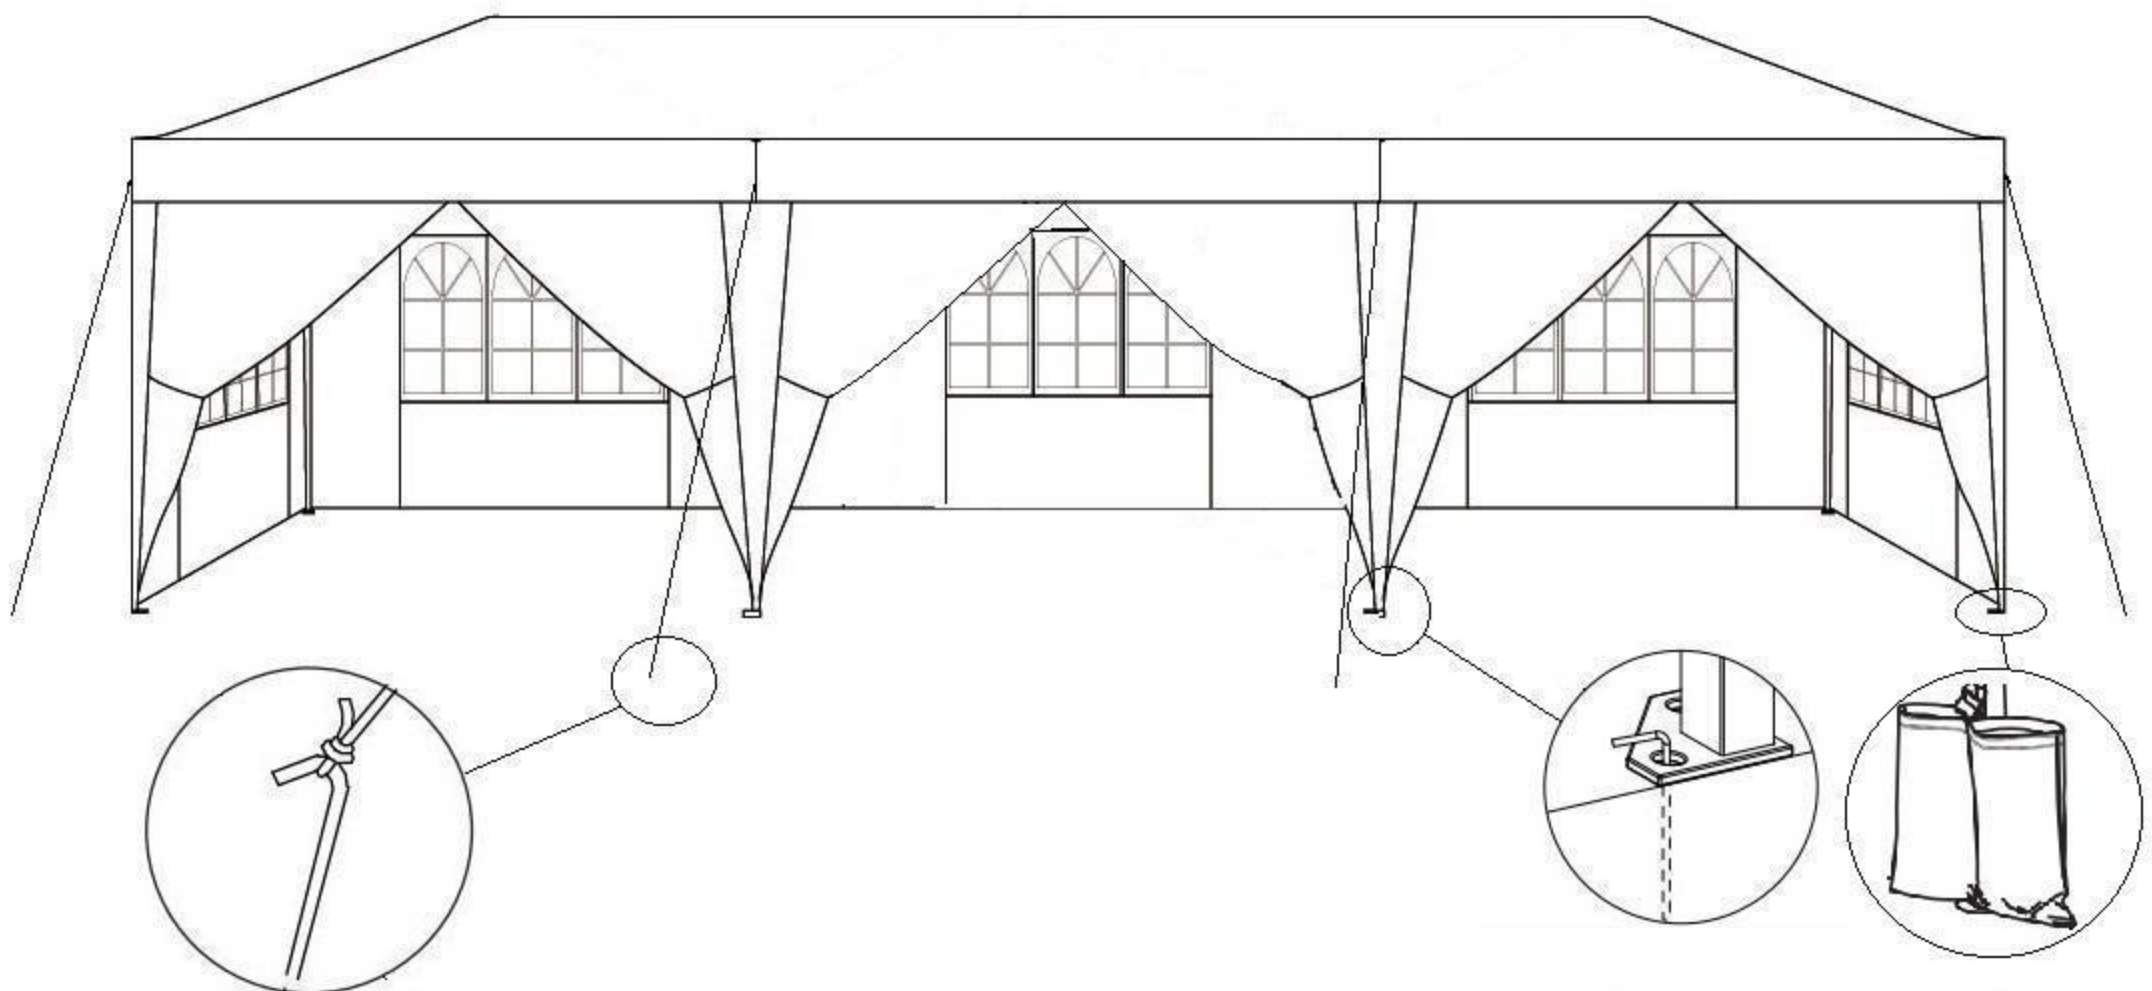


1. Pull up all stakes from the ground.

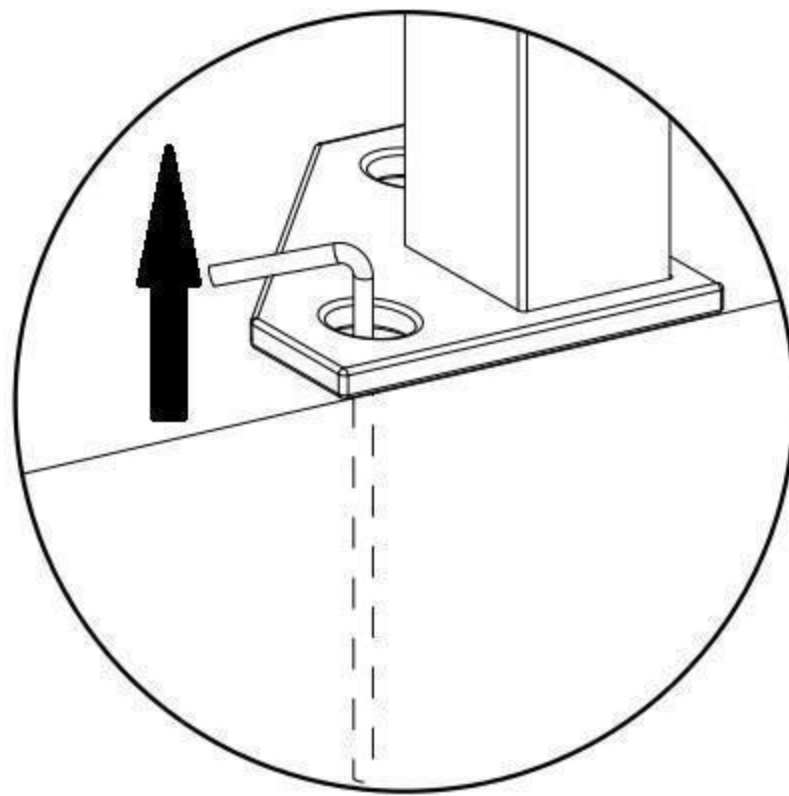

2. Remove sidewalls

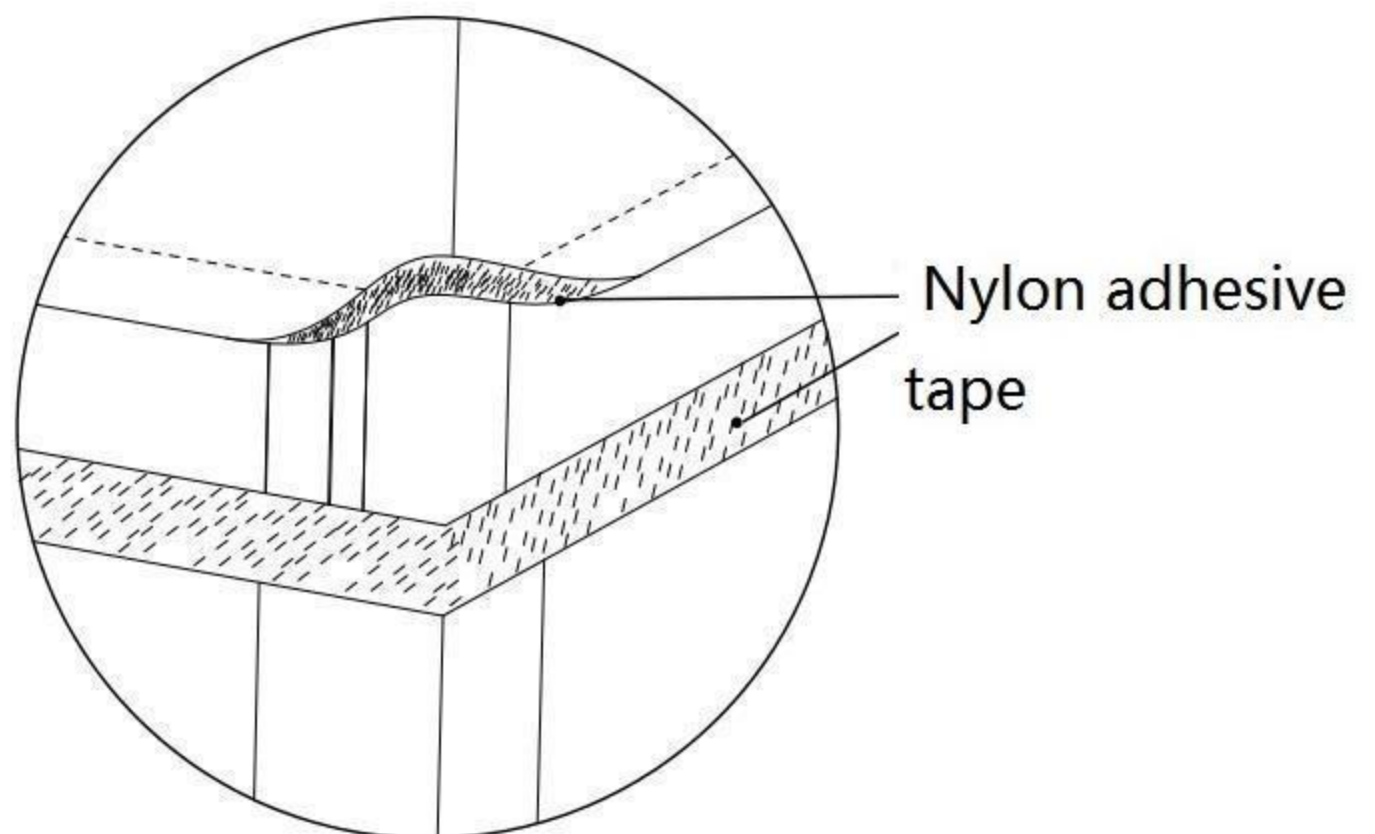


3. Press the push button on each leg and retract the legs to their original height.

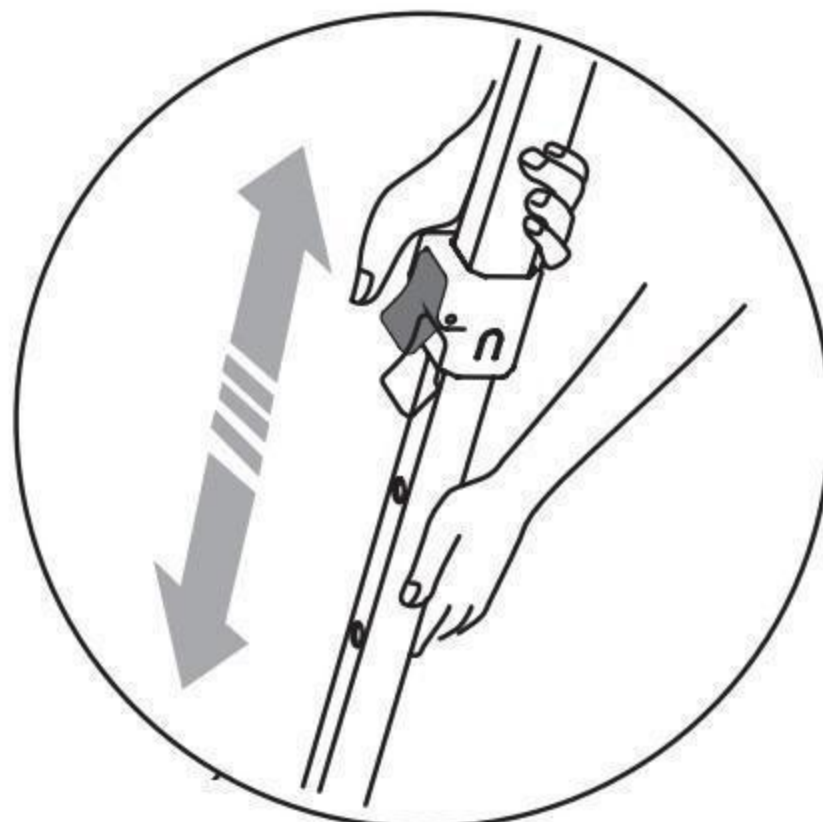


4. UNLOCK THE CENTRAL LOCK

□ Get in the underneath of canopy, press in the red lock button. Pull down on the central hub until it is separated from the central pole.

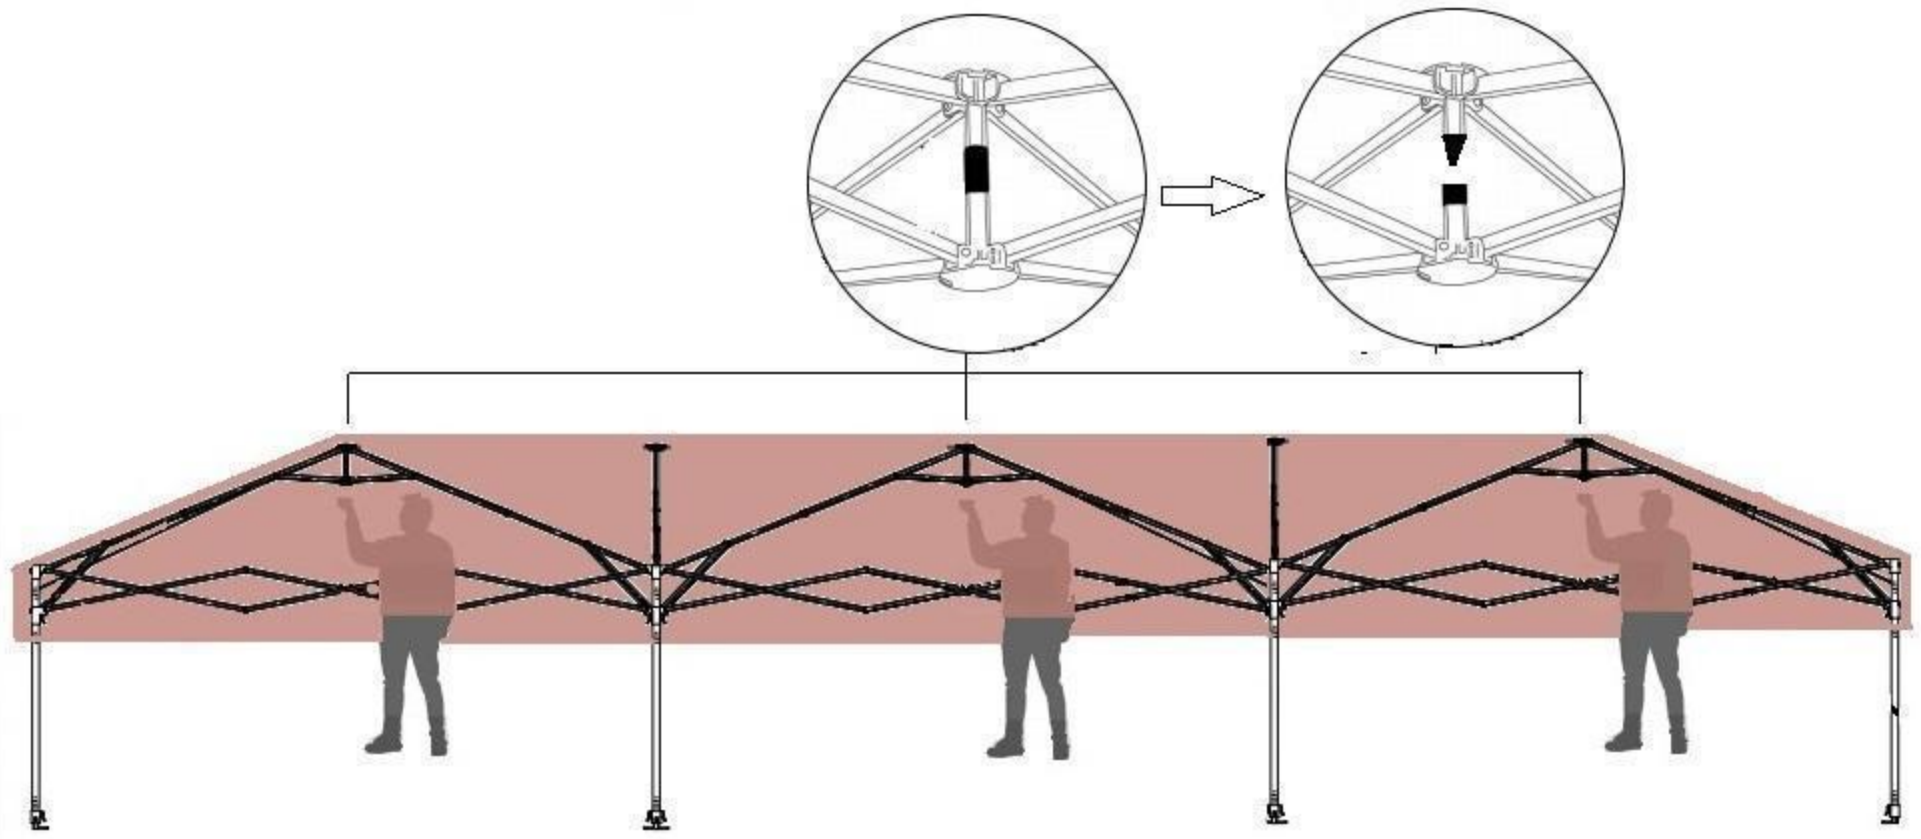

5. Push inward until the frame is fully closed.

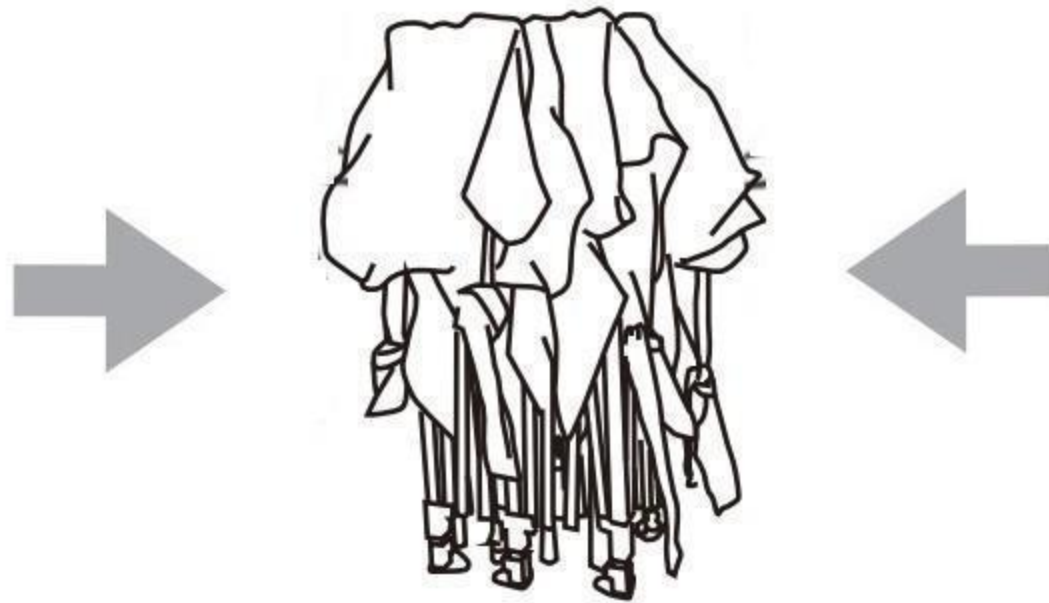

6. Slide the carry bag over the closed frame and close the zipper on carry bag

