

Fireplace Installation Instructions



1. Open the backboard

First, you need to prepare a screwdriver or an electric screwdriver




2.Remove the fireplace insert

Remove the corner code and take out the fireplace core




3. Open the firebox back panel

Remove the screws one by one along the path of the arrow, then open the firebox back panel.

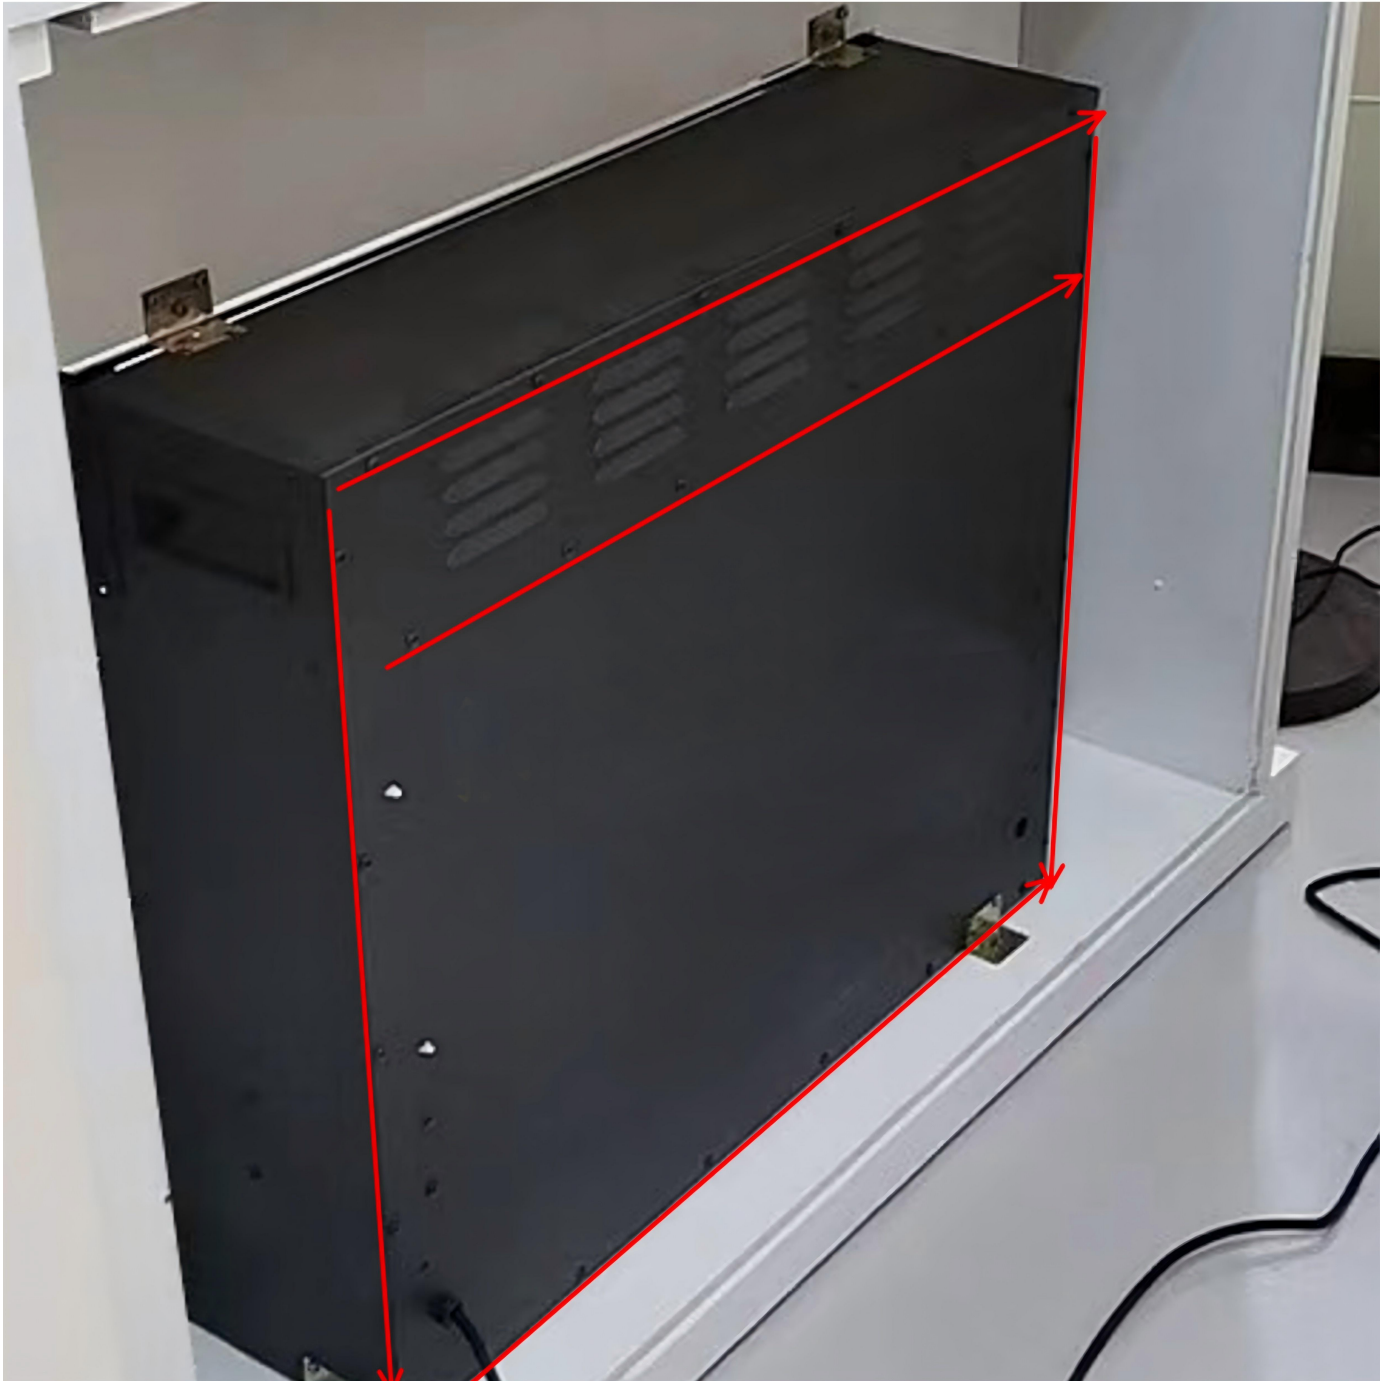

4. Locate the blower inside the firebox, then find the circuit board it connects to.

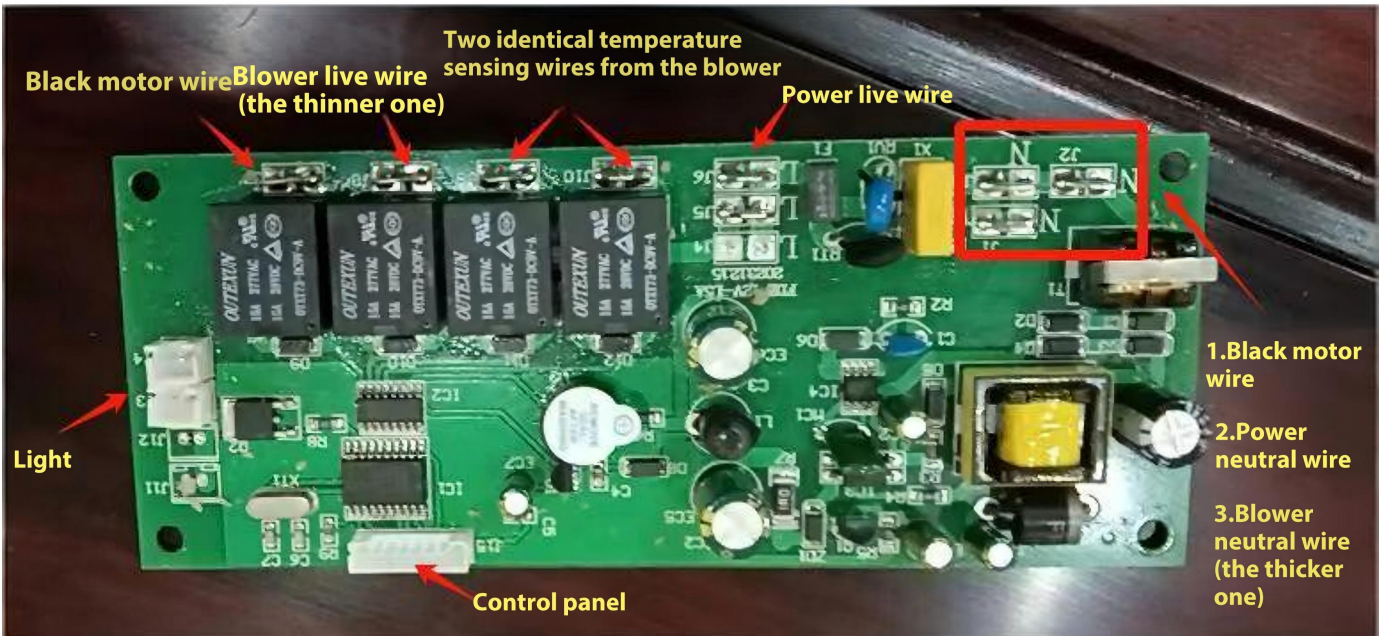

5. Install the fireplace blower.

First remove the wires of the old fireplace blower one by one, then install the new fireplace blower back according to the original wiring.

