


LP GAS PIZZA OVEN USER MANUAL

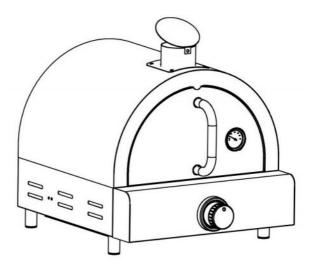





To reduce the risk of fire, burn hazard or other injury, read the USER MANUAL carefully and completely before using this appliance

Before Cleaning, make sure the gas supply and control knob is in the OFF position and the burner has cooled. WARNING

FOR OUTDOOR USE ONLY

ADANGER

If you smell gas:

- 1. Shut off gas to the appliance;
- 2. Extinguish any open flame;
- 3. Open lid;
- 4. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department



Never operate this appliance unattended. If a fire should occur, keep away from the appliance and immediately call your fire department. Do not attempt to extinguish an oil or a grease fire with water.

Failure to follow these instructions could result in fire, explosion or burn hazard which could cause property damage, personal injury or death.



- a. Keep the fuel supply hose away from any heated surface(s).
- b. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the appliance
- c. Keep children and pets away from the appliance at all times.
- d. Do not move the appliance when in use.
- e. This appliance is not intended for and should never be used as a heater.



Spiders and insects can nest inside the burner of the appliance and disrupt gas flow. Inspect the burner at least once a year.



When using a match to light the appliance, make sure to use the attached lighting rod.



Check all gas supply fittings for leaks before each use. Do not use the appliance until all connections have been checked and do not leak. Do not smoke while leak testing. Never leak test with an open flame



When lighting, keep your face and hands as far away from the appliance as possible.

🛆 warning

Do not store this appliance indoors unless the gas cylinder is disconnected.

Do not store gas cylinder in a building, garage or any other enclosed area and keep out of reach of children at all times.

This appliance is not intended to be installed in or on recreational vehicles and/or boats.



Minimum clearance from sides of unit to combustible construction is 24 inches. Minimum clearance from back of unit to combustible construction is 36 inches.

BEFORE LIGHTING

Inspect the gas supply hose prior to turning on the gas. If there is evidence of cut, ware or abrasion, it must be replaced prior to use.

Only the pressure regulator and gas hose assembly supplied with this appliance should be used.

Screw the regulator onto the gas cylinder. Leak check the hose and regulator connections with a soap and water solution before lighting the appliance.

LP GAS CYLINDER WARNING

1. Do not store spare liquid propane gas cylinder under or near this appliance.

2. Never fill the cylinder beyond 80 percent capacity

3. Liquid propane cylinder must be fitted with an OVERFILL PROTECTION DEVICE (OPD).

4. If the information above is not followed exactly, a fire resulting in death or serious injury may occur.

SAFETY PRACTICES TO AVOIN INJURY

When properly cared for, your grill will provide safe, reliable service for many years. However, extreme care must be used as the grill produces intense heat that can increase accident potential.

When using this grill basic practices must be followed, including but not limited to following:

-Do not repair or replace any part of the grill unless specifically recommended in this manual. All other service should be referred to a qualified technician.

-Children should not be left alone or unattended in an area where the grill is being used. Do not allow children to sit, stand or play around the grill at any time.

-Never let clothing or other flammables come in contact with or too close to any burner, grate or hot surface until it has cooled. The fabric could ignite, causing serious personal injury.

-For personal safety, wear proper apparel. Loose fittings garments or sleeves should never be worn while using the grill. Some synthetic fabrics are highly flammable and should not be worn while cooking.

-Do not heat unopened food containers as a buildup of pressure may cause the containers to burst.

-When lighting the burner, always pay close attention to what you are doing.

-When using the grill, do not touch the grill rack, grate, hood clip or immediate surroundings as these areas become extremely hot and could cause burns.

-Grease is flammable. Let hot grease cool before attempting to handle it. Do not allow grease deposit to collect in the grease tray at the bottom of the grill. Clean grease tray often.

-For proper lighting and performance of the burner, keep the burner pot clean. It is necessary to clean them periodically for optimum performance. The burner will only operate in one position and must be mounted correctly for safe operation.

-Do not use the grill to cook extremely fatty meats or other products which increase flare-up.


-Keep the area surroundings the grill free from combustible material including fluids, trash and vapors

such as gasoline or charcoal lighter fluid. Do not obstruct the flow of combustion and ventilation air.

-Never use the grill in extremely windy conditions.

- The temperature under the grill fire box is high. Do not place the grill on a table with flammable table cloths, plastic or any other inflammable materials.

PART LIST

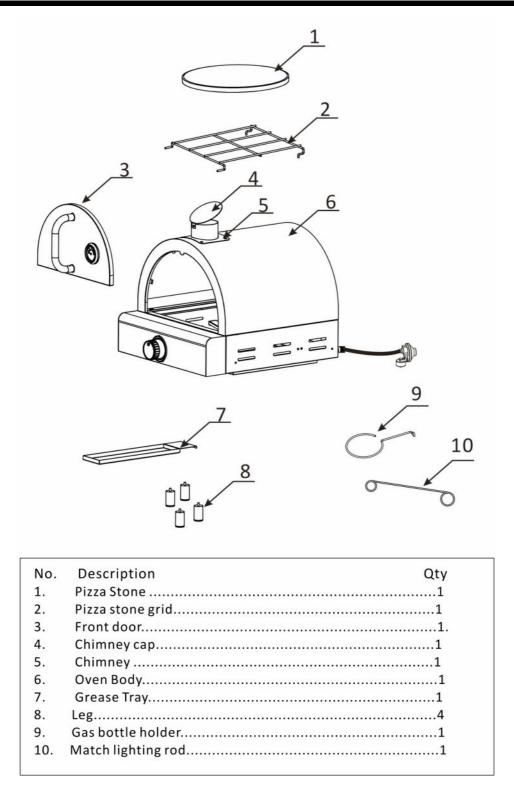

ASSEMBLY


Before assembly, make sure all parts are present. If any part is missing or damaged, do not attempt to assemble the appliance. Contact customer service for replacement parts.

TOOLS REQUIRED


* Philips screwdriver (not included)


ASSEMBLY INSTRUCTIONS


1. Leg Assembly

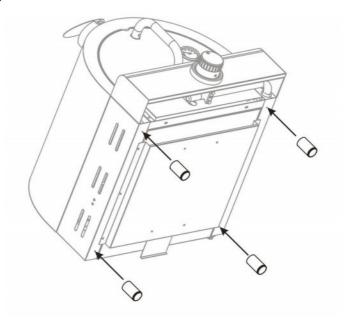


2. 1 lb gas cylinder hook assembly

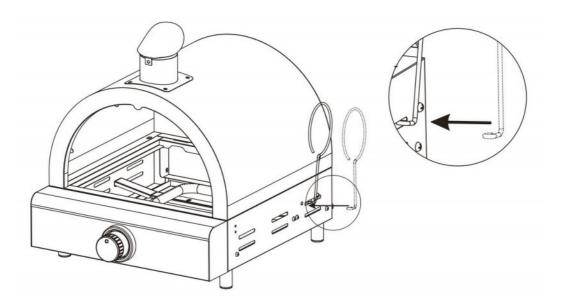


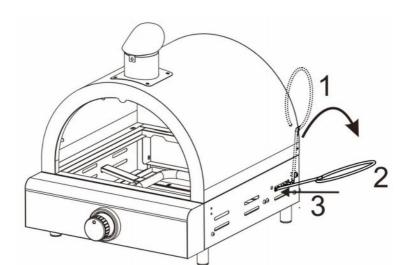

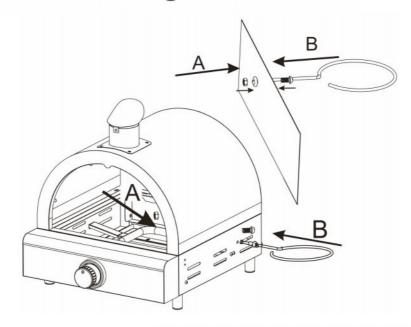


3. Chimney assembly

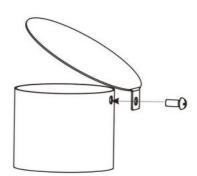


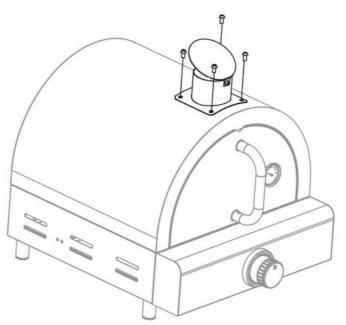

4. Cooking grid assembly

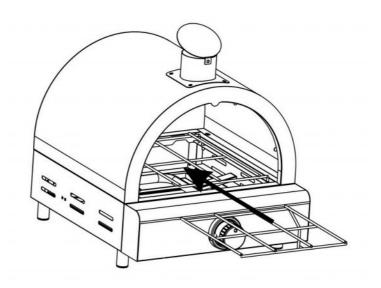


5. Pizza Stone

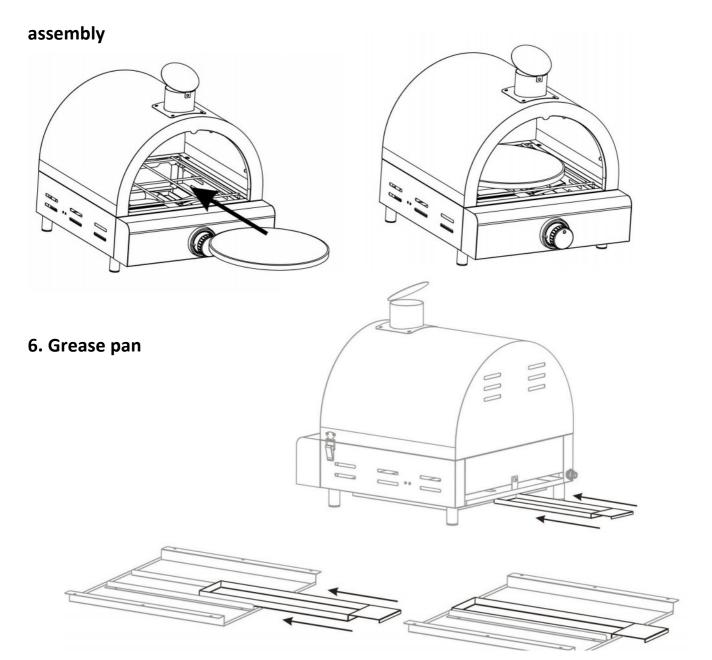


7. Clean the fire box bottom


Tools required: Philips screwdriver

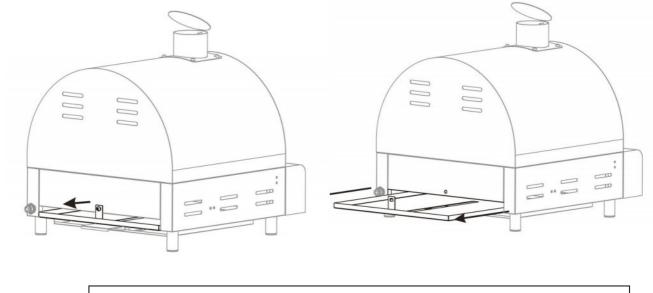




8. Connecting the 1lb gas cylinder

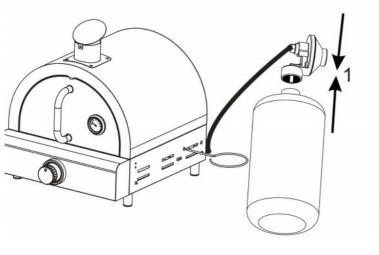


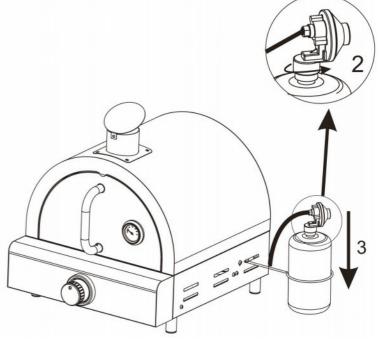



- * Please always keep the gas bottle in upright position.
- * The maximum 1lb LP gas tank size is 4 inches in diameter and 8 inches tall
- * The cylinder be disconnected when the appliance is not in use
- * Only cylinders marked "propane" must be used The bottom needs to be assembled and fixed by screw after each cleaning

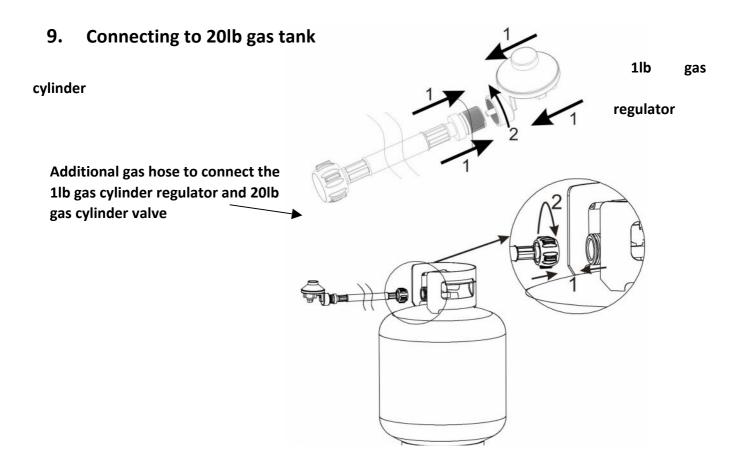

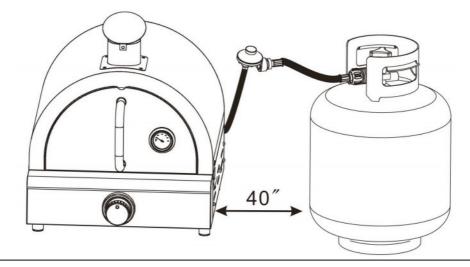


MWARNING

* Please always keep the gas bottle in upright position.

* The size for 20lbs LP gas cylinder is 12.2 inches in diameter and 17.9 inches tall

- * If the appliance is not in use, the gas must be turned off at the supply cylinder.
- * The cylinder used must include a collar to protect the cylinder valve.
- * The minimum distance for the appliance and the 20lb gas tank is 40 inches apart.

10. Opening the front door

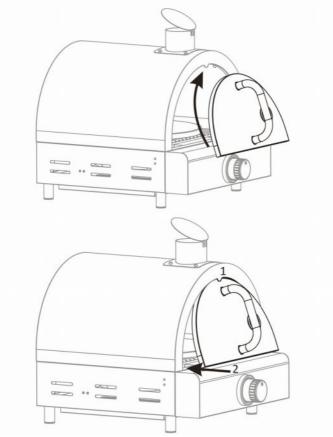

CONNECTING THE LIQUID PROPANE GAS CYLINDER

To connect the liquid propane gas cylinder:

- 1. The cylinder valve should be in OFF position.
- 2. Make sure the burner valve is in OFF position.
- 3. Inspect the valve connections, port and regulator assembly. Remove debris and inspect the hose for damage.
- 4. When connecting the regulator assembly to the valve, use your hand to tighten the nut clockwise until it stops. Use of a wrench could damage the quick coupling nut and result in a hazardous situation.
- 5. Open the cylinder valve fully by turning the valve counterclockwise.
- 6. Before lighting the grill, use soap and water solution to check all connections for leaks.
- 7. If a leak is found, turn the cylinder valve OFF, and do not use the grill until local liquid propane dealer can make repairs.

DISCONNECTING THE LIQUID PROPANE GAS CYLINDER

- 1. Turn the grill burner valve OFF and make sure the grill is cool.
- 2. Turn the liquid propane cylinder valve OFF by turning clockwise until it stops.
- 3. Detach the regulator assembly from the cylinder valve by turning the quick coupling nut counterclockwise.
- 4. Place dust cap for cylinder valve outlet whenever the cylinder is not in use.

LEAK TESTING

GENERAL

Although the gas connections of the appliance are leak tested prior packing and shipment, a complete test must be performed at the installation site.

Before each use, check all the gas connections for leak testing using the procedure listed below. If the smell of gas is detected at any time, you should immediately stop using and check the entire system for leaks.

BEFORE TESTING

Make sure all packing material has been removed from the appliance.

Make a solution of one part liquid detergent and one part water. You will need a spray bottle, brush or rag to apply the solution to the fittings.

TO TEST

- 1. Turn the burner valve OFF
- 2. Turn the liquid propane cylinder valve on counterclockwise to open the valve.

- 3. Apply the soap solution to all gas fittings. Soap bubbles would appear where a leak is present.
- 4. If a leak is present, immediately turn the gas supply OFF and tighten leaky fittings.
- 5. Turn the gas back ON and recheck.
- 6. Should the gas continue to leak from any of the fittings, turn the gas supply OFF and contact customer service.

OPERATING INSTRUCTIONS

USING THE GRILL

Each burner is rated at 10,000BTU/Hr.

To begin:

- 1. Make sure the grill has been leak tested and properly placed.
- 2. Remove any remaining packing material.
- 3. Light the grill burner using the LIGHTING INSTRUCTIONS below

LIGHTING INSTRUCTION

TO LIGHT THE BURNER

- 1. Make sure the control knob is in OFF position, and then turn the liquid propane cylinder valve ON by slowly turning counterclockwise.
- 2. Open the lid, push and turn the main burner knob to HI, burner should be lit immediately.
- 3. If burner doesn't light up, turn the knob OFF, wait 5 minutes and repeat the lighting.

TO MATCH LIGHT THE GRILL

If burner will not light after several attempts using the control knob, the burner may be lit with a match.

- 1. If you have already attempted to light the burner using the control knob, wait 5 minutes for any gas to dissipate.
- 2. Insert a match into the light rod, ignite the match and insert through the cooking grid to burner.
- 3. Push and turn the control knob to HI slowly, the burner should ignite immediately.
- 4. If the burner does not light within seconds, turn the control knob OFF and wait 5 minutes and try again.

CARE AND MAINTENANCE

STAINLESS STEEL

There are many stainless steel cleaners available. Always use the mildest cleaning process first, scrubbing in the direction of the grain. DO NOT use steel wool as it will scratch the surface.

To touch up noticeable scratches in the stainless steel, sand very lightly with dry 100 grit sand paper in the direction of the grain.

Grease specks can gather and bake on the surface of the stainless steel, giving the appearance of rust. For removal, use an abrasive pad with stainless steel cleaner.

Stainless steel could also rust if not maintained well.

The color of stainless steel could change after burning, it is the nature of the stainless steel.

COOKIING GRATE

The best way to clean the grate is immediately after cooking is completed and the burner flame is OFF. Wear a barbecue mitt to protect your hand from heat and steam.

Scrub the hot cooking grate by dipping a bristled barbecue brush in tap water. Cleaning would be more difficult if the grate is cool.

GREASE PAN

The grease pan should be emptied and washed after each use with a mild detergent and warm water solution. Check the grease pan frequently and do not allow excess grease to accumulated and flow out of the grease pan.

GRILL BURNER

Extreme care should be taken when removing the grill. It must be properly centered on the orifice before any attempt is made to relight the grill. Frequency of cleaning will be depend on how often you use the grill.

Failure to properly place the burner over the orifice could cause a fire to occur behind and beneath the valve panel, thereby damaging the grill and making it unsafe to operate.

Before cleaning, make sure the gas supplier and control knob are in OFF position and the burner has cooled.

To clean the burner,

- 1. Clean the exterior of the burner with a wire brush. Use a metal scraper for stubborn stains or debris.
- 2. Clear clogged ports with a straightened paper clip. Never use a wooden toothpick as it may break off and clog the port.
- 3. Check and clean burner for insects and insect nests. A clogged tube can lead to a fire beneath and behind the control panel.

PIZZA STONE

- 1.DO NOT use stone over an open flame
- 2. Avoid extreme temperature change to the stone. DO NOT place frozen foods on a hot stone
- 3. The stone is fragile and can break if bumped or dropped
- 4. Pizza stone is very hot during use and stays hot for a longtime after use.
- 5. DO NOT cool the pizza stone with water when the pizza stone is hot
- 6. After clean the pizza stone with water, please dry the stone before use

TROUBLE SHOOTING

Problem	Possible Cause	Prevention/Solution
Burner will not	•No gas flow.	Check to see if LP tank is empty.
light.	•Coupling nut and regulator not fully	• Turn the coupling nut about one-half to three
	connected.	quarters additional turn until solid stop. Tighten
		by hand only-do not use tools.
		• Clear burner tube(s).
	•Obstruction of gas flow.	 Reengage burner and valve.
	•Disengagement of burner to valve.	
	•Is grill assembled correctly?	Check steps in assembly instructions.
Sudden drop in gas	•Out of gas.	Check for gas in LP tank.
flow or low flame.	•Excess flow valve tripped.	• Turn off knobs, wait 30 seconds and light grill. If
		flames are still low, turn off knobs and LP tank
		valve. Disconnect regulator. Reconnect
		regulator and leak test. Turn on LP tank valve,
		wait 30 seconds and then light grill.
Flames blow out.	•High or gusting winds.	• Turn front of grill to face wind or increase flame
		height.
	•Low on LP gas.	Refill LP tank.
	•Excess flow valve tripped.	• Refer to "Sudden drop in gas flow" above.
Flare-up.	•Grease build-up.	• Clean grill.
	•Excessive fat in meat.	• Trim fat from meat before grilling.
	•Excessive cooking temperature.	Adjust (lower) temperature accordingly.
Persistent grease	•Grease trapped by food build-up	• Turn knobs to OFF. Turn gas off at LP tank. Leave
fire.	around burner system.	lid in position and let fire burn out.
		After grill cools, remove and clean all parts.
Flashback	Burner and/or burner tubes are	• Turn knobs to OFF. Clean burner and/or burner
(fire in burner	blocked.	tubes.
tube(s)).		

CONTACT FOLLOWING FOR SERVICE

Mont Alpi.1927 E Deere Ave, Santa Ana, California. 92705Tel : 949 207 9595Email : info@montalpionline.com