 


ASSEMBLY INSTRUCTIONS

36 INCH CABINET

 
 
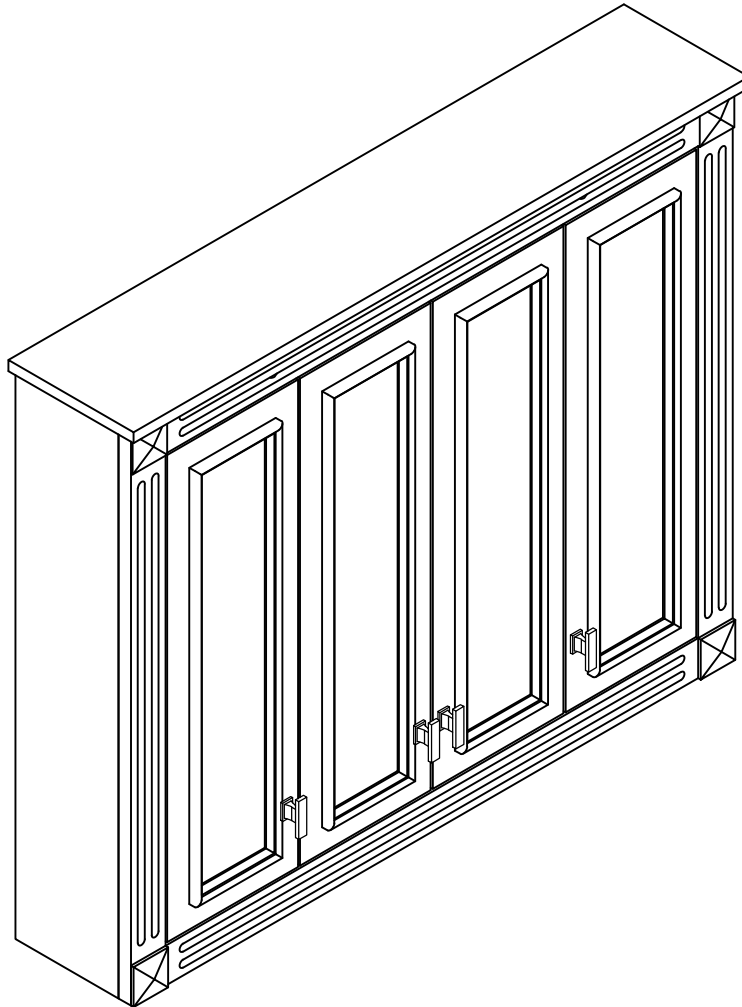 


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!**
*** Please assemble on a clean soft surface to avoid damage.**

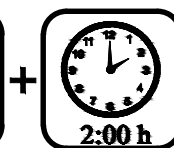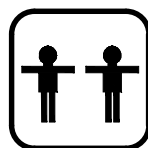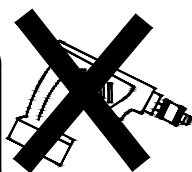

Tools Required

 

(Not Included)

 

(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions













	Diagram A	Insert Cam Bolt into hole as shown in diagram A.
	Diagram B	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
Connect the panels together.		
ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.		
To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>		

 Detail View - CABINET




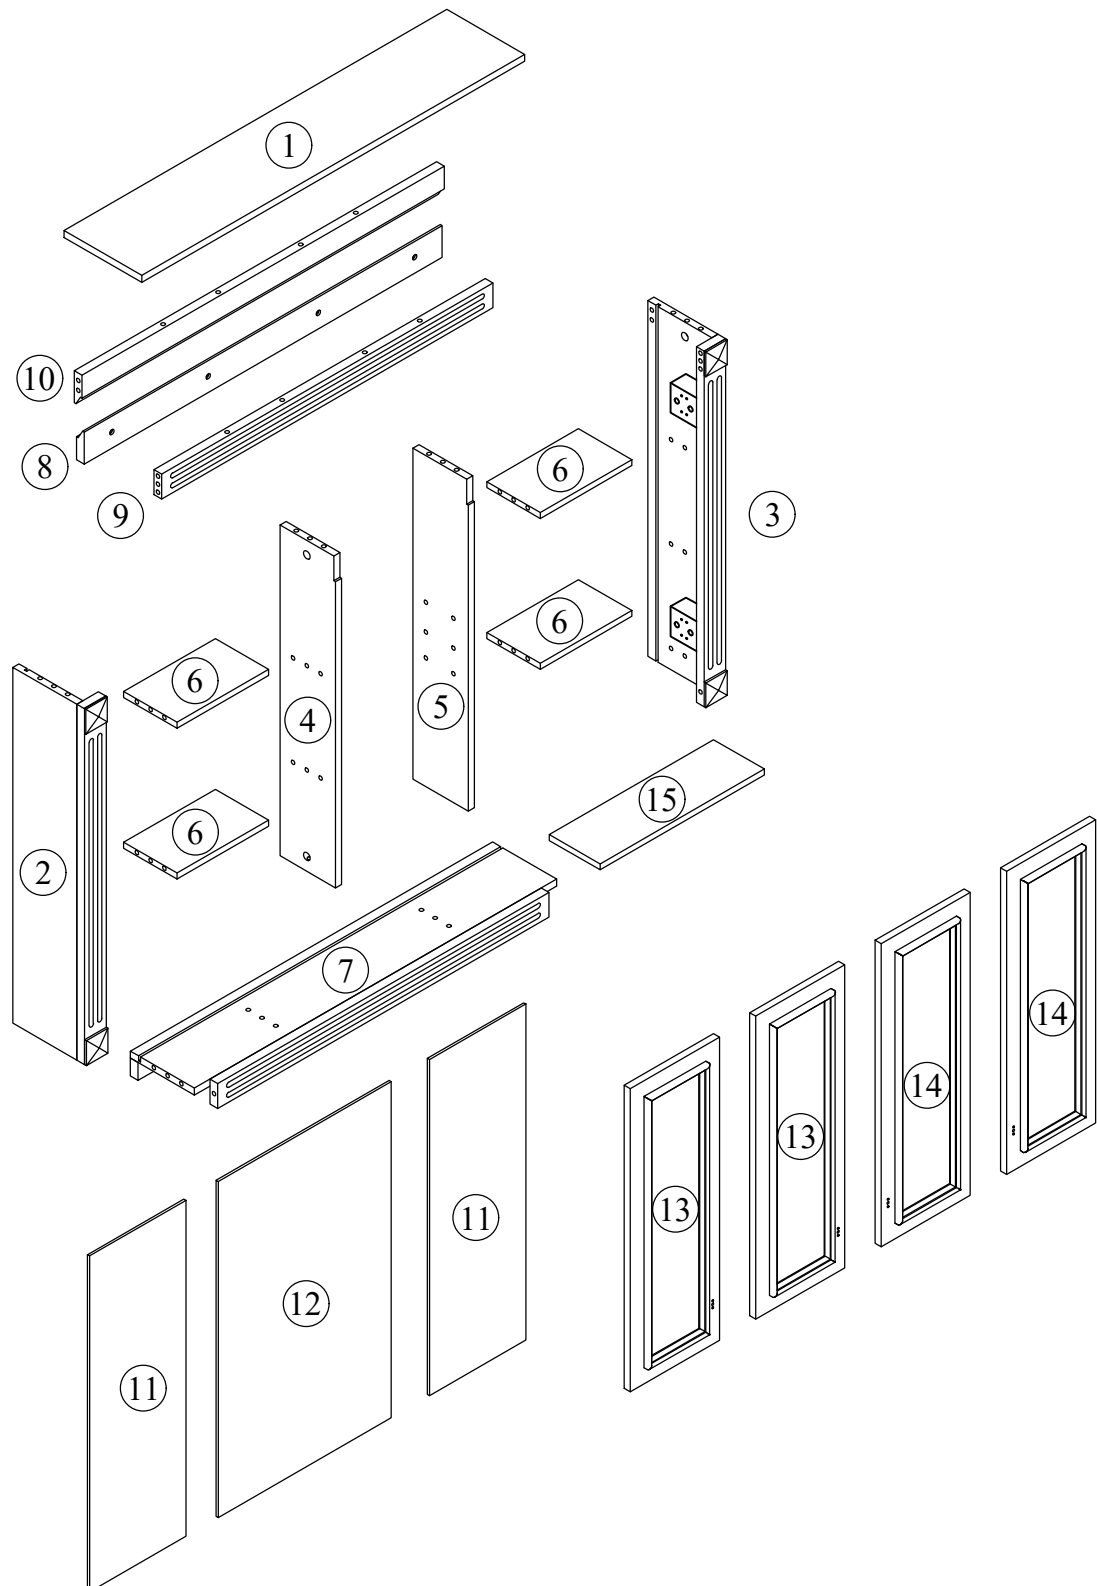


Identifying the Hardware—Identify the hardware using the illustrations below.

            
Part List - N710P496235

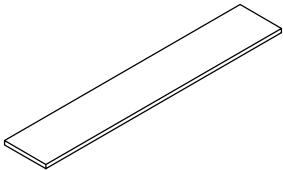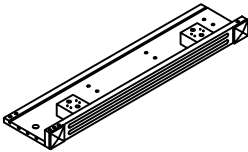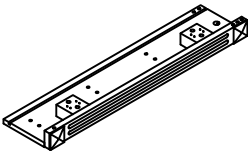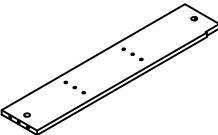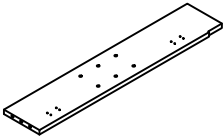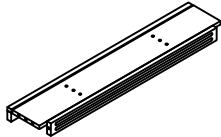
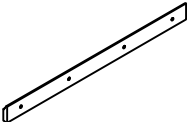
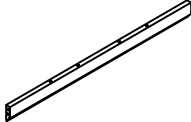



1	 Top Panel - 1pc	2	 Side Panel Left - 1pc
3	 Side Panel Right - 1pc	4	 Mid Panel (L) - 1pc
5	 Mid Panel (R) - 1pc	6	 Mid Panel - 4pcs
7	 Bottom Panel - 1pc	8	 Connect Bar - 1pc
9	 Front Top Bar - 1pc	10	 Rear Top Bar - 1pc
11	 Back Panel (A) - 2pcs	12	 Back Panel (B) - 1pc
13	 Door Cabinet Left - 2pcs	14	 Door Cabinet Right - 2pcs
15	 Adjustable Shelf - 1pc		

    Hardware List - N710P496235


A  ø6x35mm	B  ø14.5x9mm	C 
Three in one bolts (24pcs)	Three in one lock (24pcs)	Handle (4pcs)
D  ø5/32"x16mm	E 	F  ø7xø3.5x12mm
Handle screw (4pcs)	Damping hinge (8pcs)	Flat head screw (48pcs)
G 	H  ø8x30mm	I  ø6x30mm
Shelf Pin(4pcs)	Wood dowel (28pcs)	Wood dowel (16pcs)
J  ø7xø3.5x15mm	K  ø10xø5x60mm	L  ø12x55mm
Round head screw(4pcs)	Round head screw (4pcs)	Plastic stopper (4pcs)

 STEP: 1

A

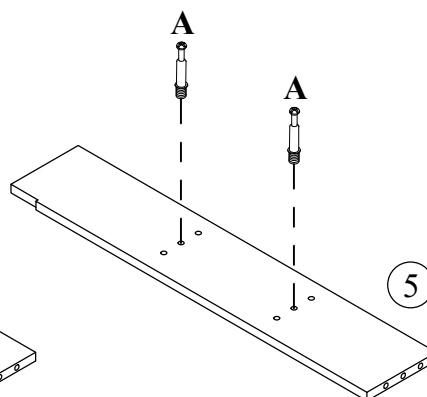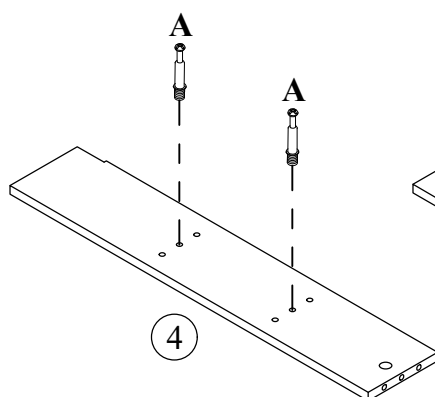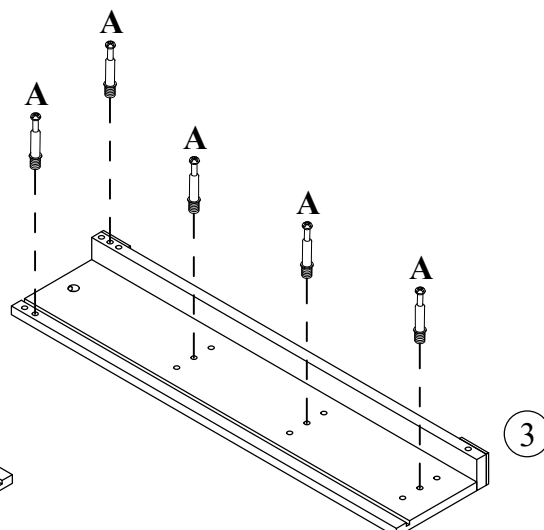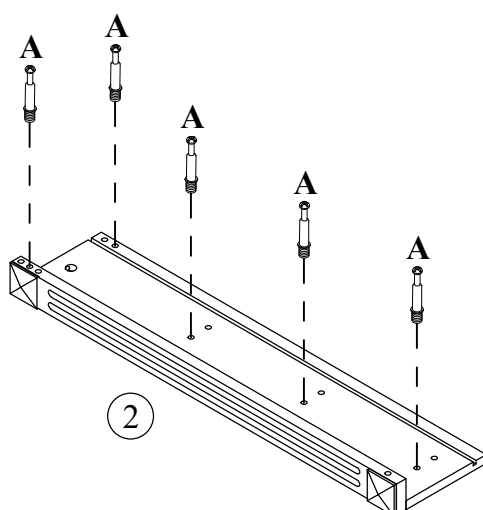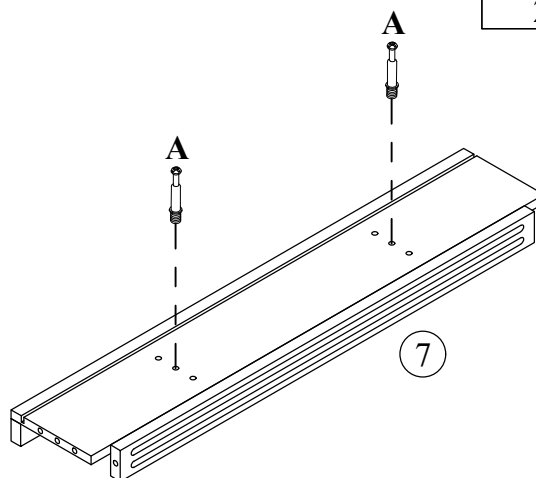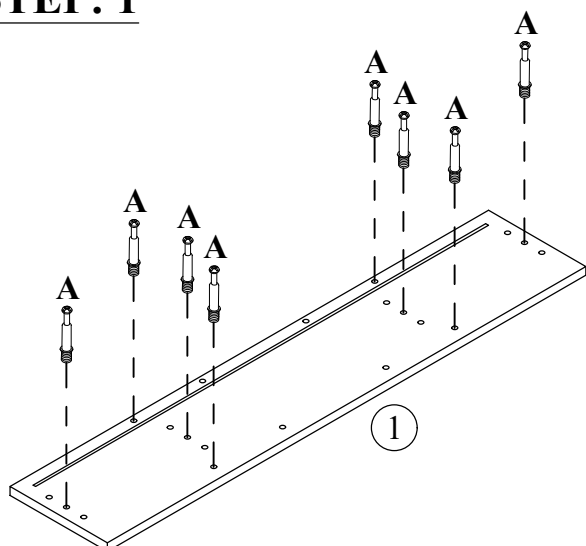      24PCS

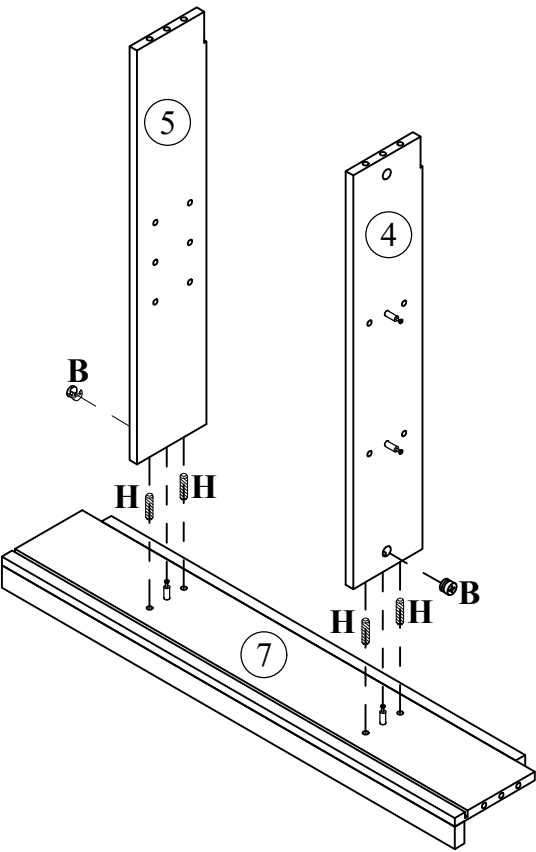 


STEP: 2




B		H	
2PCS		4PCS	

 STEP: 3

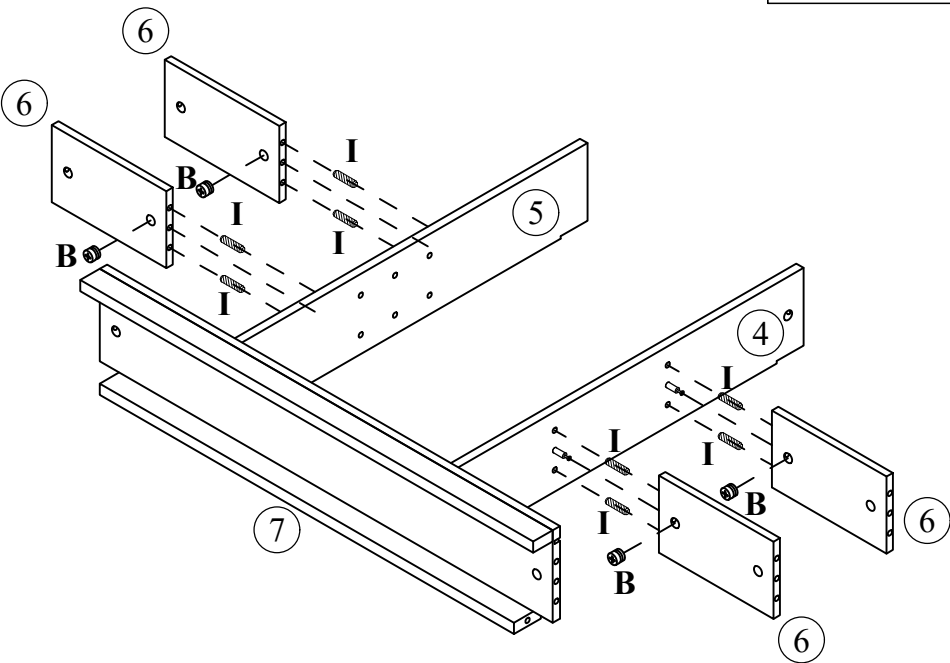


B		I	
4PCS		8PCS	

 STEP: 4

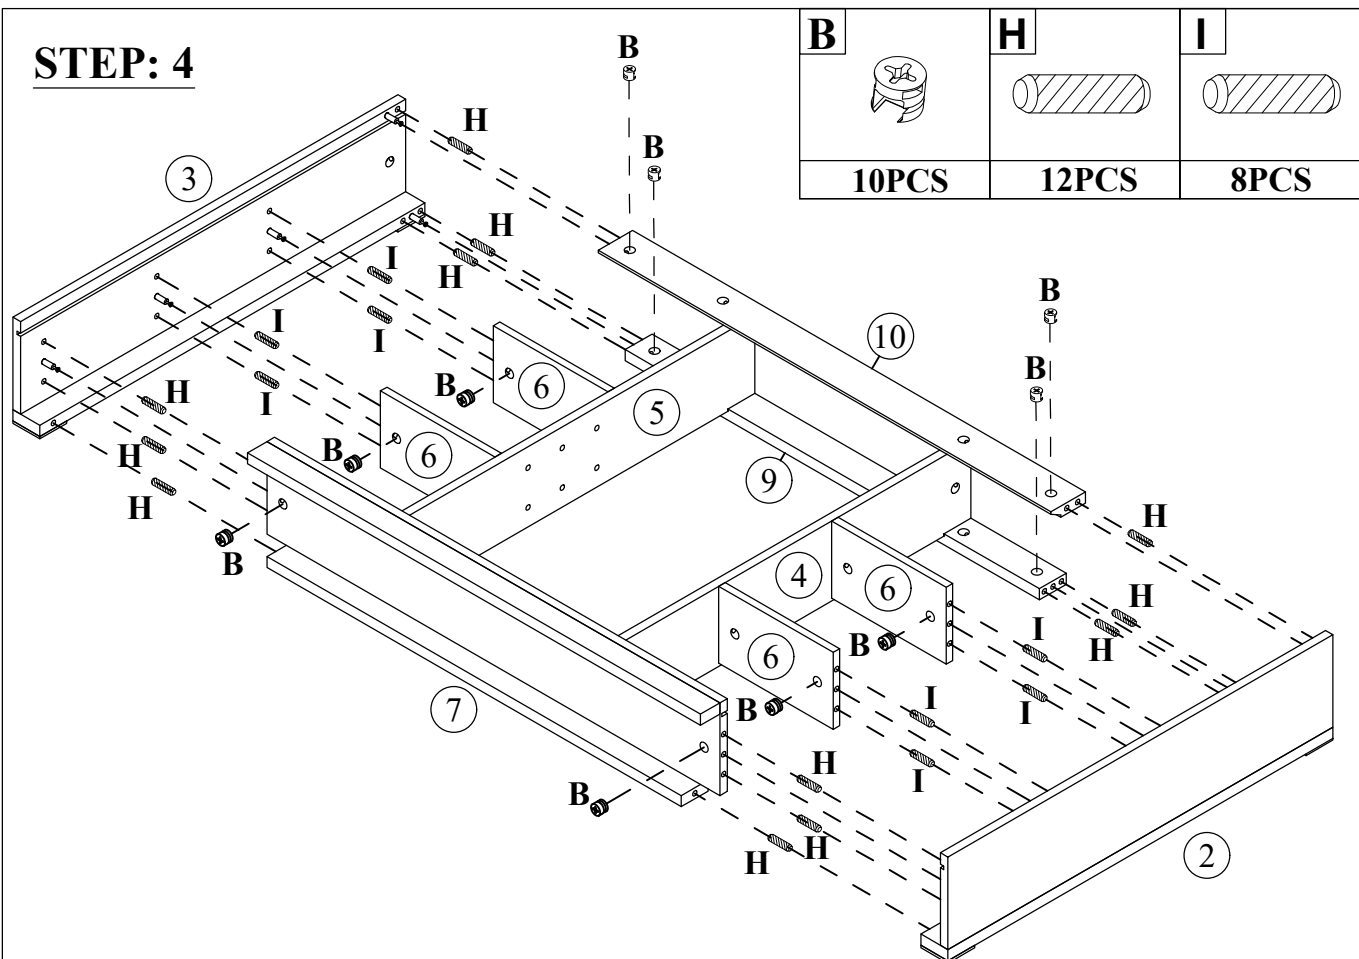


STEP: 5

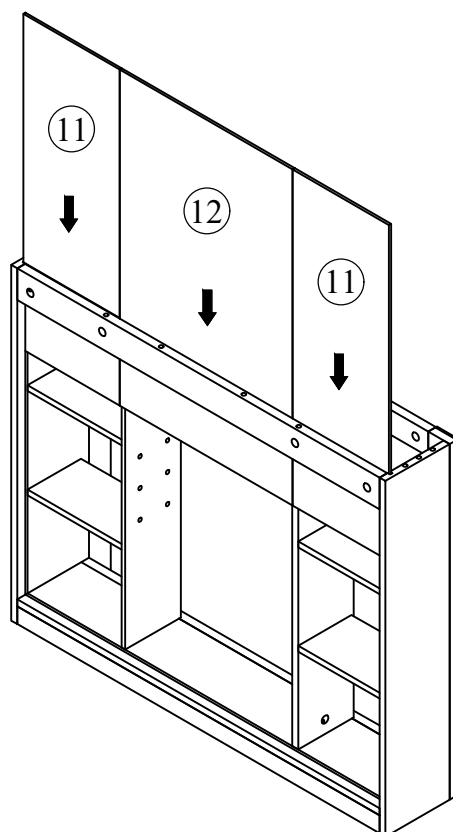 


STEP: 6

B		H	
8PCS		12PCS	

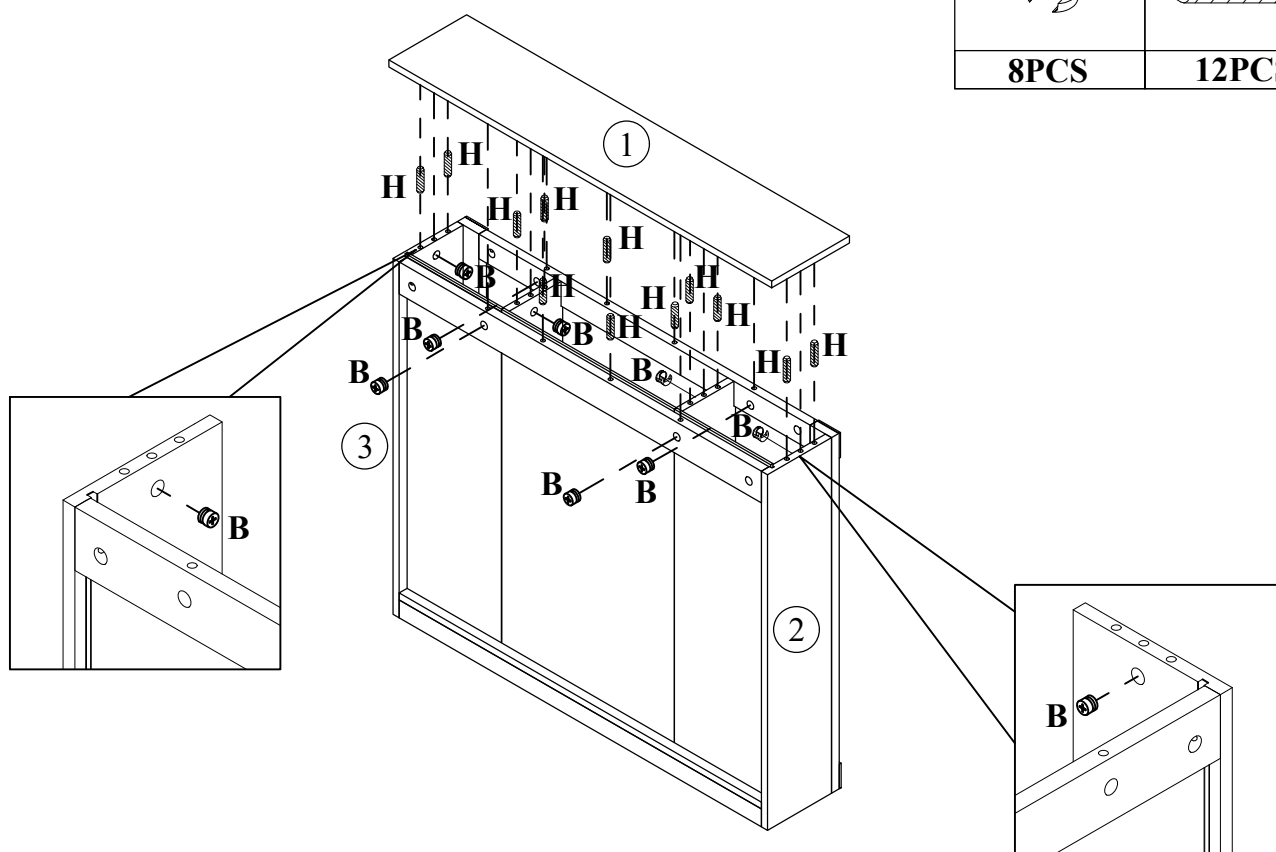 





STEP: 7

J	
4PCS	

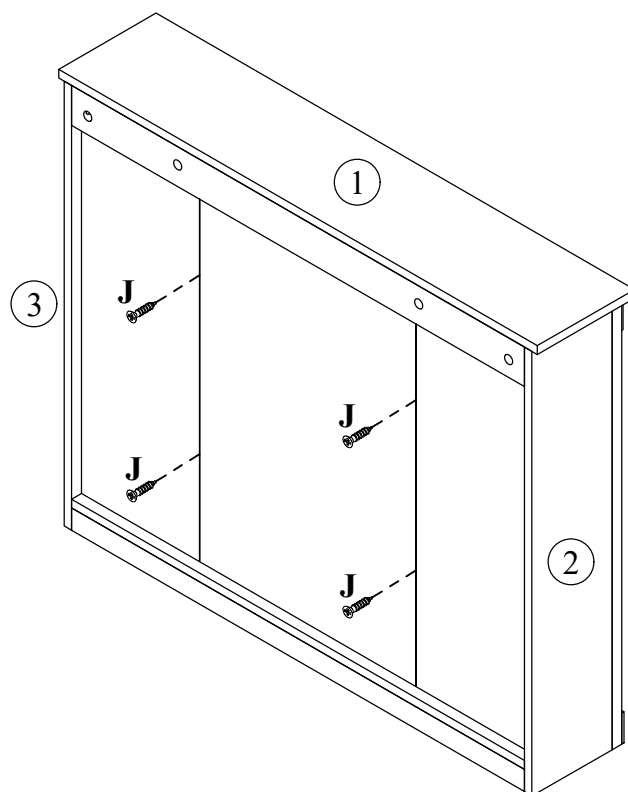 



STEP: 8

E		F	
8PCS		16PCS	

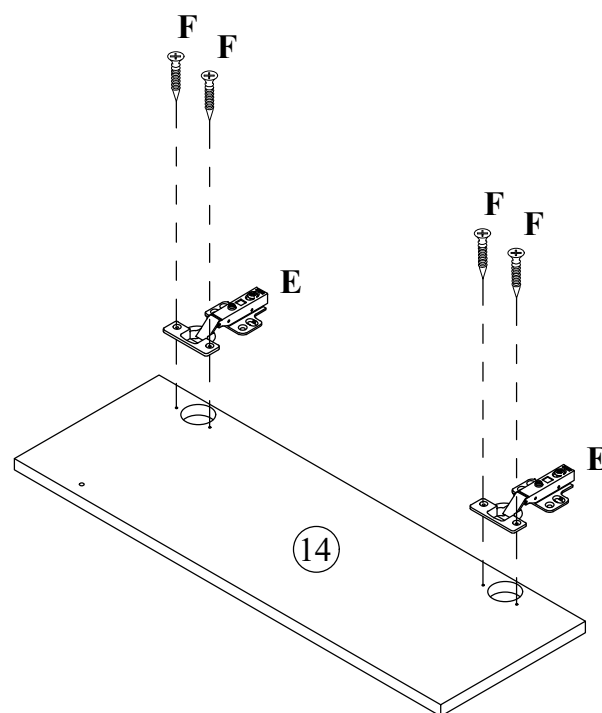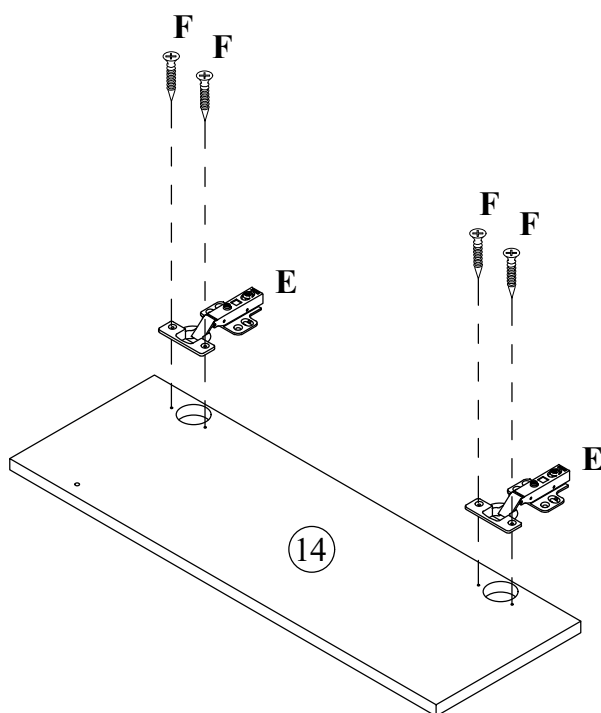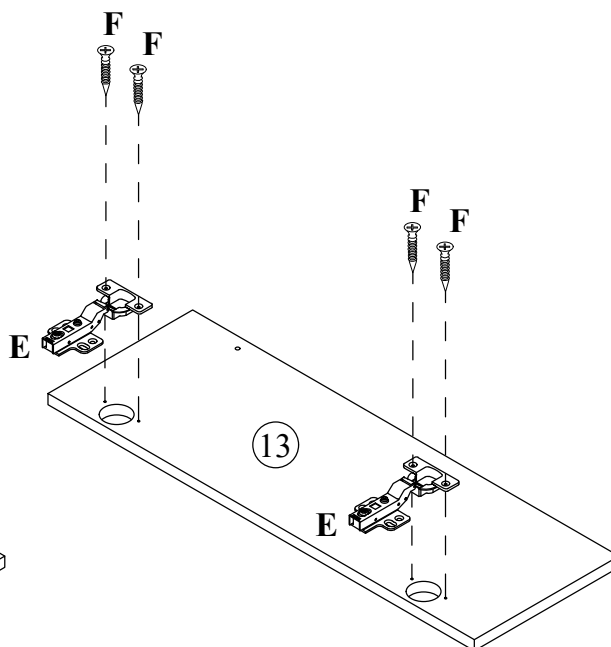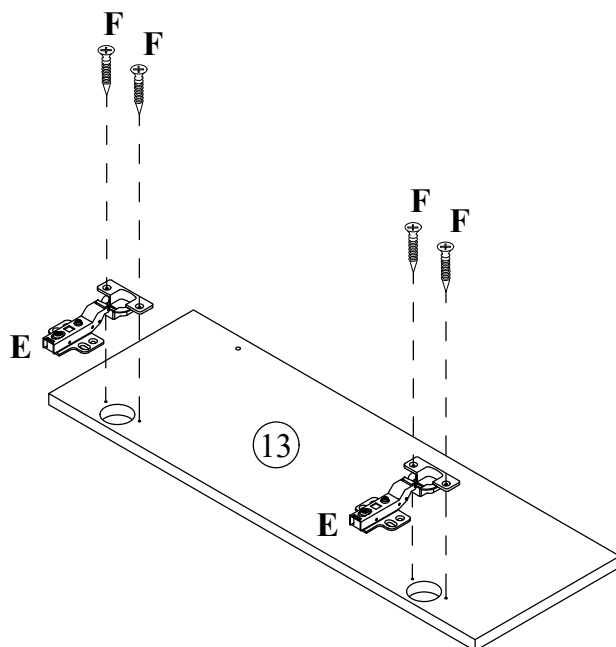    


STEP: 9

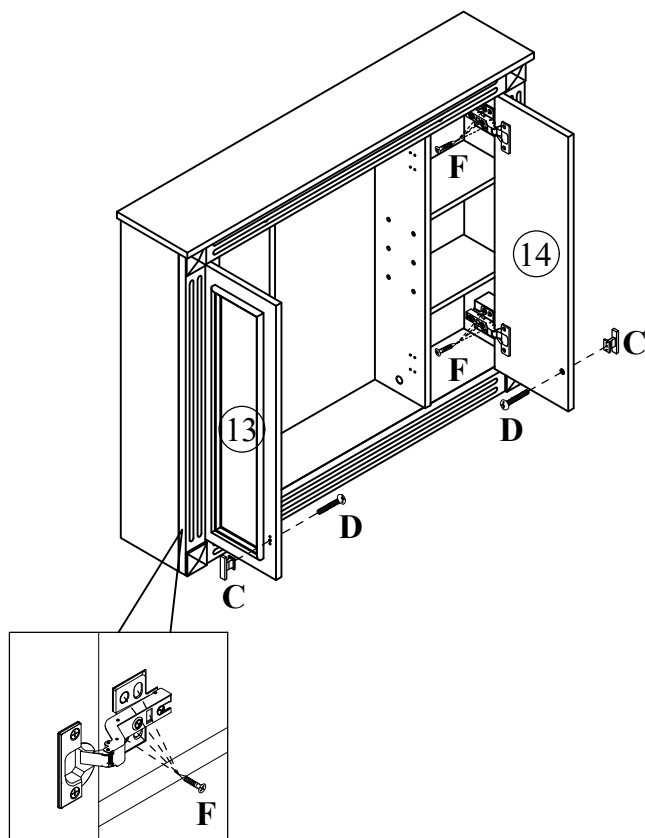 


 C		D		F	
	2PCS		2PCS		16PCS

 
Use the screws to adjust up or down

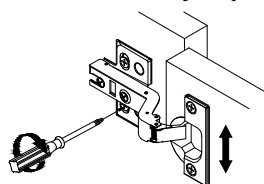


Use the screws to permanent

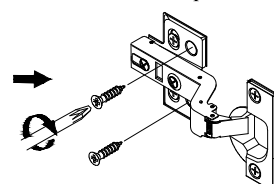 


Use the screws to adjust left or right

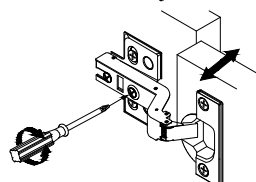 


Use the screws to adjust in or out

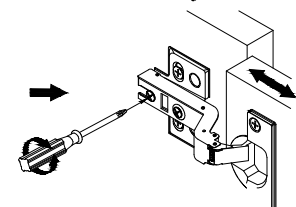 


STEP: 10

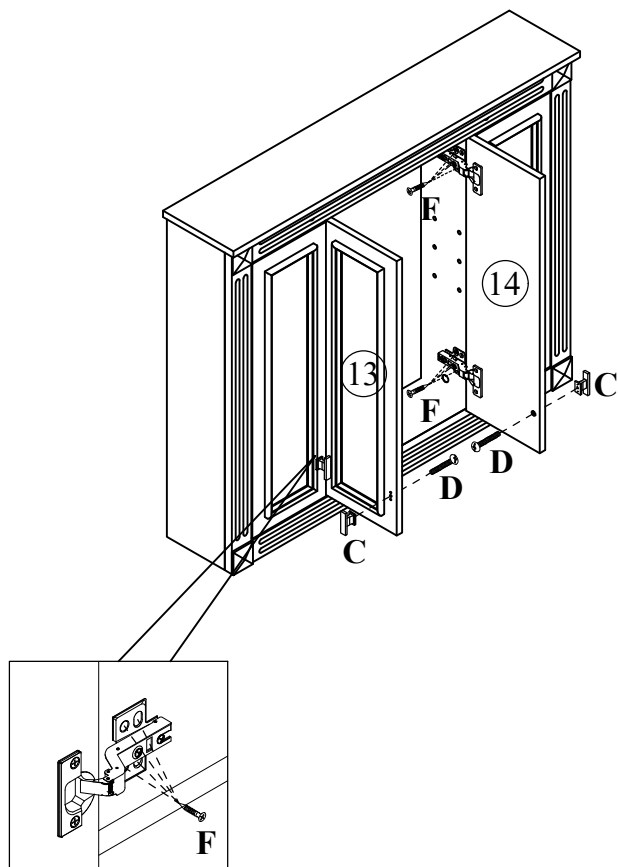 


 C		D		F	
	2PCS		2PCS		16PCS

 
Use the screws to adjust up or down

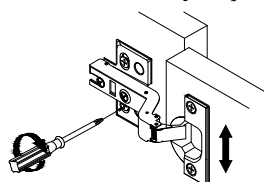


Use the screws to permanent

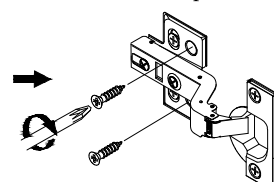 


Use the screws to adjust left or right

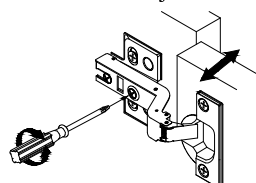 

Use the screws to adjust in or out

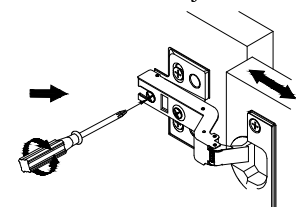 


STEP: 11

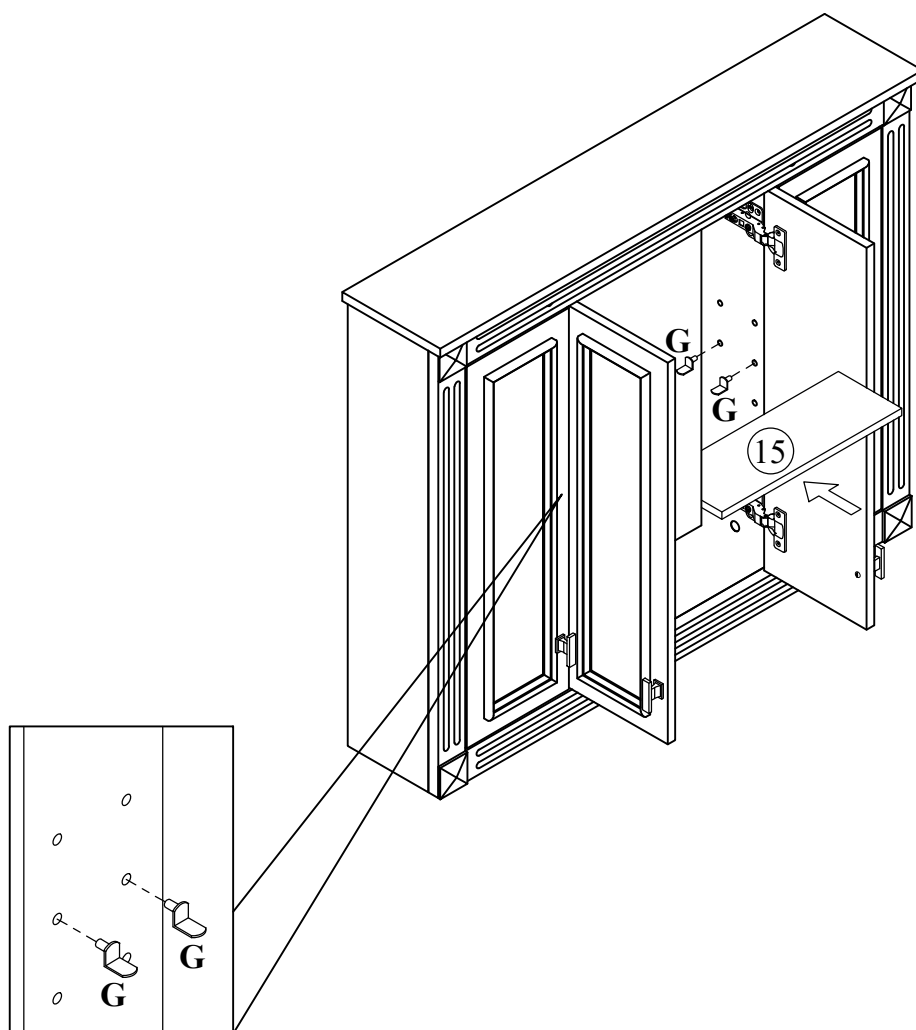 G**4PCS**

STEP: 12

 Option: 1

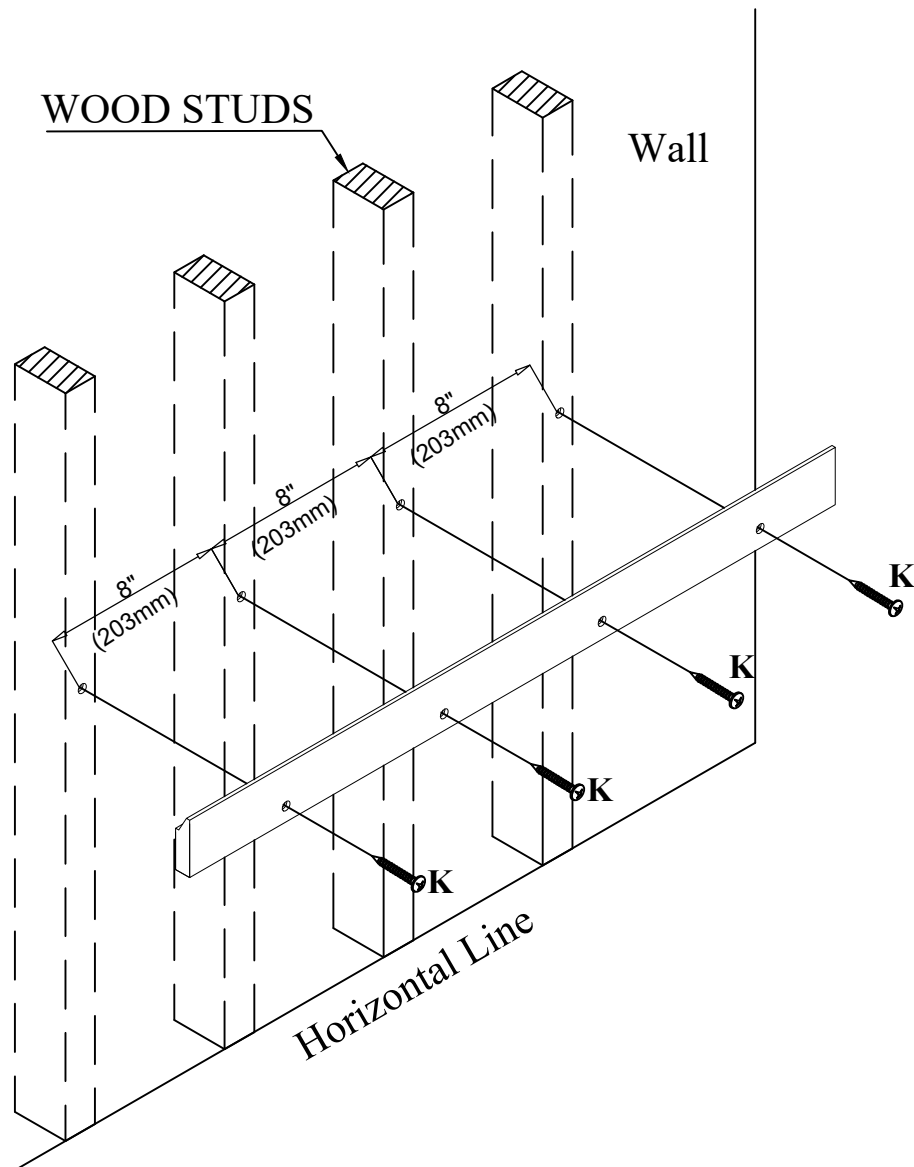K**4PCS**

Use a wood stud finder to locate the wood studs behind the walls, and then mark by pencil.
Use a level to ensure the Cross Bar (8) will be level before installing to the wall.



The 8"/8"/8" value is for reference only,
please according to the Wood stud's location.




Make sure the screw holes must be on the wood studs otherwise
the vanity will fall out because the dry wall cannot hold the cabinet.

STEP: 13

Option: 2

K	L
	
4PCS	4PCS

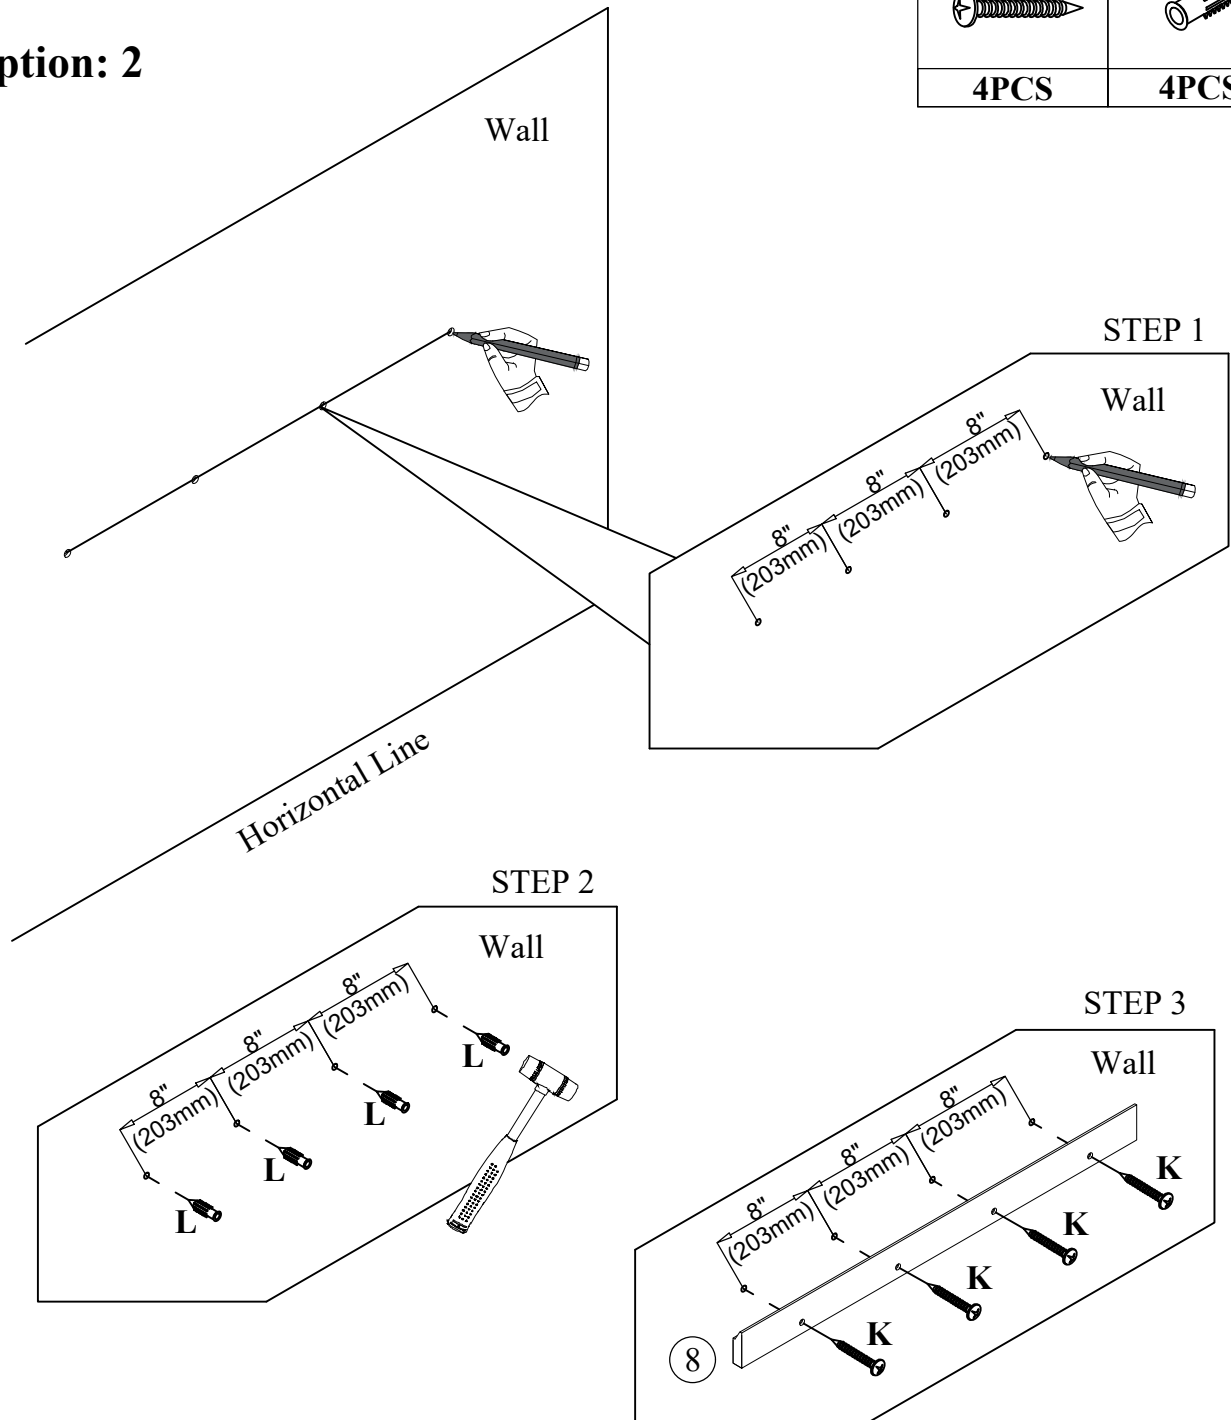 

Use a wood stud finder to locate the wood studs behind the walls, and then mark by pencil.
Use a level to ensure the Cross Bar (8) will be level before installing to the wall.

 


The 8"/8"/8" value is for reference only,
please according to the Wood stud's location.





Make sure the screw holes must be on the wood studs otherwise
the vanity will fall out because the dry wall cannot hold the cabinet.


STEP: 14

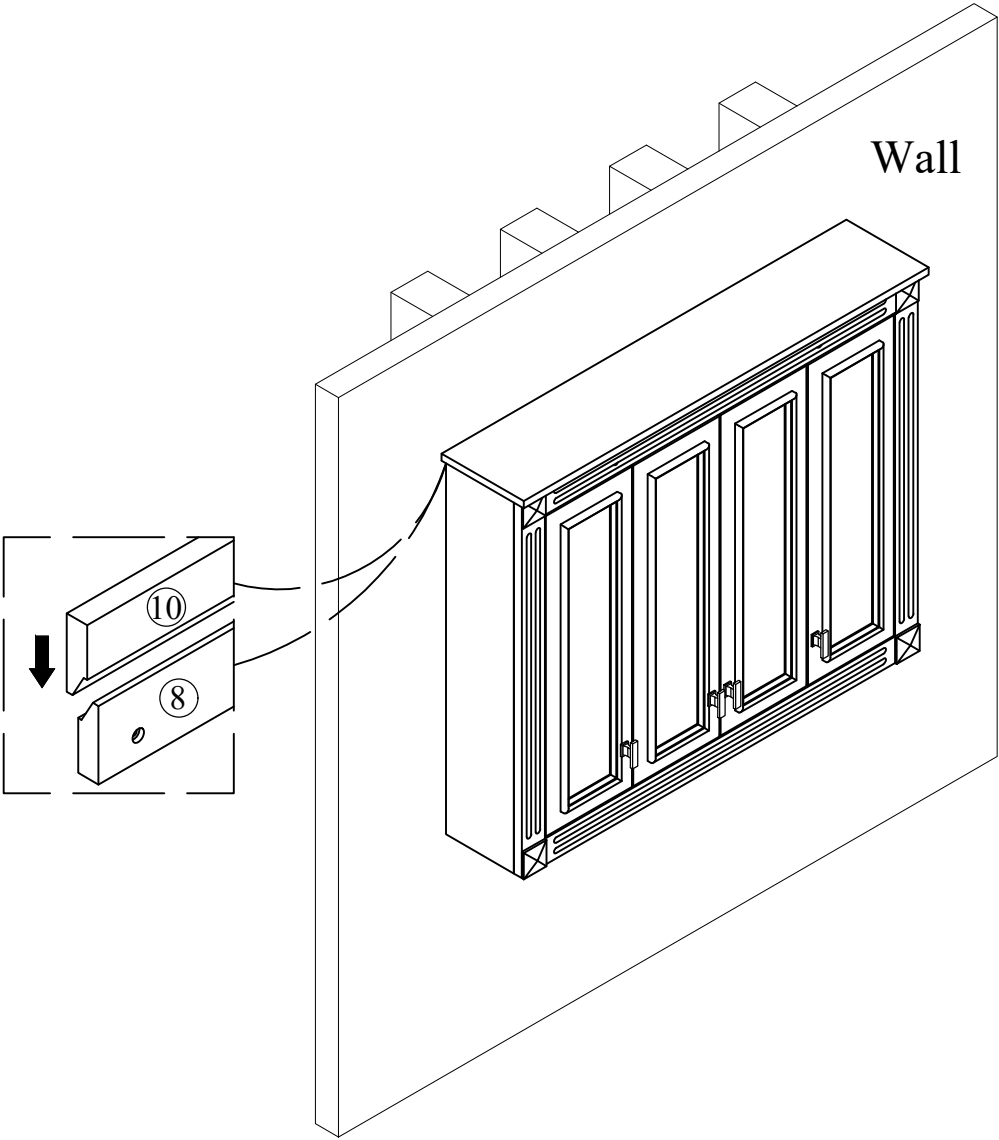

STEP: 15

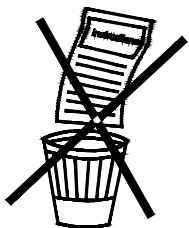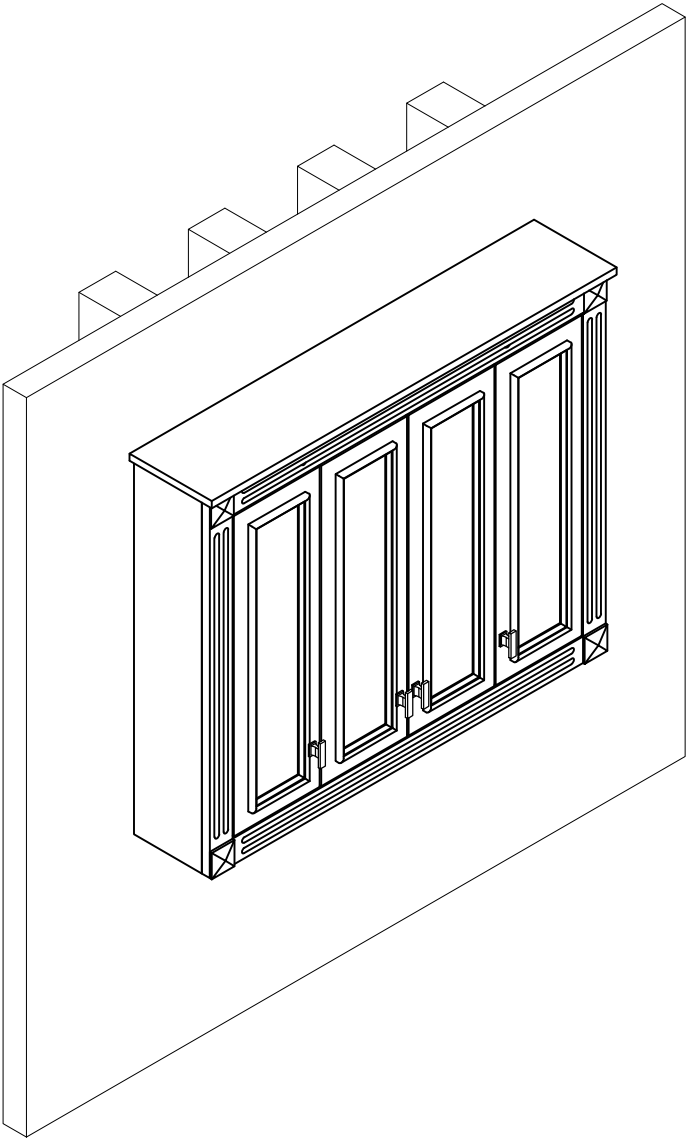  


HINGE ADJUSTMENTS

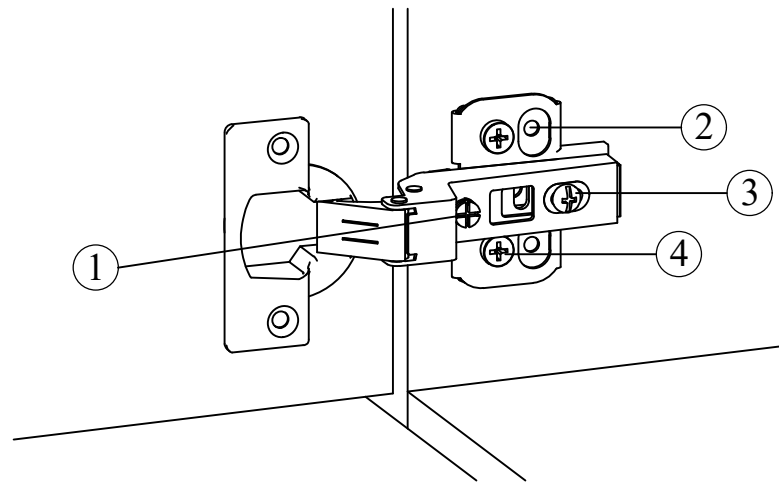 


1 Sideways / Tilt adjustment

 Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

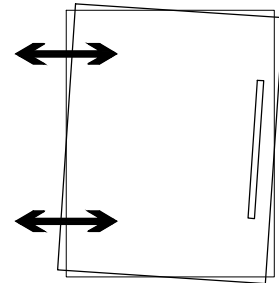

2 4 Height adjustment

 While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

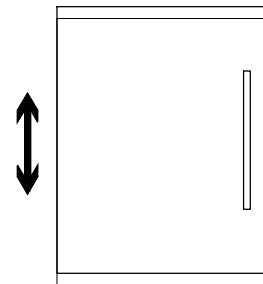

3 Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

