



# HAMILTON ELECTRIC STOVE HEATER MODEL EF-BLT01 / EF-BLT04 / EF-BLT07 / EF-BLT08

## OPERATION MANUAL



NO VENTILATION REQUIRED  
PRODUCES SAFE AND EFFICIENT HEAT  
PLEASE READ THIS ENTIRE INSTRUCTION MANUAL BEFORE USING  
110/120-VOLT / 1500-WATT  
SAVE THESE INSTRUCTIONS FOR FUTURE USE

## Quick Reference Guide:

1. Prior to plugging your heater into a convenient outlet, first verify that the circuit breaker for the outlet is on.
2. The heater may emit a slight harmless odor when first used. This odor is normal and is caused by the initial heating of the internal heater parts, but will not occur again.
3. If the heater does not emit any heat, please consult the manual for further instructions.

### **CAUTION:**

- RISK OF ELECTRIC SHOCK
- DO NOT OPEN
- THERE ARE NO SERVICEABLE PARTS INSIDE (EXCEPT FOR THE LIGHT BULBS)
- HIGH TEMPERATURE WHEN IN USE
- KEEP ELECTRICAL CORDS, DRAPERY, AND ALL FURNISHINGS, AT LEAST THREE INCHES FROM THE FRONT, AND SIDES, OF THE HEATER AT ALL TIMES

### **WARNING:**

- RISK OF FIRE
- KEEP COMBUSTIBLE MATERIAL AWAY FROM THE FRONT OF HEATER
- SERVICING SHOULD ONLY BE DONE WHEN THE HEATER IS UNPLUGGED FROM THE POWER SUPPLY

### **CAUTION WHEN CHANGING LIGHTBULBS**

REPLACE ONLY WITH E12 CLEAR, SCREW FITTING, WITH A RATING OF 110-120 / 40-WATT MAXIMUM

 
**Lightbulbs are not covered under this warranty**

## **IMPORTANT SAFETY INSTRUCTIONS:**

When using electrical appliances, to reduce the risk of fire, electric shock, and injury, basic precautions should always be followed, including the following:

1. Read all the instructions before use.
2. This heater will get hot when in use. To avoid burns, do not let bare skin touch any of the hot surfaces.
3. Keep combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains, at least 3-inches away from the front of heater, and keep them away from the sides of heater.
4. Extreme caution is necessary when the heater is used near children, elderly and pets. Never leave the heater unattended.
5. Always unplug the heater when not in use.
6. Do not operate any heater that has a damaged cord or plug. Do not operate if the heater has malfunctioned, or has been dropped, or is damaged. Return the heater to an authorized service facility for repair if damage has occurred.
7. Do not use outdoors.
8. This heater is not intended for use in bathrooms, laundry areas, or any similar indoor location. Never place heaters where it may fall into a bathtub or another water source.
9. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or any kind of textile. Keep the cord away from traffic areas where it could be tripped over.
10. To disconnect the heater, turn the control to off, then remove the plug from the outlet.
11. Connect to a properly grounded outlet only.
12. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, as well as damage the heater.
13. To prevent a possible fire, do not block the air intake or exhaust in any manner.
14. Do not use on soft surfaces, such as a bed, where openings may become blocked.
15. This heater has hot and sparking parts inside. Do not use it in any areas where gasoline, paint, or flammable liquids are used or stored.
16. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury.
17. Avoid the use of an extension cord because the extension cord may overheat and cause a fire.
18. Do not strike the heater glass.
19. Always use properly grounded, fused, and polarized outlets.
20. Always disconnect the power before cleaning, performing maintenance, or relocating the heater.
21. When transporting or storing the heater, keep in a dry place that is free from excessive movement or vibration.

22. A motor powers the flame effect, and it is normal for the motor to make some noise as it slowly rotates and creates the beautiful 3D flame effect.
23. Every effort is made to ensure packing materials are kept outside of the plastic bag, which covers your heater in the box. There is a chance that some packing may lodge itself into the heater part of the unit. If you notice this upon close inspection, please remove it before turning the heater on. When turning your heater on for the first time it is normal for the heater to emit a little 'new heater' smell, which will quickly pass.
24. You may notice some light coming from underneath, or from the sides, of the unit. This is normal and the holes allow the unit to 'breathe'. Do not block these holes.
25. This heater is only to be used on a 110-120-volt, 15-amp, grounded circuit. Do not use in an outlet controlled by a switch or dimmer switch. The cord supplied with the heater has a 3-prong plug. The round pin on the plug is for grounding purposes. If a 3-prong outlet is not available, an adapter must be used, and the adapter must be properly grounded to an outlet box. Do not plug any appliances into the same circuit as the heater.

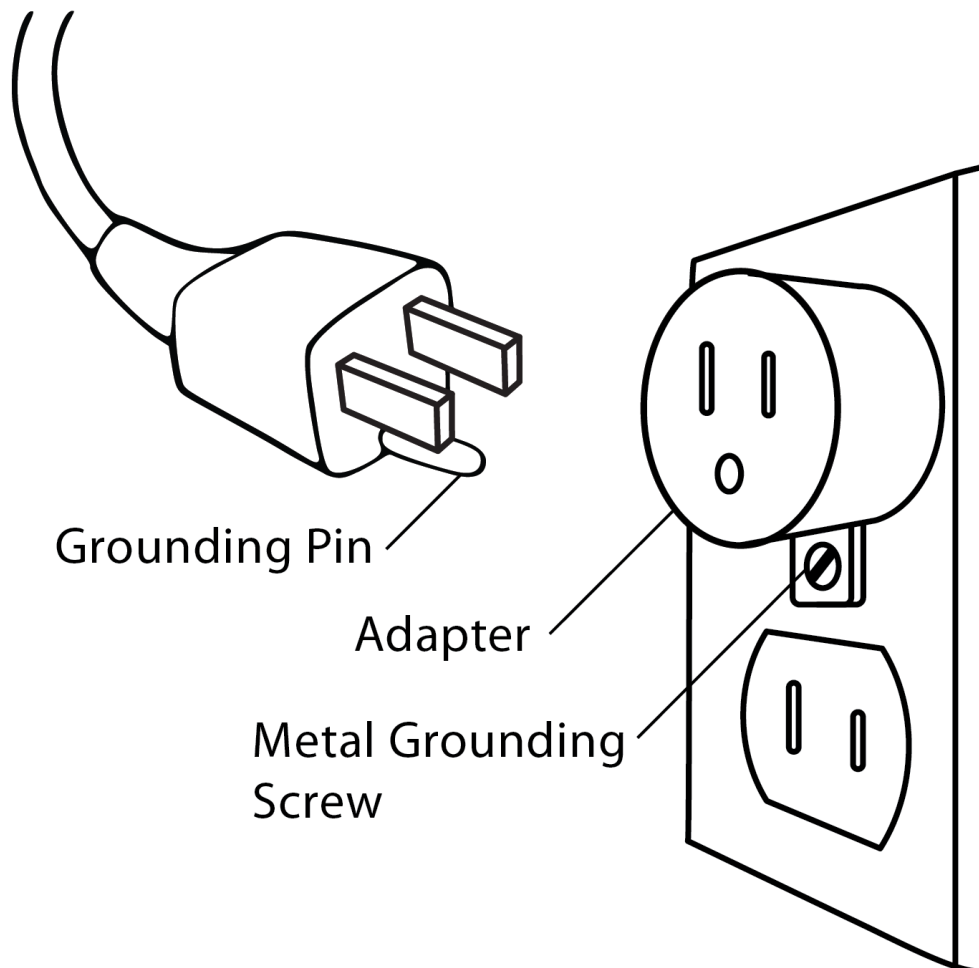


**-Save These Instructions-**

*When the heat function is used for the first time, a slight odor may be present. This is normal and should not occur again unless heater has not been used for an extended period of time.*

### Flame Effect / Lightbulb Replacement


**Caution:** *Lightbulbs will become very hot when they are in use. Allow at least ten minutes for lightbulbs to be cool before touching.*

The flame effect on this electric stove heater is created by two 40-watt lightbulbs with an E-12 (small) socket base. Only use 40-watt lightbulbs in this unit. To service lightbulbs, unplug the power cord from the outlet, and locate the access panel on the back of the stove. Remove the screws and the panel. Lightbulbs may have come loose, or may have become damaged, during shipping. If the flame effect does not work properly, check to be certain that both bulbs are screwed in tightly, and are in working order. Replace the lightbulbs as needed. Replace the access panel. Do not operate without the access panel in place. Do not remove the back cover of the heater. There are no serviceable parts inside the heater.

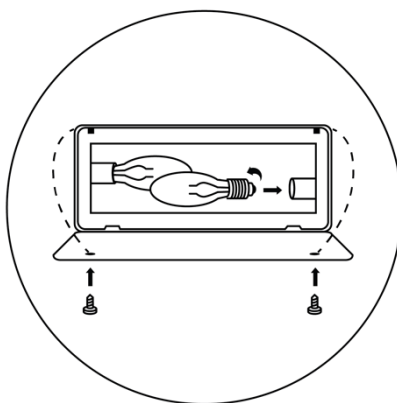


### Controls / Operation

After reading the safety instructions, and this entire manual, be certain that the controls are in the OFF position. The heat and flame affect controls are located on the right side of heater. Your heater stove is now ready for operation. Plug the unit into a grounded 15-amp with a 110 / 120-volt outlet. For the flame affect only, slide the ON / OFF switch to the ON position. For low heat, slide the ON / OFF switch and the I switch. For high heat, slide the ON / OFF switch, and the I and II switch.

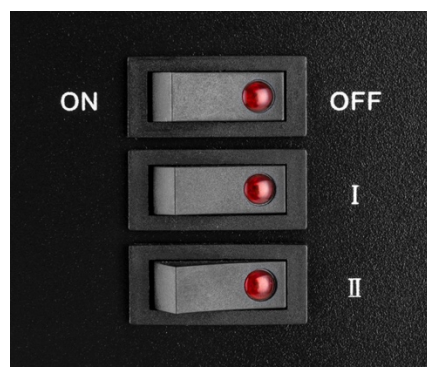

## **Leg Assembly**

Lay stove on a flat surface. Attach 4 legs with screws provided as shown:

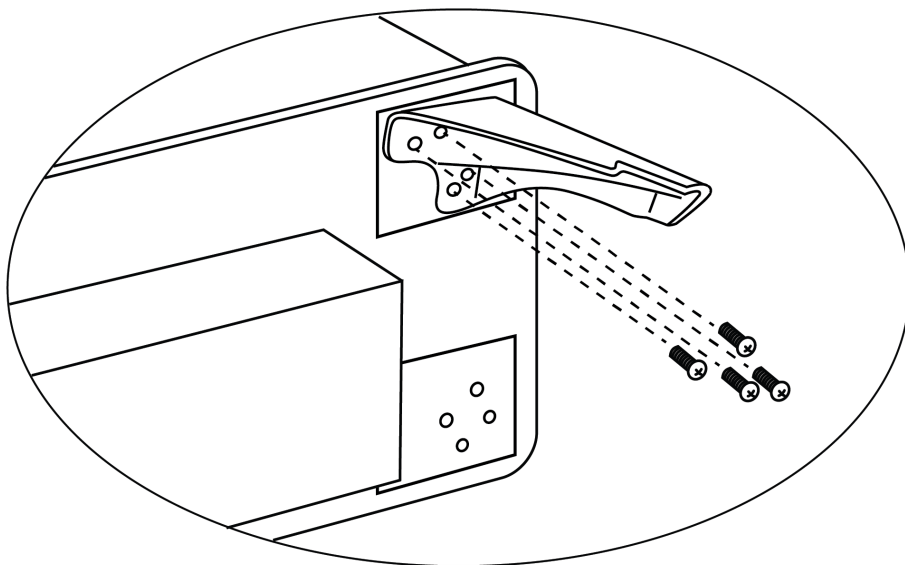

## **Temperature Control**

This heater is equipped with Temperature Limiting Control. Should the heater reach an unsafe temperature (115 degrees) the heater will automatically turn off. To reset unplug the unit from the wall and wait for five minutes. Plug unit back in and continue to use.

## **Cleaning**

Turn the heater OFF and unplug from the outlet. Use a vacuum or duster to keep heat and vent area clean from dust and dirt. The exterior of the stove should be cleaned with a damp cloth or duster. Do not use abrasive cleaners, liquid sprays, or any other cleaner.

Thank you for purchasing and enjoy this e-Flame Electric Stove Heater!



## LIMITED WARRANTY

This warrants to the original purchaser that this product is free from defects in material and workmanship as of the date of purchase and that it will, under normal use and proper care, remain so for 1 year from the date of purchase. Missing or initially defective parts will be replaced free of charge during the period of this limited warranty. If parts are unavailable, comparable replacement or refund will be given. The original dated sales receipt is required for all warranty claims. This warranty does not cover damage which has occurred during transport from the point of purchase to the consumer's home. This warranty does not cover glass, lightbulbs, or batteries.

**This product is for residential use only.** Any and all commercial use of this product voids all warranties, and frees the manufacturer from all liability. Read and fully understand all assembly and operating instructions, and all safety information and warnings, before use. The following will void this warranty: damage caused by tampering with, modifying, or altering the electric fireplace in any manner; damage due to incorrect assembly, improper care, misuse, or abuse; damage from being used with the wrong power source; water damage; damage caused from the electric fireplace being used outdoors; damage caused from the electric fireplace being used for excessive periods of time; damage caused by the electric fireplace being used in any commercial application; damage from use as a primary heat source; other misuse and abuse not specifically listed herein.

**This product is not intended to be used as a primary heat source.** e-Flame USA, its directors, officers, or agents, will not be liable to the purchaser or any third party, whether in contract, in tort, or on any other basis, for any indirect, special, punitive, exemplary, consequential, or incidental loss, cost, or damage arising out of or in connection with this sale, maintenance, use, or inability to use this product, even if e-Flame USA, or its directors, or agents have been advised of the possibility of such losses, costs, or damages that exceed the purchase price of the product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to the purchaser. This limited warranty gives you specific legal rights, and you may also have other rights, which vary from state-to-state.

Thank you for purchasing this product! If you have any questions about the assembly or operation of this product, are missing any parts, or have defective parts, please email us at [info@eflameusa.com](mailto:info@eflameusa.com).

