


Barber Chair



 
OWNER'S MANUAL



CAUTION! Please read through this manual before assembling, installing or using the product to ensure safe and correct use.

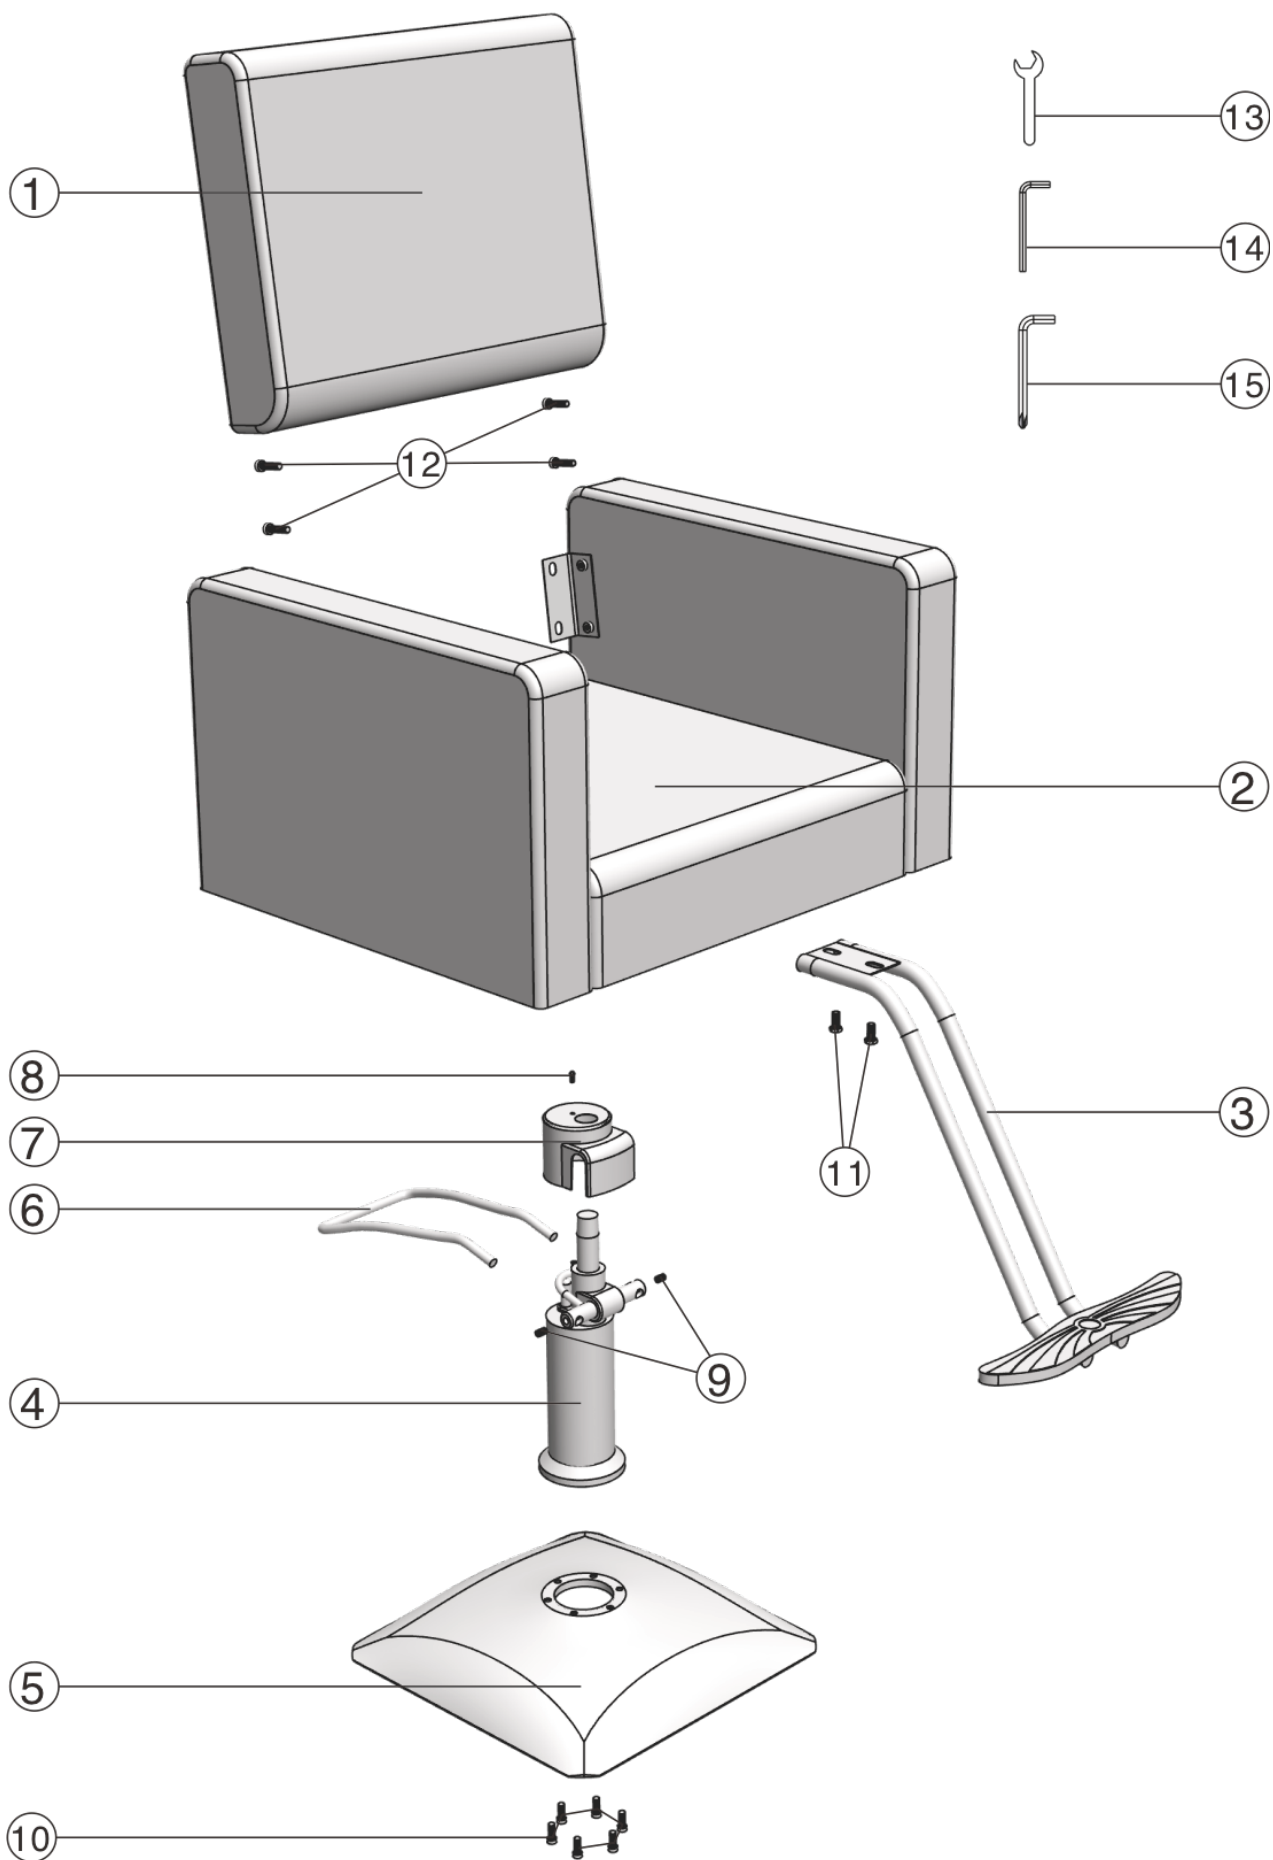

Parts

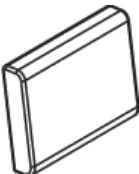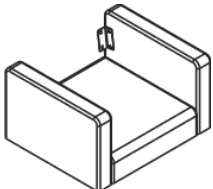Parts Code	Image	Parts Name	Qty(Pcs)
1		Backrest	1
2		Seat	1
3		Footrest	1
4		Oil Pump	1
5		Base	1
6		Foot Pump Rod	1
7		Oil Pump Cover	1
8		Semi-round head screw M5*15	1
9		Lock Nut M8	2
10		Allen Socket Screw M6*12	6
11		Hex Screw M8*16	2
12		Allen Socket Screw M8*30	4

Tools


Parts Code	Image	Parts Name	Qty(Pcs)
13		Wrench 14mm	1
14		Allen Key 4mm	1
15		Allen Key 5mm with Phillips head Screwdriver	1

Installation Diagram

Step One:

Loosen the two Lock Nuts M8 ⑨, install the Foot Pump Rod ⑥ to the Oil Pump ④, and tighten the two Lock Nuts M8 ⑨ to fix the Foot Pump Rod ⑥


Caution: Install the Foot Pump Rod ⑥ to the Oil Pump ④ in the correct direction as the diagram

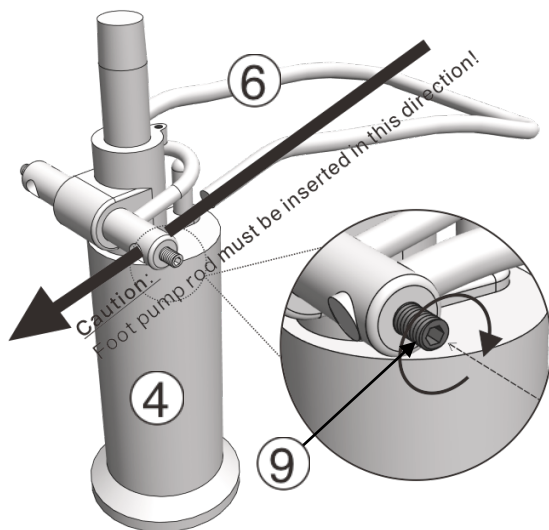

Two Lock Nuts ⑨ were pre-installed on the Oil Pump ④


Step Two:

Install the oil pump cover ⑦ on the oil pump ④ and fix it with the semi-round head screw M5*15 ⑧

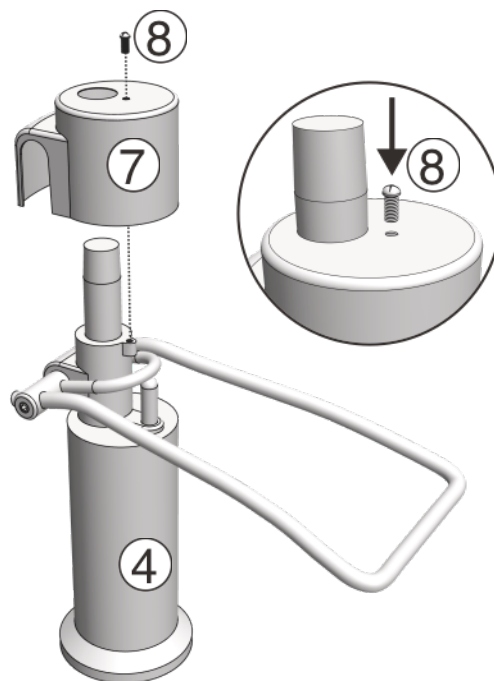


Step Three:

Unscrew the six Allen Socket Screws M6*12 ⑩ from the bottom of the oil pump ④ for later use

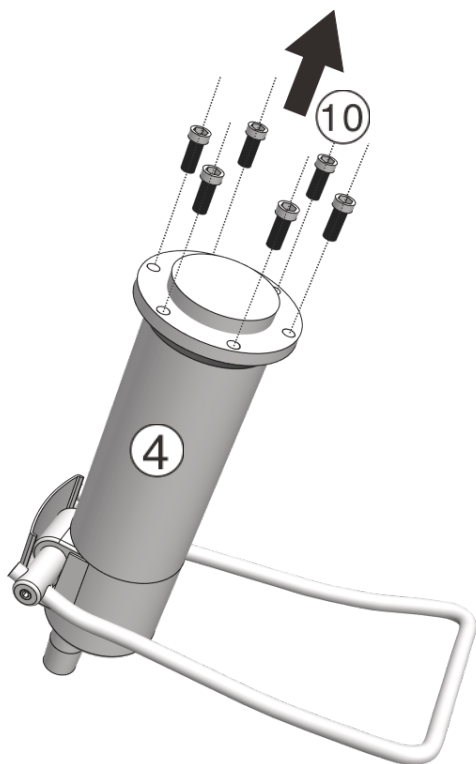


Step Four:

Fix the base ⑤ with six Allen Socket Screws M6*12 ⑩ to the bottom of the oil pump ④

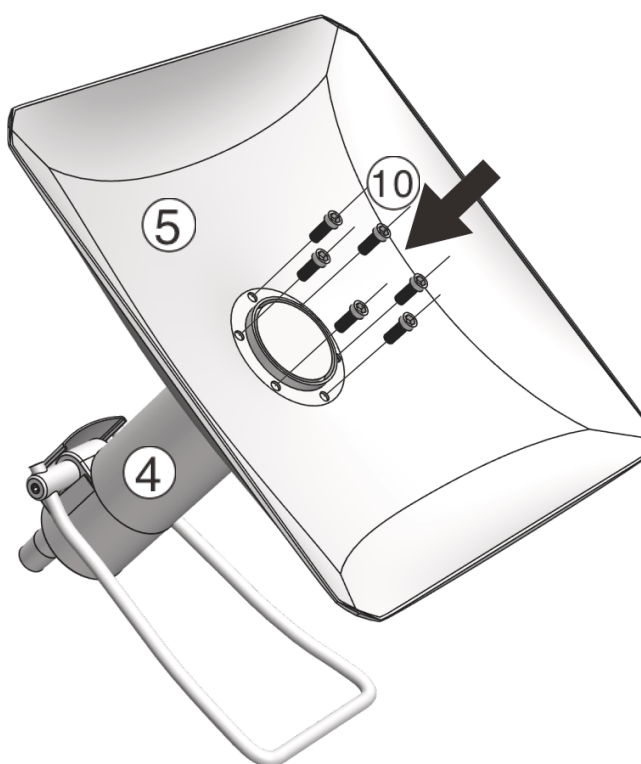

Step Five:


Install the Backrest ① to the Seat ② and secure it with four Allen Socket Screws M8*30 ⑫

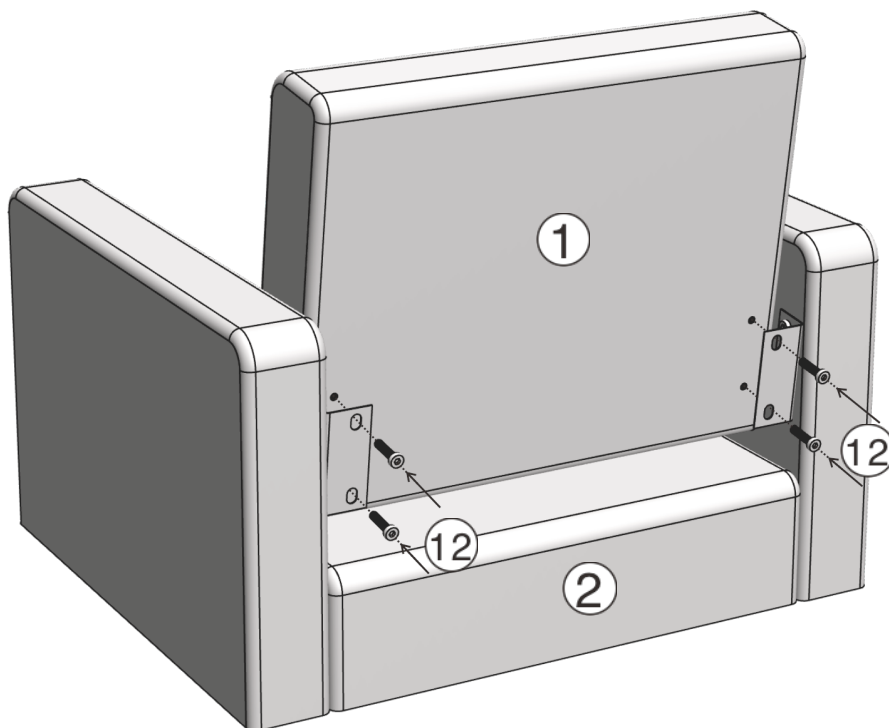

Four Allen Socket Screws M8*30 ⑫ are pre-installed on the back of the backrest

Step Six:


Install the Footrest ③ to the bottom of the Seat ② and secure it with two Hex Screws M8*16 ⑪

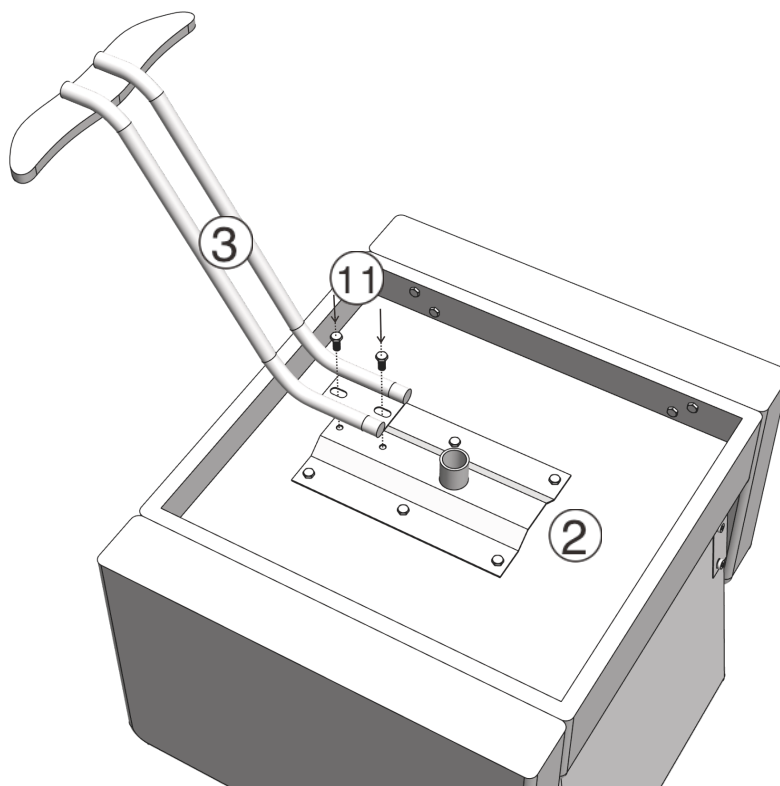


Two Hex Screws M8*16 ⑪ are pre-installed on the bottom of the Seat ②

Step Seven:


Combine the Seat: Attach the assembled seat to the pump, sit on it, and there you go.

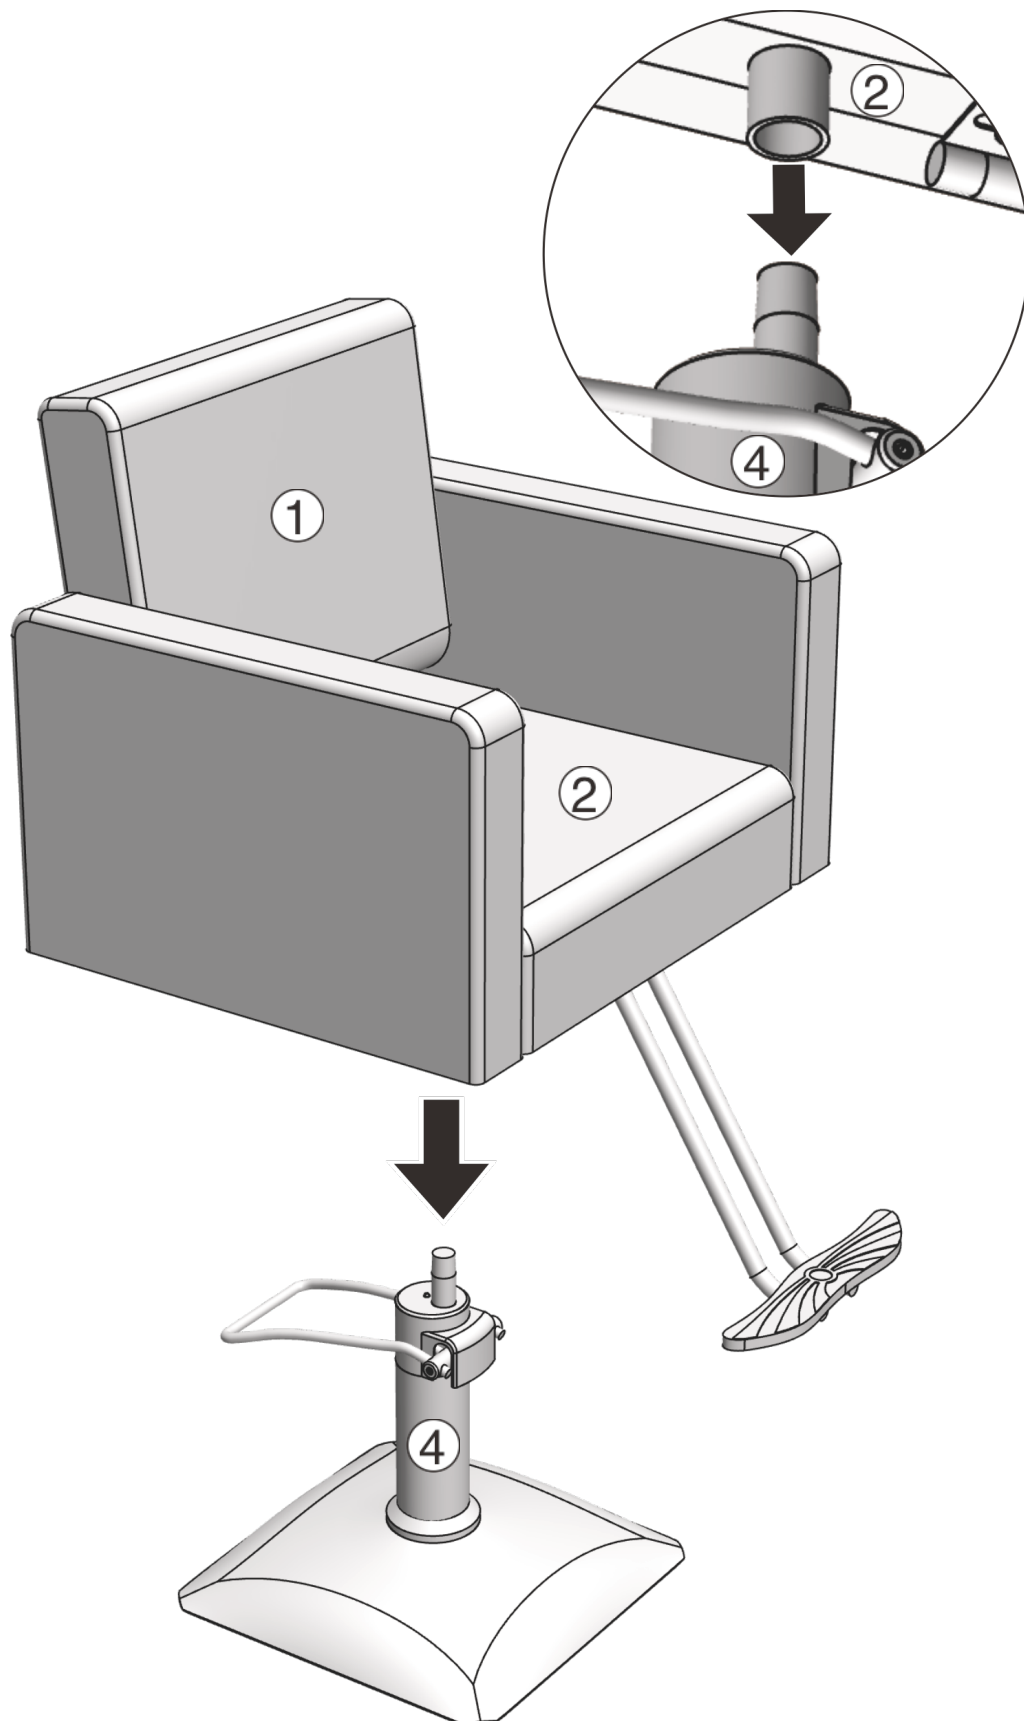

Instruction for use

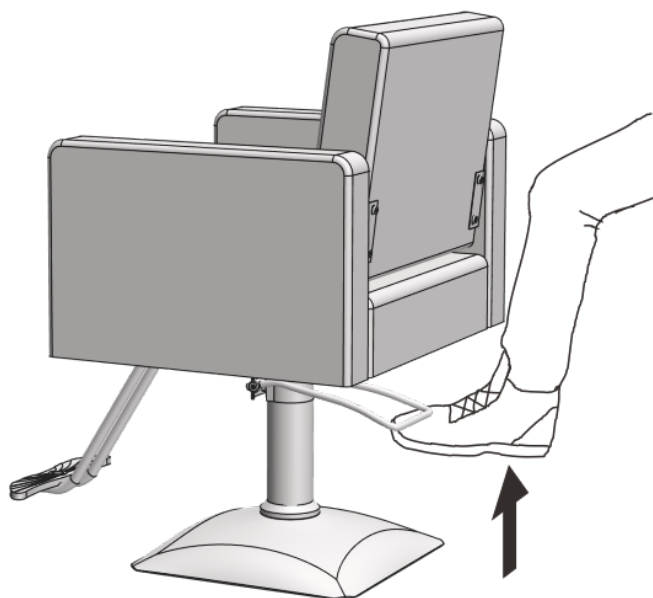


 **Lock:** Lift the foot pump rod upward, and the rotation and lifting functions are locked.

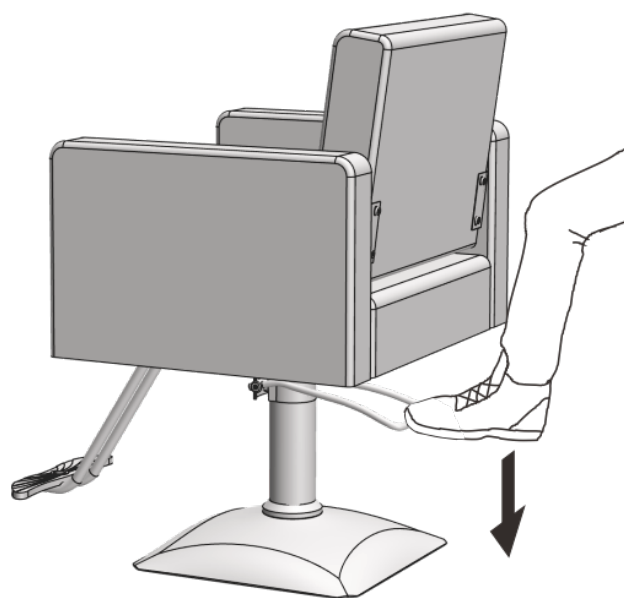

 **Unlock:** Press the foot pump rod down, and the rotation and lift functions resume.

Seat up: Foot down on the foot pump rod 5-10 cm, and repeat. Don't step too deep!

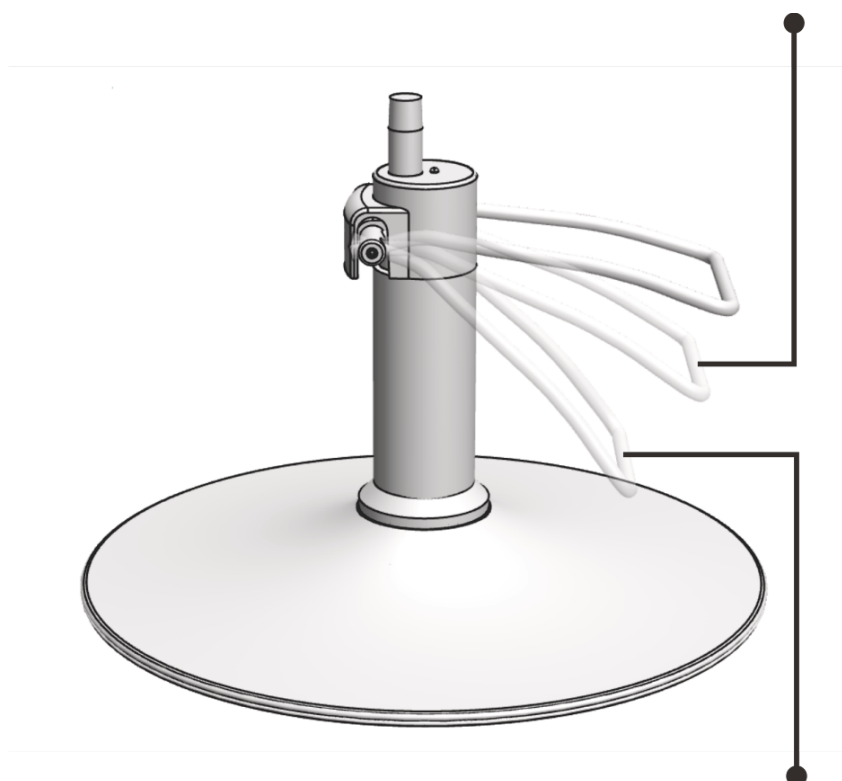

Seat down: Downhill the foot pump rod and hold still to lower the seat.

