


Picture Light Fixture Instruction

1.Product profile & packing

1.1 Profile

ITEM:
16inches design


ITEM:
24inches design

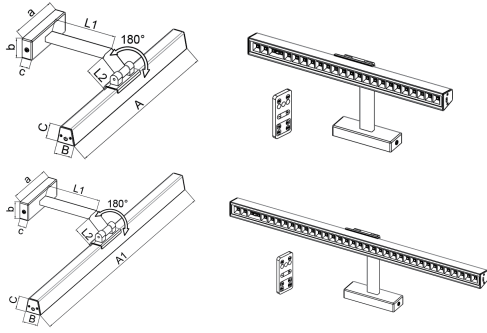

Product dimensions

a=12cm/4.72inch	A=40cm/15.7inch	L1=12.2cm/4.8inch
b=4cm/1.57inch	B=3.5cm/1.38inch	L2=4.5cm/1.77inch
c=2cm/0.79inch	C=3.1cm/1.22inch	Al=60cm/23.6inch


1.2 Packing List

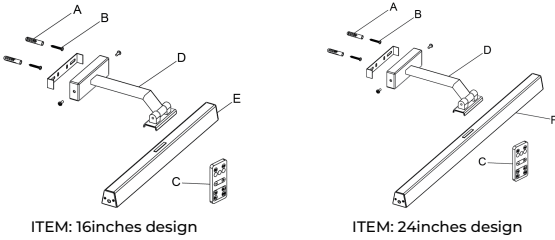

ITEM: 16inches design

ITEM: 24inches design


NO	Part name	Specification	40cm design	60cm design
A	Expansion Screw	Plastic	2	2
B	Screw	ST3.5x30, Cross	2	2
C	Remote Control	11 buttons	1	1
D	Lamp Bracket	11 buttons	1	1
E	LED Light Source Part(40cm)	Magnetic LED light source, remote control, S1=40cm/15.7inch	1	
F	LED Light Source Part(60cm)	Magnetic LED light source, remote control, S1=60cm/23.6inch		1
G	Charging Cable	Type-C charging cable, cable length 100cm/39.4in	1	1

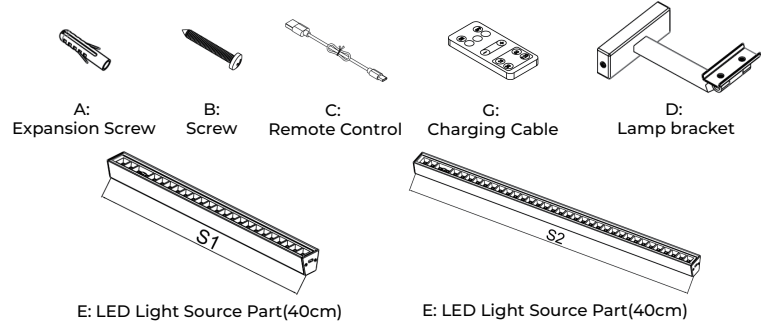

2.Installation

Warning:


1)Please read the instruction carefully before beginning installation.

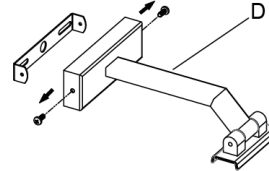


Step1:
Remove the screws and mounting plate located on the Lamp Bracket (D).

Step2:

Insert the screw (b) through the mounting plate and lock it in the installation position.

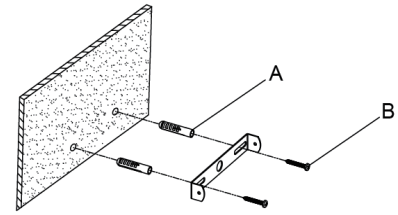

Step3: Install the lamp bracket (B) on the mounting plate.

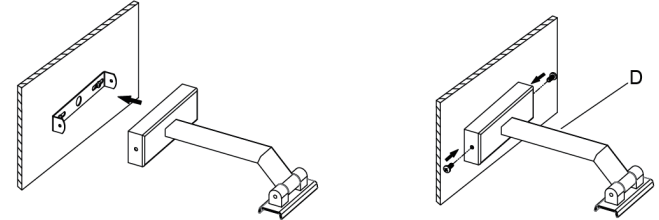


Picture Light Fixture Instruction

1.Product profile & packing

1.1 Profile

ITEM:
16inches design


ITEM:
24inches design

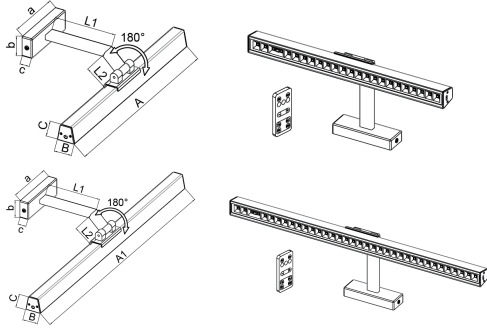

Product dimensions

a=12cm/4.72inch	A=40cm/15.7inch	L1=12.2cm/4.8inch
b=4cm/1.57inch	B=3.5cm/1.38inch	L2=4.5cm/1.77inch
c=2cm/0.79inch	C=3.1cm/1.22inch	Al=60cm/23.6inch


1.2 Packing List

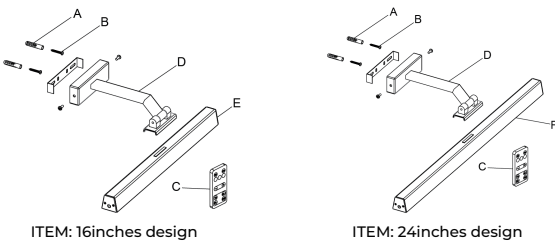

ITEM: 16inches design

ITEM: 24inches design


NO	Part name	Specification	40cm design	60cm design
A	Expansion Screw	Plastic	2	2
B	Screw	ST3.5x30, Cross	2	2
C	Remote Control	11 buttons	1	1
D	Lamp Bracket	11 buttons	1	1
E	LED Light Source Part(40cm)	Magnetic LED light source, remote control, S1=40cm/15.7inch	1	
F	LED Light Source Part(60cm)	Magnetic LED light source, remote control, S1=60cm/23.6inch		1
G	Charging Cable	Type-C charging cable, cable length 100cm/39.4in	1	1

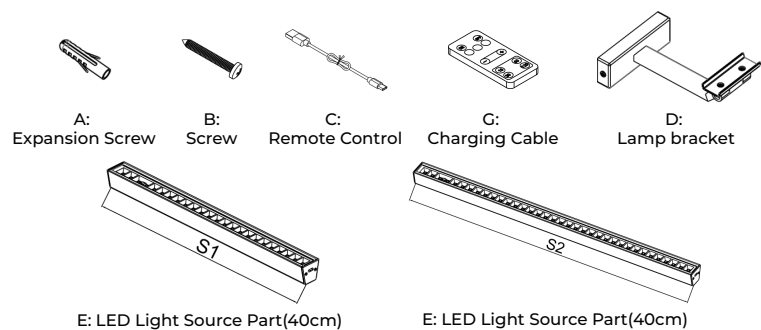

2.Installation

Warning:


1)Please read the instruction carefully before beginning installation.

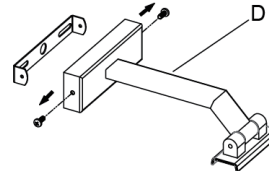


Step1:
Remove the screws and mounting plate located on the Lamp Bracket (D).


Step2:

Insert the screw (b) through the mounting plate and lock it in the installation position.

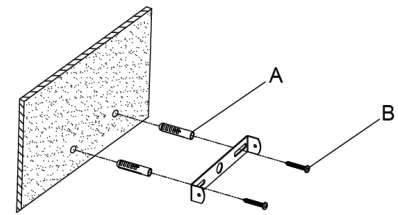


Step3: Install the lamp bracket (B) on the mounting plate.

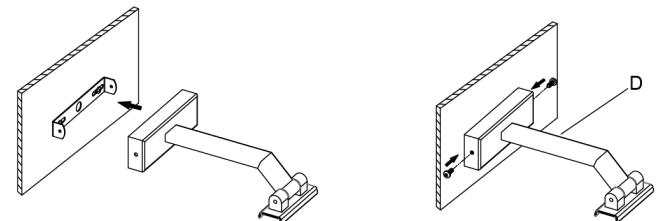

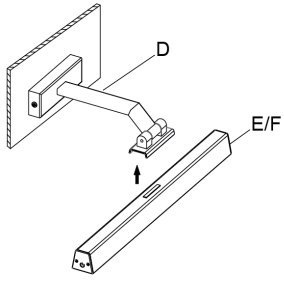

Step4:
Install the LED light source (E/F) to the lamp bracket (D) via magnet.

Step5: LED light source (E/F) can be rotated 180° along the axial direction, Type C charging interface, Touch the icon to switch it on and off.

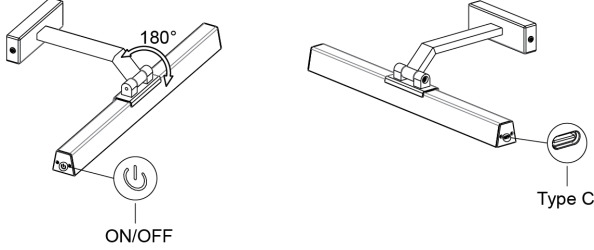

Charging operation

Type C charging interface, parameter: DC5V/2A.
Take down the light tube to recharge, indicator light is red when charging, turn green when finished.


ON/OFF Touch Operation

Short press: Touch once the button int to turn on, twice for cool white light, third for warm light, forth for nature light, the last to turn off. Touch the button and hold for seconds to adjust any level brightness.

Long press: after touching the buttons for a few seconds, adjust the light brightness.


3.Operation of the Remote Controller

Remove the insulation tabs from the Remote Controller before use
The remote-control distance is 4M/13FT. Aim at the picture light

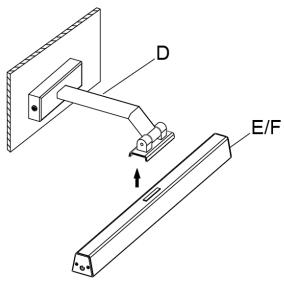

Step4:
Install the LED light source (E/F) to the lamp bracket (D) via magnet.

Step5: LED light source (E/F) can be rotated 180° along the axial direction, Type C charging interface, Touch the icon to switch it on and off.

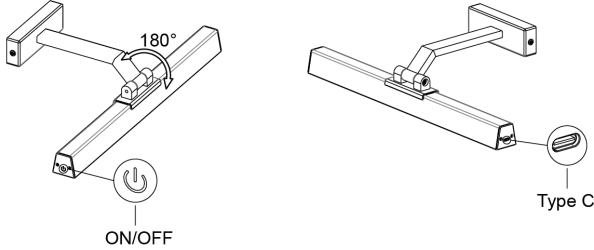

Charging operation

Type C charging interface, parameter: DC5V/2A.
Take down the light tube to recharge, indicator light is red when charging, turn green when finished.

ON/OFF Touch Operation

Short press: Touch once the button int to turn on, twice for cool white light, third for warm light, forth for nature light, the last to turn off. Touch the button and hold for seconds to adjust any level brightness.

Long press: after touching the buttons for a few seconds, adjust the light brightness.

3.Operation of the Remote Controller


Remove the insulation tabs from the Remote Controller before use
The remote-control distance is 4M/13FT. Aim at the picture light

Remote Control Button Explanation


- 1: On and Off switch
- 2: Color temperature adjustment
- 3: Brightness adjustment
- 4: Timing mode

Remote Control Button Function Details

- (ON) On switch: Open the LED Light.
- (OFF) Off switch: Close the LED Light.
- (-) (☀️) (+) Respectively: Warm white, Natural white, Cool white
- (☀️) (☀️) (☀️) Brightness adjustment: "-" brightness decreases, "+" brightness increases.t
- (15) (30) (60) (120) Timer for 15, 30, 60 or 120 minutes to turn off the light

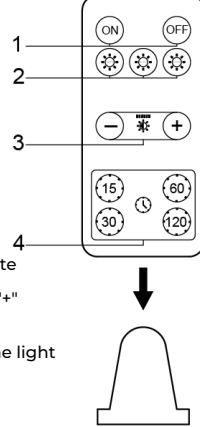

4. Operation of the Remote Controller

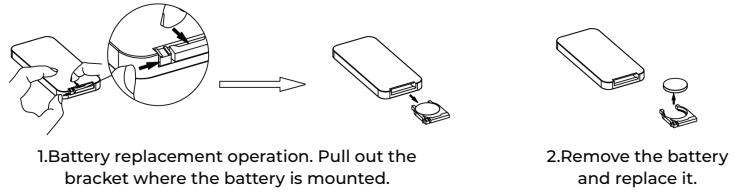

5.Failure analysis and solution

The fault phenomenon	Cause analysis	The solution
No light	1.The battery is exhausted.	1. Charge the light.
Not controlled by remote control	2.Insulation piece not dialed down. 3. Remote control is not aligned with the wall sconces. 4. The remote control distance is too far.	2. remove the insulation tabs 3. Aim the remote control at the wall sconces and then press the button. 4. The distance between the remote control and the light is not more than 4m.

Warranty:


Dear Customer:
For your better using experience, we offer efficient after-sale customer service. If you have any question, please don't hesitate to contact us via amazon email from your order page. We are always here providing prompt response and good solutions to you within 12 hours

Remote Control Button Explanation


- 1: On and Off switch
- 2: Color temperature adjustment
- 3: Brightness adjustment
- 4: Timing mode

Remote Control Button Function Details

- (ON) On switch: Open the LED Light.
- (OFF) Off switch: Close the LED Light.
- (-) (☀️) (+) Respectively: Warm white, Natural white, Cool white
- (☀️) (☀️) (☀️) Brightness adjustment: "-" brightness decreases, "+" brightness increases.t
- (15) (30) (60) (120) Timer for 15, 30, 60 or 120 minutes to turn off the light

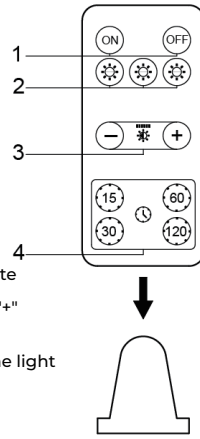

4. Operation of the Remote Controller

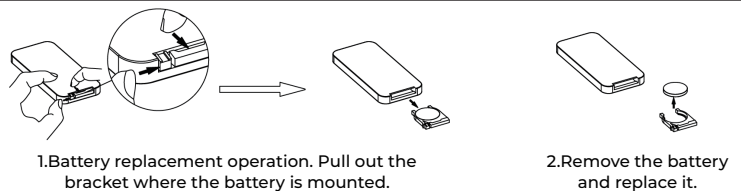

5.Failure analysis and solution

The fault phenomenon	Cause analysis	The solution
No light	1.The battery is exhausted.	1. Charge the light.
Not controlled by remote control	2.Insulation piece not dialed down. 3. Remote control is not aligned with the wall sconces. 4. The remote control distance is too far.	2. remove the insulation tabs 3. Aim the remote control at the wall sconces and then press the button. 4. The distance between the remote control and the light is not more than 4m.

Warranty:

Dear Customer:
For your better using experience, we offer efficient after-sale customer service. If you have any question, please don't hesitate to contact us from your order page. We are always here providing prompt response and good solutions to you within 12 hours