


SECTIONAL

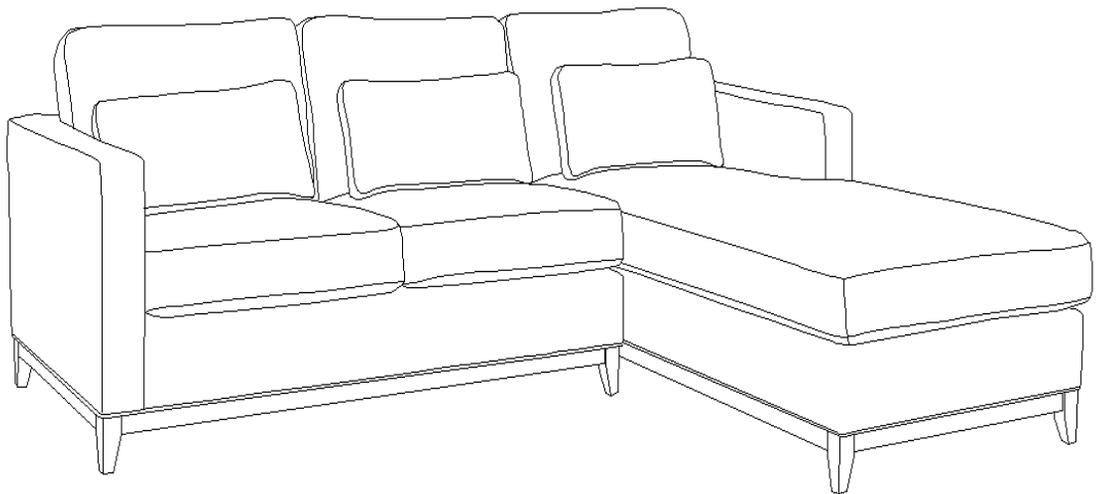



Questions, problems, assembly help, missing parts?

No need to return the product, we will gladly help and ship your replacement parts free of charge
Please call Customer Service

In order to assist you in a timely manner, please have the following information ready:

Model # _____ Part Number or Letter _____

Purchased at _____ Date of Purchase _____

If you wish to return the product, please contact the retailer where the product was purchased.

IMPORTANT: Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets.

We recommend that you assemble this unit on a carpeted floor to avoid scratches. We do not recommend the use of power tools for assembly as this could damage the unit. Only use manual tools.

Requires 2 people for ease of assembly.

CARE and MAINTENANCE

Wipe regularly with clean water and a damp, clean, soft white cloth.

General cleaning can be done as needed with a mild detergent and water solution. Always rinse with clean water and dry.

For heavy soiling, dampen a soft white cloth or soft bristle brush. Use care as scrubbing can damage the surface.


More difficult stains can be treated, but this should be occasional, not daily, cleaning. ANY cleaning solution used must be removed with clean water and a clean white cloth. Cleaning residue left on the material can cause it to dry out and crack, or affect the color.

DO NOT use any cleaners with corrosive ingredients (lye, acids or ammonia).

PRE-ASSEMBLY INFORMATION

PARTS DESCRIPTION

A

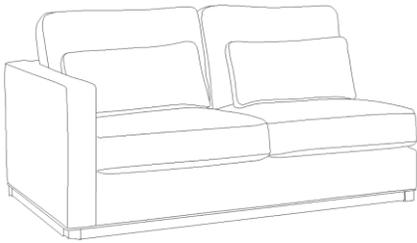

LOVESEAT
QTY 1

B



CHAISE
QTY 1

C




LEG
QTY 8

NEED HELP? For help with assembly or if you are missing a part, Please call customer service

PRE-ASSEMBLY INFORMATION


HARDWARE DESCRIPTION

1

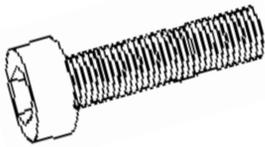


BOLT
M8 x 60MM
QTY 8

2

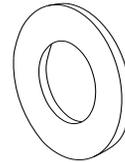


FLAT WASHER
 ϕ 22MM
QTY 8

3

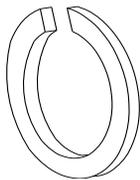

LOCK WASHER
M8
QTY 8

4

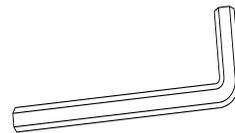


ALLEN KEY
6MM
QTY 1

NEED HELP? For help with assembly or if you are missing a part, Please call customer service

ASSEMBLY


STEP 1

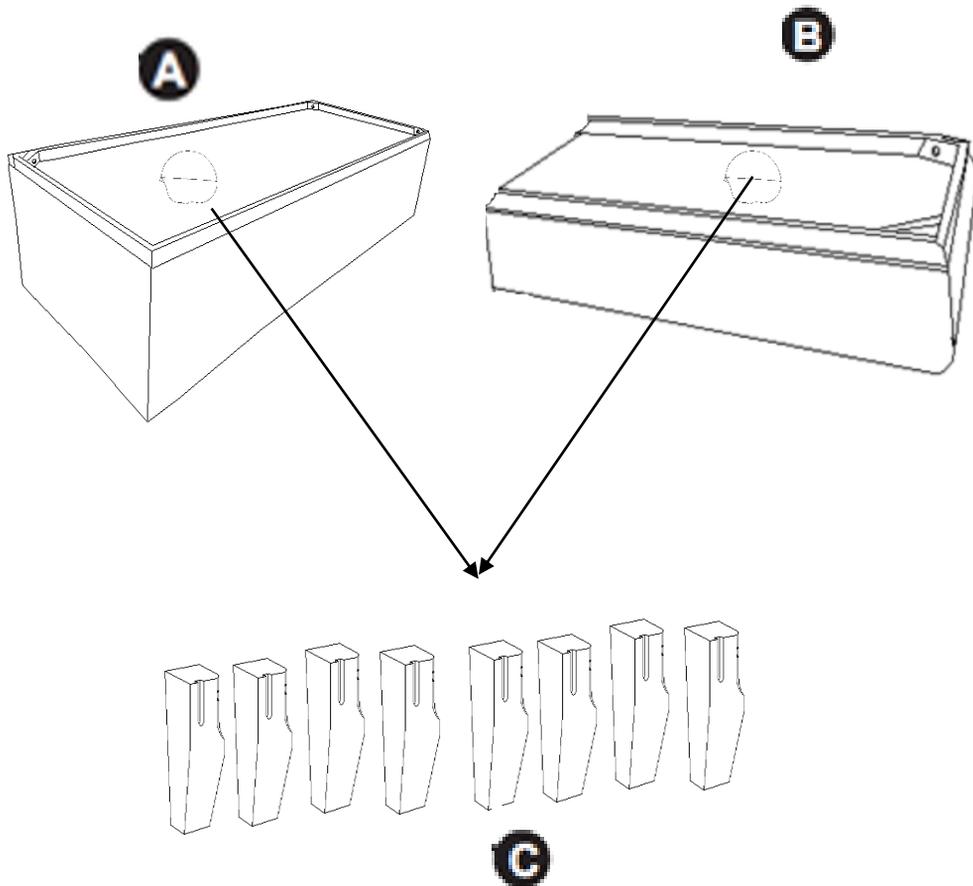

Place the Loveseat (A) and Chaise (B) on their back on a flat smooth surface. Remove the Legs (C) from inside the fabric of the bottom of the Loveseat (A) and Chaise (B).

ASSEMBLY



STEP 2

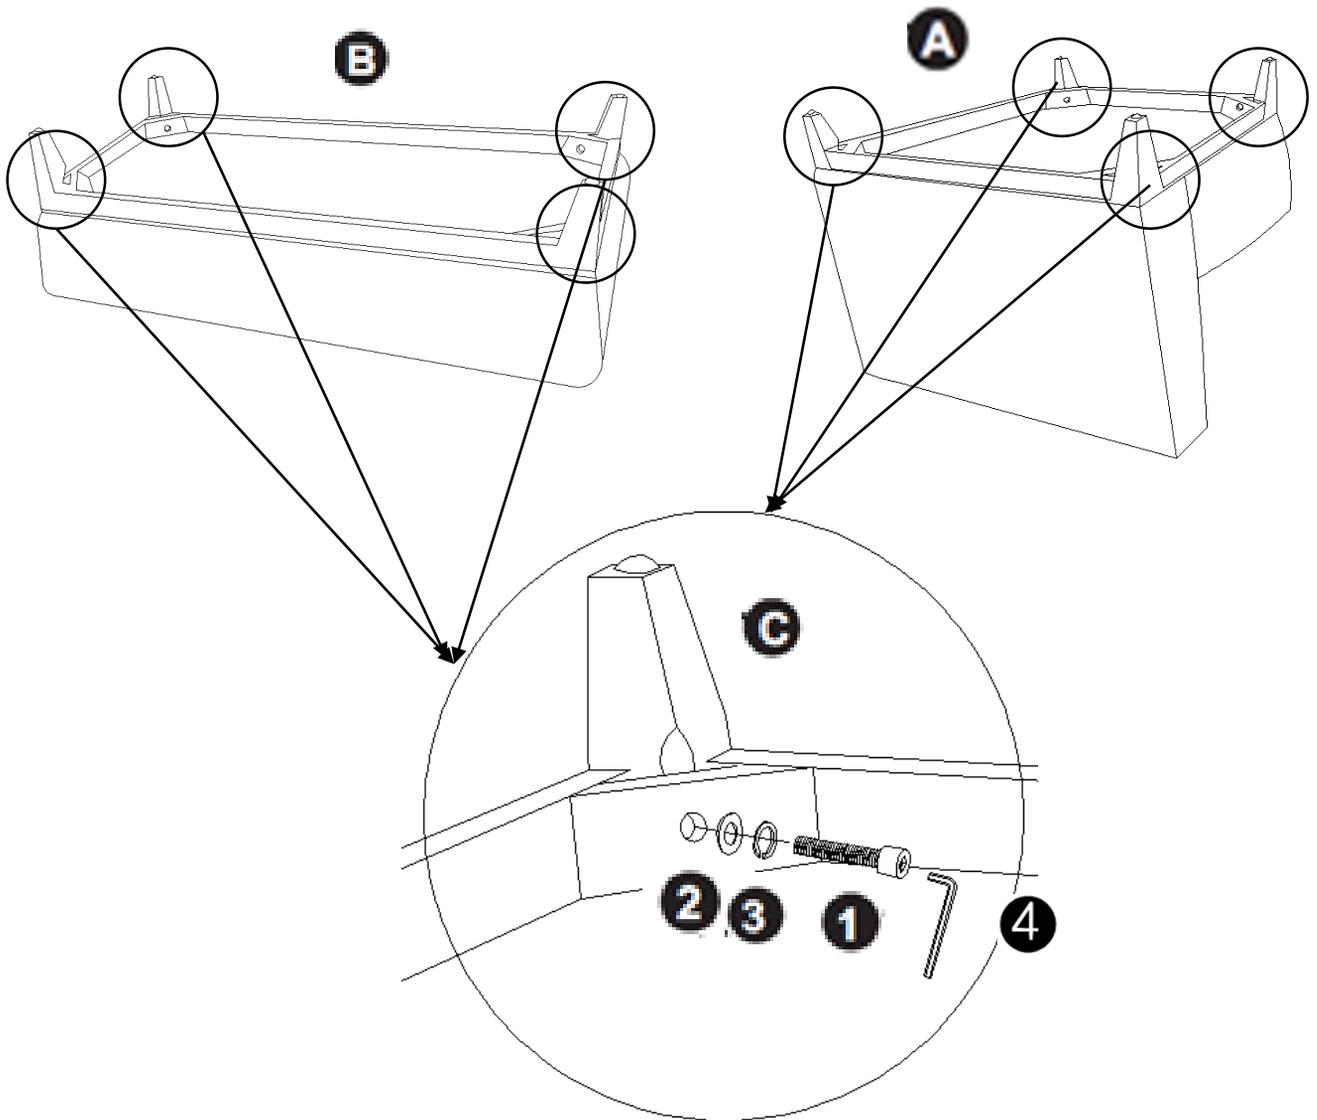

Attach the Legs (B) to the Loveseat (A) and Chaise (B) with Flat Washer (2), Lock Washer (3) and Bolt (1) using Allen Key (4).

ASSEMBLY


STEP 3

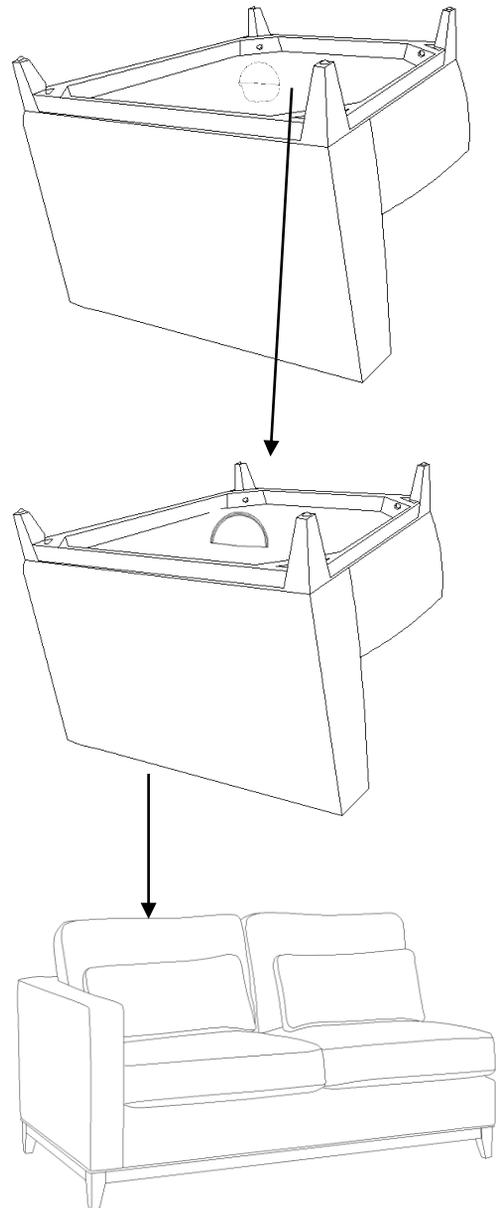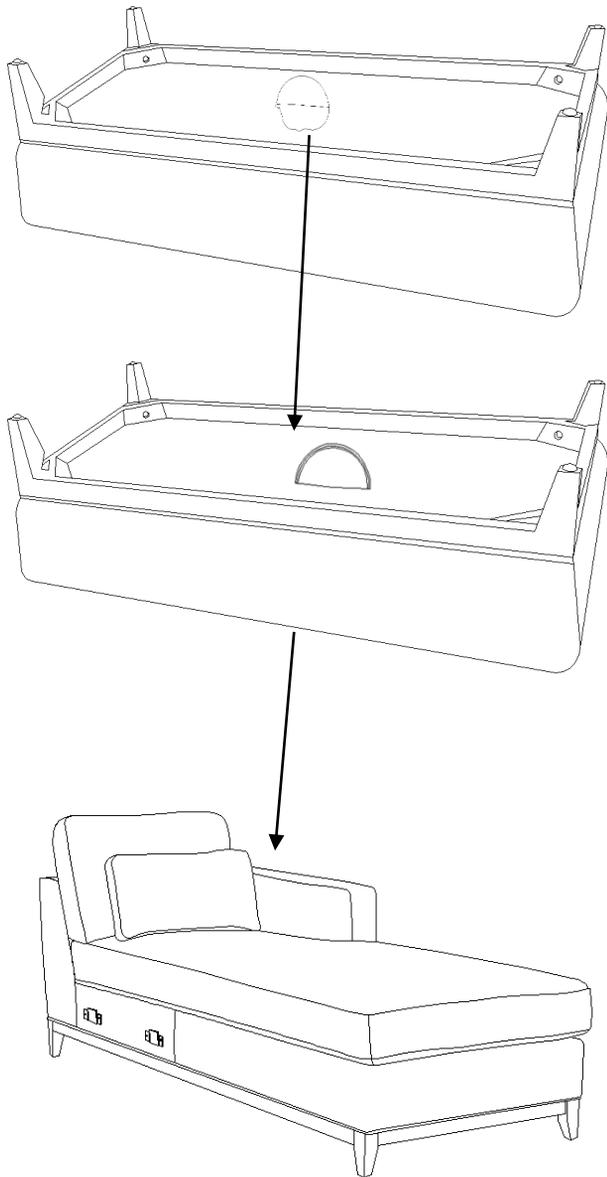

Use the zipper to close the fabric on the bottom of Loveseat and Chaise. Turn the Loveseat and Chaise right side up.

ASSEMBLY

STEP 4

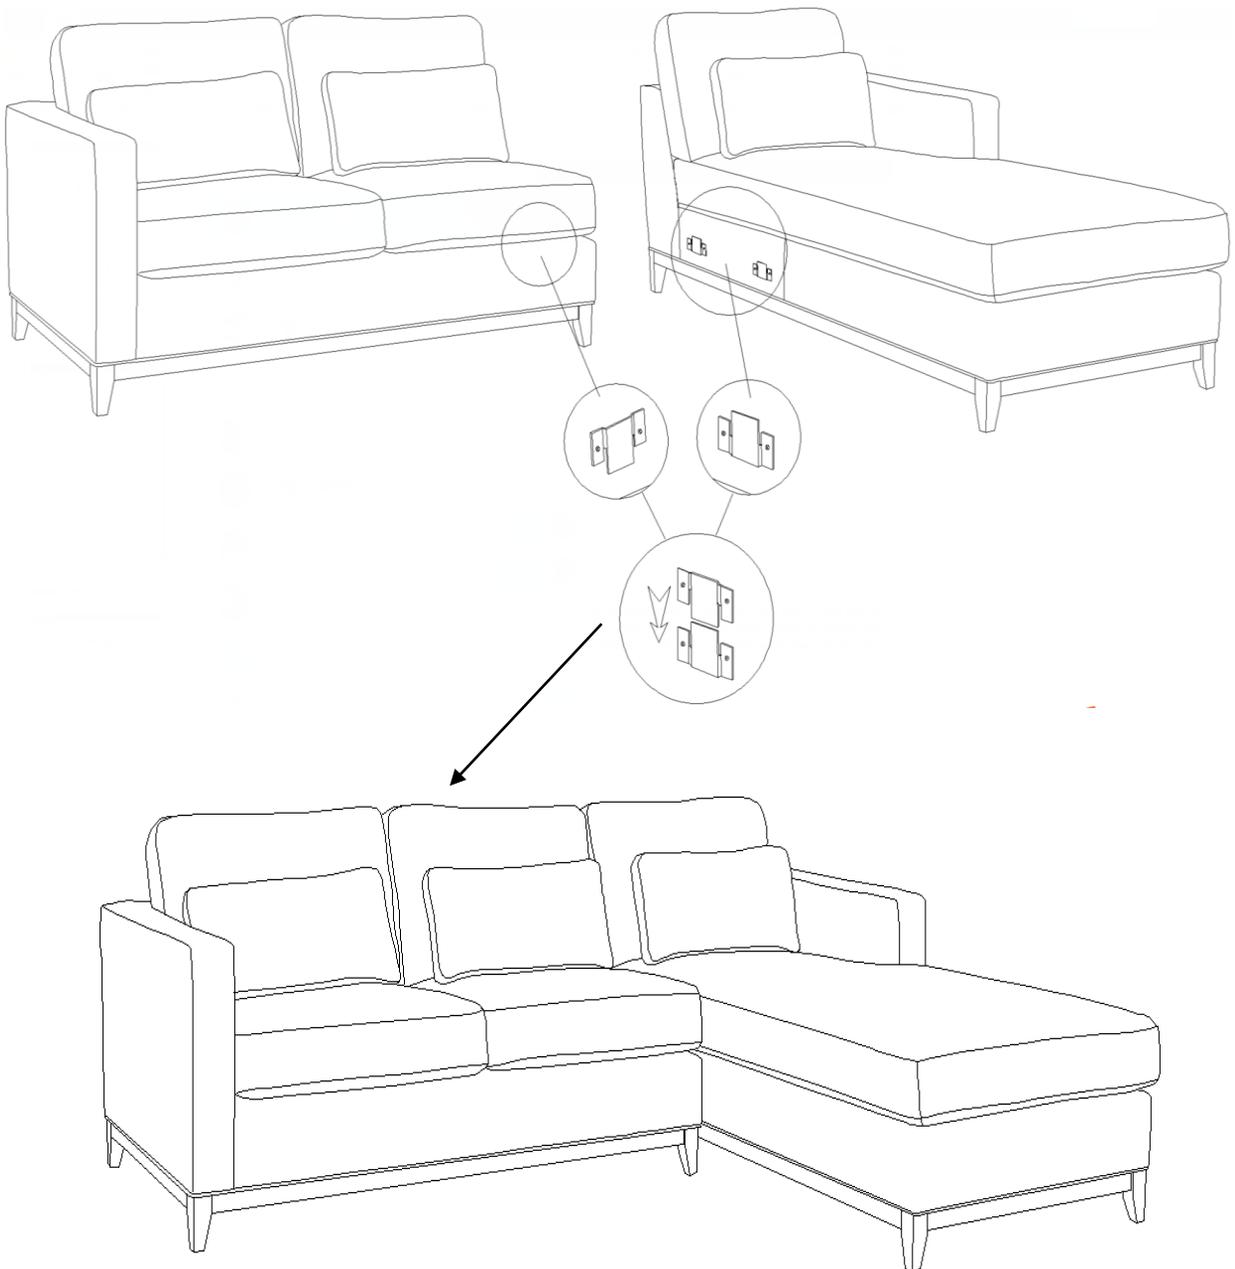

Slide the brackets on the left side of the Loveseat (A) into the brackets on the right side of the Chaise (B).
Ensure they are locked in place.

WARRANTY

Thank you for purchasing our product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.