 


TV Cabinet

Installation Instructions

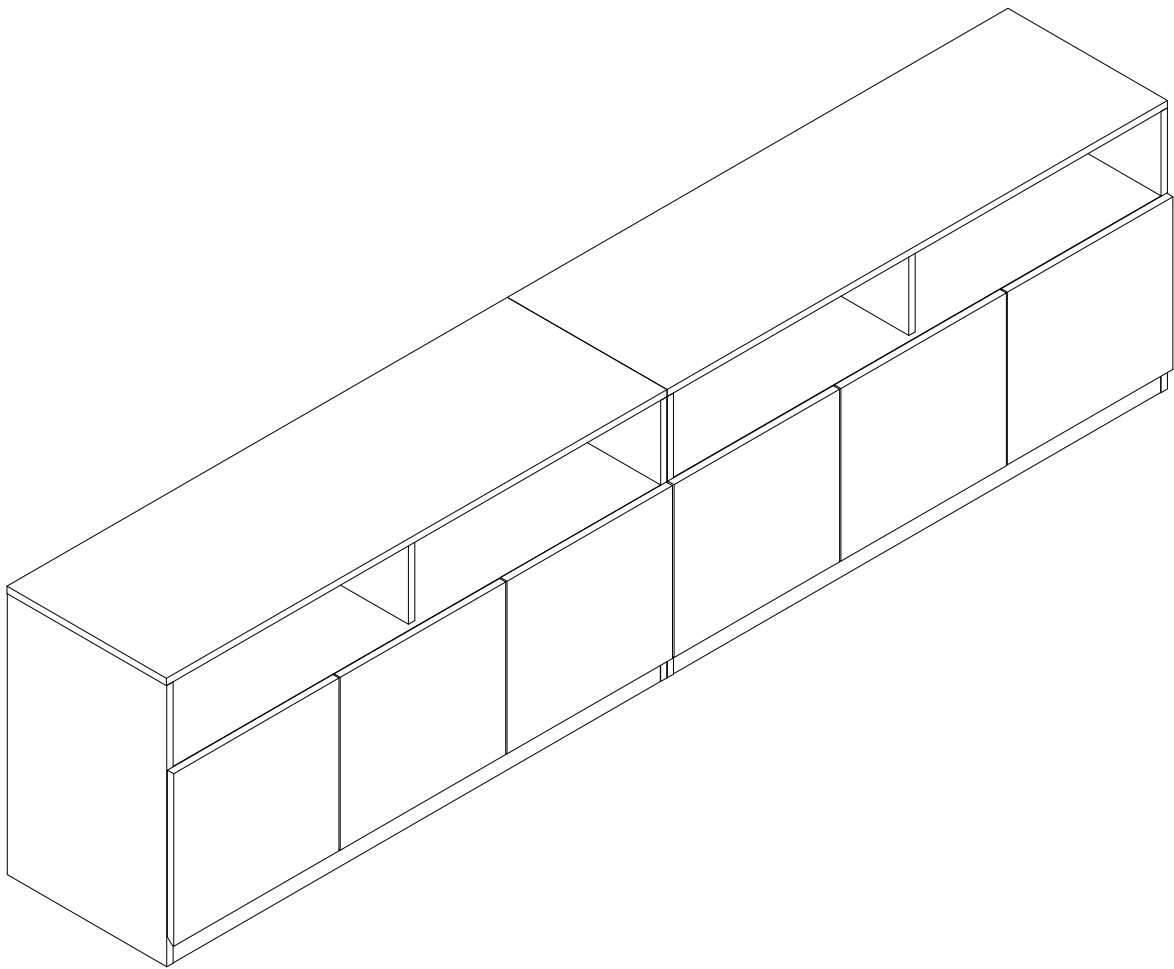

Contents

Before Use

General Guidelines.....	2
Warning.....	2
Material Properties.....	2
Assembly Instructions.....	2
Tools You May Needs.....	2

Installation Guide

Parts List-1/Accessories List-1.....	3-4
Parts List-2/Accessories List-2.....	5-6
Exploded Views.....	7
Cam Lock Fastening System Installation.....	8
Installation Steps.....	9-20

Maintenance & Troubleshooting

Use and Maintenance.....	21
Trouble Shooting.....	22

Special Accessories Installation Instructions

Hinge Adjustment Diagram.....	23
-------------------------------	----

After-Sales Warranty.....24

General Guidelines

- Please read the following instructions carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- Product is intended for indoor use only. It must be assembled and used according to the instructions. The seller does not accept any responsibility for damage or injury resulting from improper assembly or use.
- This summary may not include every detail of all variations and considered steps.
- Please contact us when further information and help are needed.

Warning

- Children are not allowed to assemble the product. During assembly, keep any small part out of reach of children as they may be fatal if swallowed or inhaled.
- Children are not allowed to stand, climb or play on the product to avoid serious bodily injury by toppling.
- Keep plastic packing bags out of reach of children to avoid any potential danger, such as suffocation.
- Avoid sharp objects and corrosive chemicals to prevent damage to the product or bodily injury.

Material Properties

1. Solid Wood

Trees will have a unique texture, scar, color and other natural marks during their growth. These elements constitute the natural beauty of wood. After being made into furniture, there will be discoloration when viewed under different light and different angles. That is because different grain minerals and light intensity affect vision, which is a normal phenomenon.


2. Marble and Sintered Stone

The pattern of marble and sintered stone is unique to each piece. Due to the characteristics of the material, there is no guarantee that the pattern of each piece will be consistent with the pattern seen at the time of purchase.

Assembly Instructions

- Read these instructions carefully and keep for future reference. Refer to parts inventory for guidance, and ensure you have all pieces before starting.
- When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches.
- During assembly, align all screws with the corresponding pre-drilled holes first and then tighten them one by one.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Tools You May Needs

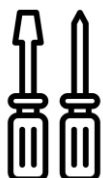

TIME



 
 
 
 
 
 
 
 
 
 
 
 
 
 
2 People



DIFFICULTY








- Note: It is recommended that installation of the product be done by a qualified licensed furniture assembler.

This TV cabinet is divided into packages 1 and 2.

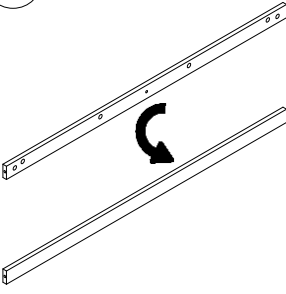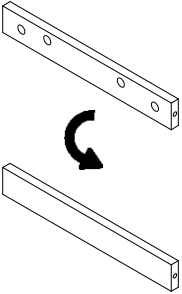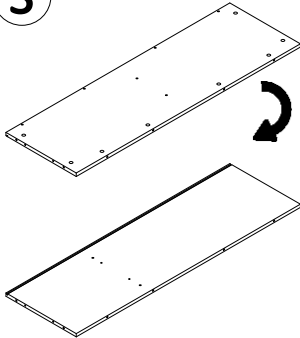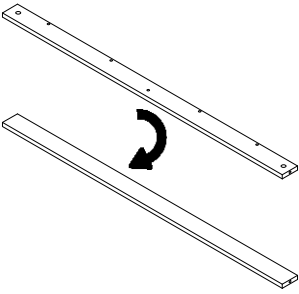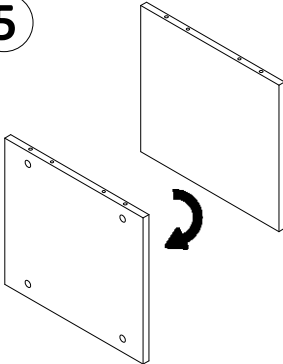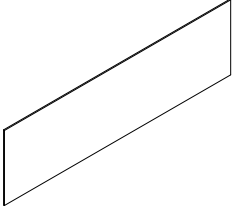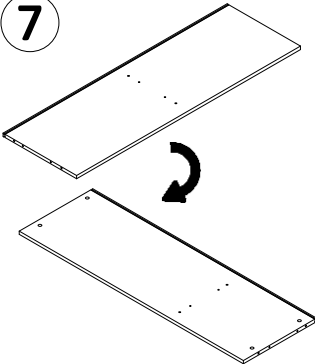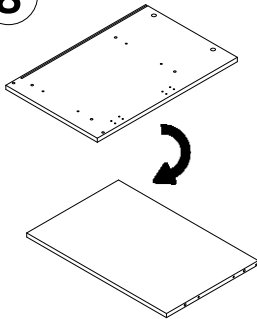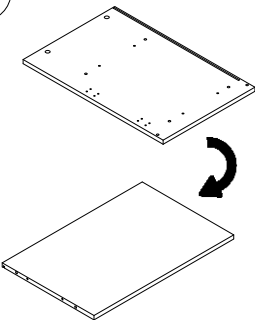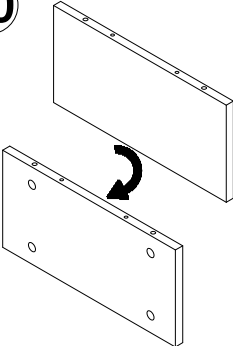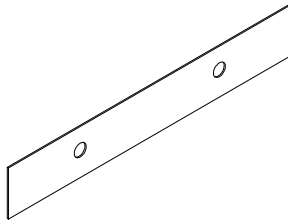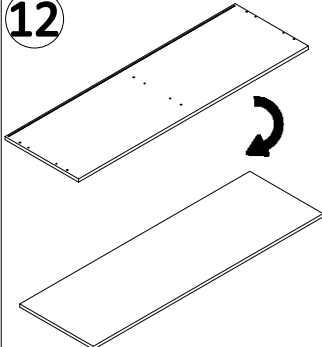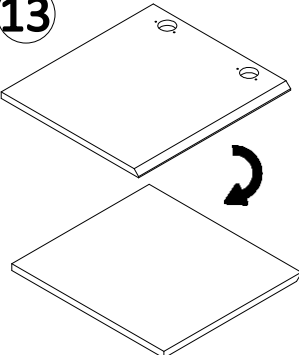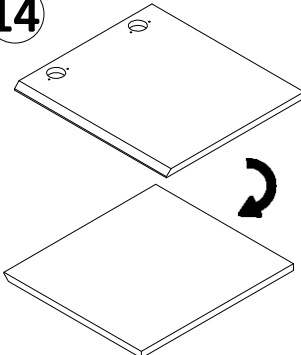PARTS LIST-Package 1			
1 	2 	3 	4 
1PCS	1PCS	1PCS	1PCS
5 	6 	7 	8 
1PCS	1PCS	1PCS	1PCS
9 	10 	11 	12 
1PCS	1PCS	1PCS	1PCS
13 	14 		
2PCS	1PCS		















This TV cabinet is divided into packages 1 and 2.

       HARDWARE LIST-Package 1

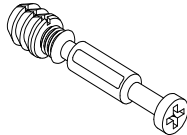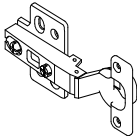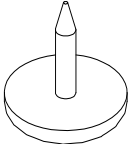A 		B 		C 		D 		E 	
Ø15*10MM 36PCS		Ø6*35MM 36PCS		Ø8*30MM 20PCS		Ø3.5*14MM 42PCS		6PCS	
F 		H 		I 					
6PCS		6PCS		8PCS					








- The number in the upper left corner indicates the panel code, and the number in the lower middle indicates the quantity.
- As some panels feature holes on both sides, both front and back views are provided accordingly in the parts list.
- If you encounter any missing or damaged panels, please contact us immediately. We will prioritize resolving your issue promptly.

              This TV cabinet is divided into packages 1 and 2.

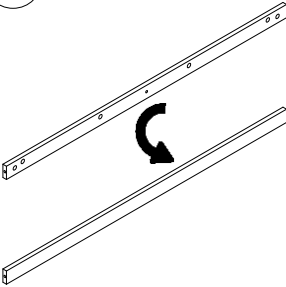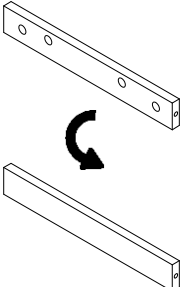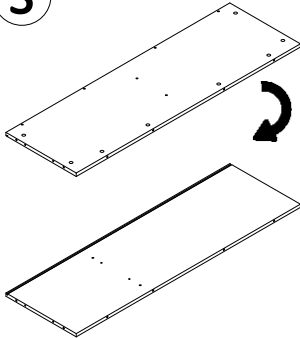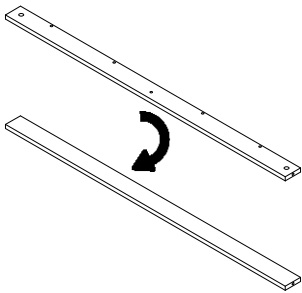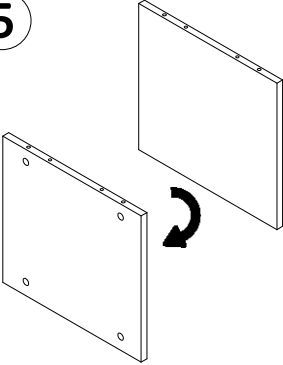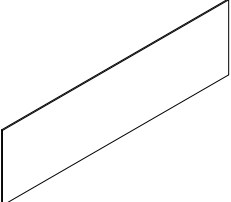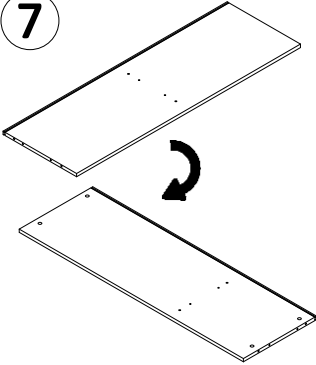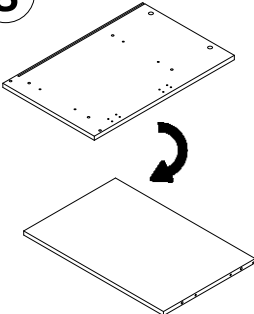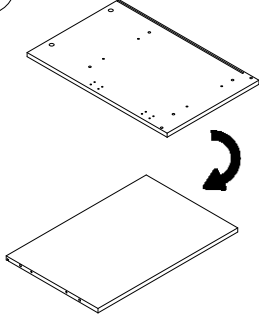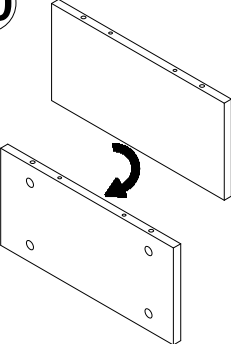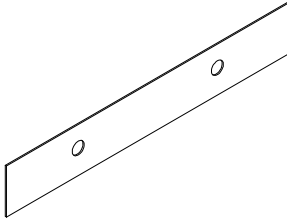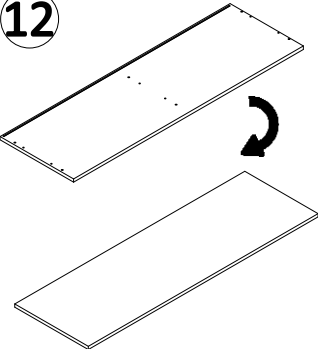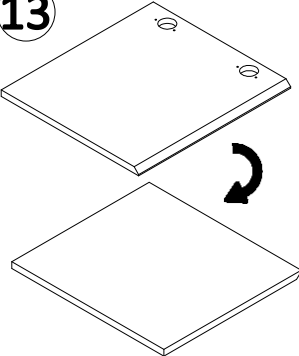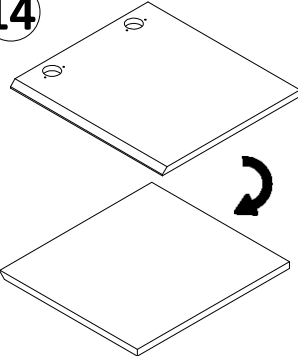PARTS LIST-Package 2			
1 	2 	3 	4 
1PCS	1PCS	1PCS	1PCS
5 	6 	7 	8 
1PCS	1PCS	1PCS	1PCS
9 	10 	11 	12 
1PCS	1PCS	1PCS	1PCS
13 	14 		
2PCS	1PCS		

This TV cabinet is divided into packages 1 and 2.

       
HARDWARE LIST-Package 2

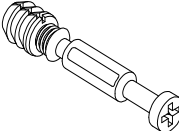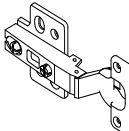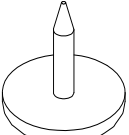A 		B 		C 		D 		E 		
Ø15*10MM 36PCS		Ø6*35MM 36PCS		Ø8*30MM 20PCS		Ø3.5*14MM 42PCS		6PCS		
F 		H 		I 						
6PCS		6PCS		8PCS						


- The number in the upper left corner indicates the panel code, and the number in the lower middle indicates the quantity.
- As some panels feature holes on both sides, both front and back views are provided accordingly in the parts list.
- If you encounter any missing or damaged panels, please contact us immediately. We will prioritize resolving your issue promptly.

Exploded Views

 
Each wooden board has an number sticker. Match them one-by-one according to the steps in the assembly manual.

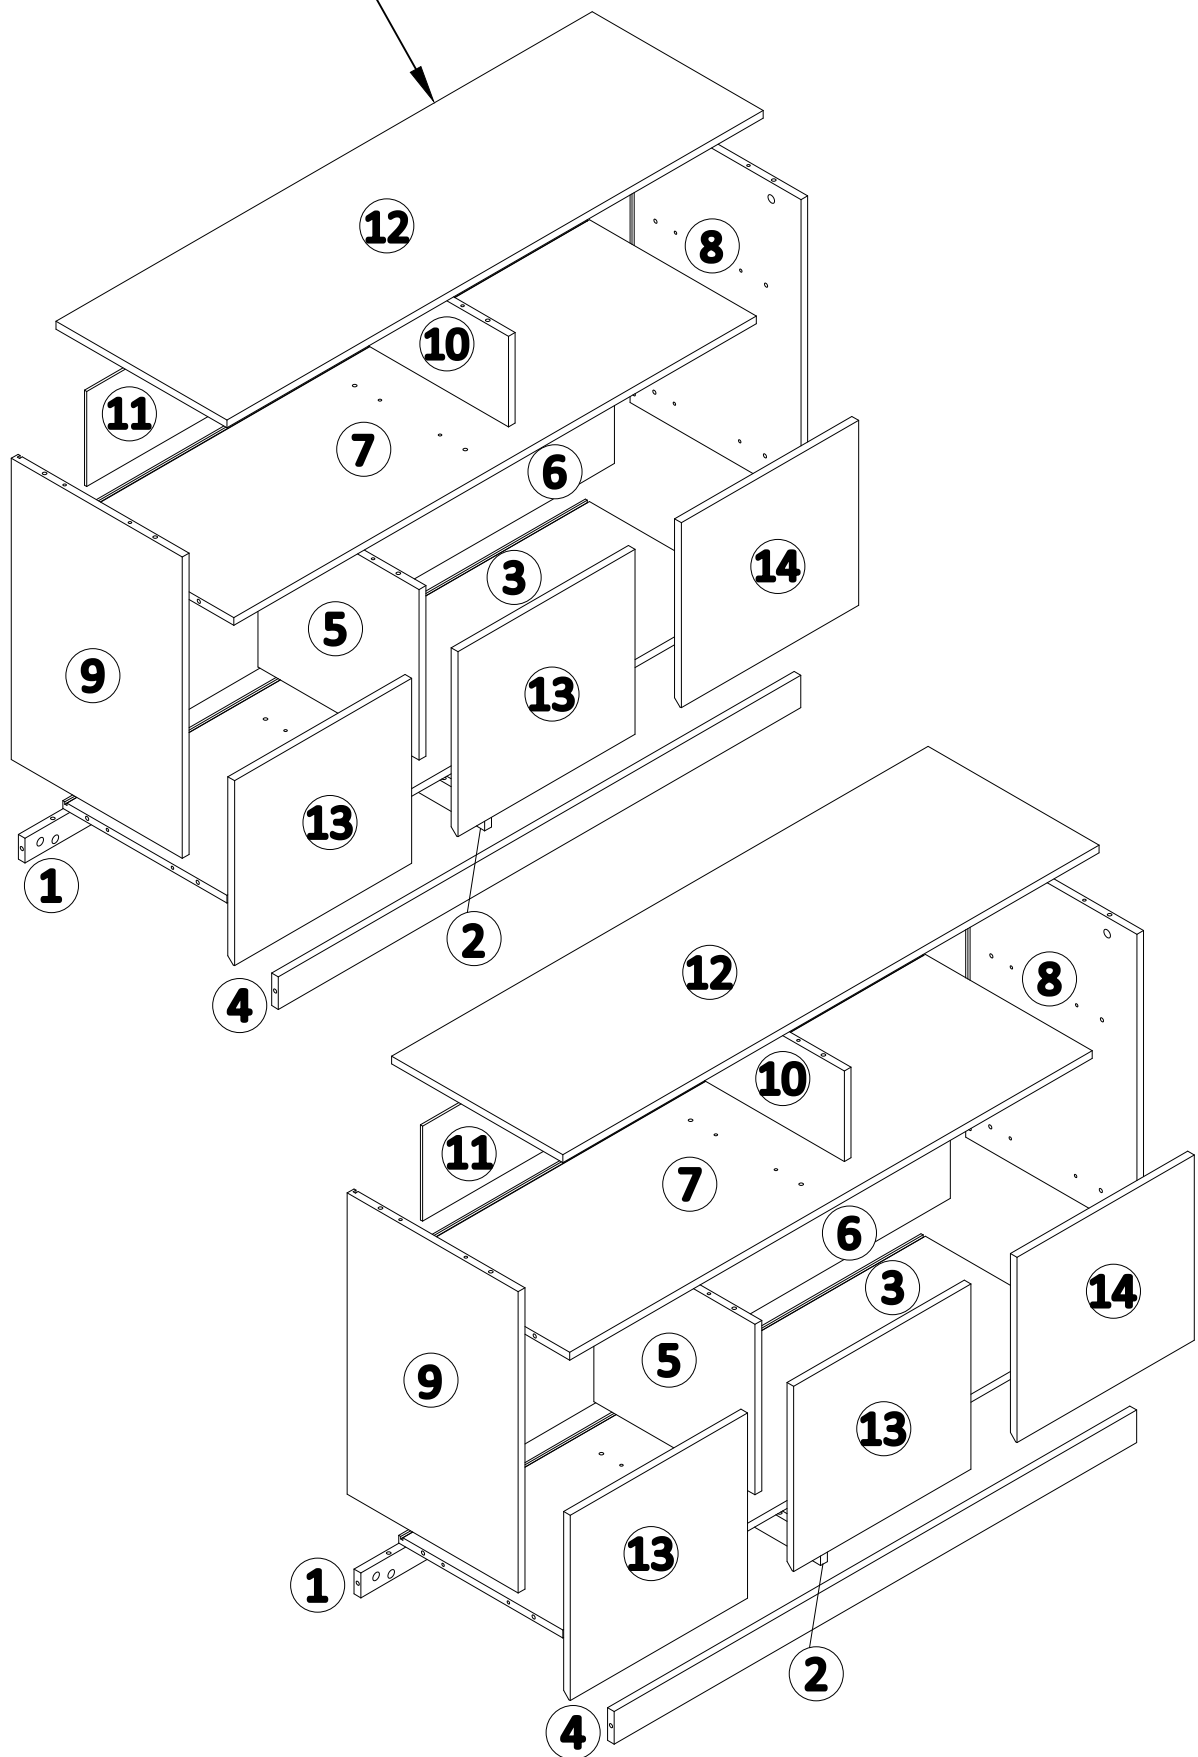


Cam Lock Fastening System Installation

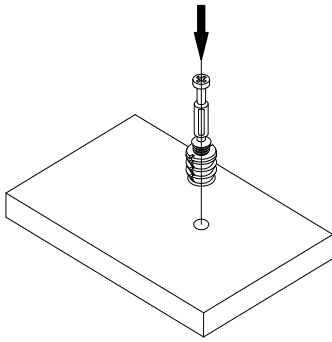 


1. Install the screw rod.

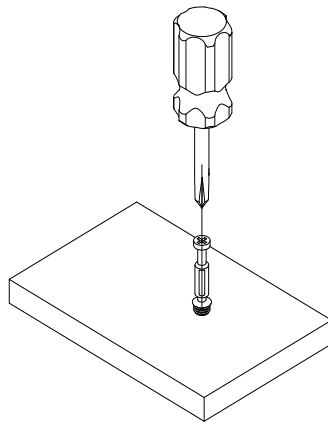


2. Tighten the screw rod clockwise.

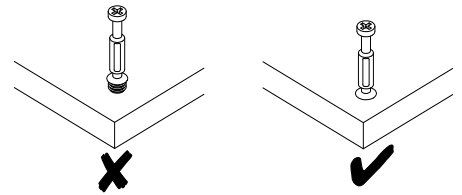


3. Pay attention to tightening the screw rod.

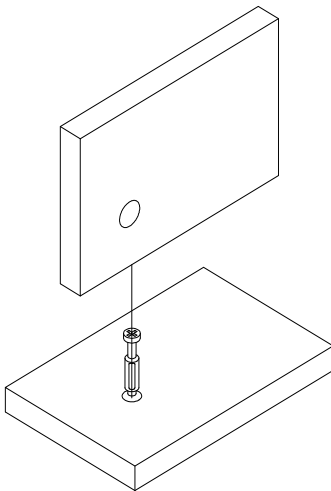

4. Installation plate.

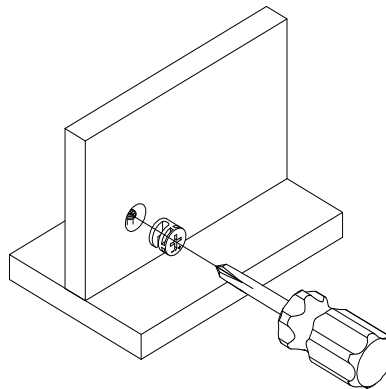


5. Align the arrow of the eccentric component with the screw rod.

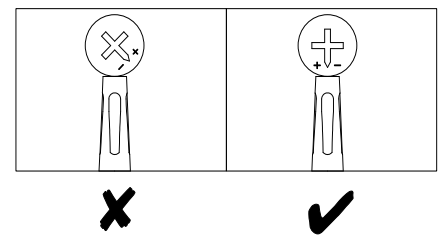


6. Pay attention to aligning the arrow of the eccentric part with the screw rod.

Step 1

As shown in the diagram, screw #B (connector bolt) into the corresponding holes of the panels 1/3/4/7/8/9/12.

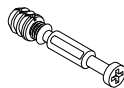
B  **X32**

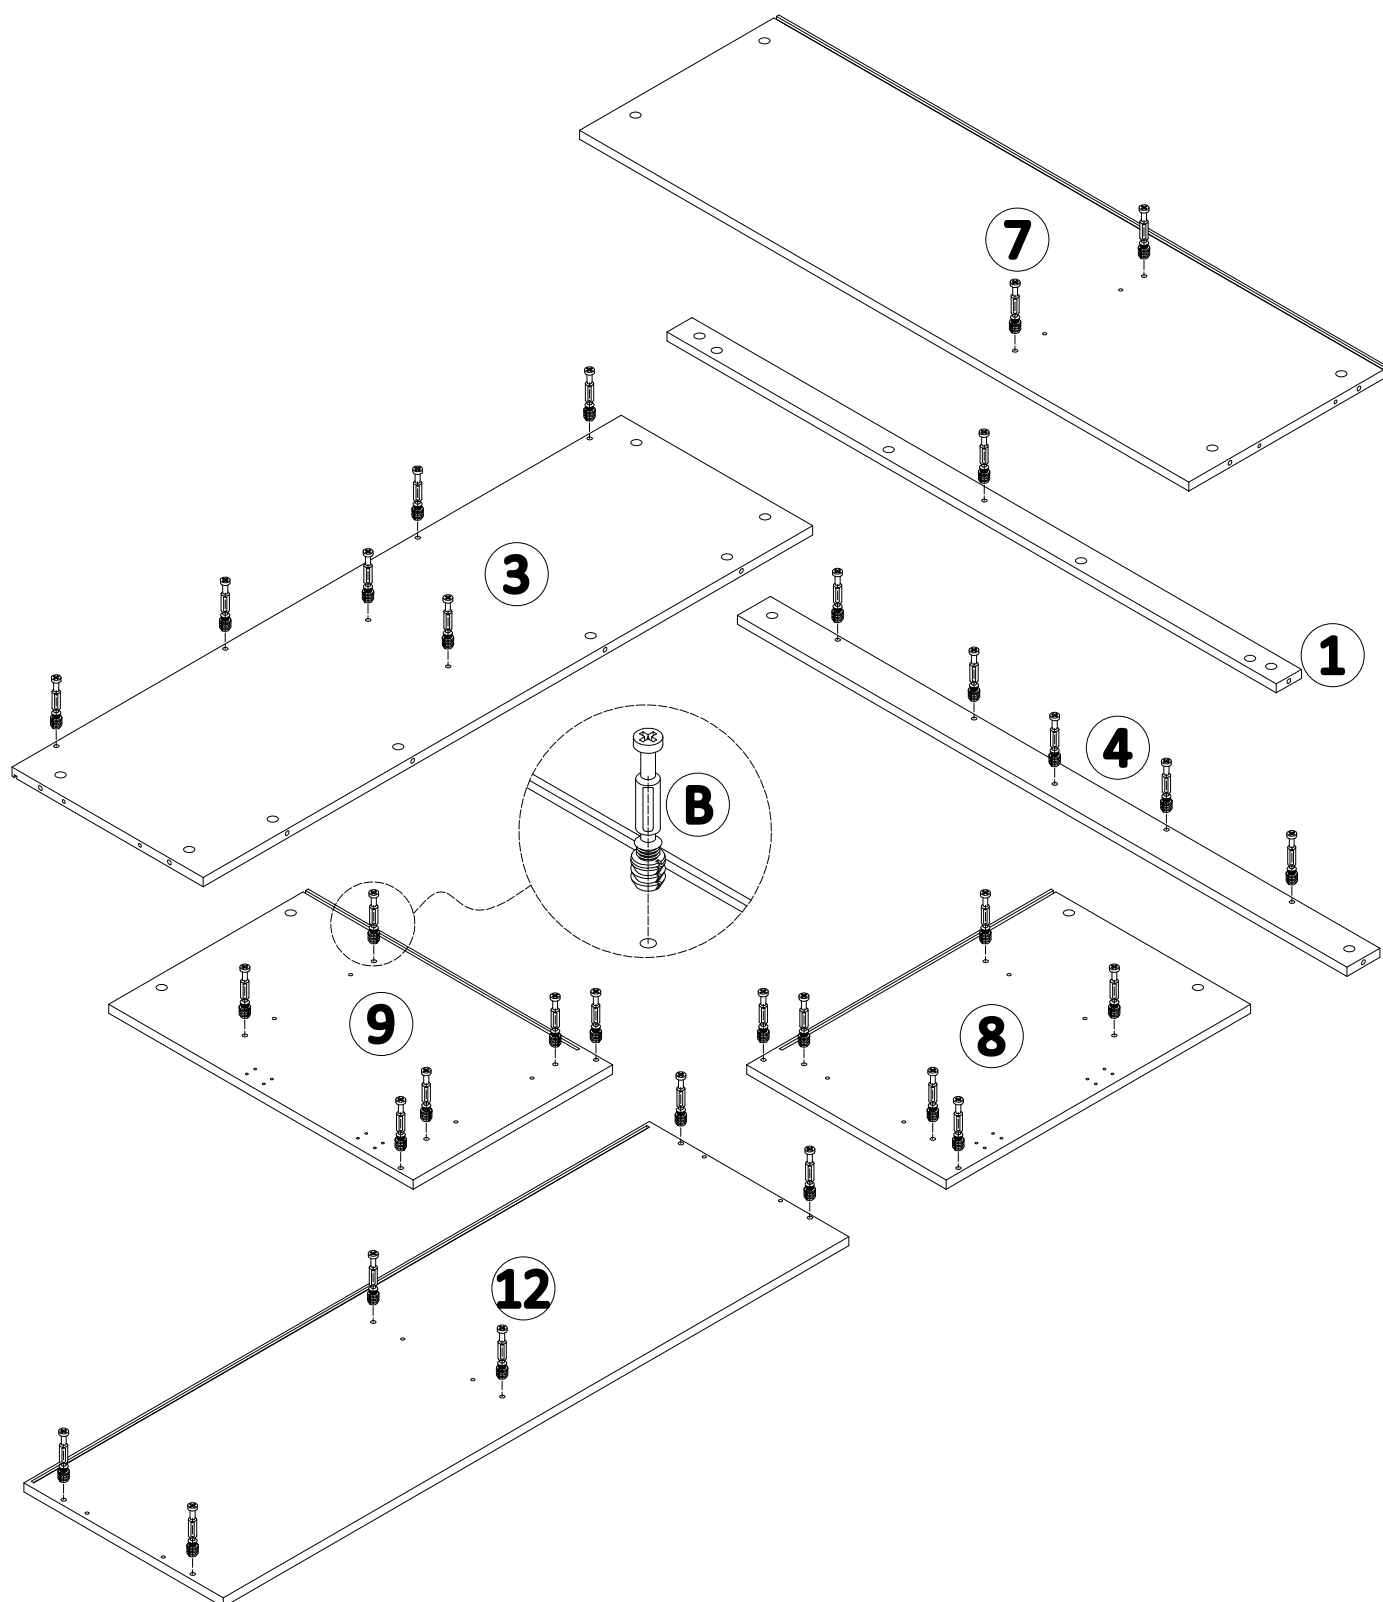

Step 2

A  **X1**


Install panel 2 into panel 1, then secure with #A (eccentric locks) and tighten.

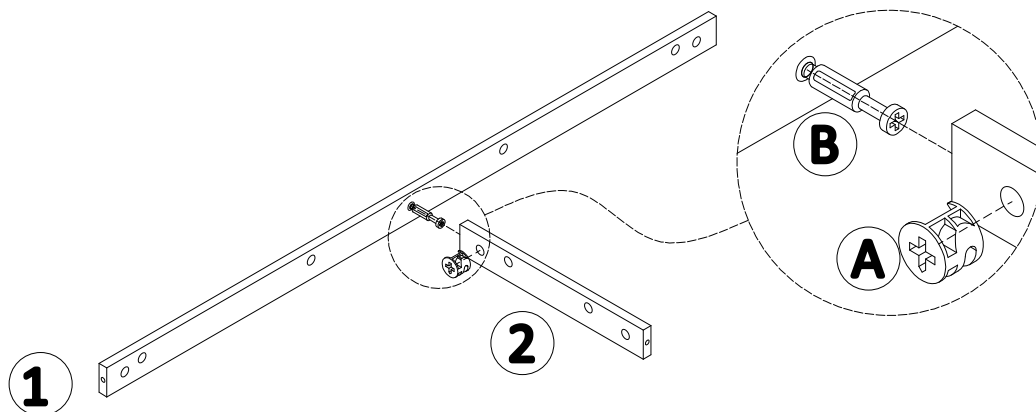

Step 3

A  **X6**


Install panels 1 and 2 onto panel 3, then secure and tighten them with #A (eccentric lock).

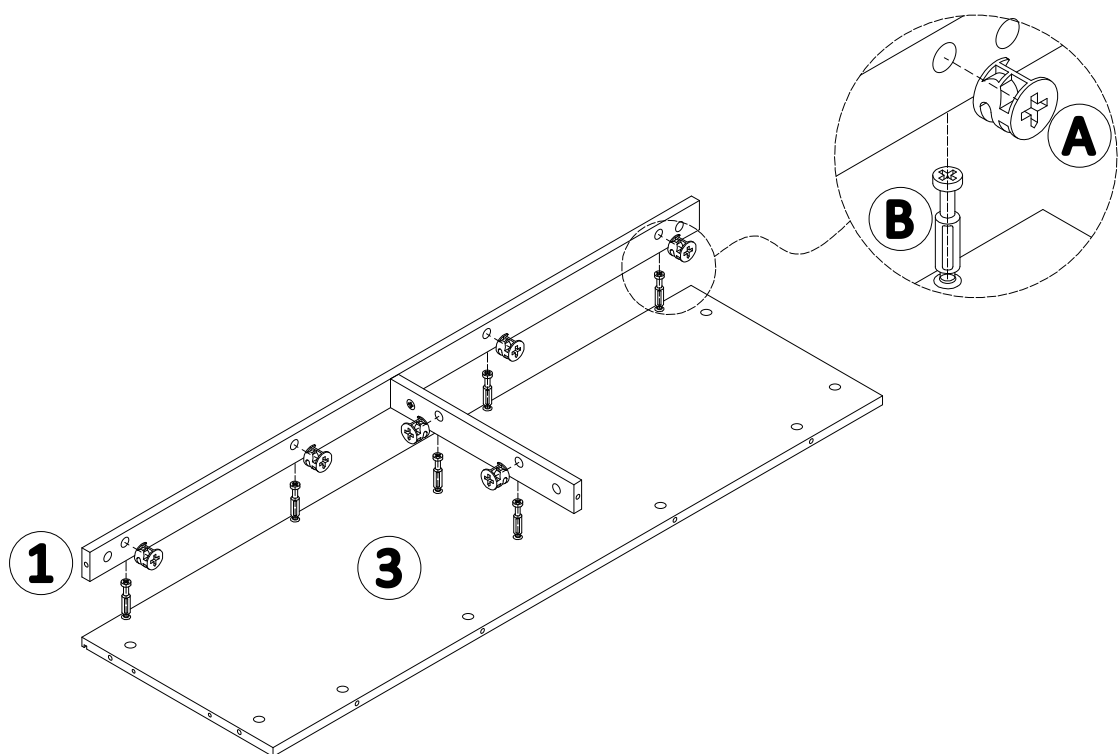


Step 4

A  **X5**


Install panel 4 into panel 2&3, then secure with #A (eccentric locks) and tighten.

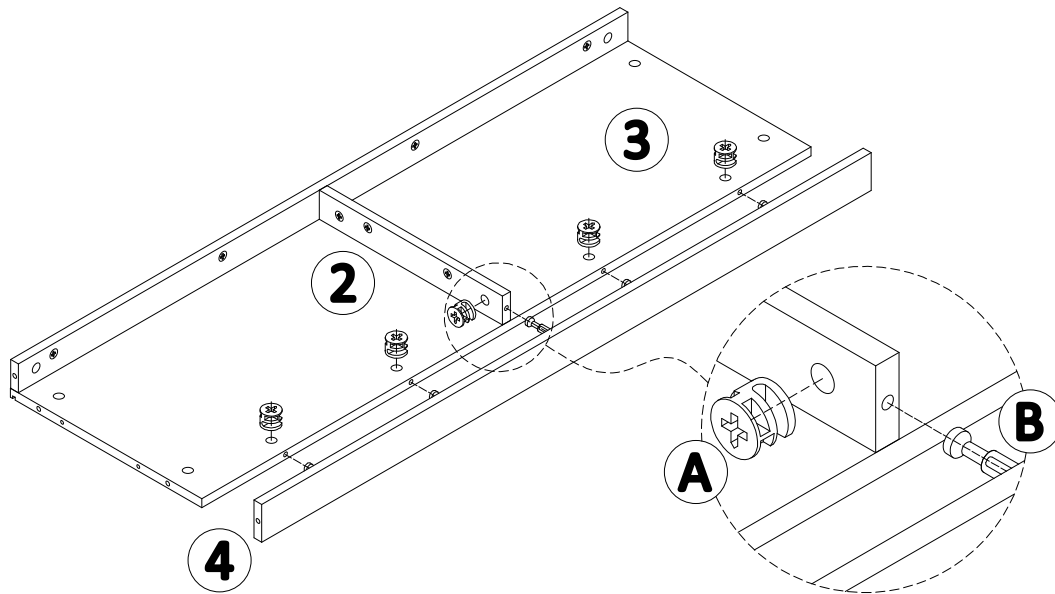

Step 5


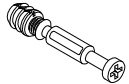
B  **X2**

Flip the pre-assembled parts and install #B (connector bolt) into the corresponding holes.

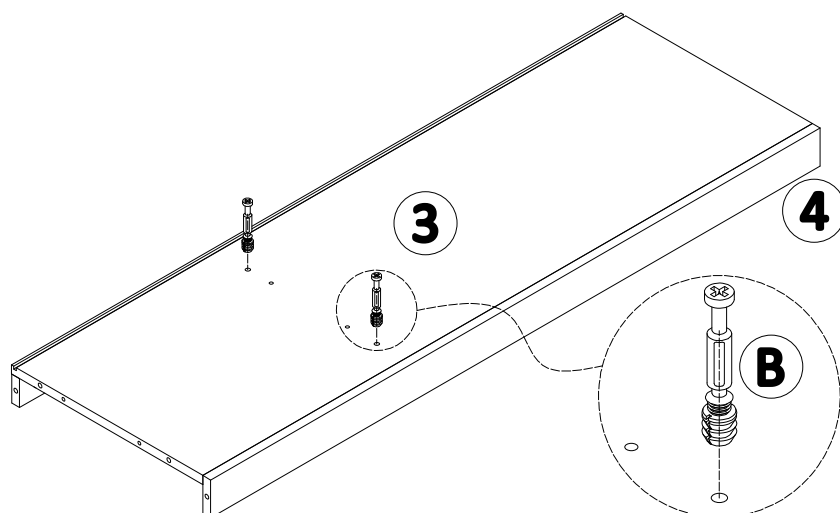

Step 6



Screw the #C (wood dowel pins) into panel 3, then install panel 5 onto panel 3, secure it with #A (eccentric lock) and tighten it.

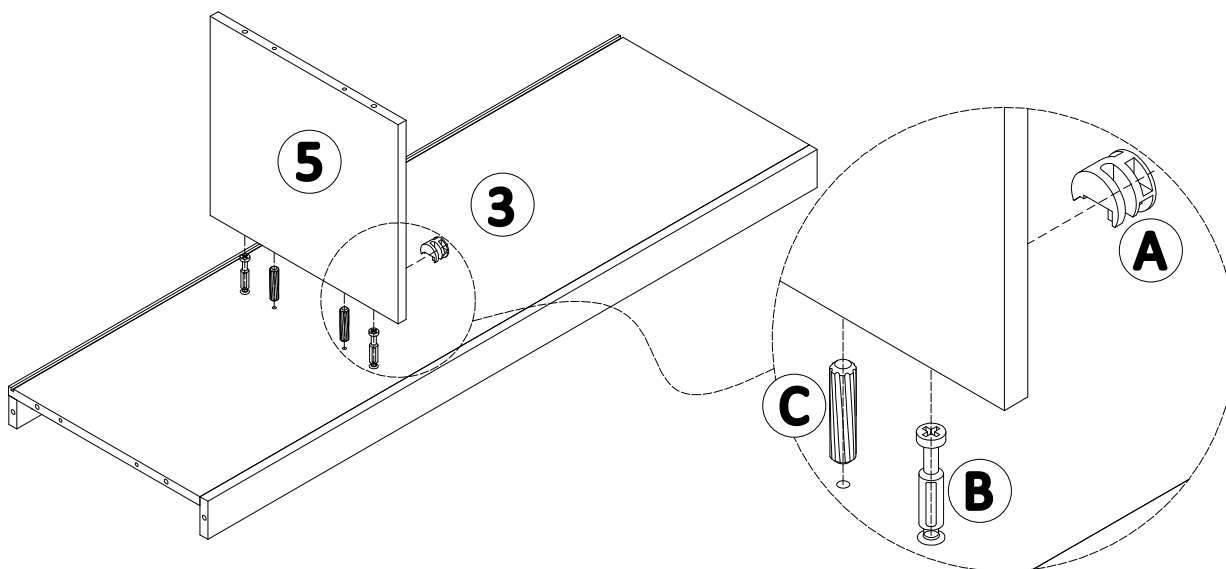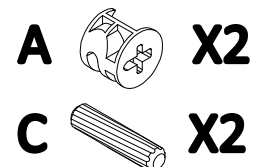

Step 7



1. As shown in the figure, the pre-assembled parts need to be flipped over. Then screw the #C (wood dowel pins) into the side of panel 5.

2. Install panel 7 onto panel 5, secure it with #A (eccentric lock) and tighten it.

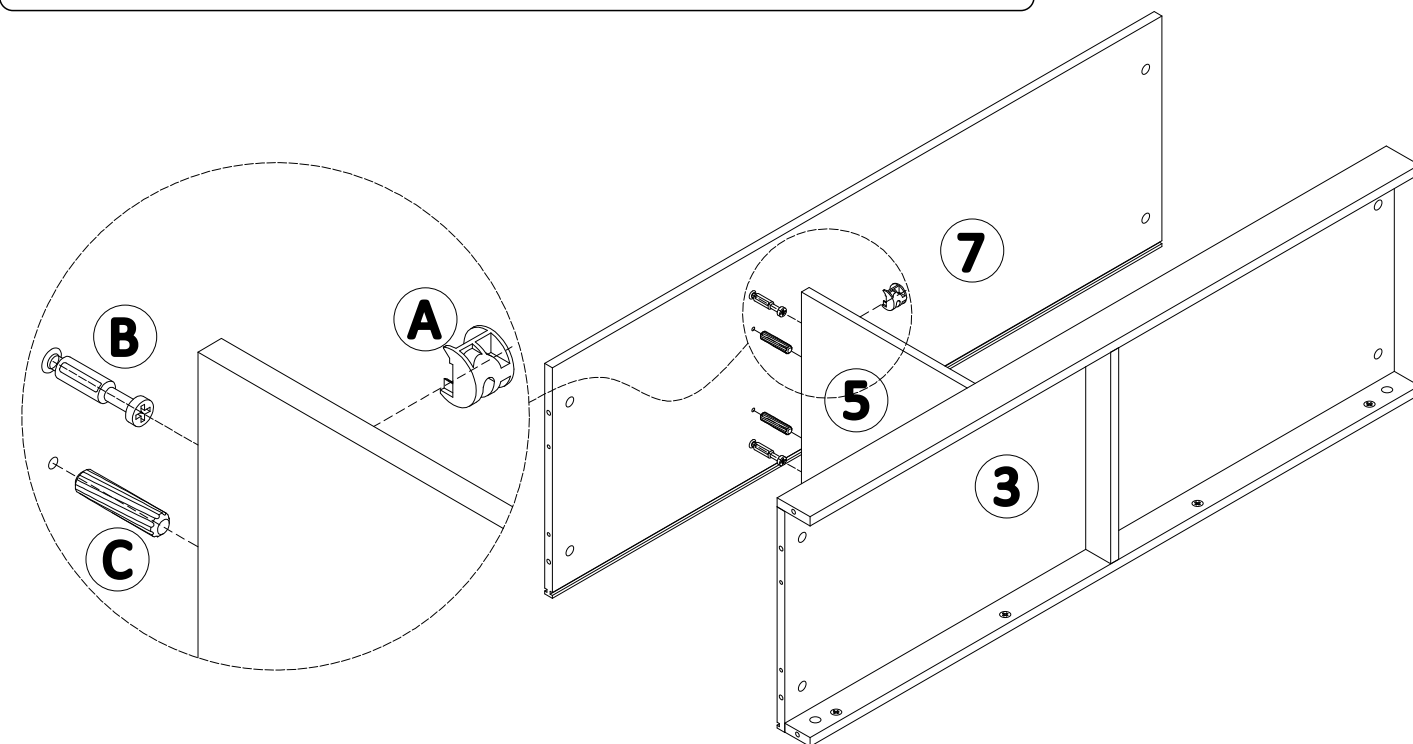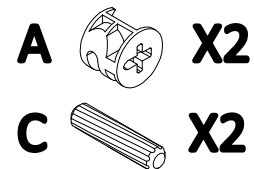

Step 8


As shown in the figure, screw the #C (wood dowel pins) into the side of the pre-assembled part, then install panel 8 on the side, secure it with #A (eccentric lock) and tighten it.

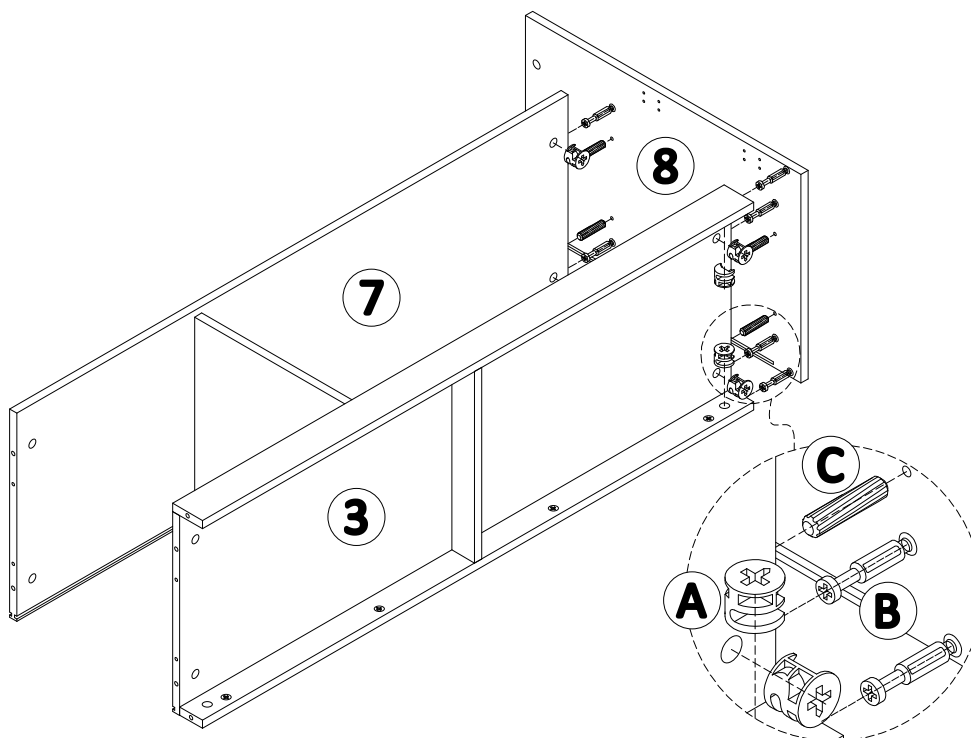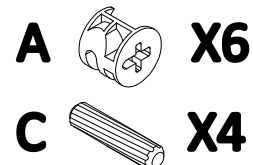

Step 9



1. As shown in the diagram, flip the entire pre-assembled component to a flush position.

2. Insert panel 6 into the slot between panels 7 and 3.

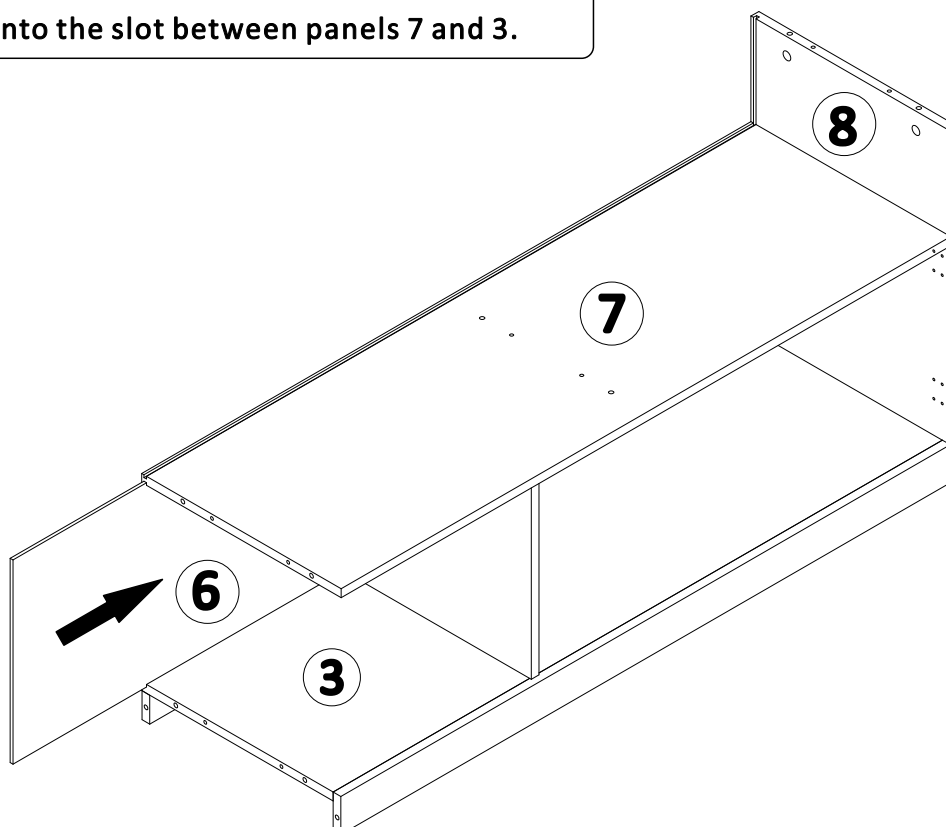



Step 10

1. Flip the pre-assembly over again and install the #F (foot nails) on its bottom, hammering them in firmly.
2. Screw the #C (wood dowel pins) into panels 3 and 7, and install panel 9 into the pre-assembly.
3. Finally, secure and tighten with #A (eccentric lock).

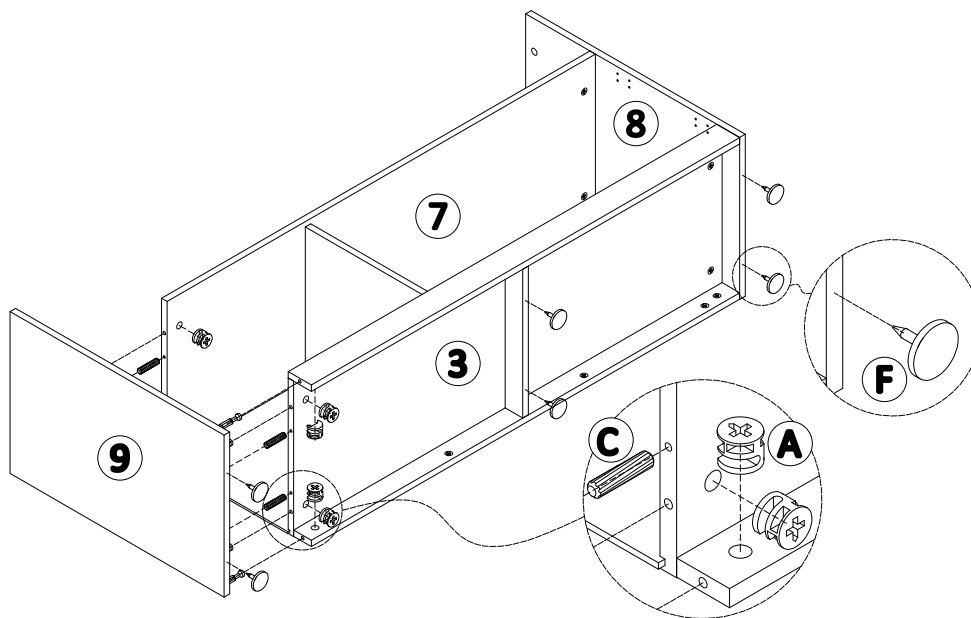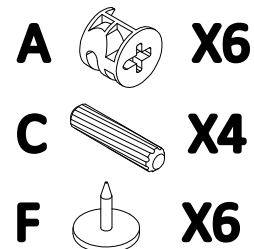



Step 11

As shown in the diagram, screw #B (connector bolt) into the corresponding holes of the panels 7.

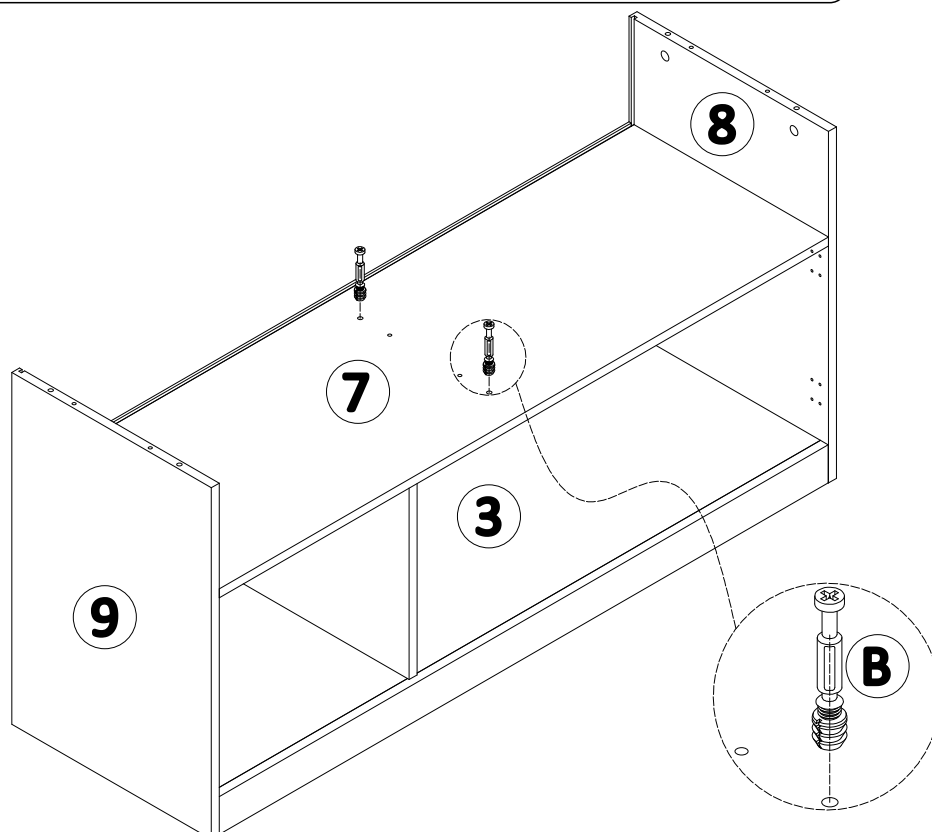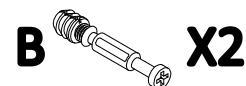


Step 12

Screw the #C (wood dowel pins) onto panel 7, then install panel 10 onto panel 7, secure it with #A (eccentric lock) and tighten it.

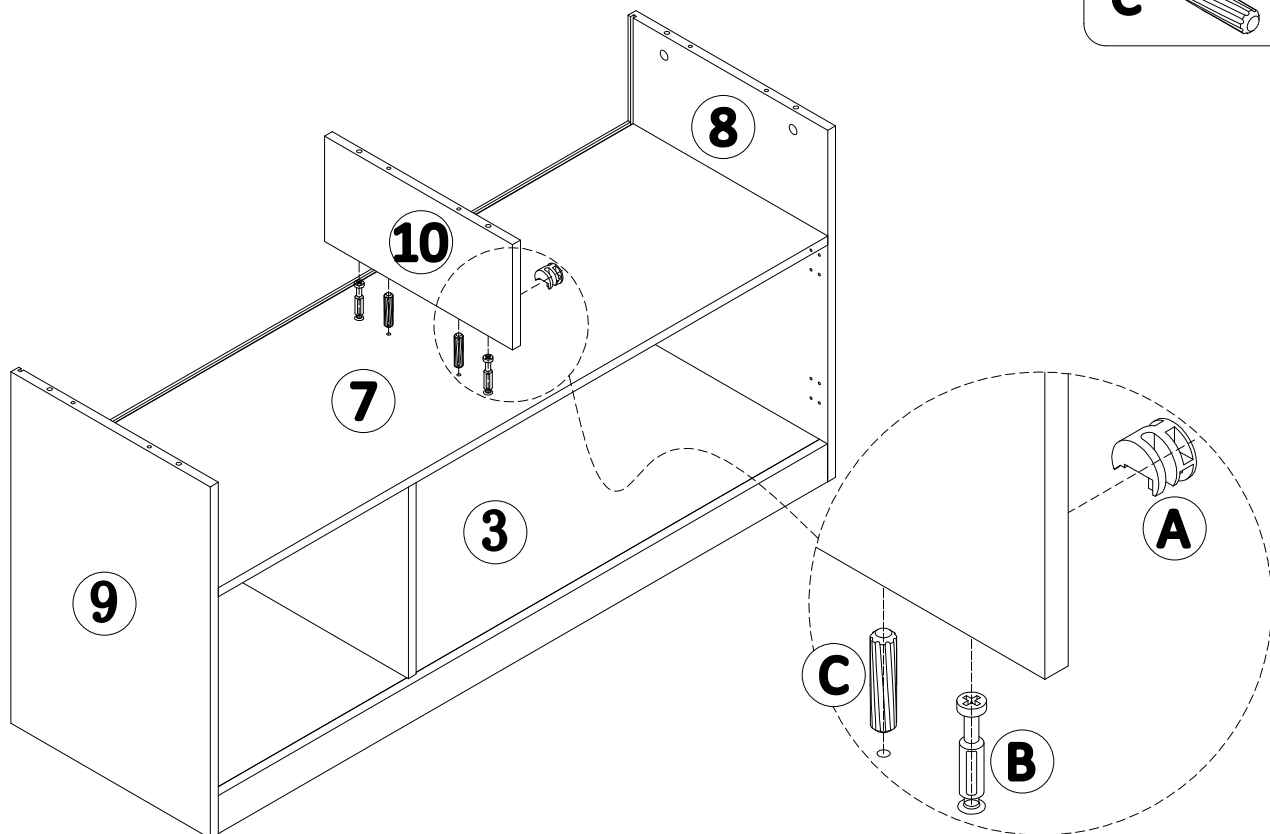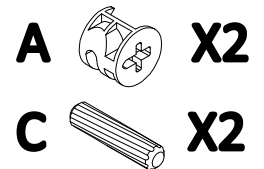

Step 13



As shown in the figure, insert panel 11 into the corresponding slot.

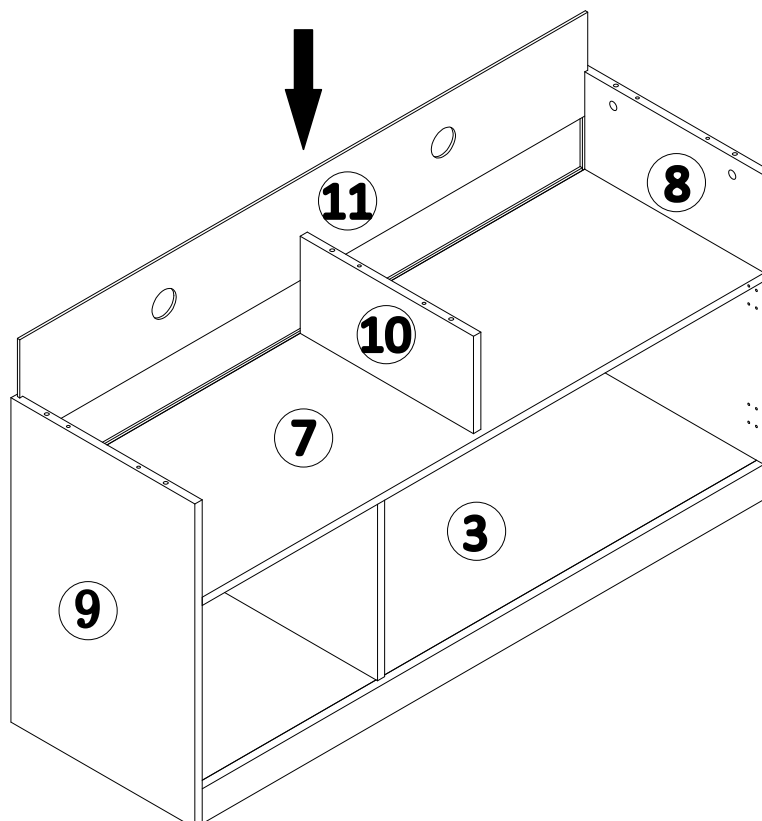

Step 14



1. As shown in the figure, screw #C (wood dowel pins) into the pre-assembled component structure.

2. Install panel 12 on top, then screw in #A (eccentric cam lock) and tighten.

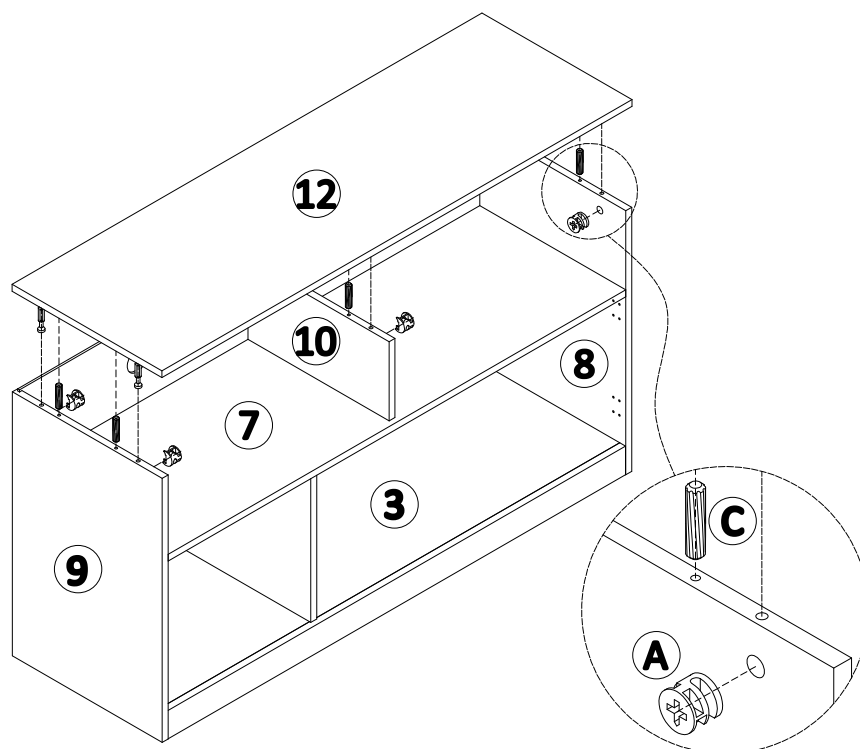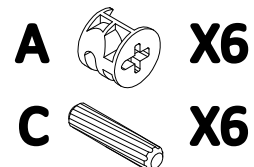

Step 15


As shown in the figure, install #E (door hinge) to the designated position on the two panels 13 and one panel 14, and screw in #D (screws) and tighten.

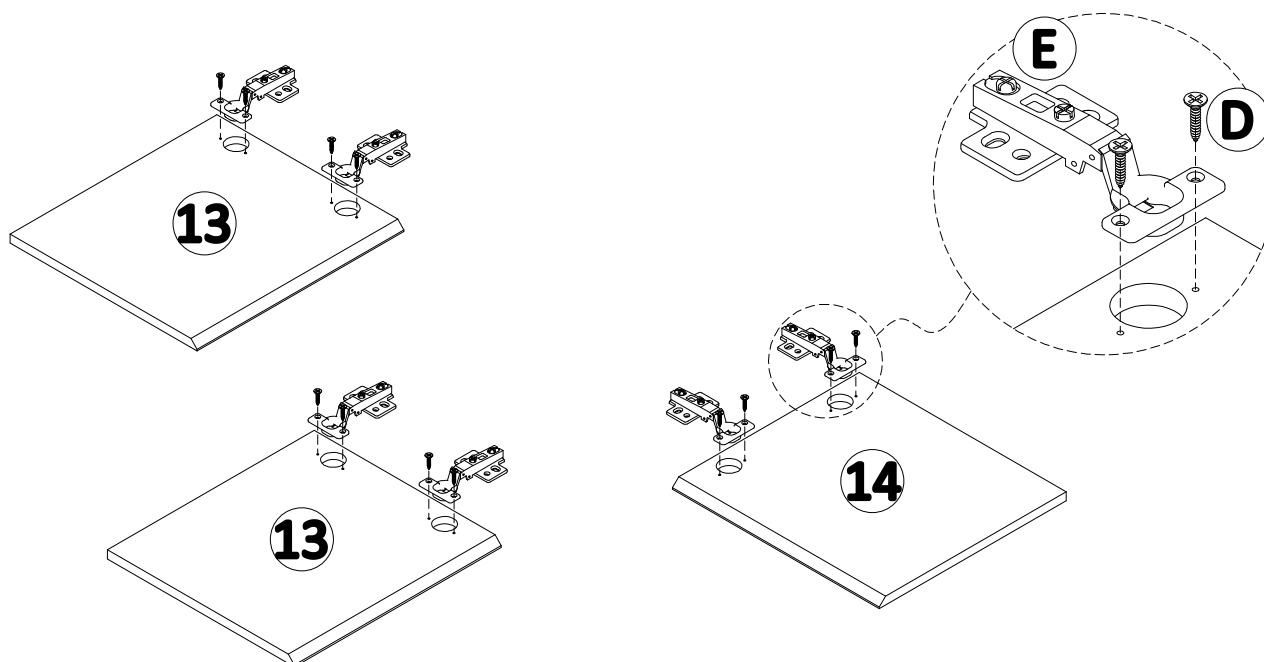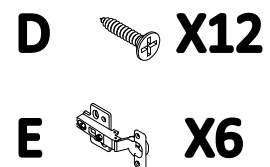

Step 16

As shown, attach panels 13 and 14 to the cabinet using #E (door hinges) and tighten with #D (screws). Please install panels 13 and 14 as shown in the figure.

D  **X24**

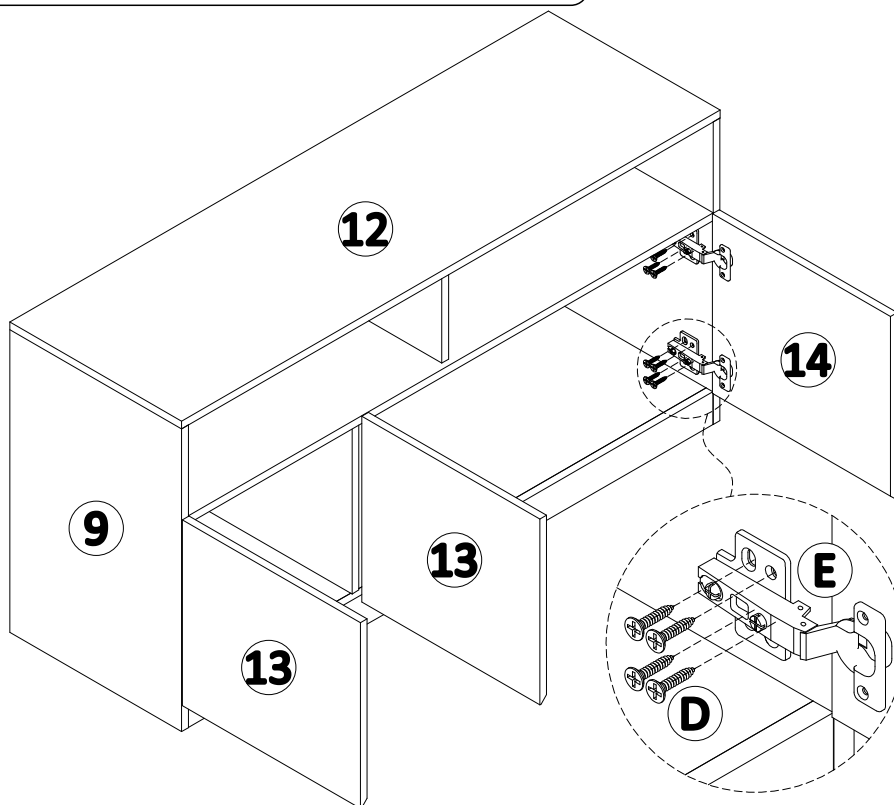


Step 17

As illustrated secure panel 6 by installing #H (backplate bracket) at all marked positions with #D (screws).


D  **X6**

H  **X6**

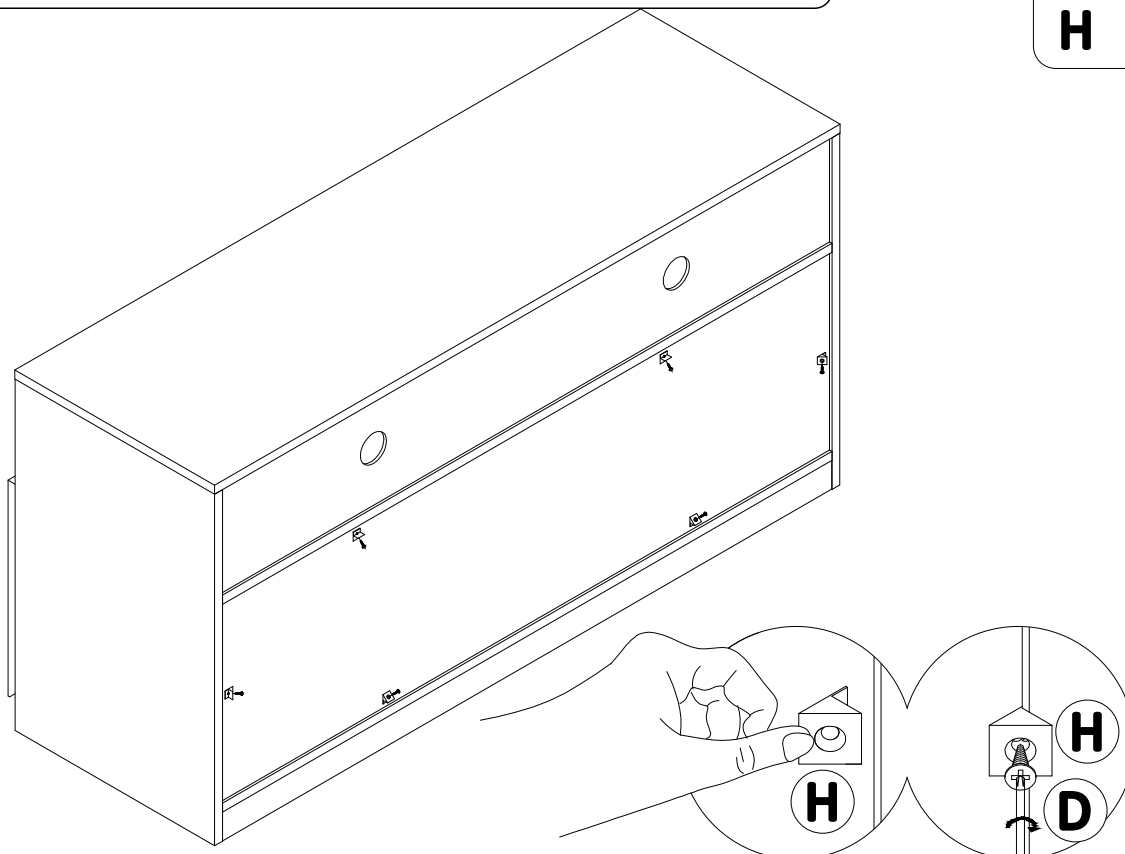

Step 18


The TV cabinet is divided into left and right parts, and the installation method is the same. Please repeat steps 1-17 to install the other half of the TV cabinet.

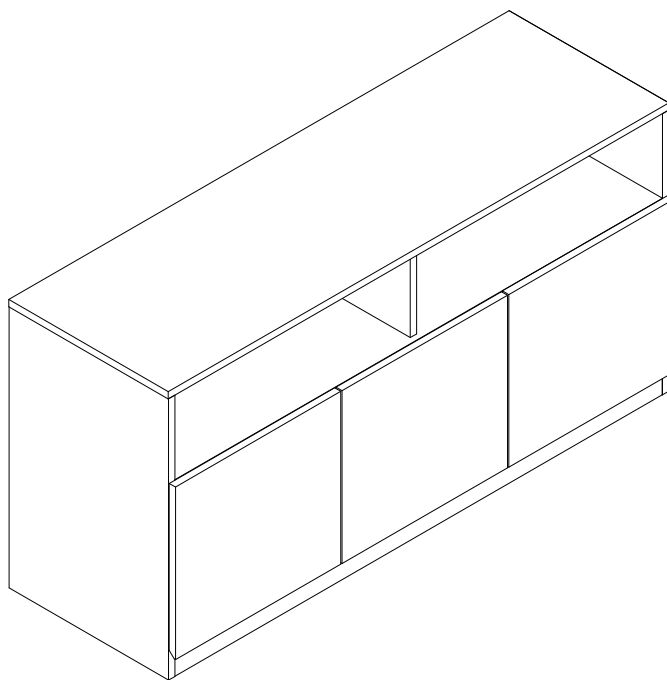


Step 19

Place the #I (hole sticker) inside the cabinet to cover the position of the #A (eccentric cam lock).

I  X16

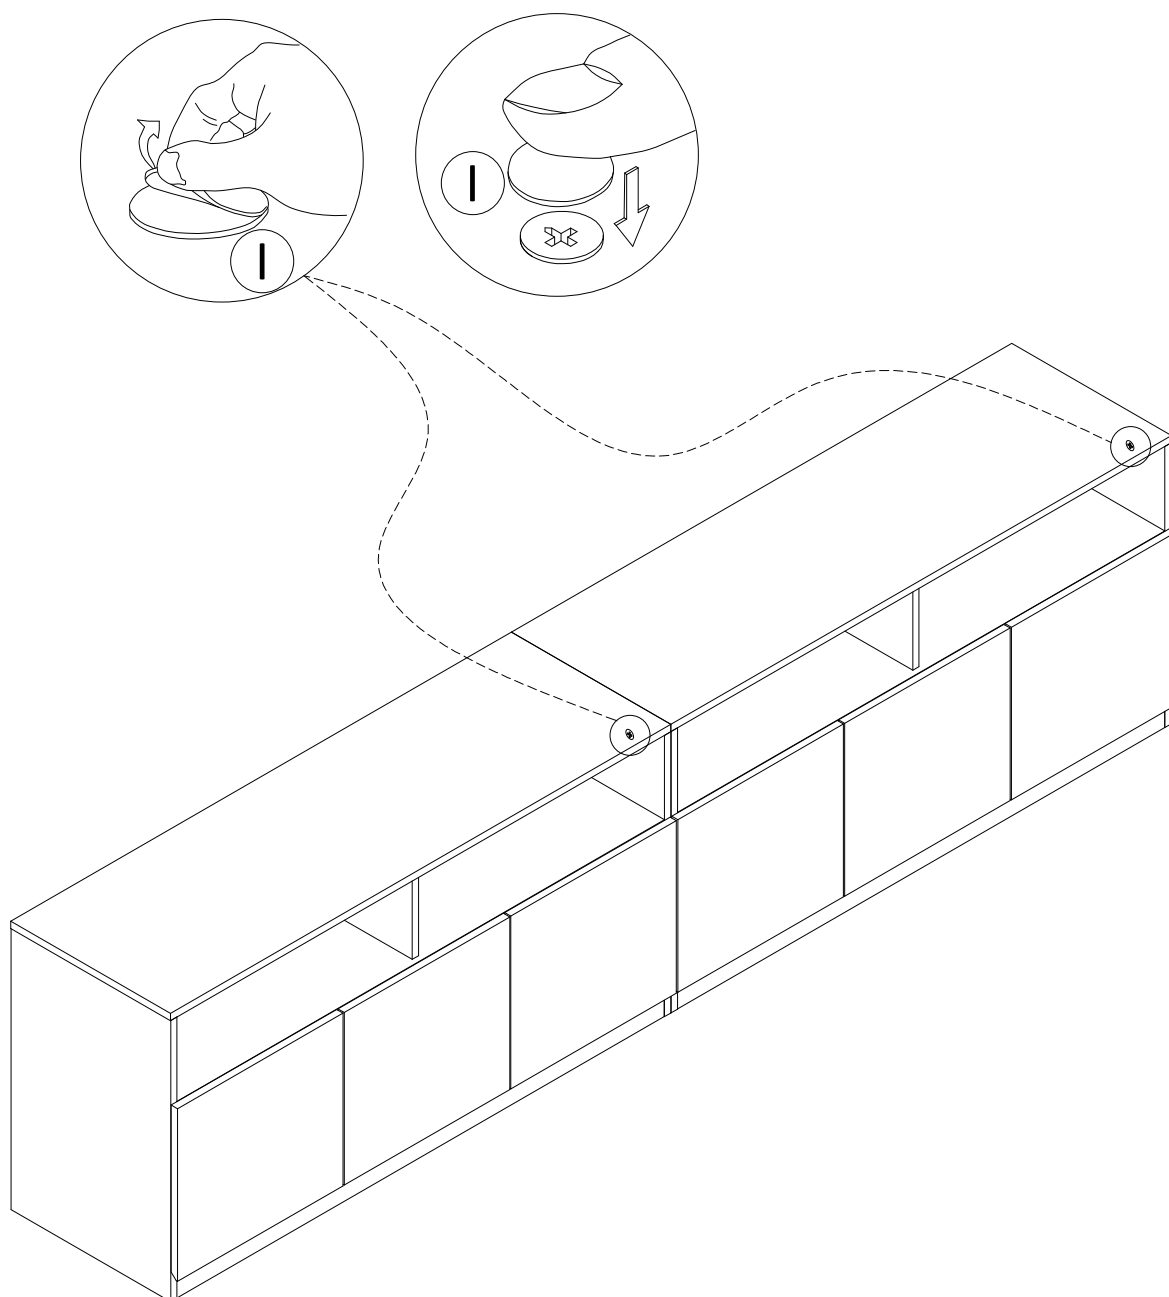

Assembly Completed

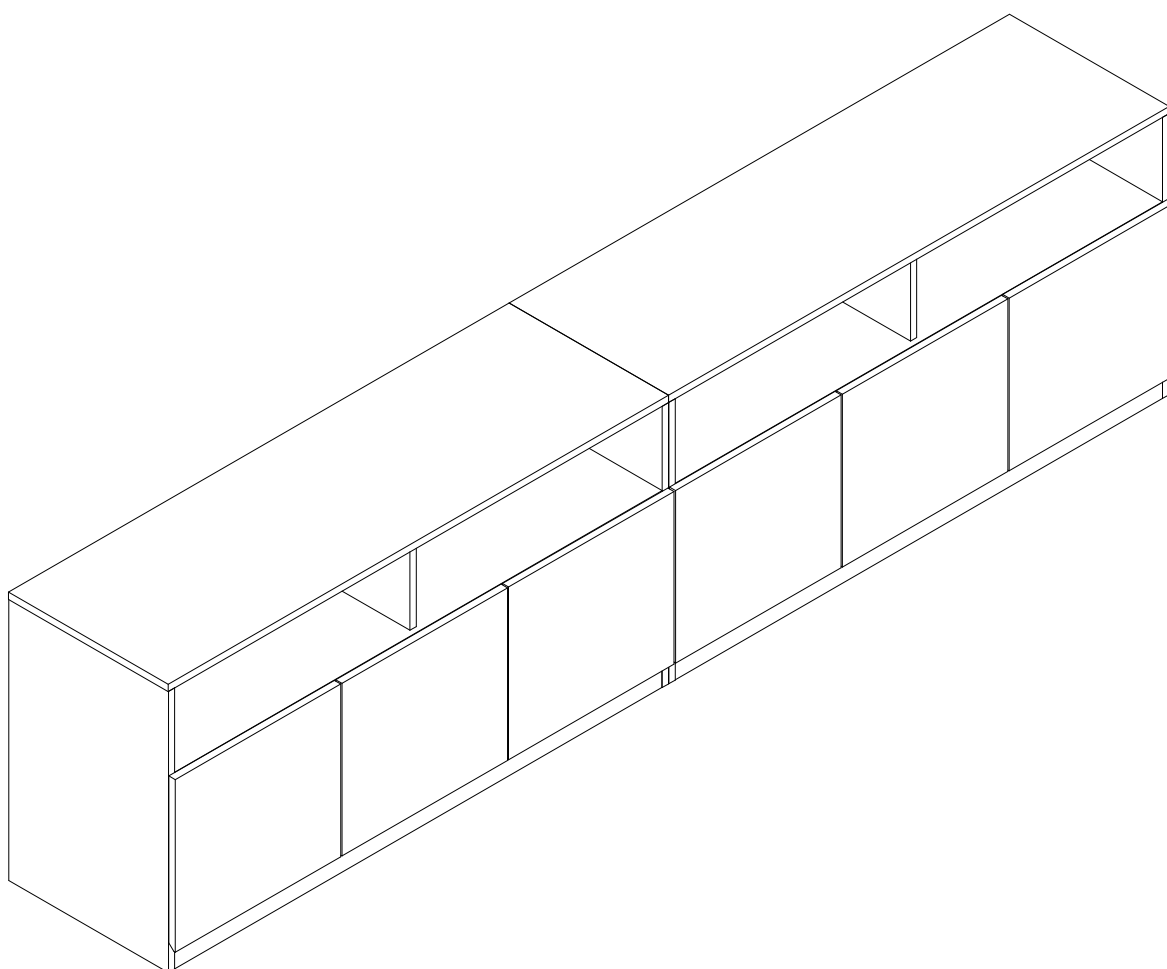

Use and Maintenance


1. Keep the furniture vacant for half a month before use, and maintain good indoor ventilation to eliminate the residual odor in furniture surface coating.
2. Place the objects smoothly, heavier objects should be placed at the bottom (layer) of the furniture to avoid the furniture from tipping over. Heavy objects should not be placed on the top of the wardrobe, so as not to cause the top plate to deform and sag and affect the opening of the cabinet door, high-temperature or frozen objects should be padded with high-temperature-resistant mats and placed on the furniture. Heavier or harder objects should be placed on the furniture table with a soft decorative tablecloth or a felt for protection.
3. Do not push hard objects directly on the furniture to avoid scratching the surface of the furniture.
4. Do not expose the furniture to sunlight for a long time or place the furniture close to the heating equipment, which can cause localized discoloration and fading.
5. Please avoid long-term exposure to humid environment to prevent mildew.
6. Place the furniture stably to avoid breaking the furniture feet or loosening the connection parts due to inclination.
7. Do not let items that are flammable and oxidizing touch the surface of the furniture, which may cause chemical reactions and damage to the furniture finishing.
8. Teach children not to play close to the glass sharp angles of furniture avoid accidental physical injury and damage to the furniture.
9. Open the doors and drawers of the furniture with appropriate force, and it is strictly forbidden to open and close them violently, which will cause loose connections.
10. Screws may become loose during long-term use. If necessary, retighten them to ensure stability and security.

Trouble Shooting


Product Category	Fault	Cause Analysis	Handling Method
Wood furniture	Door opening is not flexible	The furniture is not leveled	Use items to level the furniture
		The door hinges should be adjusted properly.	Adjust door hinges and apply lubricating oil
	Inflexible opening of drawer	Overload or deformation	Reduce weight, adjust guide rails, lubricate
	Loose component connection	Loose hinges or screws	The poke part should be coated with an appropriate amount of 502 glue, then re-install or tighten the screws.
	Minor scratches	Friction with hard or sharp objects	Use a brush to apply similar pigment ink along wood grain to the scratches, then wipe off the excess.
	Corrosive stains	Accidentally stained with chemical solvents such as nail polish, nail polish remover, etc.	Wipe them with a dry cotton cloth immediately

Possible issues during assembly:

- The two boards can't be aligned at the same level.

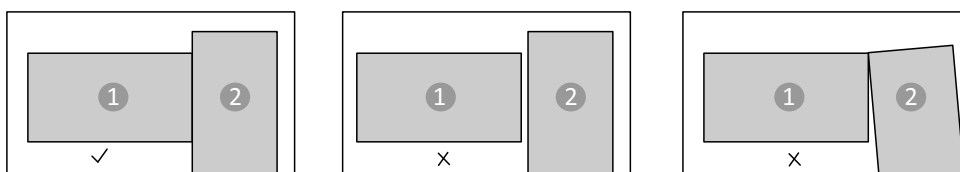


- Holes on the boards and poles are not aligned, so screws can't be installed.

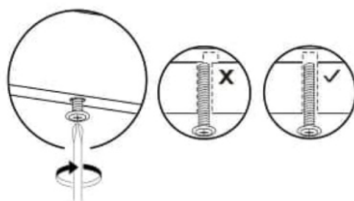

Recommended solution:




- Please slightly loosen all screws and adjust the boards. Because the diameter of the holes on the pipes 23 mm larger than that of bots, the position of the boards can be adjusted.

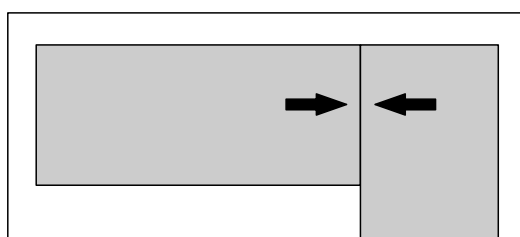

- It is still doesn't work after adjustment, please contact us for more solutions.




Special Accessories Installation Instructions

Hinge Adjustment Diagram

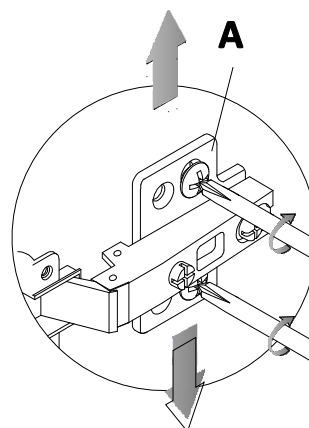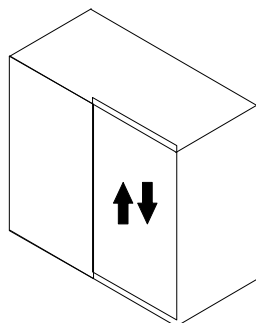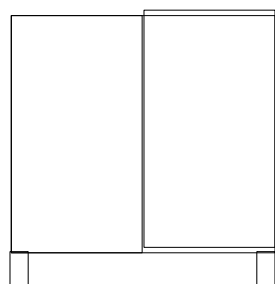




If the two doors are not aligned vertically:

If the two doors are not aligned vertically, loosen the four screws labeled "A" on both hinges. Then you can adjust the door's height up and down, allowing for adjustment by a few mm vertically. After making the adjustment, tighten the screws back into place.

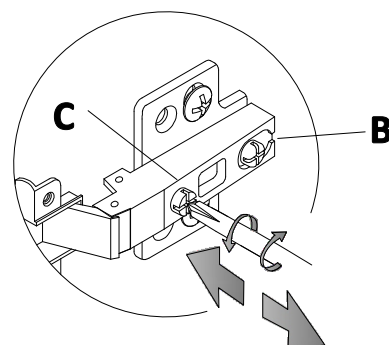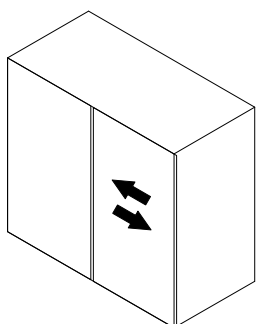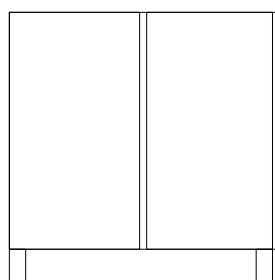

If there is a gap between the door:

Loosen the screw labeled 'B' and adjust the door. Align this door to close flush with the other door. If the door can not be adjusted, loosen the screw labeled 'C' and try adjusting again to close the doors properly. After making the adjustment, tighten screws 'B' and 'C' back into place.

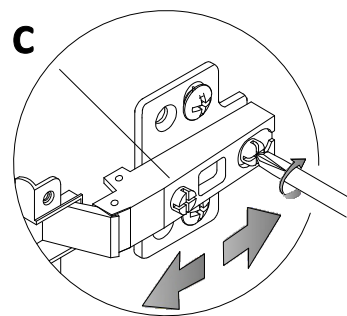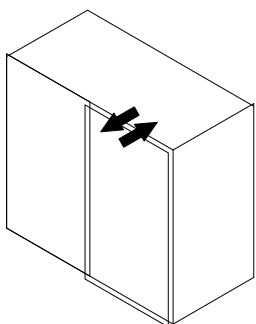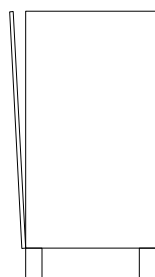

If the door cannot close fully:

You can adjust the distance from the door to the cabinet, then tighten the 'C' screw again once the adjustment is completed.

After-Sales Warranty

Dear Customer,

Thank you for purchasing this TV Cabinet. If you find that the product is damaged or accessories are missing after receiving it, please contact us through our after-sales email. Our customer support team will provide you with a professional solution within 24 hours.

If you encounter any problems with the product, accessories, installation, or damage after receiving your package. This will allow us to quickly understand your difficulties and provide prompt replacement parts and professional guidance. We look forward to receiving any feedback from you!